



## **Electronic Service Manuals**

This electronic document is provided as a service to our customers. We do not create the contents of the information contained in this document. Should you have detailed questions pertaining to the information contained in this document, you may contact Michco, or the manufacturer which provided the original information in this electronic deliverable. Michco's only part in this electronic deliverable was the electronic assembly process. By providing this manual online we are not guaranteeing parts availability.

You may contact Michco through the following methods:

**Phone (517) 484-9312**

2011 N. High St. -- Lansing, Michigan -- 48906

Fax: (517) 484-9836

Email: [CustomerService@Michco.com](mailto:CustomerService@Michco.com)

Website: [www.Michco.Com](http://www.Michco.Com)

Order Parts online at:

**[www.Michco.Com](http://www.Michco.Com)**

Directly to Parts & Service:

By Email: **[CustomerService@Michco.com](mailto:CustomerService@Michco.com)**

By Fax: (517) 484-9836

By Voice: (517) 484-9312

**Serving the Cleaning Industry Since 1922**

Notice: All copyrighted material remains property of original owners, all trademarks are property of respective owners. Manuals are subject to Manufacturer's reproduction limitations. Originals or reproductions were provided by manufacturers through a request. We make no warranty as to the correctness of information provided in this document and you assume all risk. By placing these manuals on line we are not declaring our corporation to be an manufacturer authorized dealer or provider, please check our web site for authorized manufacturers we represent.

# ENDEAVOR

## 9000I-HS MULTI-PURPOSE EXTRACTOR

OWNER'S/OPERATOR'S MANUAL



PROUDLY DESIGNED AND MANUFACTURED BY

**EDIC**

WWW.EDIC-USA.COM



Revision 1  
2-12-18

## TABLE OF CONTENTS

RECEIVING YOUR EQUIPMENT.....	3
WARNINGS AND SAFETY.....	3
GROUNDING INFORMATION.....	4
GFCI INFORMATION.....	4, 5
CORD STORAGE AND SAFETY.....	5
MAINTENANCE.....	5
ENDEAVOR OVERVIEW.....	6
CONTROL PANEL OVERVIEW.....	7
POWER CORD AND CIRCUIT LOCATOR OPERATION.....	8
CONNECTING VACUUM AND SOLUTION HOSE.....	8
ROCOVERY TANK FILTERS.....	9
AUTO-FILL/ AUTO-DUMP.....	10
PRIMING THE PUMP.....	10
ADJUSTING PUMP PRESSURE.....	11
CLEANING CARPET.....	11
CLEANING TILE AND GROUT.....	11
MOUNTING AND SETUP OF THE 991RS SYSTEM (OPTIONAL).....	12, 13, 14
USING A 9000AC SPRAYER (OPTIONAL).....	15
OPERATING INSTRUCTIONS FOR TOUCHLESS RESTROOM CLEANING.....	15
WARRANTY INFO.....	16, 17

## **UNPACKING YOUR NEW ENDEAVOR:**

When your equipment is delivered, check the carton carefully for signs of rough handling. If the ENDEAVOR is damaged, notify the carrier immediately and request an inspection. Be sure to keep the carton, packing inserts, packing lists and carrier's receipt until the inspector has verified your claim.

EDIC's liability ceases when the carrier picks up the shipment. However, our customer service staff will be happy to furnish any information needed in connection with the claim and will attempt to expedite a resolution.

## **PLEASE READ BEFORE OPERATING YOUR NEW ENDEAVOR:**

Read the manual carefully and completely before attempting to operate the unit. This manual has important information for the use and safe operation of the machine. Keep this manual handy at all times.

This equipment has been engineered and manufactured to provide excellent performance and service. To ensure that your equipment will continue to perform as intended:

- Maintain equipment regularly- following the suggested maintenance schedule provided.
- Use only original EDIC parts when servicing.
- Operate equipment with care.

All information and specifications printed in the manual are current at the time of printing; however because of EDIC's policy of continual product development, we reserve the right to make changes at any time without notice.

## **FAILURE TO COMPLY WITH THE FOLLOWING WARNINGS AND INSTRUCTIONS MAY POSE A HAZARD AND WILL VOID THE WARRANTY.**

### **WARNING:**

- This is not a toy. Keep away from children.
- Always read and understand your chemical's MSDS (Material Safety Data Sheet) before use.
- This extractor is not designed to handle or use combustible/volatile substances such as gasoline or kerosene, in, on, or near the equipment. The use of such materials will cause extreme hazardous condition.
- Make sure the extractor has all water filters in place.

- Use only commercially available cleaning chemicals intended for use with extraction machines of this type. Do not use dyes, bleaches, ammonia, or other additives.
- Do not allow high pressure spray stream to remain in one fixed location as surface damage may occur.
- Check that all spray nozzles are securely fastened. Loose nozzles could be ejected from equipment at high speeds.
- Prevent burns by wearing gloves or using a barrier to remove hot quick disconnects.
- Use caution with ejected liquid or chemicals. High pressures and temperatures could be hazardous to nearby people or surroundings.
- All servicing of EDIC equipment should be performed only by EDIC authorized service centers.
- Do not use replacement parts other than those specified in the parts list. Equipment performance could be affected if substitutions are made.
- When using an extension cord, use only a 3-prong conductor grounding cord-12 gauge wire or heavier. Do not use extension cords longer than 25FT.
- To avoid electric shock, do not expose the unit to rain or snow. Store it indoors in a heated location only. Do not expose machine to freezing temperatures.
- Do not use the machine for dry vacuuming.
- Use defoamer at all times to prevent damage to the vacuum motor.
- Do not use water in excess of 130°F (54°C) in the solution tank
- To prevent seal damage and chemical build-up to the pump system, run clean water through the solution lines after each day's use.
- Use only commercially available carpet cleaning solutions and defoamer intended for use with machines of this type. Do not use dyes, bleaches, ammonia, or other additives.
- The use of powdered cleaning solution, if not diluted properly, may result in damage to the pump. Powdered chemical is not recommended. If powdered chemicals are used, premix in a separate container before placing in the solution tank. Any damage resulting from powdered chemical will void the warranty.
- Do not pull machine by the power cord. Always unplug by grabbing the plug and pulling, do not unplug by pulling the power cord.
- Inspect cord for damage. Do not use damaged cords. Connect only to properly grounded outlets.
- Keep hair, fingers, loose clothing, and body parts away from moving parts and openings.
- Turn off all controls before disconnecting machine
- Do not use without vacuum pre-filter bag in place
- Never leave equipment unattended while power cords are plugged in to an electrical source.

**Servicing:**

In the event that your ENDEAVOR requires service, please contact EDIC at: 800-338-3342 or email [info@edic-usa.com](mailto:info@edic-usa.com)

Do not attempt repairs yourself. EDIC will assist you in locating an independent service contractor.

**GROUNDING INSTRUCTIONS:**

This piece of equipment must be grounded. Should an electrical malfunction occur, grounding provides a path of least resistance for electrical current- reducing the risk of electric shock. This piece of equipment is furnished with a cord that has a grounding conductor and grounding plug. The grounded plug must only be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

**WARNING:**

Connecting the equipment to an improperly grounded outlet can result in an increased risk of electric shock. A qualified electrician should be consulted if you are unsure that the outlet is properly grounded. Do not modify the plug provided with the equipment. If it will not fit the outlet, have a proper outlet installed by a qualified electrician. Replace the plug if the grounding pin is damaged or broken.

This appliance is designed for use on a 120-volt circuit. The Green (or Green/Yellow) wire in the cord is the grounding wire. When replacing a plug, this wire must be attached to the grounding pin only.


Extension cords connected to this machine should be 12 gauge, three-wire cords with three-prong plugs and outlets. DO NOT use extension cords more than 25 feet (7.6 m) long.

**GFCI CORD FUNCTION:**

The ENDEAVOR's power cords are equipped with a built in GFCI (Ground Fault Circuit Interrupter). The GFCI function is automatic and, under normal operating conditions, the GFCI function will not be activated.

A GFCI works by monitoring the amount of current that

is flowing from hot to neutral. If the GFCI senses an imbalance in that flow, such as a ground leak, it will disable (interrupt) the electrical system to eliminate dangerous operating conditions. If the GFCI trips due to a temporary incident, you may restore function by pressing the button on the GFCI box marked Reset "RESET" button on the GFCI box.

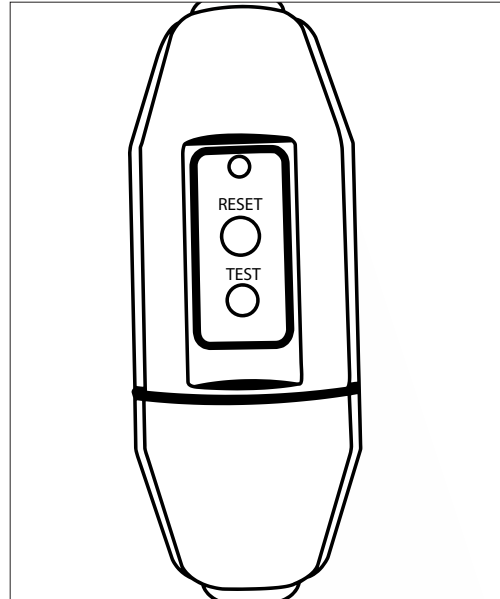

If a GFCI continues to trip after resetting, it indicates an unsafe operating condition is present and it is best to take it to an authorized repair location for servicing.

**POSSIBLE CAUSES AND SOLUTIONS TO MALFUNCTIONING GFCI ARE:**

- Your equipment has become wet and moisture has come in contact with the electrical system. **Take unit to an authorized repair location for servicing.**
- Your machine is submerged in liquid. **If it is safe to do so, remove the equipment and take unit to an authorized repair location for servicing.**
- There is damage to the power cord. **Replace the power cord immediately with the correct spec cord.**
- The wall plug or cord plug may be wet or in contact with water. **Using thick rubber gloves, unplug the cord from the wall.**
- A leak in your machine's plumbing may be wetting the internal electrical components. **Take the unit to an authorized repair location for servicing.**
- There is a loose or faulty electrical connection somewhere in your equipment. **Take the unit to an authorized repair location for servicing.**

### **GFCI MAINTENANCE:**

Although the GFCI function works on its own, it is necessary to test for proper function of your GFCI periodically. To do this:

1. Plug your equipment to an appropriate wall plug.
2. Press the “TEST” button on the GFCI panel on the cord.
3. Turn on the switches for “PUMP” and “VACUUM” (located on the switch panel on the front of the machine).

If your motors turn on, then the GFCI is NOT working properly- do not use the equipment until this function has been repaired. Take the machine to an authorized repair location.

If neither motor powers on after pressing the “TEST” button then the GFCI is working properly.

Press the “RESET” button on the GFCI and the ENDEAVOR will be fully functional again.

**NOTE: THE GFCI MUST BE RESET ANY TIME THE CORD IS UNPLUGGED. WHEN THE GFCI IS OPERATING PROPERLY, THE RED INDICATOR LIGHT WILL BE ON.**

### **CORD STORAGE:**

While not in use, store cords in a clean dry area. Wind cord carefully to prevent kinking. Cord should be completely unwound during operation.

### **CORD SAFETY**

- Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return to service center for inspection and repair.
- Do not pull or carry by cord, use cord as handle, close a door on cord, or pull cord around sharp edges or corners. Do not run over cord.
- Keep cord away from heated surfaces.
- Do not unplug by pulling cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- This equipment should be stored indoors and not

exposed to rain.

### **MAINTENANCE OF THE ENDEAVOR:**

The ENDEAVOR has been engineered and built to require minimum maintenance. However, careful attention to these maintenance instructions will help extend the life of your equipment.

#### **DAILY:**

- Keep the ENDEAVOR clean inside and out.
- Pour clean hot water (MAX 130°F/ 57°C) into the solution tank of your ENDEAVOR extractor. Turn the pump on and flush the entire system through the spray nozzles for 1 minute to prevent chemical build-up.
- Run the vacuum motor for 30 seconds before putting away the ENDEAVOR.
- Rinse out the Recovery tank.
- Clean the vacuum intake pre-filter bag and the pump-out filter.

#### **MONTHLY:**

- Use a flushing agent through the machine’s plumbing to dissolve mineral and chemical build up.
- Quick disconnects, wheels, casters, and regulators can be lubricated with an all-purpose silicone lubricant spray.
- Check and clean the filters in the solution tank.

### **PUMP WEAR AND TEAR MAINTENANCE:**

After 500 hours, replace the following pump head components:

- KIT A, PLUNGER AND SEALS: PART #G13333-1
- KIT B, VALVE SET: PART #G13333-2
- CAM BEARING: PART #G13682

After 1500 hours, replace the following pump head components:

- KIT A, PLUNGER AND SEALS: PART #G13333-1
- CAM BEARING: PART #G13682


After 3000 hours, replace the following pump head components:

- KIT B, VALVE SET: PART #G13333-2


Contact EDIC for PUMP maintenance instructions.

## ENDEAVOR OVERVIEW

1. Handle: Used to position and maneuver the machine.
2. Recovery tank and access point. Lid can be removed for cleaning of recovery tank.
3. Accessory chemical feed mounting shoe.
4. Switch/ Control panel.
5. Solution tank and access point.
6. Accessory management system: Secures 1 carpet wand or 1 REVOLUTION wand to the ENDEAVOR.
7. Grab handle and clam shell screw access point.
8. Rear caster wheels: Allow the machine to be placed on its back when loaded onto a vehicle.
9. Waste dump valve.
10. Auto-dump port: Connects to garden hose to dump waste water.
11. Auto-fill port: Connects to garden hose to fill solution tank.
12. Power cord receptacles.

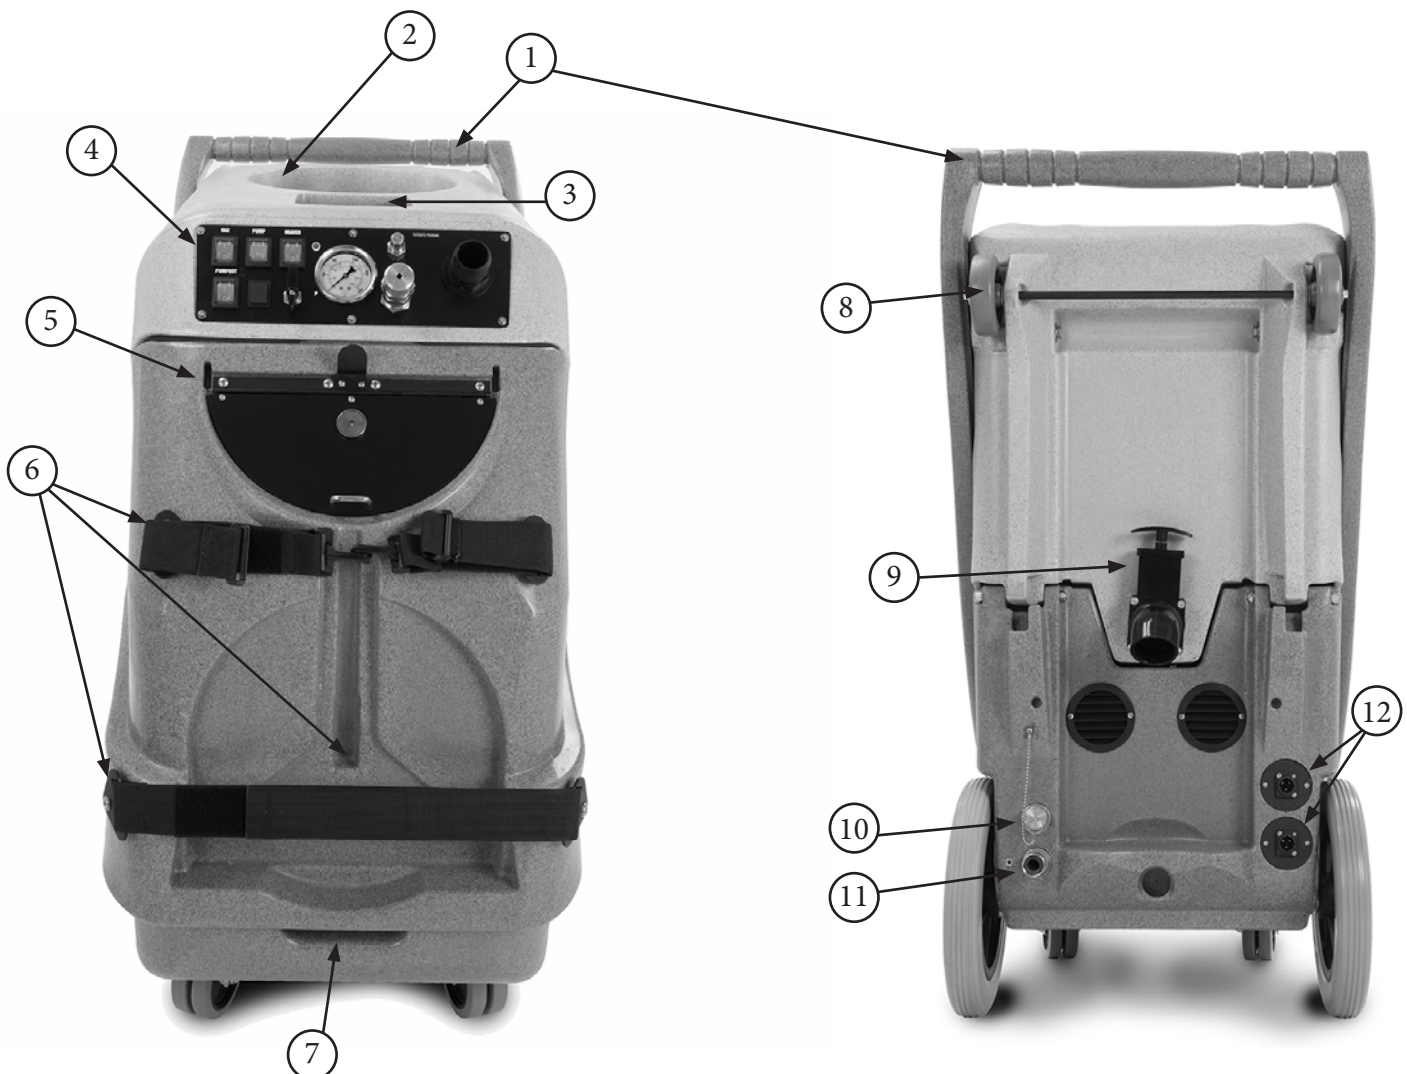

## CONTROL PANEL OVERVIEW

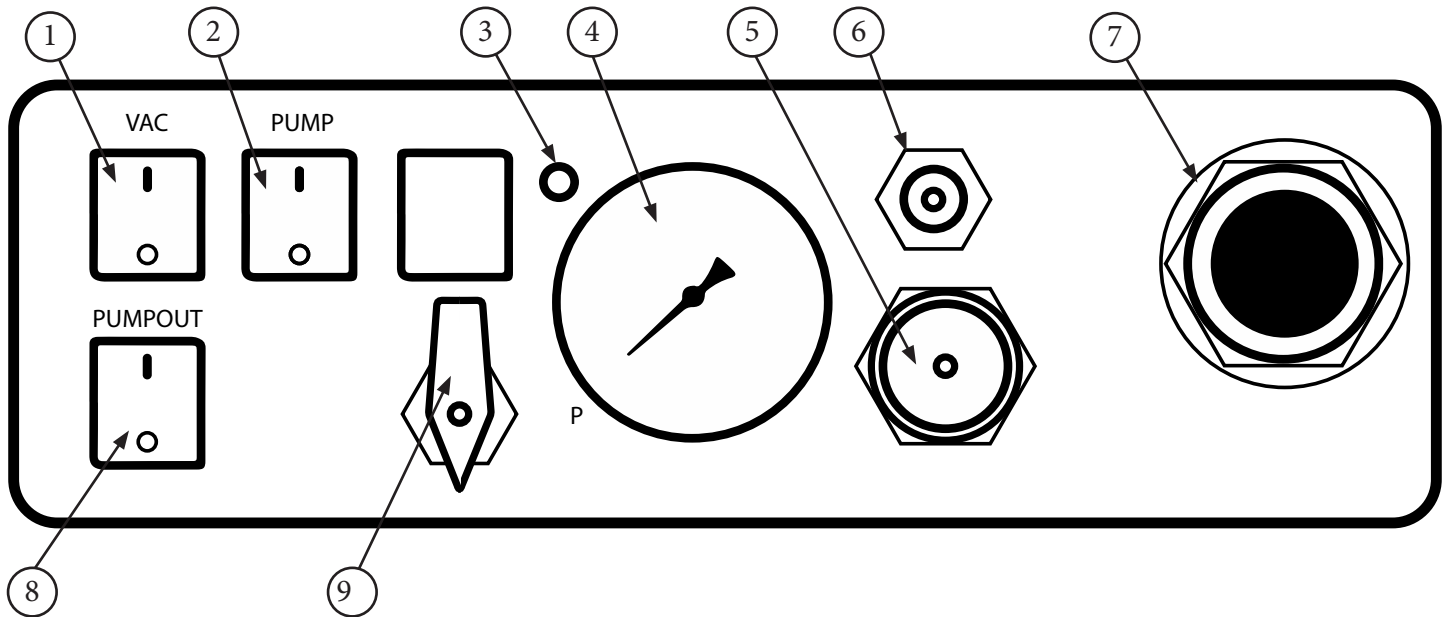


1. Vacuum power switch. "I" is on. "O" is off.
2. Pump Power switch. "I" is on. "O" is off.
3. Circuit locator confirmation light: Lights up green when both power cords are on two separate circuits.
4. Pressure gauge: Displays pump pressure.
5. Pressure regulator: Allows pressure to be adjusted by turning clockwise (raising pressure) or counter-clockwise (reducing pressure).
6. Solution line Q.D.: Allows solution line to be connected to the machine.
7. Vacuum hose inlet barb: Allows vacuum hose to be connected to the machine.
8. Pumpout power switch. "I" is on. "O" is off.
9. Priming/ pressure relief valve. "P" is open. Pointing end down is closed.

## CONNECTING THE POWER CORDS:


The ENDEAVOR uses POWERCON twist lock connectors on the end of the GFCI powercords. These mate to the female receptacles on the body of the ENDEAVOR. The female receptacles are found on the bottom right hand side of the machine on the rear. See #12 on page 6.

To connect:

1. Take a powercon twist lock connector end and match the chuck on the connector to the keyway on the female chassis receptacle.
2. Insert the connector and turn in a clockwise motion. A click will be heard when the connector has engaged and is locked in place.

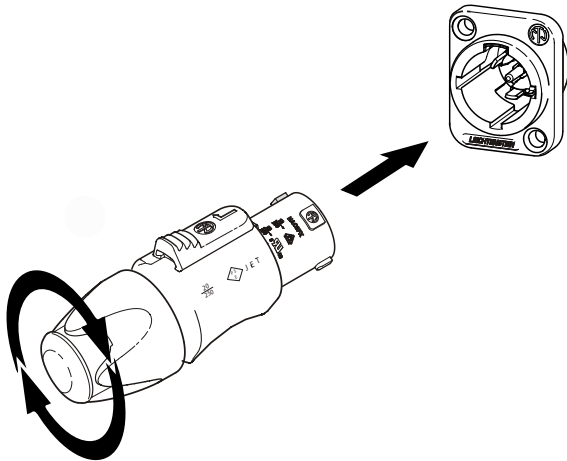

3. To disconnect, pull back on the sliding lock release then turn the connector in a counter-clockwise motion. Pull the connector out of the chassis receptacle.

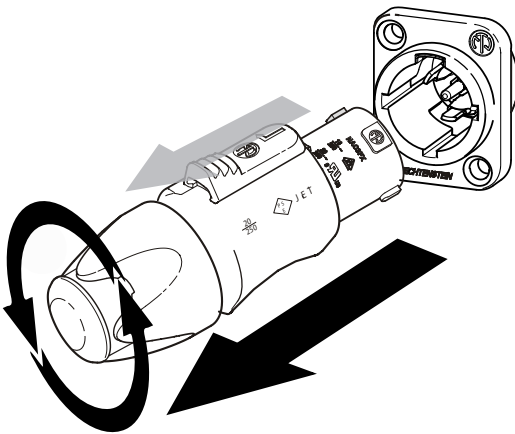

4. Connect each male wall plug to an individual circuit.
5. Press the RESET button on the cord's GFCI box. When the red confirmation light on the GFCI box turns on, the machine is ready to use. For more information on the GFCI and its function, see pages 4 and 5.

## USING THE CIRCUIT LOCATOR:

The ENDEAVOR has a built in circuit locator. When the unit is plugged into two separate circuits, the circuit locator confirmation light will turn on. The confirmation light is marked "CT" and is located on the control panel. See #4 on page 7.

1. Connect both power cords into machine.
2. Plug both male wall plug cord ends into two separate wall plugs.
3. Press the reset button on each GFCI plug.
4. The light marked "CT" will turn on if you are on two confirmed circuits. If you are in a very brightly lit environment, shield the "CT" light with your hands to better see the confirmation light.
5. If the "CT" light does not come on, try plugging into another circuit until you get a confirmation light.

**NOTE:** Do not ignore the circuit locator. Do not run both cords on one circuit. Doing so may overload the circuits and trip the circuit breaker.

## CONNECTING SOLUTION AND VACUUM HOSES:

Hose connections for the solution line and the vacuum line can both be found on the front of the machine in the control panel. The control panel is #4 on page 6.

**Solution hose:** Connect the Q.D. on your solution hose to the Q.D. on the machine's control panel (#7 on page 7). Connect opposite end of the solution hose to your accessory.

**Vacuum hose:** Connect the cuff on your vacuum hose to the vacuum hose barb on the machine's control panel (#8 on page 7). Connect opposite end of the vacuum hose to your accessory. Make sure hose cuffs are pushed in securely.

## RECOVERY TANK FILTERS:

### VACUUM PRE-FILTER:

The intake filter bag has been designed to catch larger debris before it enters the open area of the waste tank. This keeps the auto-dump intake filter from clogging too fast, allowing un-interrupted flow to the auto-dump pump.



Locate the filter bag in the waste tank, press the cord release (circled above in white) and pull back to loosen the drawstrings. Remove all solids, rinse the bag out and place back into the tank. Tighten the cord release. Always remove the bag by loosening the cord, do not pull the elbow out.

### AUTO-DUMP INTAKE FILTER:

The auto-dump filter is located next to the vacuum intake stand pipe. The filter can be removed by turning counter-clockwise. Turn Clockwise to re-tighten. Clean filter after every job.



to determine a proper cleaning schedule as workloads differ from job to job. It is advisable to inspect the filters after the completion of each job to gauge what an appropriate cleaning schedule would be.

### VACUUM INTAKE FILTER AND VACUUM SHUT OFF:

The vacuum intake filter houses the float ball which is in place to shut off airflow to the vacuum motor when there is too much fluid in the waste tank. This function keeps the vacuum motor from taking in fluids and getting damaged. Under normal operating conditions the mesh screen on the air filter should not get dirty. A dirty filter is a sign of over-filling. To remove the filter cage, Pull down on the filter, in a pivoting motion. Clean as needed. Firmly press it back into place. If there is minor build up, you may use a towel to wipe off the surface of the filter.



NOTE: Daily cleaning of the intake filter bag and the pump intake filter, are essential to preserving the proper function of the pump out feature. It is up to the operator

**UTILIZING AUTO-FILL & AUTO-DUMP:**

This machine is equipped with the ability to self-regulate the levels of fluid in the solution tank and the recovery tank.

**Auto-Fill:**

1. Connect a 3/4" garden hose to a faucet.
2. Connect opposite end of the garden hose to the female garden hose connection located on the rear bottom left of the machine. #11 on page 6.
3. Turn the water pressure on to about 1/4 to 1/2 of the full flow. Do not turn to full pressure.
4. Wait for the solution tank to fill and confirm it has stopped filling before walking away to begin your job.
5. The Auto-fill function is controlled by a float valve. Any obstruction of the float valve could lead to flooding or not filling at all. Check that the float is moving freely before and after every job.

**Auto-Dump**

1. Remove the cap from the male garden hose connection on the rear bottom left of the machine. #10 on page 6.
2. Connect a 3/4" garden hose to the male garden hose connection. #10 on page 6.
3. Secure the opposite end of the garden hose to an approved drain or sewer system. Secure end of hose to prevent flooding.
4. When ready to start recovering water, turn on the PUMPOUT switch. #9 on page 5.
5. The pump can be left on throughout your job so long as small amounts of water are flowing through the pump. Turn off the PUMPOUT switch if you will not be recovering water for periods lasting longer than 2 minutes.
6. Clean your Auto-Dump filter and vacuum filter bag after every job. Some jobs, such as carpet may require multiple cleanings of the filter during operation.


NOTE: Periodically stop to monitor your solution tank and recovery tank levels to ensure that the Auto-Dump and Auto-Fill features are working properly. This could prevent flooding.

**PRIMING THE PUMP:**


THE ENDEAVOR HAS A PISTON PUMP WHICH IS NOT SELF-PRIMING. PRIMING RESTORES PRESSURE TO THE PUMP WHEN AIR HAS BEEN INTRODUCED INTO THE PUMP SYSTEM.

**WARNING: TO PREVENT FLOODING, NEVER LEAVE THE MACHINE UNATTENDED WHILE THE PRIMING VALVE IS IN THE OPEN POSITION.**

1. Place water in the solution tank by using the Auto-Fill feature or by using a bucket or hose to fill from the solution tank access point (see #5 on page 4)
2. Open the pump line by turning the priming valve a 1/4 turn counter-clockwise toward the letter "P". (See #10 on page 7)

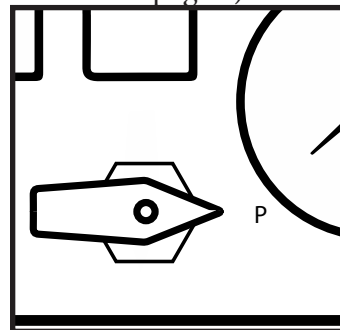

3. Place the pump switch into the on position. Position "I" (see #2 on page 7)
4. Allow the pump to run for 15-20 seconds.
5. Close the priming valve and return it to its original position.

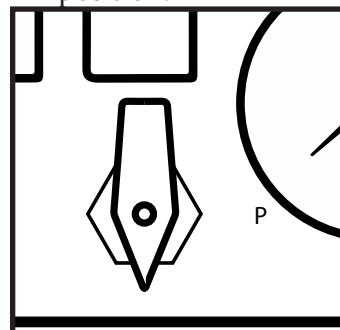


6. Once the priming valve has been closed, the gauge will display the current pressure. Use the regulator to adjust pressure, if necessary. See page 10 to adjust pressure.
7. Repeat steps 1-5 if pressure on gauge is still showing less than desired pressure.

## ADJUSTING PUMP PRESSURE:


This machine is equipped with a pressure regulator (see #6 on page 7), that allows the operator to adjust the pressure between 100PSI and 1100PSI.

To adjust pressure:

1. Turn Pump switch to on position. Position "1".
2. Check current pressure on pressure gauge. (#5 on page 7)
3. To increase pressure, turn the regulator in a clockwise motion. Watch the gauge and stop rotating the regulator when the desired pressure has been reached. Max pressure is 1100PSI.

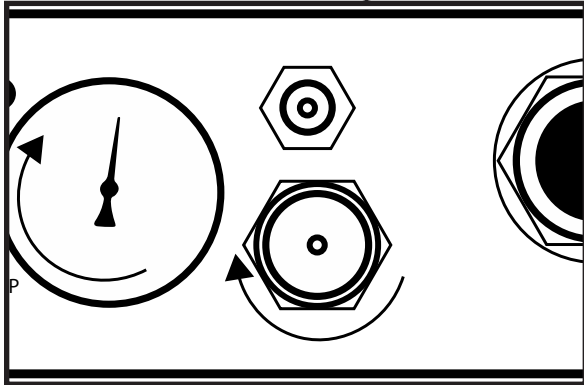

4. To decrease pressure, turn the regulator in a counter-clockwise motion. Watch the gauge and stop rotating the regulator when the desired pressure has been reached. Minimum pressure is 100PSI.

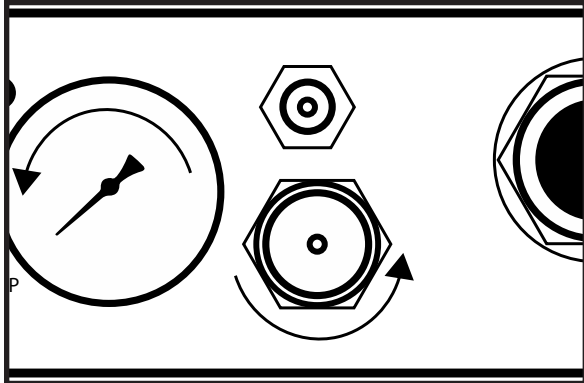

**Note: Do not adjust the pressure while spraying. Adjusting the pressure, while spraying, will cause the pump to over-pressurize and place excess load on the pump motor. Do not exceed 1100PSI. Take care when reducing the pressure below 100PSI as the regulator adjuster nut may come off the threaded regulator shaft.**

## HOW TO SETUP THE ENDEAVOR FOR CLEANING CARPET OR UPHOLSTERY:




1. Plug in power cords as per instructions on page 8.
2. Make sure you are on 2 circuits.
3. Connect your solution and vacuum hoses to machine and accessories.
4. Fill the machine with water. See page 10 for auto fill instructions.
5. Prime the pump as per instructions on page 10.
6. Adjust the pressure to 100-500psi. See instructions for adjusting pressure on page 11.
7. Prespray the carpet or fabric as necessary.
8. Turn on the vacuum motor.
9. Spray on the backstroke and do a dry stroke when pushing forward.
10. Overlap your previous path slightly when you pull back.
11. Monitor the levels in the recovery tank and empty as necessary. Use defoamer to ensure your vacuum motor does not take in fluid

## HOW TO SETUP THE ENDEAVOR FOR TILE AND GROUT:

1. Plug in power cords as per instructions on page 8.
2. Make sure you are on 2 circuits.
3. Connect your solution and vacuum hoses to machine and accessories.
4. Fill the machine with water. See page 10 for auto fill instructions.
5. Prime the pump as per instructions on page 10.
6. Adjust the pressure to 500-1100psi. See instructions for adjusting pressure on page 11.
7. Prespray the tile and grout surface to be cleaned.
8. Turn on the vacuum motor.
9. Spray and extract using the REVOLUTION in a side to side motion.
10. Monitor the levels in the recovery tank and empty as necessary. Use defoamer to ensure your vacuum motor does not take in fluid.

## MOUNTING THE OPTIONAL 991RS ACCESSORY CHEMICAL INJECTOR SYSTEM (NOT INCLUDED):


If you have purchased a 991RS Chemical Injector System for your ENDEAVOR. Follow the detailed instructions in the 991RS manual to install onto the ENDEAVOR body.

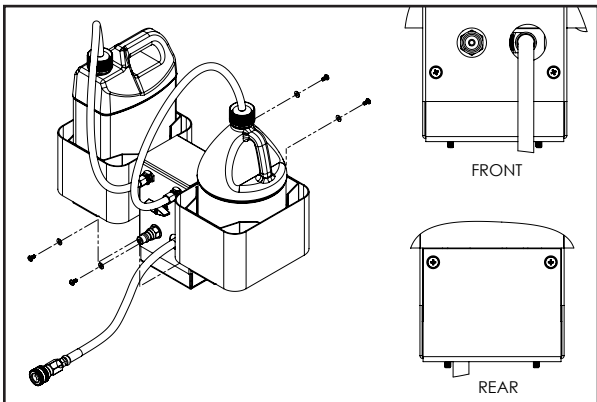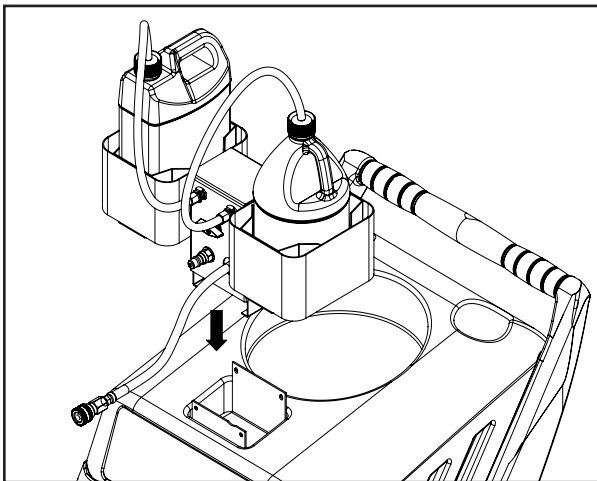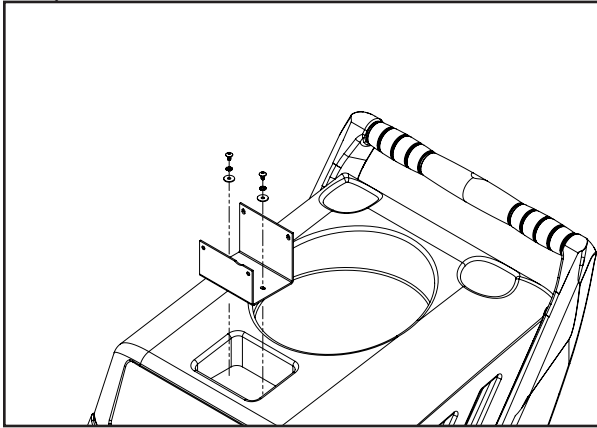

## SET UP OF THE OPTIONAL 991RS ACCESSORY CHEMICAL INJECTOR SYSTEM:

### STEP 1.

Locate the short blue hose on the 991RS. Connect it to the male quick connect on the switch panel of the ENDEAVOR. #7 on page 7.

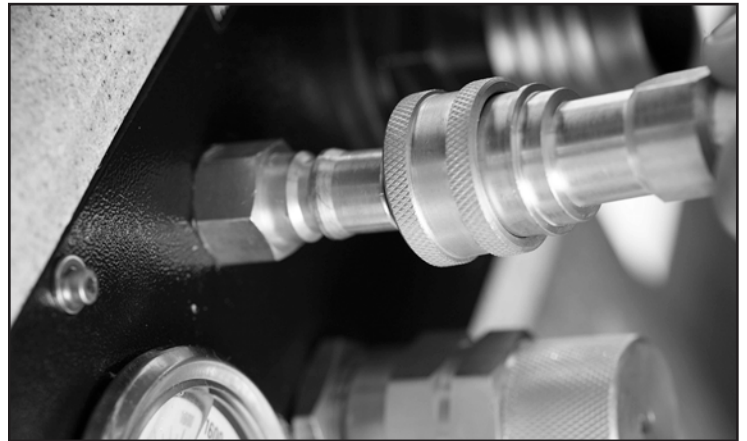

### STEP 2.

Connect the female quick connect on your 25FT working solution hose to the male quick connect on the main body of the 991RS.



**STEP 3.**

The intake bottle caps, and the clear hoses that are attached to them, are designed to be removed and interchanged by way of a quick release system. When you first receive your new 991RS, you will need to install the hoses by pushing them inside the quick release openings. See 991RS manual for detailed instructions.




To remove the hose, push down on the release tab and pull back on the hose.





Extra intake bottle Cap/ hose assemblies are available for purchase.

**STEP 4.**

Separate the clear hose from the intake bottle cap.

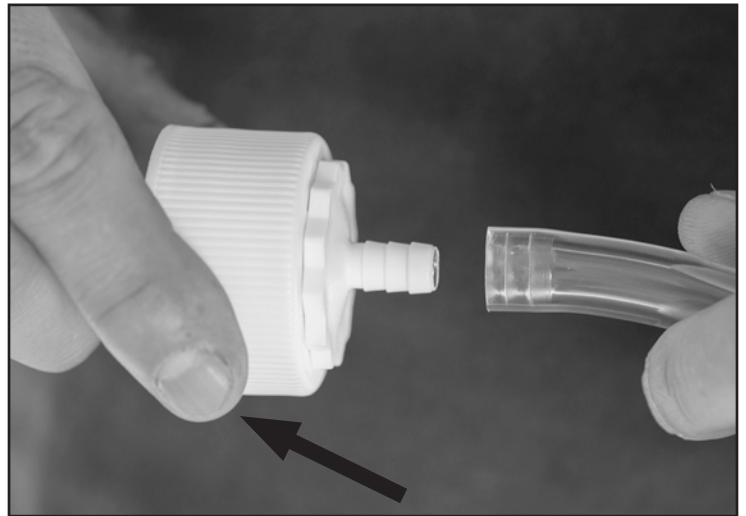
**STEP 5.**

Locate the brass threaded insert on the intake bottle cap barb and install a metering tip by threading it in a clockwise motion.

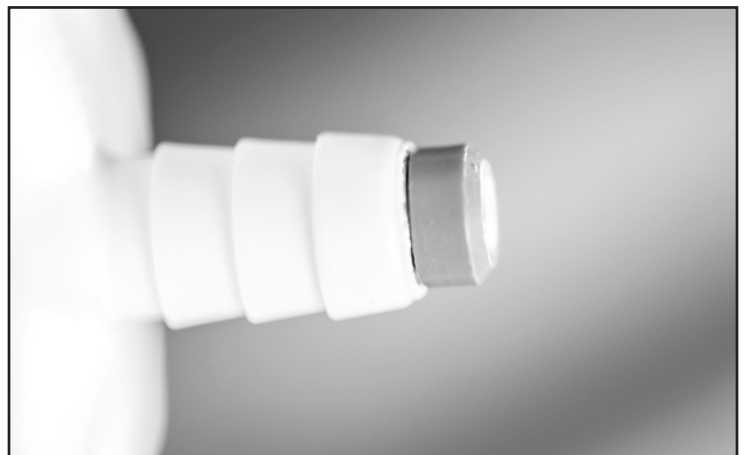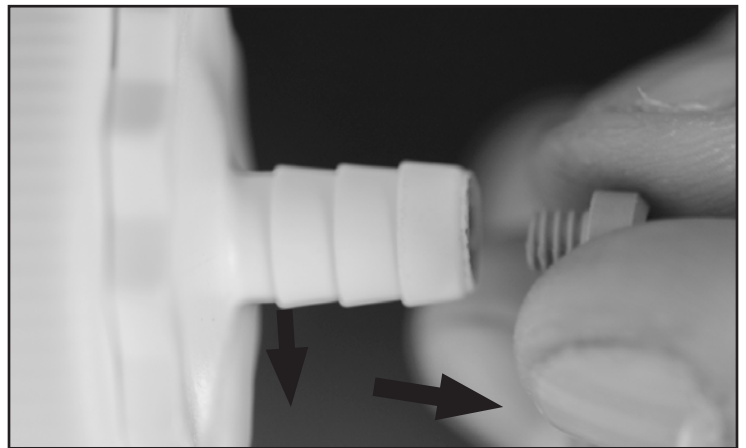

**STEP 6.**




Once the tip has been installed, push the clear hose back into place over the hose barb.

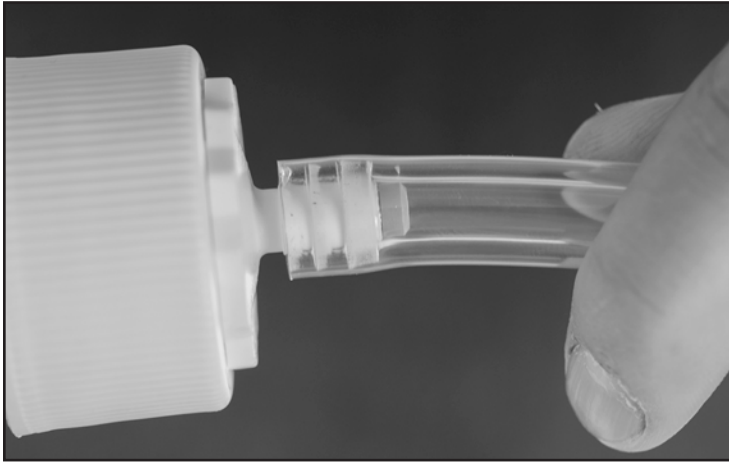**STEP 7.**

Place your chemical bottles in the bottle holders and install the threaded intake caps.


**SELECTING CHEMICAL:**

Use the chemical selector valve to change between the left side and right side bottle holders. For accurate flow rates, point the selector valve straight at the bottle holder you wish to draw from. Place the selector valve at top dead center to close the injector system. The system will not draw chemical in the closed position.

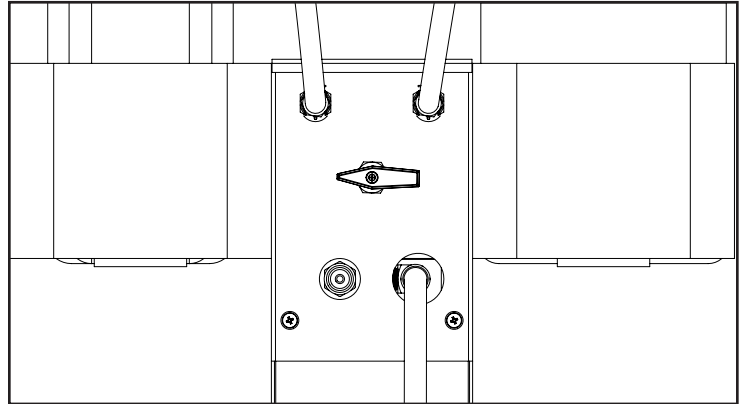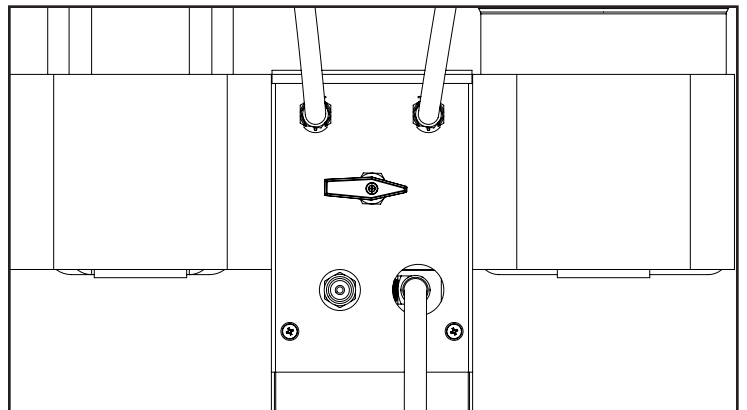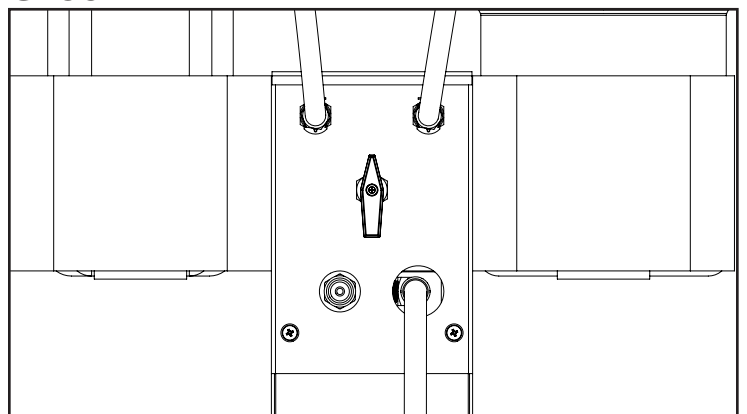**LEFT BOTTLE****RIGHT BOTTLE****CLOSED**

## USING A 9000AC SPRAYER (NOT INCLUDED):

Use the spray collar to select between low pressure chemical application or high pressure rinse. Pop “OUT” for low pressure and “IN” for high pressure.

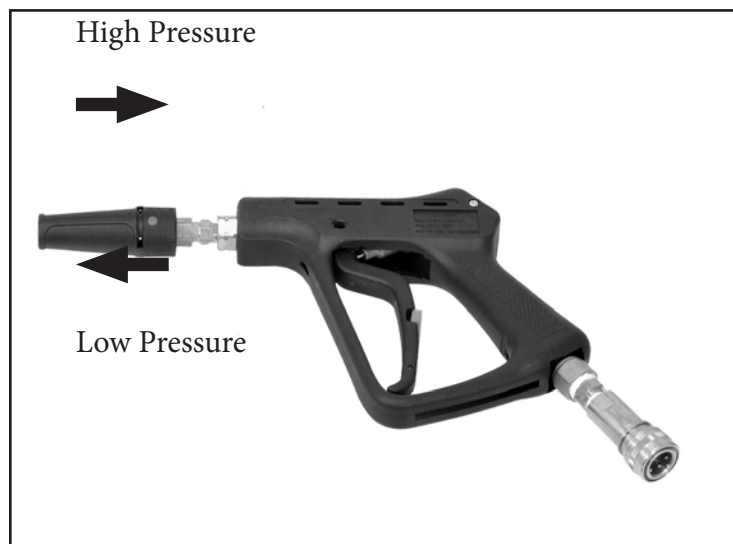

You may also adjust the angle of spray from a concentrated stream to a wider pattern by rotating the spray collar clockwise or counter-clockwise.

## NOTE: CHEMICAL WILL NOT DRAW IN HIGH PRESSURE RINSE MODE.

## OPERATING INSTRUCTIONS FOR TOUCHLESS RESTROOM CLEANING USING 991RS:

Use the following instructions as a basic guideline to clean hard surfaces using the ENDEAVOR and the 991RS system.

1. Select the appropriate tip and install on the intake cap.
2. Place bottles into the bottle holders.
3. Select chemical using chemical selector valve.
4. Take the feed tube attached to the intake cap and place it inside the bottle. Thread the intake cap onto the bottle.
1. Plug in power cords as per instructions on page 6.
2. Make sure you are on 2 circuits.
3. Connect your solution hose to machine and 9000AC spray gun.
4. Fill the machine with water. See page 10 for auto fill instructions.
5. Prime the pump as per instructions on page 9.
6. Adjust the pressure to 500psi. See instructions on page 9.
7. Chemical will draw only in the “LOW” pressure setting of your pressure gun. To activate the “LOW” pressure setting, pop the collar of the gun out.
8. In “LOW” pressure, apply chemical to the walls and fixtures starting from the lowest point to the highest.
9. Spray the floor as you make your way out of the room.
10. Allow the chemical time to dwell according to the chemical manufacturers recommendations.
11. You may use a brush to agitate particularly soiled areas.
12. When you are ready to rinse away the chemical, pull the collar of your 9000AC “IN”, to activate high pressure rinse mode. If you require a higher volume of flow for rinse mode, you may bypass the 991RS chemical injector system by connecting your 25ft hose directly to the male quick connect on the ENDEAVOR’s control panel.
13. Rinse surfaces starting from the top and working your way down.
14. Use a 334ACH squeegee wand to extract the excess fluid from the floor.



# Warranty Registration:

To register your product warranty, visit our website at:

[www.edic-usa.com/warranty-registration/](http://www.edic-usa.com/warranty-registration/)

## EDIC STANDARD LIMITED WARRANTY PLAN FOR MACHINES MANUFACTURED AFTER 2/14/2017

The following Limited 5-year Warranty is given by EDIC with respect to the following specific EDIC products:

Polaris	Aviator	Saturn Low Speed	Aqua Dri
Galaxy 5	Fivestar	Saturn Dual Speed	CR2 Restroom Cleaner
Endeavor	Galaxy	Saturn HD Low Speed	
Heat N Run	Bravo	Atlas	
Saturn High Speed	Supernova	Galaxy Pro	

The following Warranty is given by EDIC with respect to the following specific EDIC products:

2 Years Parts & Labor	TORO HD Orbital	TORO Orbital
FloodBuster Dynamo Vacuums Pilot Autoscrubber Galaxy Automotive Extractors	1725-TES has a 4-year parts warranty and a 2-year labor warranty	1725-TPT has a 2-year parts warranty and a 1-year labor warranty

**LIFETIME** on rotationally molded polyethylene tanks, stainless steel heater tank and Saturn stainless steel brush covers.

**5 YEARS** on service labor, and all other parts not covered by the Lifetime terms.

**2 YEARS** on service labor, and all other parts not covered by the Lifetime terms.

### EDIC REPLACEMENT PARTS LIMITED WARRANTY PLAN

All parts sold as replacement parts for out-of-warranty EDIC products have the following Limited Warranty, with no warranty on labor: **30 DAYS**

Your product is warranted to be free of defects in material and workmanship for the period set forth above, after the date of delivery to the retail purchaser, when operated in normal service and used in accordance with the operating and maintenance instructions in the Owner’s Manual. This warranty is limited to and provides at no cost to the retail purchaser repair or replacement of parts determined to be defective, at EDIC’s option, and labor, if provided for above, to replace or repair the parts (“service labor”) according to EDIC’s Standard Rates, during the warranty period set forth above. This warranty excludes transportation charges unless authorized in writing by EDIC. No warranty returns for refund or credit will be permitted. In the event of a defect, these are your exclusive remedies. Warranty claims must be made in writing to EDIC prior to returning the product and no products will be accepted for repair or replacement without prior authorization by EDIC. Use of parts not approved by EDIC in EDIC products will void this warranty. Warranty repair or replacement shall not extend the original warranty period of the product, and replacement parts used for in-



Quality Above All

warranty repairs will only be warranted for the remainder of the original warranty and not from their installation date. Any parts or product replaced under this Limited Warranty will become the property of EDIC.

**EXCEPTIONS AND EXCLUSIONS FROM THE WARRANTY.** This Limited Warranty only covers product issues caused by defects in material or workmanship during normal service. It does not cover product issues from any other cause, including but not limited to (a) transportation damages; (b) alteration by unauthorized persons; (c) unauthorized use, unreasonable use, misuse, or abuse (including the use of incompatible or corrosive chemicals or overloading of capacity); (d) failure caused by lack of proper maintenance and cleaning; (e) normal wear on items such as cords, belts, hoses, switches, bumpers, gaskets, seals, carbon brushes, squeegees, harnesses, valves, cams, extraction brushes, bearings, handle grips, filters and finishes; (f) acts of God; or (g) modification of or any part of the product. This Limited Warranty does not cover EDIC products sold AS IS and WITH ALL FAULTS. This Limited Warranty is valid only in the United States and Canada.

We suggest that you complete and return the enclosed product registration card promptly to facilitate verification of the date of the original purchase. However, return of the product registration card does not eliminate the need for the retail purchaser to maintain the original proof of the purchase in order to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this warranty will be the date of manufacture.

For specific information on how to obtain warranty services for your product, please write to:

EDIC/Warranty Department  
1753 Blake Ave.  
Los Angeles, CA 90031

**THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE OF THIS STATEMENT. THERE IS NO IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY USE ON THESE GOODS.**

**NO IMPLIED WARRANTY, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, APPLIES TO THE PRODUCT AFTER THE APPLICABLE PERIOD OF THE EXPRESS LIMITED WARRANTY STATED ABOVE, AND NO OTHER EXPRESS WARRANTY, EXCEPT AS MENTIONED ABOVE, GIVEN BY ANY PERSON OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BIND EDIC. EDIC SHALL NOT BE LIABLE FOR ANY FORM OF ACTION FOR ANY DAMAGES, WHETHER DIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, OR INDIRECT, TO PROPERTY OR PERSON, INCLUDING BUT NOT LIMITED TO, DAMAGE OR LOSS OF INCOME, LOSS OF PRODUCTION, OR LOSS OF PROFITS DUE TO MALFUNCTIONING OF ANY PRODUCT, REGARDLESS OF THE LEGAL THEORY ON WHICH THE CLAIM IS BASED. IN NO EVENT SHALL RECOVERY OF ANY KIND AGAINST EDIC BE GREATER IN AMOUNT THAN THE PURCHASE PRICE OF THE PRODUCT SOLD BY EDIC, AND CAUSING THE ALLEGED DAMAGE. WITHOUT LIMITING THE FOREGOING, YOU ASSUME ALL THE RISK AND LIABILITY FOR LOSS, DAMAGE OR INJURY TO YOU AND YOUR PROPERTY AND TO OTHERS AND THEIR PROPERTY ARISING OUT OF USE OR MISUSE OF, OR INABILITY TO USE, THE PRODUCT NOT CAUSED DIRECTLY BY NEGLIGENCE OF EDIC. THIS LIMITED WARRANTY STATES YOUR EXCLUSIVE REMEDY.**

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This Limited Warranty gives you specific legal rights and you may have other rights which vary from state to state (or province).

0900.002/9989