



Electronic Service Manuals

This electronic document is provided as a service to our customers. We do not create the contents of the information contained in this document. Should you have detailed questions pertaining to the information contained in this document, you may contact Michco, or the manufacturer which provided the original information in this electronic deliverable. Michco's only part in this electronic deliverable was the electronic assembly process. By providing this manual on line we are not guaranteeing parts availability.

You may contact Michco through the following methods:

Phone (517) 484-9312 or (800) 331-3339

2011 N. High St. -- Lansing, Michigan -- 48906

Fax: (517) 484-9836

Email: CustServe@Michco.com

Web site: www.Michco.Com

Parts Web site: www.FloorMachineParts.Com

Order Parts on Line at:

www.FloorMachineParts.Com

Directly to Parts & Service:

By Email: **Shop@Michco.com**

By Fax: (517) 702-2041

By Voice: Use numbers above.

Serving the Cleaning Industry Since 1922

Notice: All copyrighted material remains property of original owners, all trademarks are property of respective owners. Manuals are subject to Manufacturer's reproduction limitations. Originals or reproductions were provided by manufacturers through a request. We make no warranty as to the correctness of information provided in this document and you assume all risk. By placing these manuals on line we are not declaring our corporation to be an manufacturer authorized dealer or provider, please check our web site for authorized manufacturers we represent.



WRANGLER

1503 AE 115 Vac



Spare parts catalogue



Catalogue de pièces de rechange



Catalogo parti di ricambio



09/2011



NSS® Enterprises, Inc.

3115 Frenchmens Road, Toledo, Ohio 43607
PHONE: (419) 531-2121 FAX: (419) 531-3761

NSS® Enterprises, Inc. European Distribution Centre
Unit II Pinfold Trading Estate * 55 Nottingham Road
STAPLEFORD NOTTINGHAM NG9 8AD ENGLAND U.K.
PHONE: (44) 0115 939 1568 * FAX: (44) 0115 949 0615

[illegible]

In order to assure a correct spare parts service, we advise you to keep the indicated elements on stock. Estimated importance of the spares as indicated hereunder

● = Indispensable Necessary Indispensable


 I ricambi originali **NSS** permettono di mantenere inalterato nel tempo le caratteristiche d'origine della vostra lavasciugapavimenti aumentandone la sicurezza e riducendone i tempi di assistenza. La qualità di un ricambio originale viene garantita da rigidi e continui controlli di qualità; inoltre tutti i nostri ricambi sono concepiti nel rispetto dell'ambiente, evitando l'utilizzo di sostanze vietate e dannose.

 To assure the correct functioning during many years, only use original **NSS** spare parts. They guarantee security and reduce reparation time. RCM spare parts quality is guaranteed through rigid control, furthermore they are developed respecting environment avoiding the use of any forbidden or dangerous substance.

 N'utilisez que des pièces détachées originelles **NSS**, elles permettent de maintenir dans le temps les caractéristiques originelles de l'autolaveuse, en garantissent la sécurité et réduisent le temps nécessaire aux réparations. La qualité des pièces détachées est garanti par des contrôles très rigides. Elles sont produites dans le respect de l'environnement et sans l'utilisation de matériaux interdit ni dangereux.

TAV. N° 5047

CHASSIS ASSEMBLY - 115Vac

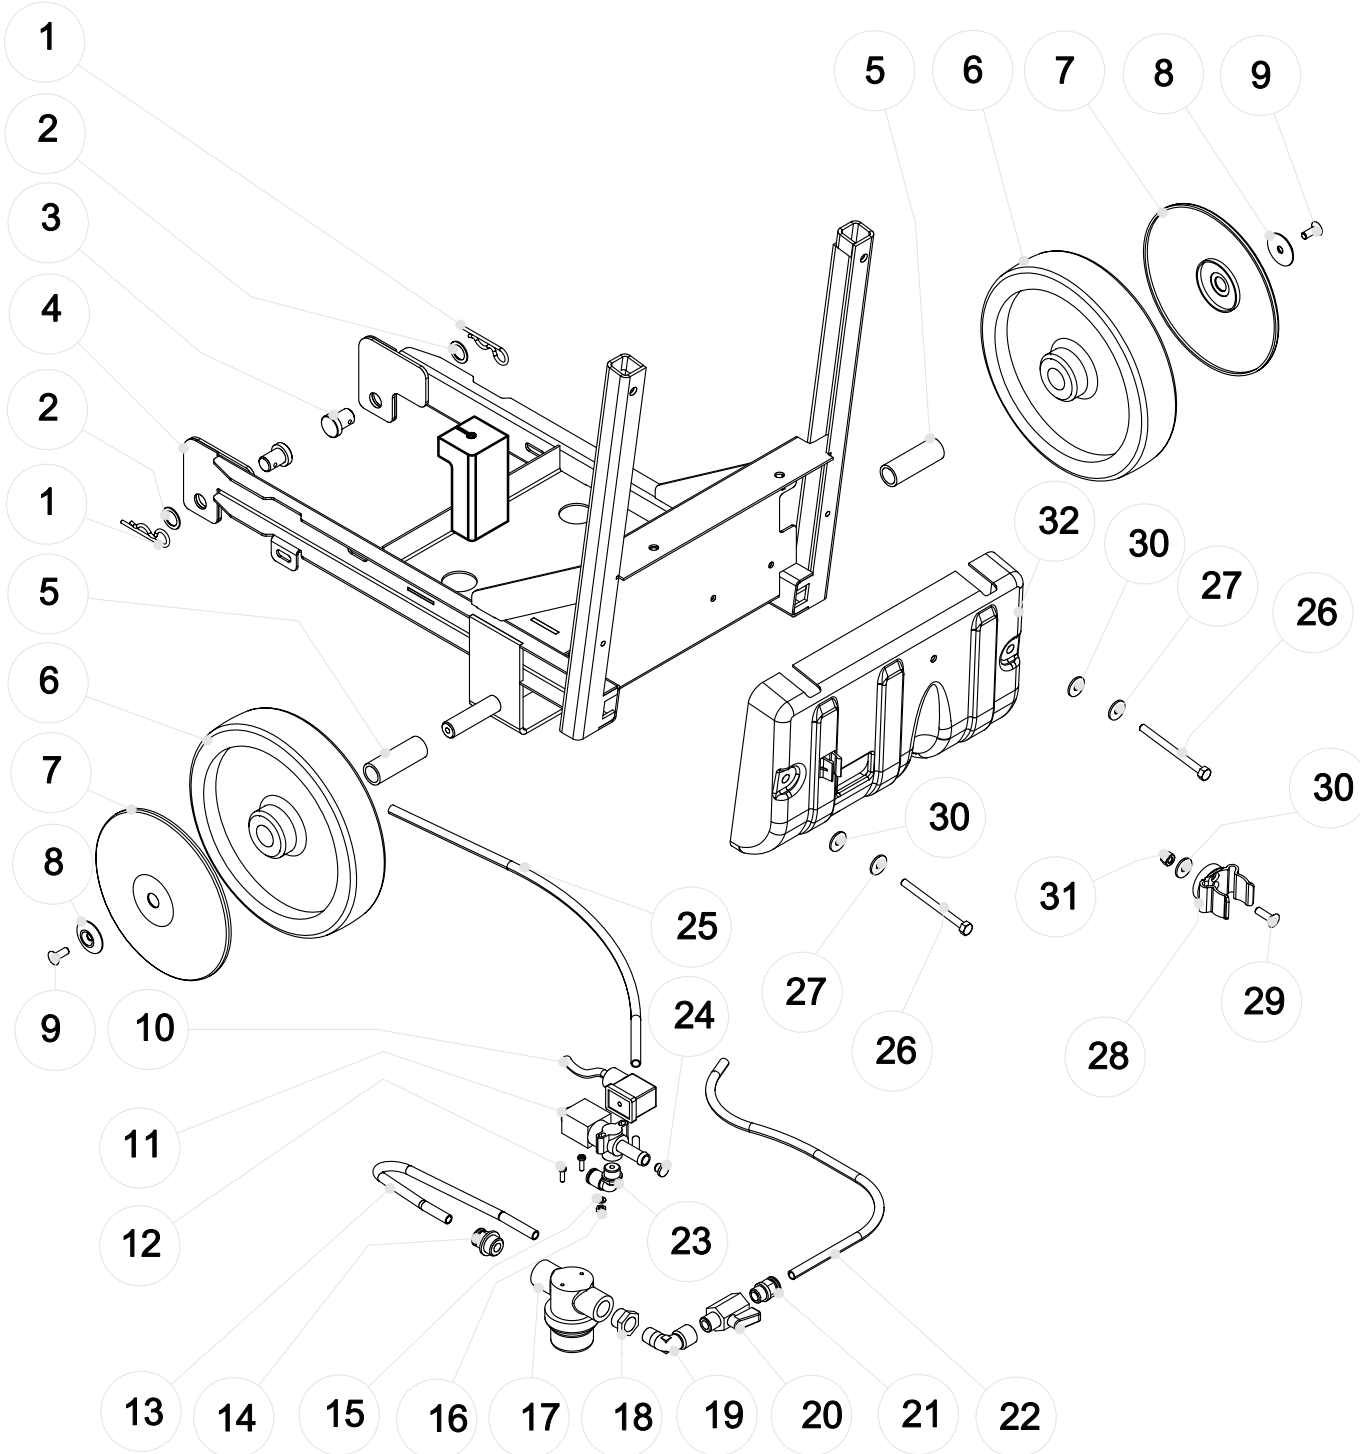


TAV. N° 5047

CHASSIS ASSEMBLY - 115Vac

[illegible]

TAV. N° 5051

SOLUTION TANK ASSEMBLY

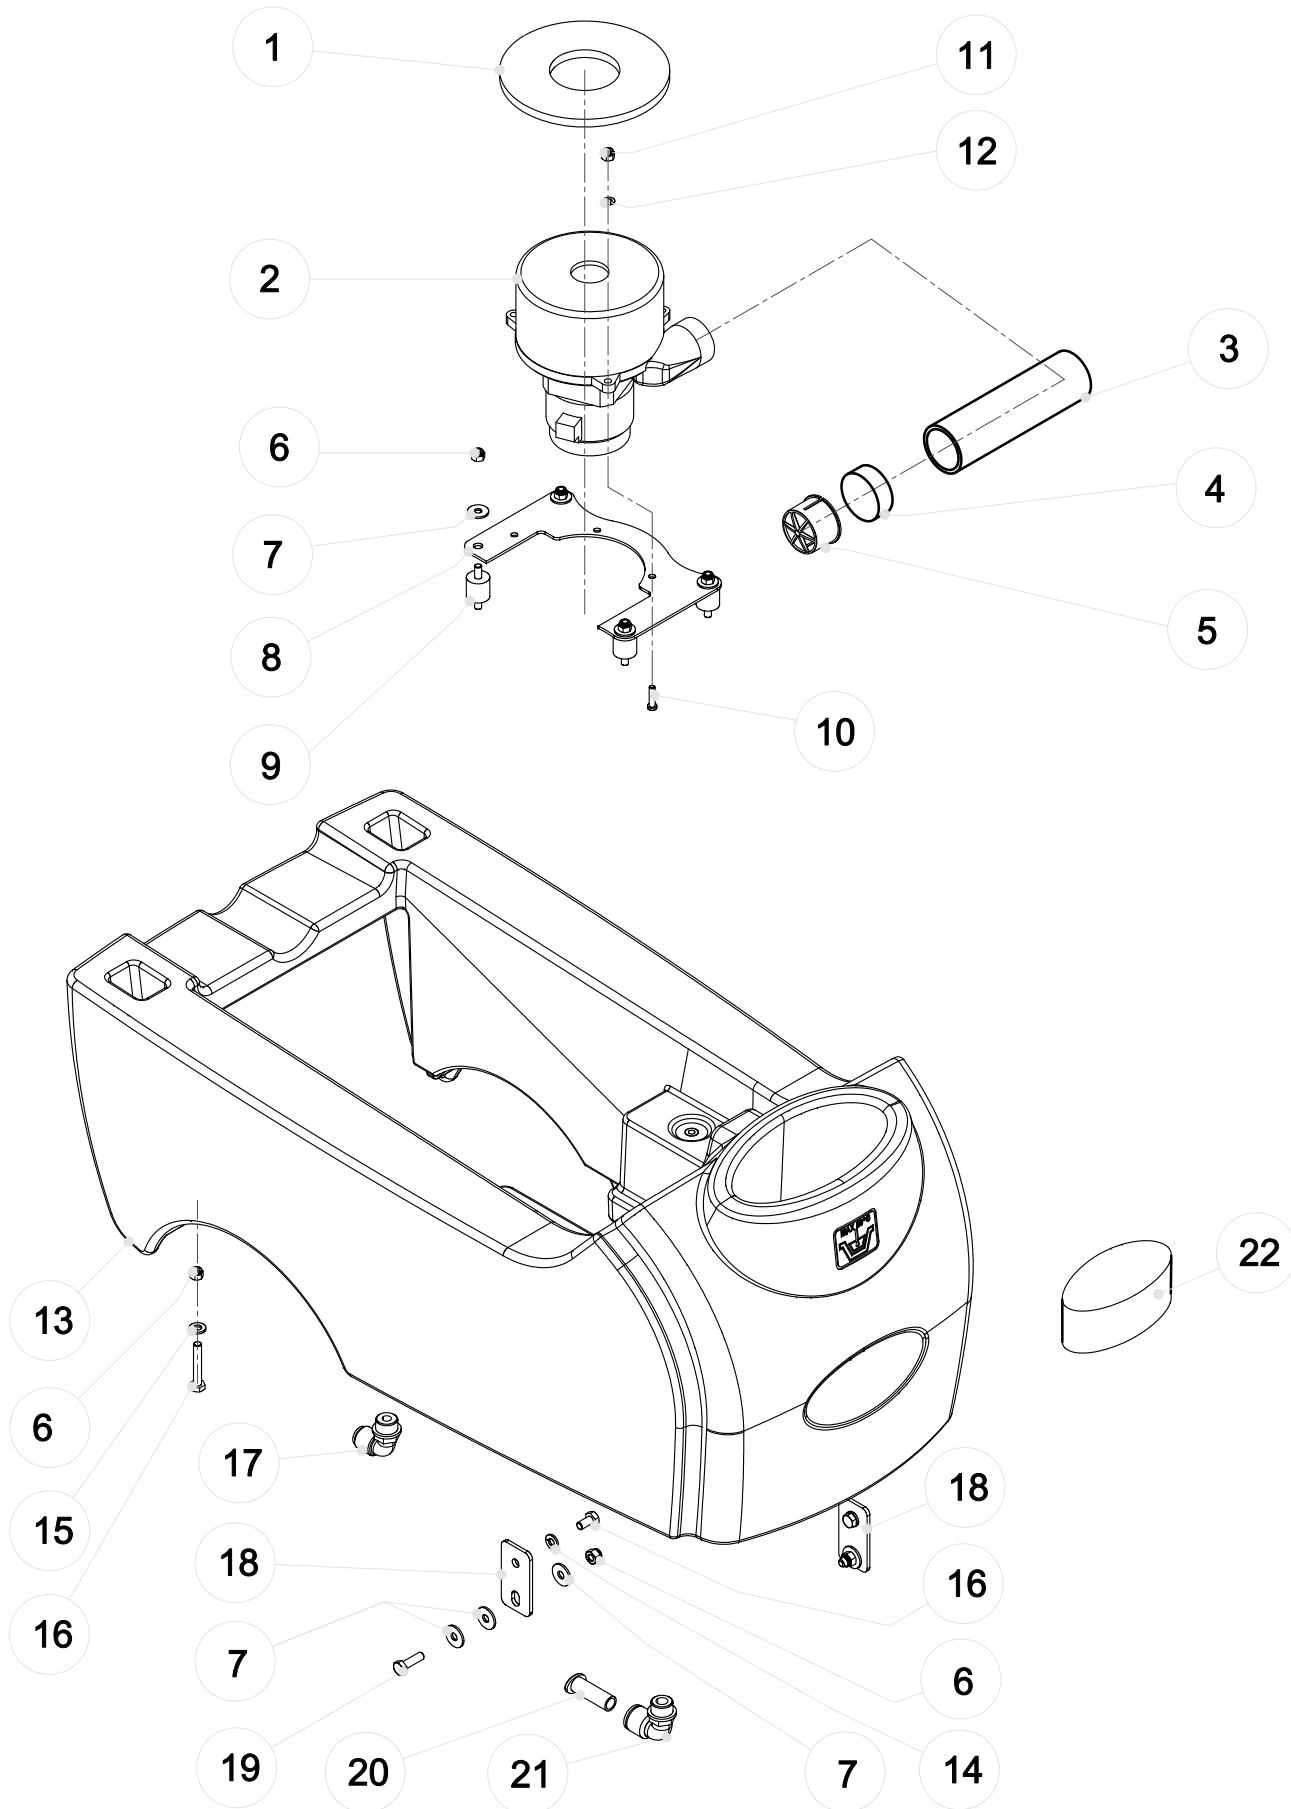


TAV. N° 5051

SOLUTION TANK ASSEMBLY

[illegible]

TAV. N° 5002

RECOVERY TANK ASSEMBLY

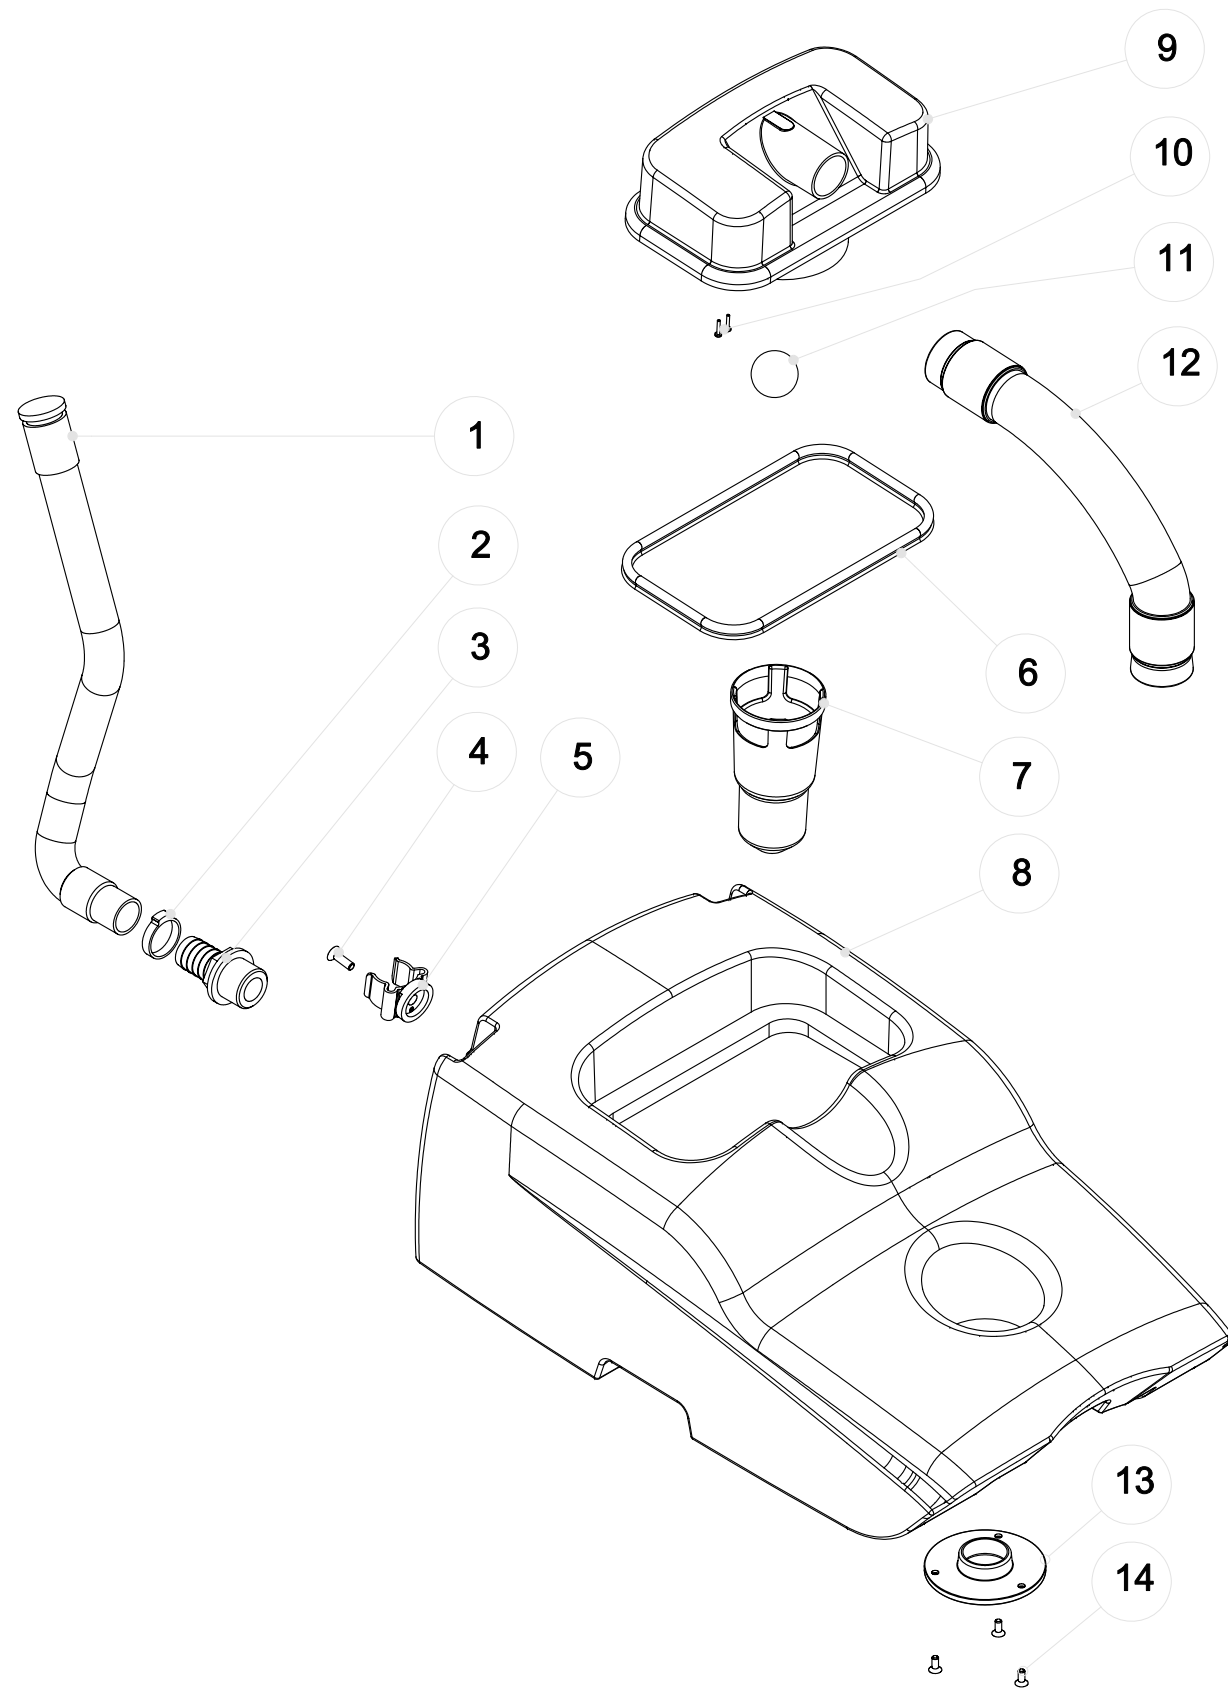

TAV. N° 5002

RECOVERY TANK ASSEMBLY

[illegible]


HANDLE ASSEMBLY

This exploded view diagram illustrates the components of a handle assembly. The parts are numbered as follows:

- 1: Power supply unit
- 2: Screws
- 3: Screws
- 4: Cable
- 5: Screws
- 6: Screws
- 7: Screws
- 8: Screws
- 9: Screws
- 10: Screws
- 11: Screws
- 12A: Screws
- 12B: Screws
- 13: Screws
- 14: Screws
- 15: Screws
- 16: Screws
- 17: Screws
- 18: Screws
- 19: Screws
- 20: Screws
- 21: Screws
- 22: Screws
- 23: Screws
- 24: Screws
- 25: Screws
- 26: Screws
- 27: Screws
- 28: Screws
- 29: Screws
- 30: Screws
- 31: Screws
- 32: Screws
- 33: Screws
- 34: Screws
- 35: Screws
- 36: Screws
- 37: Screws
- 38: Screws
- 39: Screws

[illegible]

TAV. N° 5055

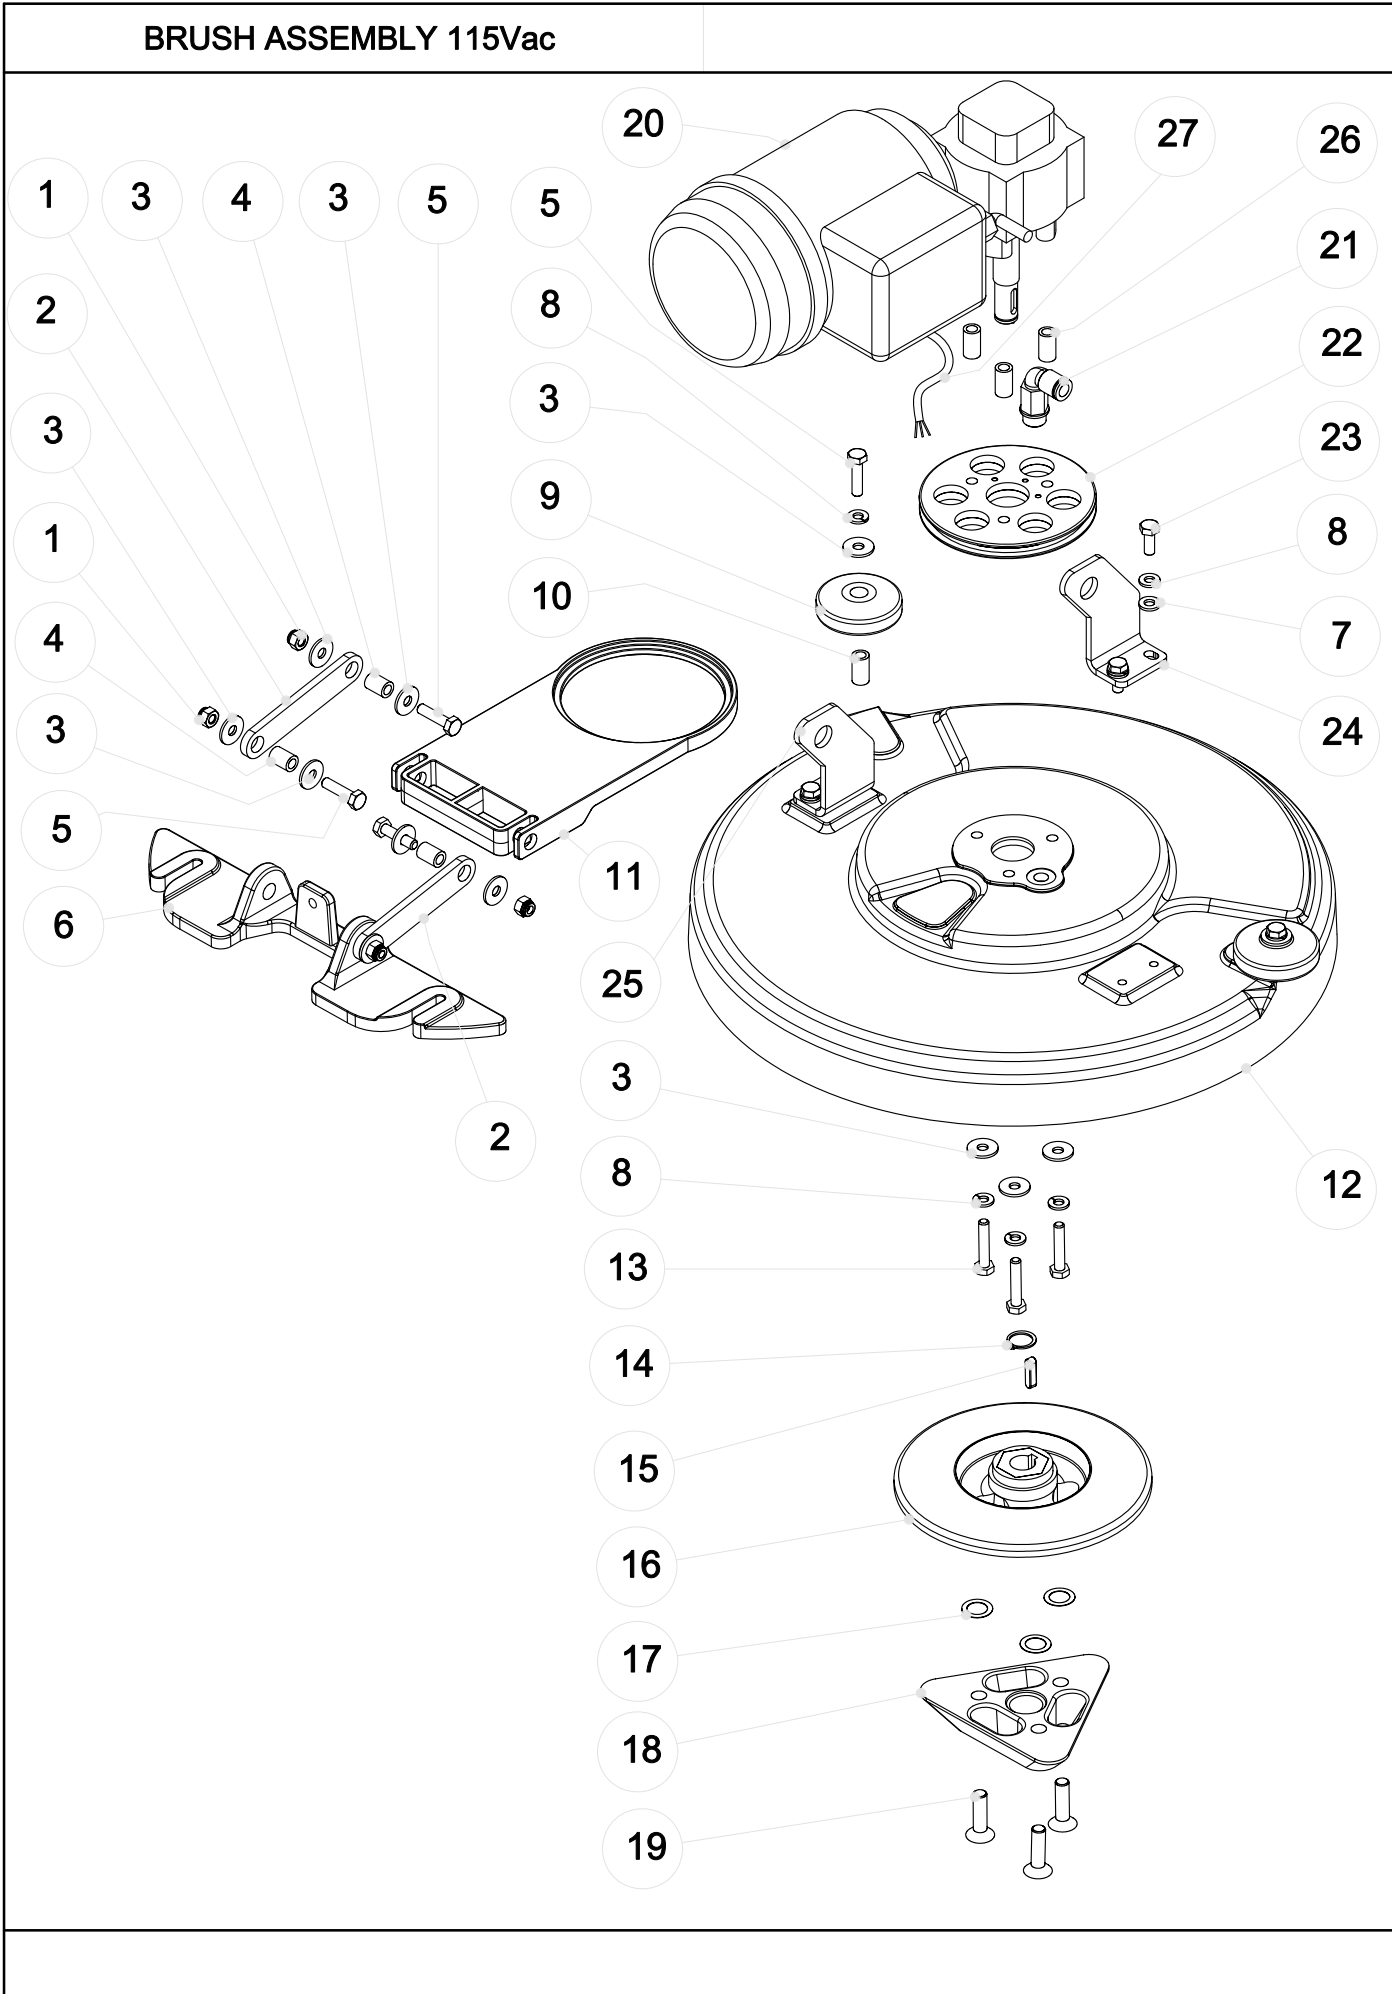


TAV. N° 5055

[illegible]

--


TAV. N° 5005

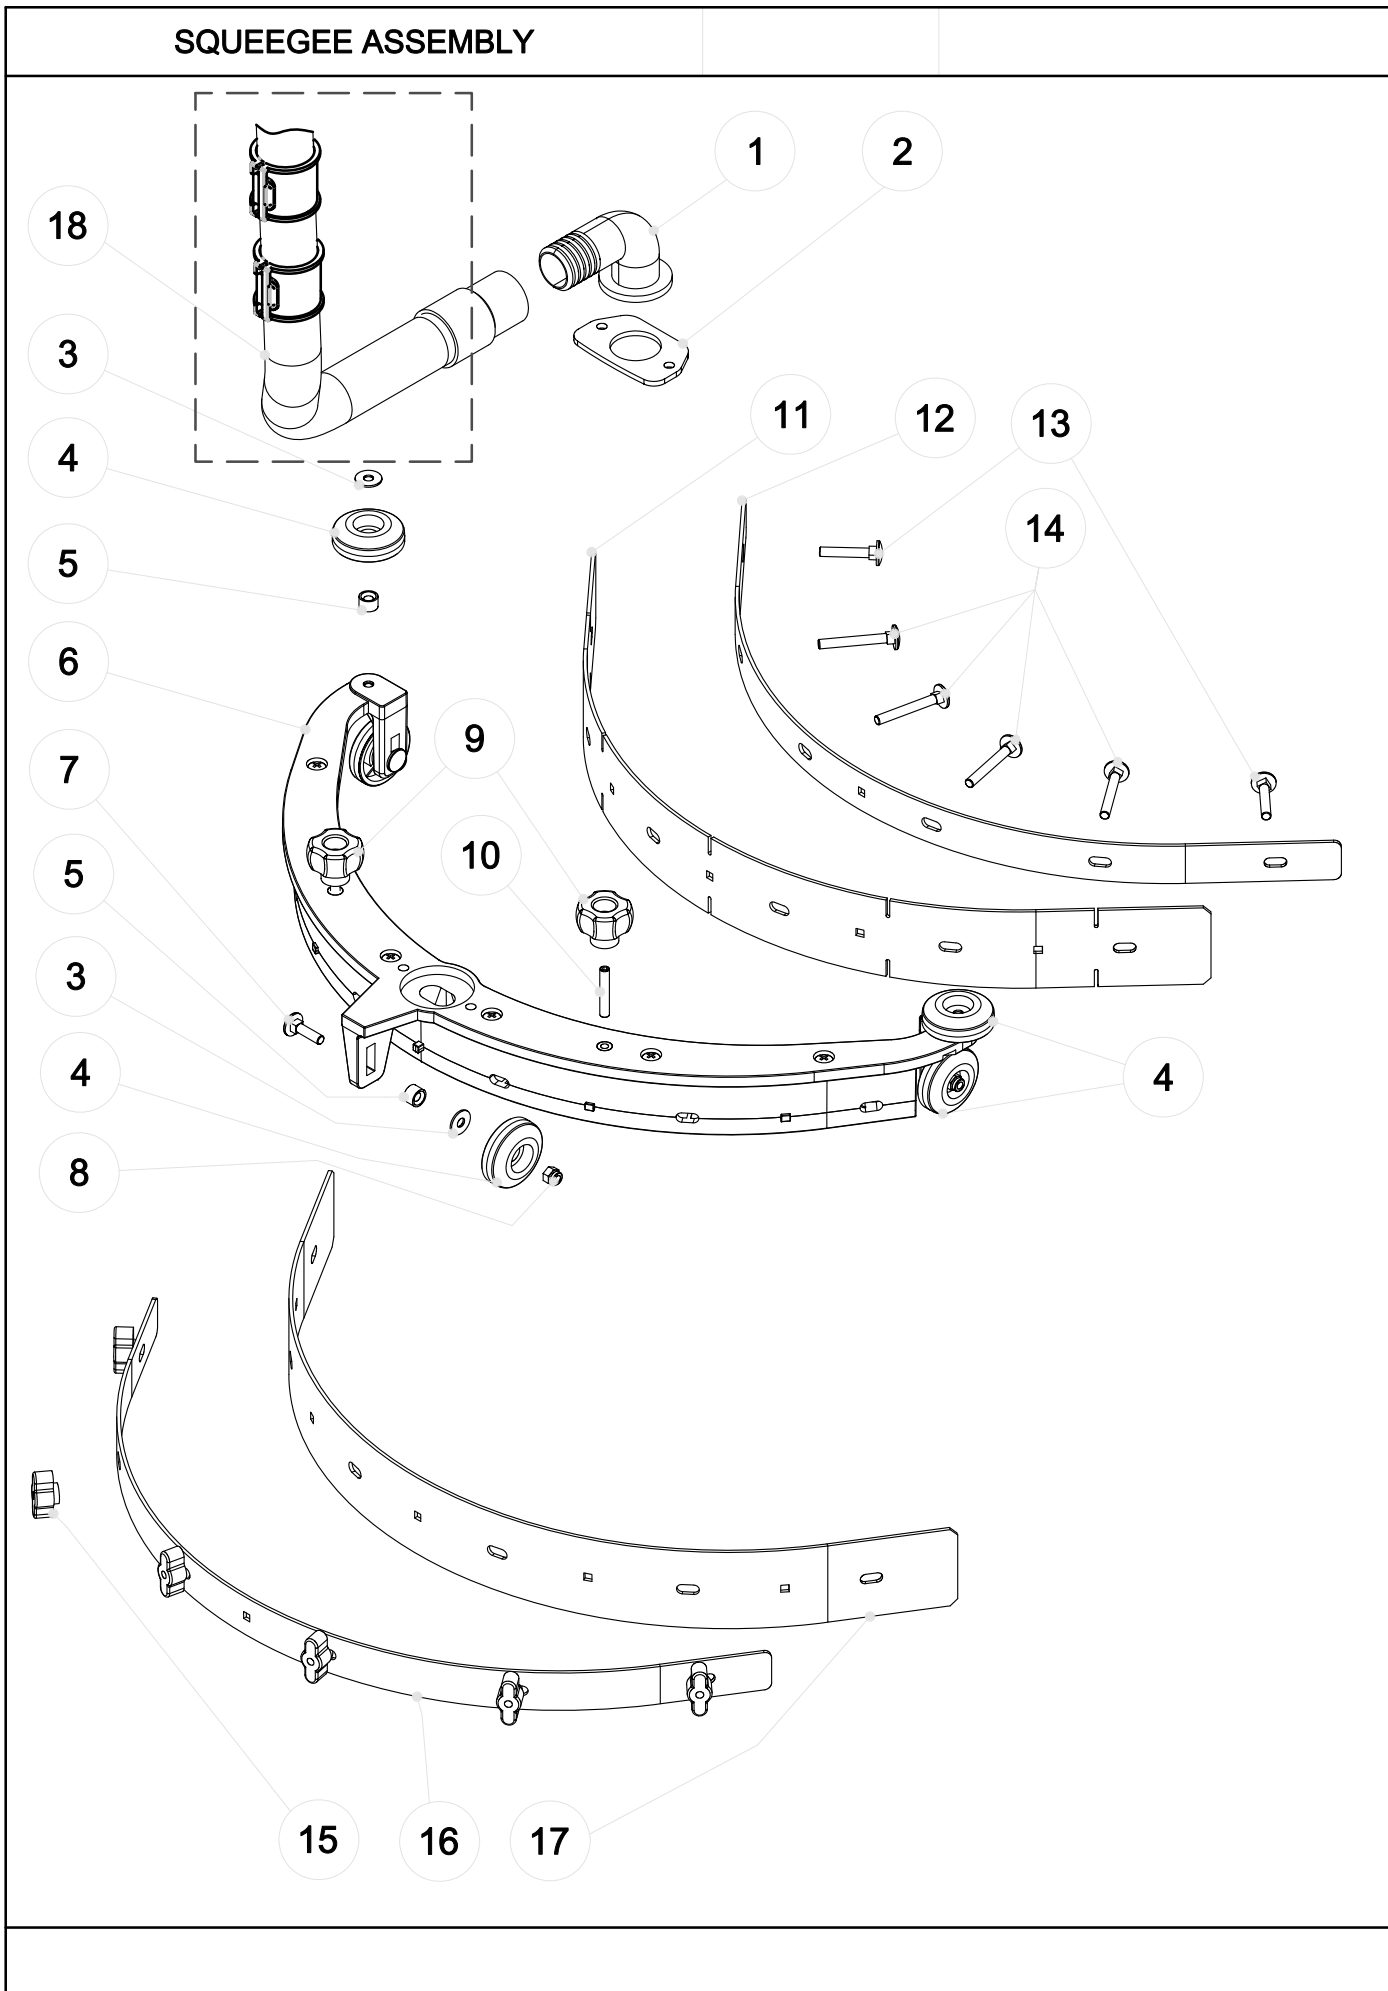

TAV. N° 5005

[illegible]

TAV. N° 5006

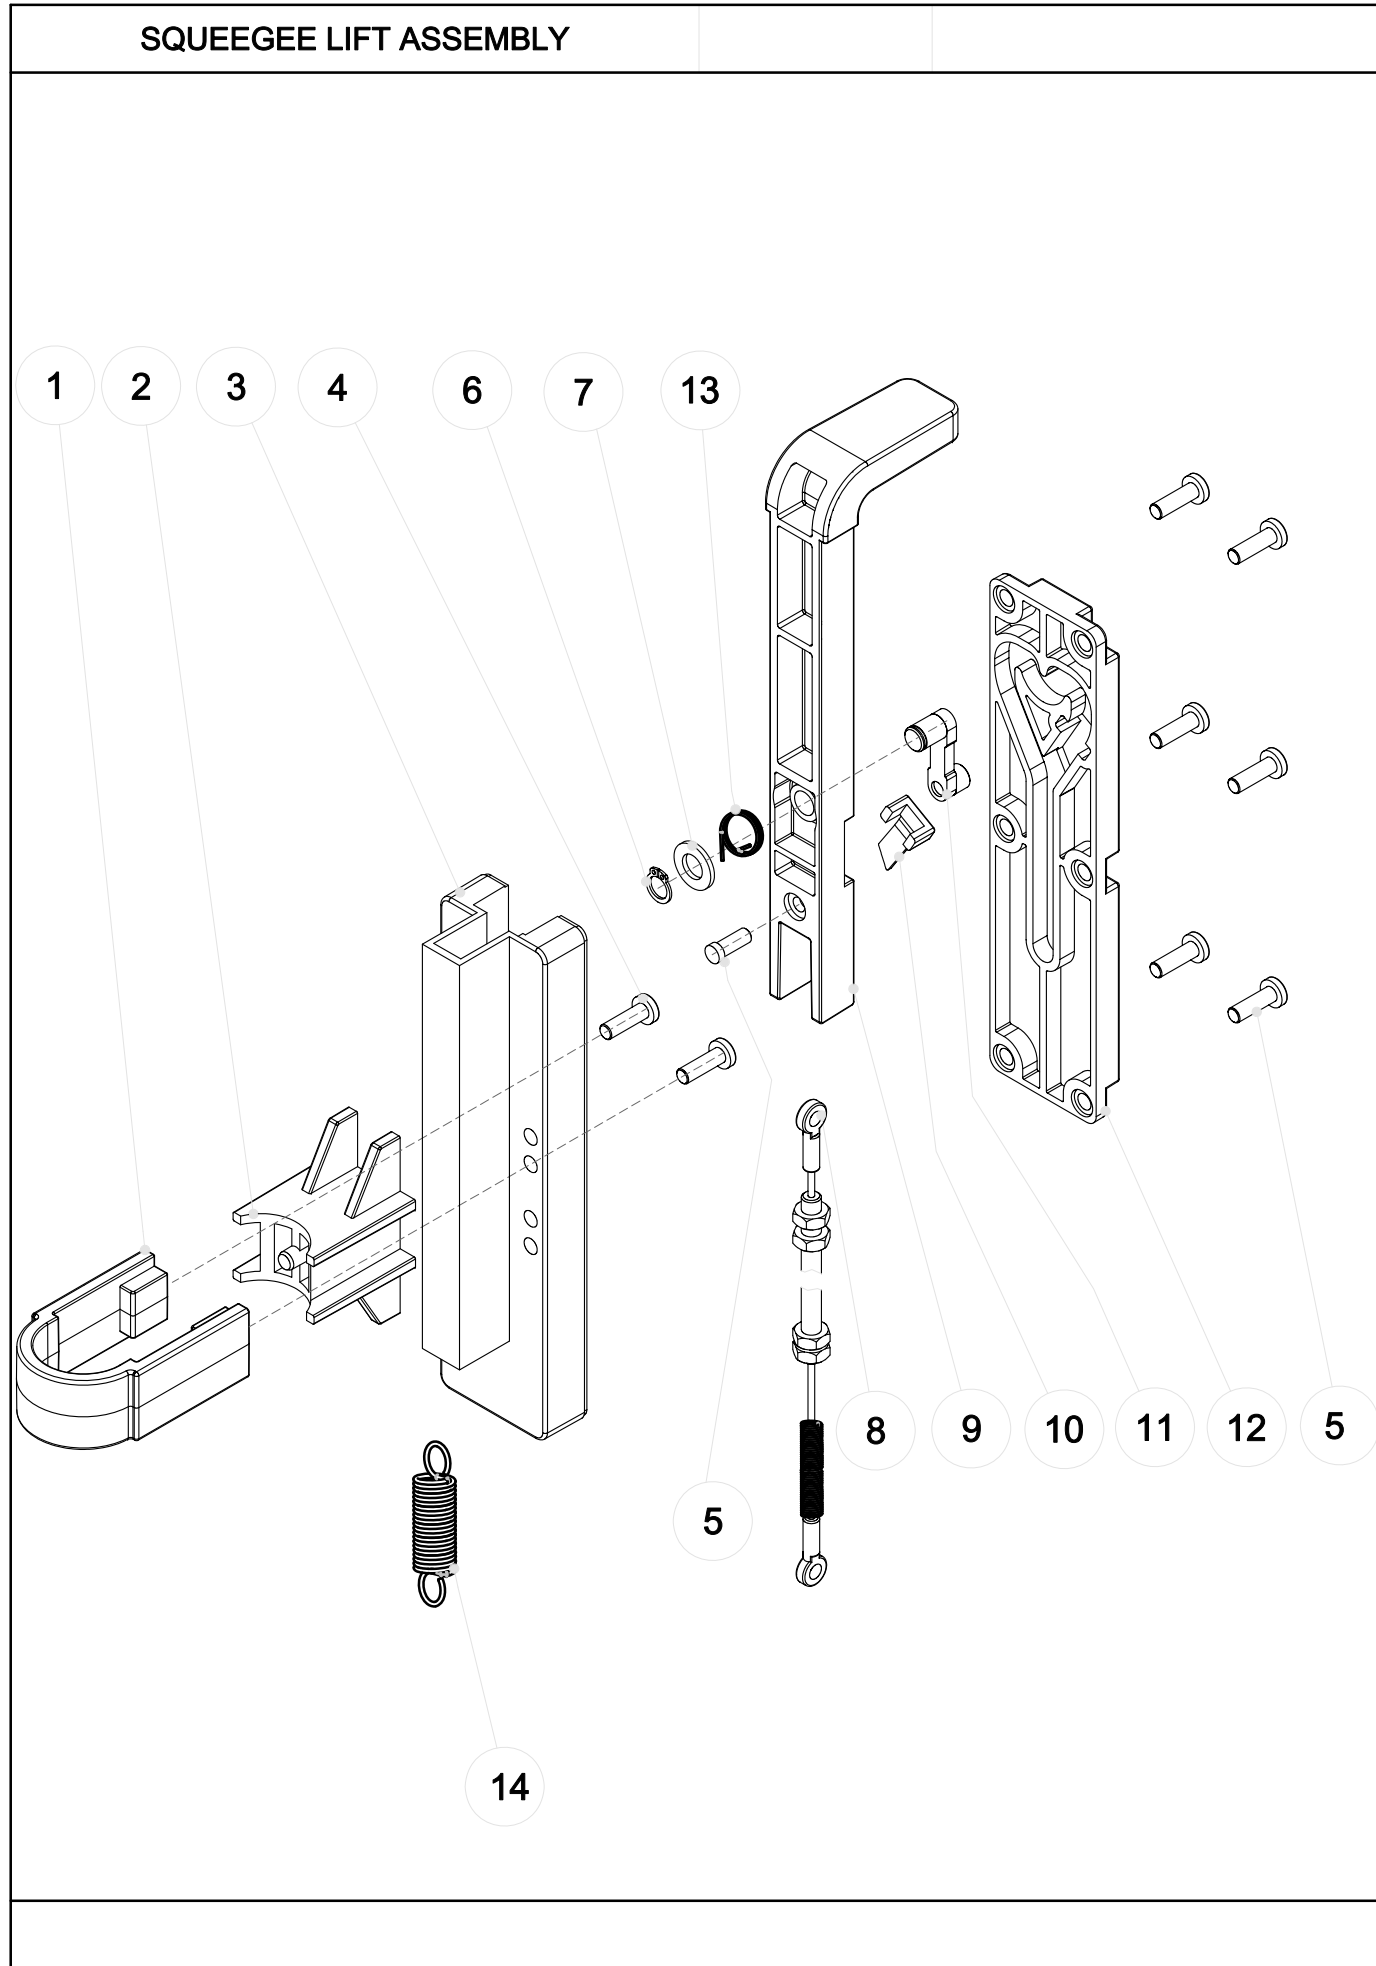


TAV. N° 5006

[illegible]

TAV. N° 5048

ELECTRIC PANEL

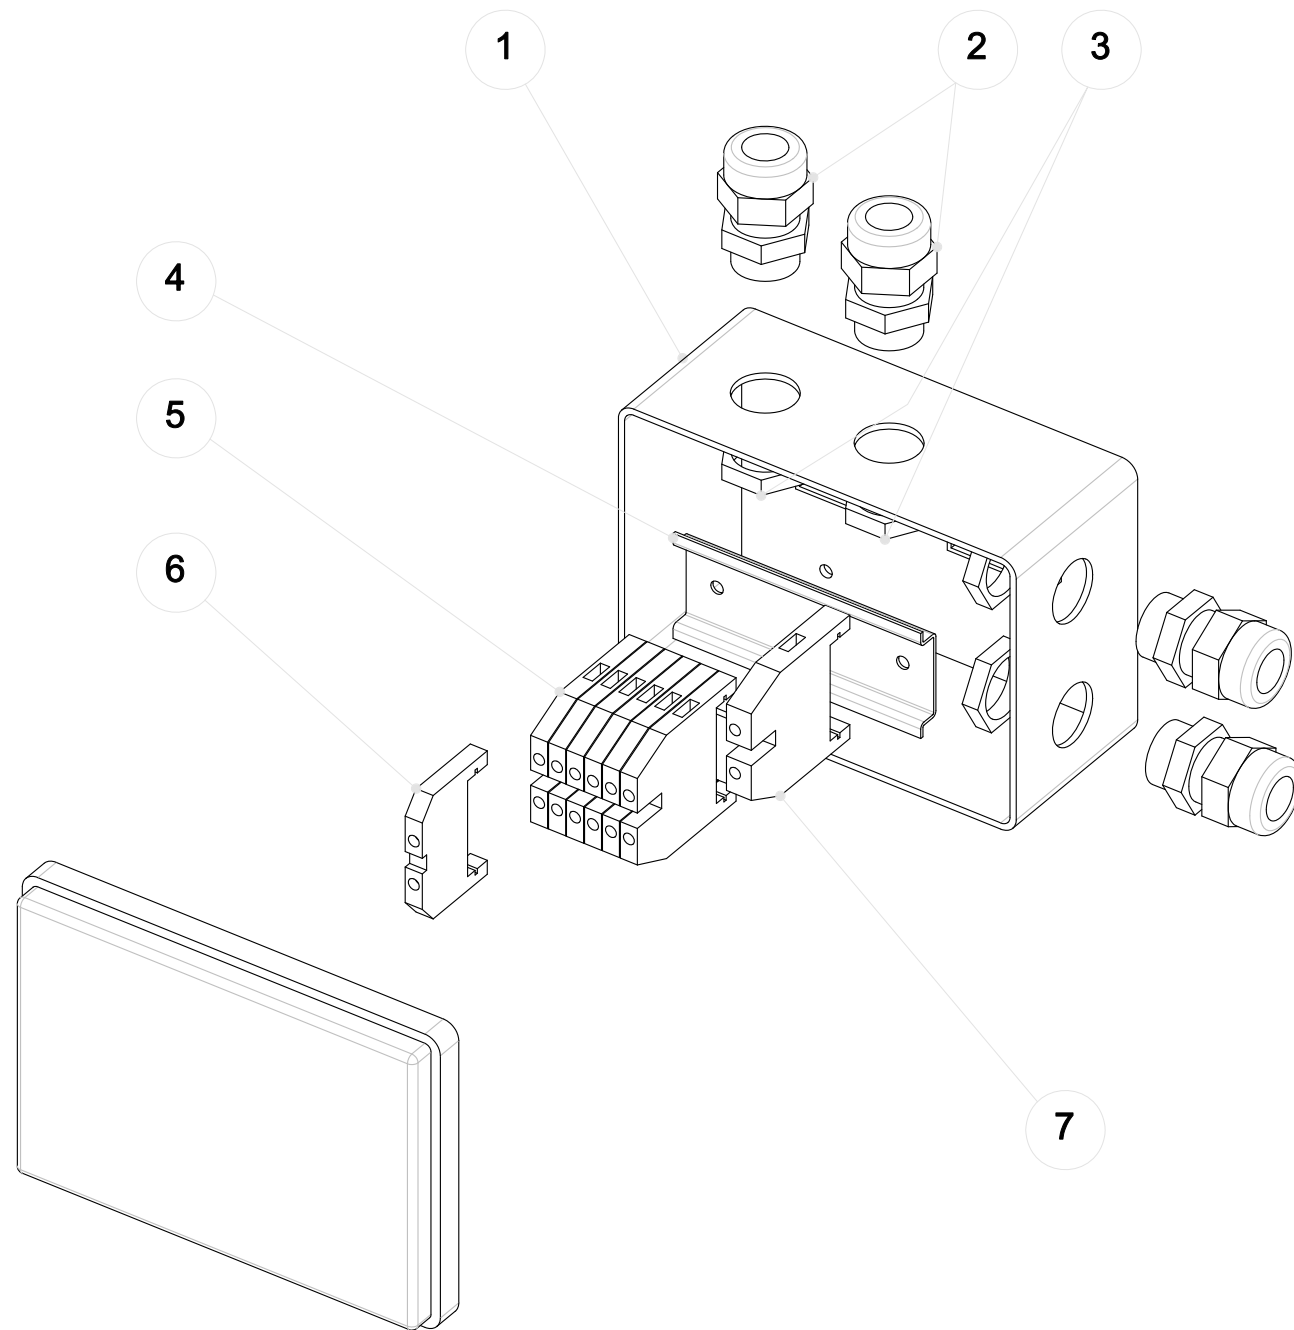


TAV. N° 5048

ELECTRIC PANEL

[illegible]

TAV. N° 5049

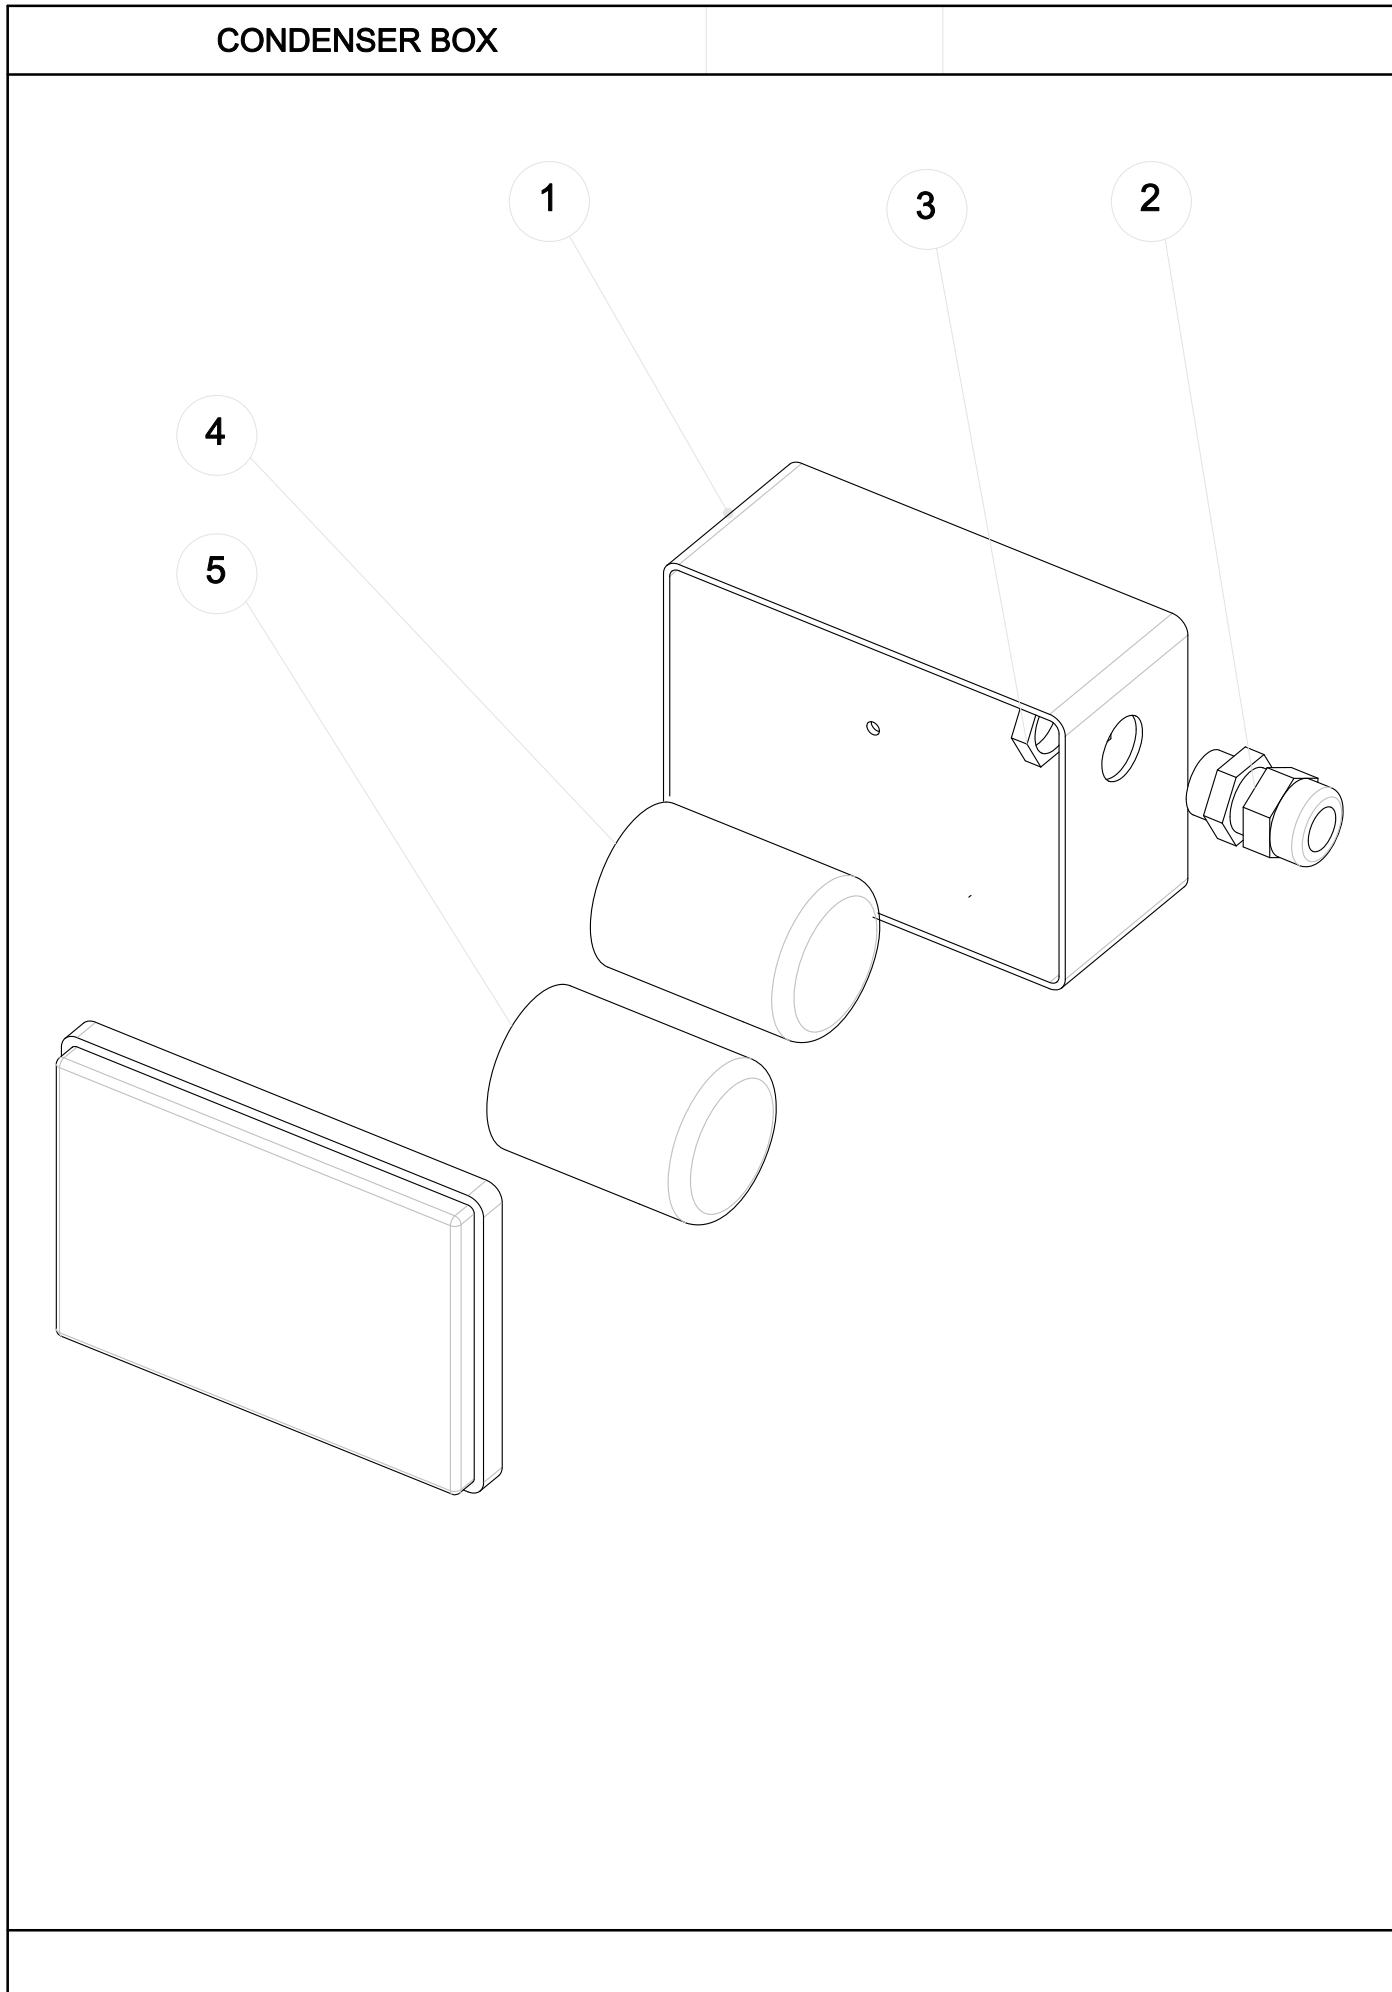

TAV. N° 5049

[illegible]