



Electronic Service Manuals

This electronic document is provided as a service to our customers. We do not create the contents of the information contained in this document. Should you have detailed questions pertaining to the information contained in this document, you may contact Michco, or the manufacturer which provided the original information in this electronic deliverable. Michco's only part in this electronic deliverable was the electronic assembly process. By providing this manual on line we are not guaranteeing parts availability.

You may contact Michco through the following methods:

Phone (517) 484-9312 or (800) 331-3339

2011 N. High St. -- Lansing, Michigan -- 48906

Fax: (517) 484-9836

Email: CustServe@Michco.com

Web site: www.Michco.Com

Parts Web site: www.FloorMachineParts.Com

Order Parts on Line at:

www.FloorMachineParts.Com

Directly to Parts & Service:

By Email: **Shop@Michco.com**

By Fax: (517) 702-2041



By Voice: Use numbers above.

Serving the Cleaning Industry Since 1922

Notice: All copyrighted material remains property of original owners, all trademarks are property of respective owners. Manuals are subject to Manufacturer's reproduction limitations. Originals or reproductions were provided by manufacturers through a request. We make no warranty as to the correctness of information provided in this document and you assume all risk. By placing these manuals on line we are not declaring our corporation to be an manufacturer authorized dealer or provider, please check our web site for authorized manufacturers we represent.

OPERATING INSTRUCTIONS AND PARTS FOR
FOR
TK-26525 KLEEN SWEEP


Parker

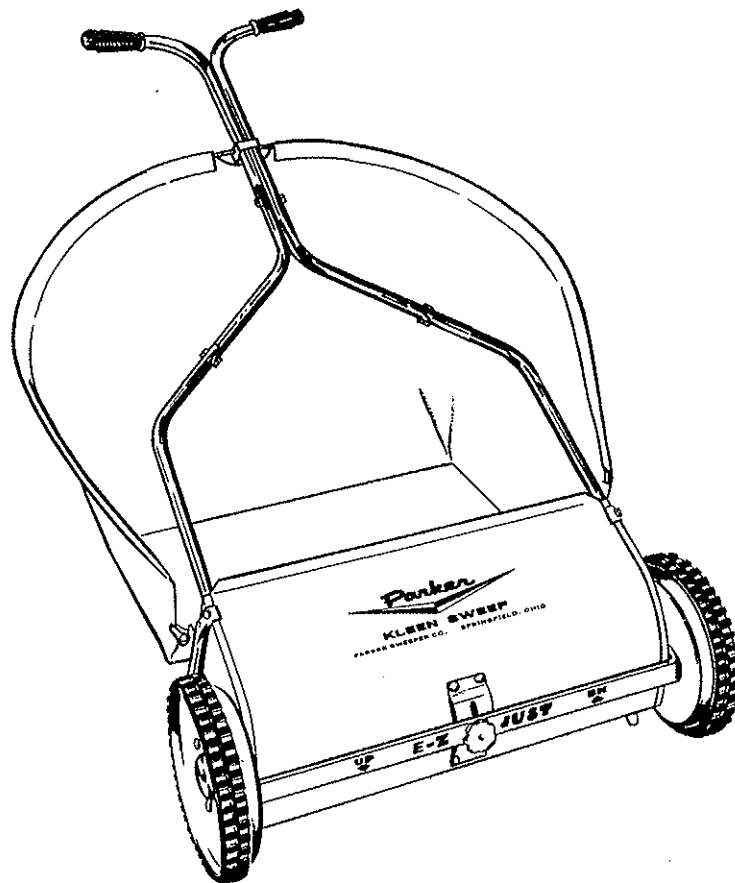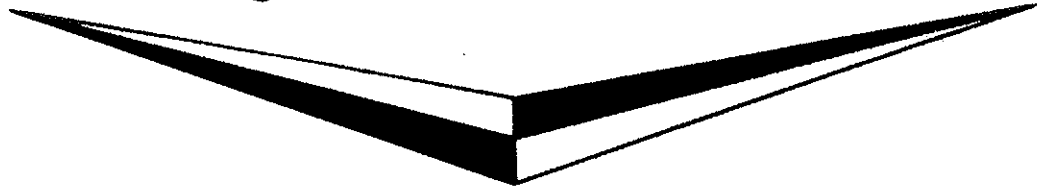

NOTICE: These instructions were written to assist you in assembling your Lawn Sweeper quickly and correctly. Read instructions thoroughly before attempting assembly so that you are familiar with the complete procedure.

PARKER SWEEPER COMPANY

BOX 720

Printed in U.S.A.

SPRINGFIELD, OHIO

ASSEMBLY INSTRUCTIONS

1. Place sweeper on ground in upright position.
2. Remove bolts from corner of hood and position R.H. handle UNDER R.H. corner of hood. Replace hardware as it was before.
3. Repeat instruction No. 2 for L.H. handle.
4. Remove bolts from lower end of upper handle assembly.

Assemble handle assembly to lower handles with bolts and nuts you just removed, make sure that basket hanger points down.

5. Assemble basket by spreading the two upper basket rods so that the L.H. rod will telescope into the connector of R.H. rod at top center of basket.
6. Place basket into position as shown on front cover.

OPERATING INSTRUCTIONS

Brush Height Adjustment. Loosen adjusting knob, Ref. No. 28. To raise brushes to extreme height, push down on frame assembly, Ref. No. 15, as far as possible. To lower brushes to lowest position, lift up on frame assembly as far as possible. Secure knob when desired adjustment is obtained. When adjusting brushes, the hood assembly will automatically be set in the correct position.

1. For grass clippings or leaves, adjust brushes to highest position. After trial run on lawn, should the setting be too high, lower slightly and try again until correct setting is found. Brush life may be prolonged by adjusting so contact with ground is light. The lighter the contact, the longer the wear and easier to push.
2. For patio, sidewalk, and driveway sweeping, adjust brushes so they just contact ground.

NOTE: IF SWEEPER PUSHES HARD, THE HOOD IS SET TOO LOW.

Maintenance. Lubricate the sweeper about once each season to insure long unit life and easy operation.

1. Oil the wheel gear and pinion through oil hole on each side of wheel hub.

2. It is not necessary to oil nylon brush bearings.

Canvas Basket Care. The basket should always be emptied immediately of wet clippings or leaves. Not doing so will cause it to mildew. Always store the sweeper in a dry place.

Care and Replacement of Brushes. The brushes used on this sweeper are made of the finest bristles that will give years of service if given proper care. Should they become bent from constant use, dampening and straightening will reset the bristles upright. It is also possible to straighten bristles by reversing the brushes on reel shaft.

To Reverse or Replace Brushes:

1. Turn the sweeper upside down on the ground.
2. Remove the bolts which hold the brush sections to the reel shaft. Reverse and replace the brushes and retighten the bolts.

Storage. Hang sweeper on the wall by the upper handle for storage.

ALWAYS GIVE THE FOLLOWING INFORMATION WHEN ORDERING REPAIR PARTS:

1. PART NUMBER (Not Ref. No.)
2. QUANTITY NEEDED
3. DESCRIPTION OF PART
4. SERIAL No. (Found on Guarantee Card)
5. MODEL No. TK-26525

If unable to obtain parts locally, write down above information and send to:
PARKER SWEEPER CO., BOX 720, SPRINGFIELD, OHIO 45501

Your unit is right hand (R.H.) or left hand (L.H.) as you stand behind it.

IMPORTANT

KLEEN-SWEEP HAND LAWN SWEEPER	SIZE 25"	PRODUCTION YEAR 1969	MODEL No. TK-26525
--	---------------------	---------------------------------	-------------------------------

Ref. No.	Part No.	Qty.	Description
1	64-152-A	2	Grip Handle
2	68-223-C	2	Handle - Upper
3	64-160-B	1	Hanger - Upper Basket
4	120-24-B	4	Brush - Strip
5	365-416	4	Nut - Hex Lock 1/4-20
6	64-150-C	1	Basket
7	355-416	2	Nut - Stamped Square 1/4-20
8	68-225-LC	1	Handle - Lower L.H.
9	355-416	8	Nut - Square 1/4-20
10	65-416-8	2	Bolt - Hex Head 1/4-20 x 1/2
11	65-416-20	2	Bolt - Hex Head 1/4-20 x 1 1/4
12	63-255-D	1	Support - Handle
13	69-12-B	1	Shaft - Reel
14	64-140-D	1	Head
15	59-43-D	1	Frame
16	946-1216-20	6	Washer - Fiber 3/4 I.D. x 1 1/4 O.D.
17	59-44-C	2	Wheel - Complete
18	63-224-B	2	Tire
19	335-516	2	Nut - Hex 5/16-18

Ref. No.	Part No.	Qty.	Description
20	945-516	2	Washer - Flat S. A. E. 5/16
21	59-29-A	2	Spacer
22	59-55-A	2	Screw - Truss-Head
23	55-161-A	2	Washer - Special
24	69-233-A	2	Bearing - Nylon
25	64-162-LA	1	Hanger - Lower Basket L.H.
26	70-516-12	1	Bolt - Carriage 5/16-18 x 3/4
27	936-716	1	Washer - Int. Tooth Lock 7/16
28	59-47-B	1	Knob - Adjusting
29	45-25-A	2	Pawl
30	45-56-18-R	1	Pinion R.H. (Shown)
31	45-56-19-L	1	Pinion L.H. (Not Shown)
32	59-26-XCP	2	Gear - Wheel
33	59-20-C	4	Rim - Wheel
34	380-332-16	2	Pin - Cotter 3/32 x 1
35	59-46-A	2	Cap - Hub
36	64-161-RA	1	Hanger - Lower Basket R.H.
37	65-416-16	6	Bolt - Hex Head 1/4-20 x 1
38	62-112-B	2	Rollers - Complete
39	65-416-32	4	Bolt - Hex Head 1/4-20 x 2
40	64-156-B	1	Rod - Lower Basket
41	64-155-LF	1	Rod - Upper Basket L.H.
42	62-75-A	2	Roller - Wood
43	62-77-B	2	Bracket - Roller
44	62-76-A	2	Spacer
45	64-153-B	1	Rod - Upper Assy. R.H.
46	68-224-RC	1	Handle - Lower R.H.
47	364-416	8	Nut - Hex Lock 1/4-20 thin
48	65-416-36	1	Bolt - Hex Head 1/4-20 x 2 1/4
49	61-416-8	6	Cap Screw Hex Hd. Thd. Cut 1/4-28 x 1/2
50	69-04-A	6	Brush Strip Clamp
51	67-243-A	2	Roll Pin 5/32 x 1"

RIW SA-1583-B

