


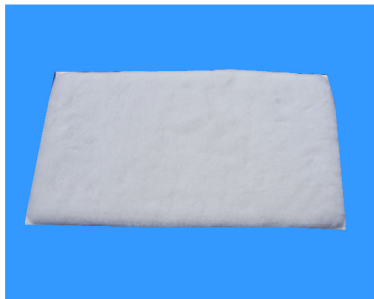

The Polar Pad

Keeping rubber floors looking spectacular can be a chore, but not anymore, with Tuway's Polar Pad. Just take a look at these results!




The Polar Pad is the key to success with any rubber floor care maintenance program.

- ✓ Deep cleans while pulling debris out of all the nooks and crannies.
- ✓ Will contour to any floor type.
- ✓ Will not burn "hot spots" into your flooring.
- ✓ Improves indoor air quality with built-in dust control.
- ✓ Soft enough to polish, yet tough enough to deep clean.
- ✓ Hand wash or launder to clean.
- ✓ For use with Auto Scrubbers.
- ✓ 100% Microfiber.




THE RESULTS ARE IN!

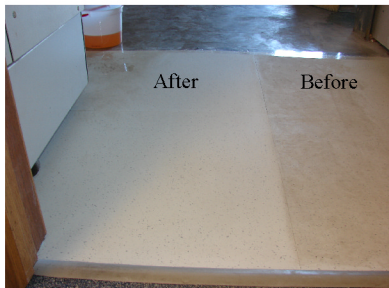

"TUWAY'S POLAR PAD WILL KEEP YOUR FLOORS LOOKING BRAND NEW"

Rubber Flooring Dust Mop

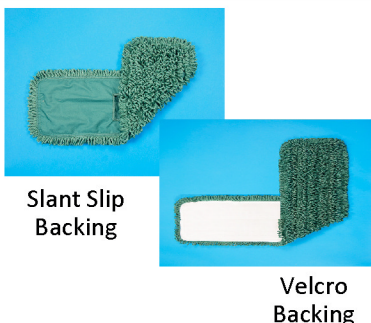

Slant Slip
Backing

Velcro
Backing

Microfiber Loopmaster

The Loopmaster's traditional looped ends make dust mopping easy and efficient. This mop offers superior cleaning and lint-free dusting. Comes in a polyester slant slip backing or a nylon looped velcro backing. The Loopmaster dusts your floors while picking up all your large debris. Use this dust mop prior to cleaning with the Polar Pad. 80/20 Microfiber blend. Launderable. Available in 18"-60" sizes.

Cleaning Instructions

Auto Scrubbers - Rubber Floor Maintenance for Existing Floors

1. Place "Floor Hazard" signs in area to be buffed or polished.
2. If floor finish has been applied, remove from floor making sure there is no residual finish remaining. (Consult manufacturer's maintenance instructions for the proper procedure.)
3. Use Tuway's Microfiber Dust Mop to remove debris from floor. Replace pad often.
4. Thoroughly clean floor with a neutral cleaner using your auto scrubber and Tuway's Polar Pad. Must have a continuous flow of cleaning solution over pad.
5. Using an auto scrubber, attach a dry Tuway Polar Pad to the machine to "dry" buff the floor.
6. By repeating steps 4 and 5 on a routine basis, the level of gloss will continue to increase over time.

Auto Scrubbers - Rubber Floor Maintenance for New Floors

1. Place "Floor Hazard" signs in area to be buffed or polished.
2. Use Tuway's Microfiber Dust Mop to remove debris from floor. Replace pad often.
3. Thoroughly clean floor with a neutral cleaner using your auto scrubber and Tuway's Polar Pad. Must have a continuous flow of cleaning solution over pad.
4. Using an auto scrubber, attach a dry Tuway Polar Pad to the machine to "dry" buff the floor.
5. By repeating steps 3 and 4 on a routine basis, the level of gloss will continue to increase over time.