



Electronic Service Manuals

This electronic document is provided as a service to our customers. We do not create the contents of the information contained in this document. Should you have detailed questions pertaining to the information contained in this document, you may contact Michco, or the manufacturer which provided the original information in this electronic deliverable. Michco's only part in this electronic deliverable was the electronic assembly process. By providing this manual online we are not guaranteeing parts availability.

You may contact Michco through the following methods:

Phone (517) 484-9312

2011 N. High St. -- Lansing, Michigan -- 48906

Fax: (517) 484-9836

Email: CustomerService@Michco.com

Website: www.Michco.Com

Order Parts online at:

www.Michco.Com

Directly to Parts & Service:

By Email: **CustomerService@Michco.com**

By Fax: (517) 484-9836

By Voice: (517) 484-9312

Serving the Cleaning Industry Since 1922

Notice: All copyrighted material remains property of original owners, all trademarks are property of respective owners. Manuals are subject to Manufacturer's reproduction limitations. Originals or reproductions were provided by manufacturers through a request. We make no warranty as to the correctness of information provided in this document and you assume all risk. By placing these manuals on line we are not declaring our corporation to be an manufacturer authorized dealer or provider, please check our web site for authorized manufacturers we represent.





S30

(Diesel)

(SN/ 006501 -)

Sweeper Parts Manual

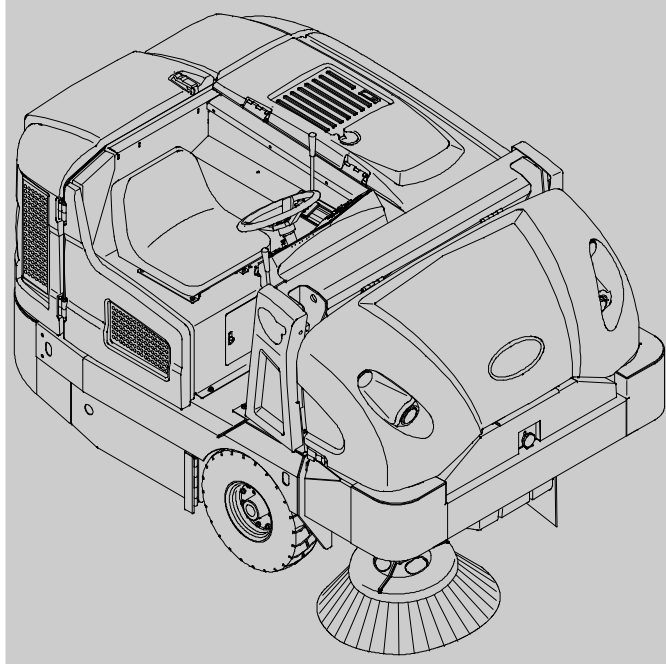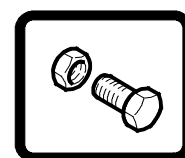

SweepMax[®] Plus System
TennantTrue[®] Parts
IRIS[®] a Tennant Technology

Global







For the latest Parts manuals and other
language Operator manuals, visit:

www.tennantco.com/manuals

9013315
Rev. 06 (8-2019)

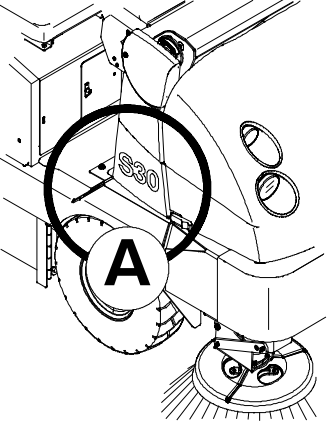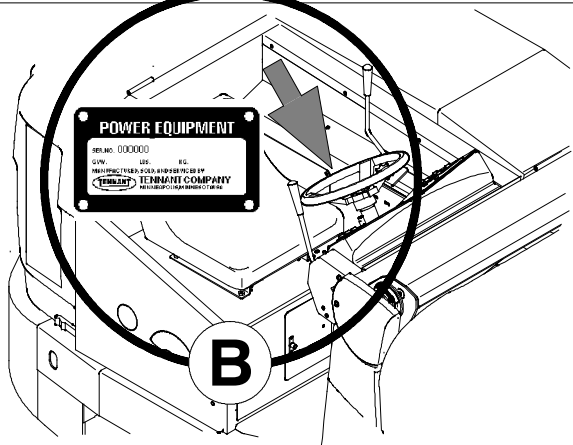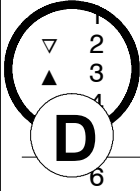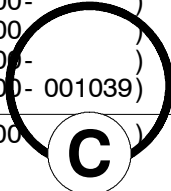

				
Ref	Part No.	Serial Number	Description	Qty.
	82681	(000000-)	Bracket W/dt, Lpg Mount	1
	63810	(000000-)	Latch Assy, Lpg Tank Mtg, W/Nut	4
	51839	(000000-)	Nut Adjustable, Lpg Tank Mtg	2
	49263	(000000-)	Tie, Cable	3
	82556	(000000- 001039)	Bracket, Vaporizer	1
	54930	(000000-)	Vaporizer, LPG	1
				

EN	HOW TO ORDER PARTS - See diagram above Only use TENNANT Company supplied or equivalent parts. Parts and supplies may be ordered online, by phone, by fax or by mail. Follow the steps below to ensure prompt delivery.	
	1. (A) Identify the machine model. 2. (B) Identify the machine serial number from the data plate. 3. (C) Ensure the proper serial number is used from the parts list. 4. Identify the part number and quantity. Do not order by page or reference numbers. 5. Provide your name, company name, customer ID number, billing and shipping address, phone number and purchase order number. 6. Provide detail shipping instructions.	
	(D) ▽ - Identifies an assembly ▲ - Identifies parts included in assembly	
	Please fill out at time of installation for future reference. Model No. - _____ Serial No. - _____ Machine Options - _____ Sales Rep. - _____ Sales Rep. phone no. - _____ Customer ID Number - _____ Installation Date - _____	

Tennant Company
 PO Box 1452
 Minneapolis, MN 55440
 Phone: (800) 553-8033

www.tennantco.com

Tennant N.V.
 Industrielaan 6 5405 AB
 P.O. Box 6 5400 AA Uden -
 The Netherlands
europa@tennantco.com
www.tennantco.com

テナントカンパニー日本支店
 〒210-0916神奈川県川崎市幸区南幸町2-9サンカビル5F
 TEL:044-556-1201 FAX:044-556-1202
www.tennant.co.jp

Thermo- Sentry, 1-STEP, EasyOpen, MaxPro², InstantAccess, II- Speed, Perma- Filter, Duramer, Lower Total Cost of Ownership, Touch- N- Go, Watershield Dust Control, and Cab Forward ErgoSpace are trademarks of Tennant Company.

Specifications and parts are subject to change without notice.

Copyright © 2014, 2015, 2016, 2017, 2018, 2019 TENNANT Company, Printed in U.S.A.

BG	КАК ДА ПОРЪЧВАМЕ ЧАСТИ - Вижте схемата по-горе Използвайте само части, доставени от TENNANT или техни еквиваленти. Частите и доставките могат да се поръчат онлайн, по телефон, факс или по пощата. Следвайте долупосочените стъпки, за да си осигурите бърза и точна доставка. 1. (A) Посочете модела на машината. 2. (B) Посочете серийния номер на машината от табелката с техническите данни. 3. (C) Уверете се, че сте използвали точния сериен номер от списъка с части. 4. Посочва номера на частта и количеството. Не поръчвайте части според страницата или референтните номера. 5. Посочете своето име, наименованието на фирмата, клиентския номер, адреса за получаване на сметката и доставката, тел.номер и номера на поръчката. 6. Посочете подробни инструкции за доставката.	Моля, попълнете по време на монтажа за бъдеща справка. Модел Э - _____ Сериен Э - _____ Опции на машината - _____ Търговски представител - _____ Тел. Э на търг. представител - _____ Клиентски Э - _____ Дата на монтаж - _____
	(D) ▽ - посочва начин на монтаж ▲ - посочва частите, включени в монтажа	

CN	如何订购部件 - 参见下表 仅使用 TENNANT 公司提供的或同等部件。部件和供应可以在线订购，通过电话、传真或邮件订购。 请遵循下面的步骤确保及时交付。 1. (A) 确定机器型号。 2. (B) 从数据标签确定机器序列号。 3. (C) 确保使用部件列表中的正确序列号。 4. 确定部件号和数量。 不要按页面或参考编号订购。 5. 提供您的姓名、公司名称、客户 ID 号、付帐和送货地址、电话号码和采购单编号。 6. 提供详细的送货说明。	请在安装时填写供未来参考。 型号 - _____ 序列号 - _____ 机器选项 - _____ 销售代表 - _____ 销售代表电话号码 - _____ 客户 ID 编号 - _____ 安装日期 - _____
	(D) ▽ - 确定组件 ▲ - 确定组件中包含的组件	

CZ	OBJEDNÁVÁNÍ DÍLŮ - Viz schéma výše. Používejte pouze díly dodané společností TENNANT Company nebo jim odpovídající. Díly a materiál lze objednat online, telefonem, faxem nebo poštou. Aby bylo zajištěno rychlé dodání, postupujte podle kroků uvedených níže. 1. (A) Zjistěte model stroje. 2. (B) Zjistěte sériové číslo stroje z výrobního štítku. 3. (C) Použijte správné sériové číslo ze seznamu dílů. 4. Určete číslo a množství dílů. Neobjednávejte podle stran nebo referenčních čísel. 5. Uveďte jméno, název společnosti, číslo ID zákazníka, fakturační a dodací adresu, telefonní číslo a číslo objednávky. 6. Uveďte podrobné pokyny pro dodání.	Vyplňte během sestavování pro budoucí potřebu. Číslo modelu - _____ Sériové číslo - _____ Doplňky zařízení - _____ Obchodní zástupce - _____ Tel. č. obchodního zástupce - _____ Číslo ID zákazníka - _____ Datum instalace - _____
	(D) ▽ - označuje sestavu ▲ - označuje díly v sestavě	

DE	BESTELLEN VON ERSATZTEILEN - Siehe oben stehendes Diagramm. Verwenden Sie nur von TENNANT gelieferte oder gleichwertige Ersatzteile. Ersatz- und Verschleißteile können online, telefonisch, per Fax oder per E-Mail bestellt werden. Befolgen Sie für eine umgehende Lieferung die folgenden Schritte. 1. (A) Geben Sie das Modell der Maschine an. 2. (B) Geben Sie die Seriennummer der Maschine an (auf dem Datenaufkleber). 3. (C) Achten Sie darauf, dass die richtigen Seriennummer aus der Ersatzteilliste verwendet wird. 4. Geben Sie die Ersatzteilnummer und die Menge an. Bestellen Sie nicht nach Seitenzahl oder Referenznummern. 5. Geben Sie Ihren Namen, den Firmennamen, die Kundennummer, die Rechnungs- und Lieferadresse, die Telefonnummer und die Einkaufsauftragsnummer an. 6. Erteilen Sie genaue Versandanweisungen.	Bitte bei der Inbetriebnahme als Referenzangabe ausfüllen. Modellnr. - _____ Seriennr. - _____ Maschinenoptionen - _____ Verkäufer - _____ Telefonnummer des Verkäufers - _____ Kundennummer - _____ Installationsdatum - _____
	(D) ▽ - steht für eine Einheit ▲ - steht für Einzelteile einer Einheit	

DK	BESTILLING AF RESERVEDELE - Se ovenstående tabel. Brug kun reservedele, der er fremstillet af TENNANT, eller dele af tilsvarende kvalitet. Reservedele og tilbehør kan bestilles online, pr. telefon, pr. fax eller pr. brev. Følg nedenstående trin for at sikre hurtig levering.	Udfyld venligst på installationstidspunktet til fremtidig brug. Modelnr. - _____ Serienr. - _____ Maskineksktraststyr - _____ Salgskonsulent. - _____ Salgskonsulentens tlf. - _____ Kunde-id-nr. - _____ Installationsdato - _____
	1. (A) Identificér maskinmodellen. 2. (B) Identificér maskinens serienummer på datamærkatet. 3. (C) Kontrollér, at det rigtige serienummer bruges i reservedelslisten. 4. Identificér reservedelsnummeret og antallet. Bestil ikke efter side- eller referencenumre. 5. Angiv dit navn, firmanavn, kunde-id-nummer, faktureringsadresse og leveringsadresse, telefonnummer og indkøbsordrenummer. 6. Angiv detaljerede instruktioner til forsendelse.	

(D) ▽ - identificerer en enhed
 ▲ - identificerer reservedele i en enhed

EE	KUIDAS VARUOSI TELLIDA – vaadake alltoodud joonist Kasutage ainult TENNANT Company poolt tamitud või samaväärseid varuosi. Varuosi ja tarvikuid saab tellida Interneti, telefoni, faksi või posti teel. Kiire kohaletoimetamise tagamiseks järgige alltoodud juhiseid.	Palun täitke paigaldamise ajal edaspidiseks viitamiseks. Mudeli number - _____ Seerianumber - _____ Masina lisavarustus - _____ Müügiesindus - _____ Müügiesinduse telefoninumber - _____ Kliendinumber - _____ Paigaldamise kuupäev - _____
	1. (A) Märkige masina mudel. 2. (B) Märkige andmesildil olev masina seerianumber. 3. (C) Veenduge, et olete valinud varuosade loendist õige seerianumbri. 4. Märkige varuosa number ja kogus. Ärge tellige lehekülje- või viitenumbri alusel. 5. Märkige oma nimi, ettevõtte nimi, kliendinumber, arveldus- ja saatmisaadress, telefoninumber ja ostutellimuse number. 6. Lisage täpsed saatmisjuhised.	

(D) ▽ - tähistab komplekti
 ▲ - tähistab komplektis olevaid osi

ES	CÓMO SOLICITAR PIEZAS - Consulte el diagrama anterior. Utilice sólo las piezas suministradas por TENNANT Company o piezas equivalentes. Puede solicitar las piezas a través de internet, por teléfono, por fax o por correo. Siga los siguientes pasos para que la entrega sea rápida.	Rellene estos datos cuando realice la instalación para utilizarlos como referencia en el futuro. Nº modelo - _____ Nº serie - _____ Opciones de la máquina - _____ Vendedor - _____ Nº teléfono vendedor - _____ Nº cliente - _____ Fecha de instalación - _____
	1. (A) Indique el modelo de máquina. 2. (B) Indique el número de serie de la etiqueta de datos. 3. (C) Asegúrese de que indica el número de serie correcto de la lista de piezas. 4. Indique la cantidad y el número de la pieza. No realice el pedidoindicando el número de página o el de referencia. 5. Incluya su nombre, el nombre de la empresa, el ID de cliente, las direcciones de envío y facturación, el número de teléfono y el número del pedido de compra. 6. Facilite instrucciones de envío.	

(D) ▽ - identifica un conjunto
 ▲ - identifica piezas de un conjunto

FI	KUINKA VARAOSIA TILATAAN - katso kuvaa yllä. Käytä ainoastaan TENNANTIN toimittamia tai niitä vastaavia varaosia. Voit tilata varaosia ja tarvikkeita internetistä, puhelimitse, faksilla tai sähköpostilla. Noudata seuraavia ohjeita täsmällisen toimituksen varmistamiseksi.	Ole hyvä ja täytä ottaessasi koneen käyttöön myöhempiä tarpeita varten. Mallinnumero - _____ Sarjanumero - _____ Koneen lisävarusteet - _____ Myyntiedustaja - _____ Myyntiedustajan puhelinnumero - _____ Asiakasnumero - _____ Asennuspäivä - _____
	1. (A) Katso koneen malli. 2. (B) IKatso koneen sarjanumero sen tunnustarrasta. 3. (C) Varmista, että osaluettelosta, että käytät oikeaa sarjanumeroa. 4. Katso osanumero ja kappalemäärä. Älä tilaa ilmoittamalla sivu- tai viitenumeroita. 5. Ilmoita nimesi, yrityksesi nimi, asiakasnumero, laskutus- ja toimitusosoite, puhelinnumero ja ostotilauksen numero. 6. Ilmoita yksityiskohtaiset toimitusosoitteet.	

(D) ▽ - tarkoittaa kokoonpanoa
 ▲ - tarkoittaa kokoonpanoon sisältyviä osia

FR	COMMENT COMMANDER DES PIÈCES DÉTACHÉES - Voir le schéma ci-dessus.	
	Utilisez uniquement des pièces fournies par la société TENNANT ou équivalentes. Les pièces et fournitures peuvent être commandées en ligne, par téléphone, fax, ou par courrier. Suivez les étapes ci-dessous pour assurer une livraison rapide. 1. (A) Identifiez le modèle de la machine. 2. (B) Identifiez le numéro de série de la machine, à partir de l'étiquette signalétique. 3. (C) Assurez-vous que le numéro de série correct est utilisé à partir de la liste de pièces détachées. 4. Identifiez le numéro de pièce et la quantité. Ne commandez pas par page ou numéros de référence. 5. Fournissez votre nom, le nom de votre société, votre numéro d'identification de client, l'adresse de facturation et d'expédition, le numéro de téléphone et le numéro du bon de commande. 6. Fournissez des instructions d'expédition détaillées.	
	(D) ▽ - identifie un assemblage ▲ - identifie les pièces composant l'assemblage	A remplir au moment de l'installation à titre de référence. N° du modèle - _____ N° de série - _____ Options de la machine - _____ Agent commercial - _____ N° tél. de l'agent commercial - _____ Numéro d'identification client - _____ Date d'installation - _____

GR	ΤΡΟΠΟΣ ΠΑΡΑΓΓΕΛΙΑΣ ΑΝΤΑΛΛΑΚΤΙΚΩΝ - Βλ. παραπάνω διάγραμμα.	
	Χρησιμοποιήστε μόνο ανταλλακτικά παρεχόμενα από την TENNANT Company ή ισοδύναμα. Τα ανταλλακτικά και αναλώσιμα μπορούν να παραγγελθούν online, τηλεφωνικά, με φαξ ή ταχυδρομικά. Ακολουθήστε τα παρακάτω βήματα για να εξασφαλίσετε την έγκαιρη αποστολή τους. 1. (A) Βρείτε το μοντέλο μηχανήματος. 2. (B) Βρείτε τον αριθμό σειράς του μηχανήματος από την ετικέτα στοιχείων. 3. (C) Βεβαιωθείτε ότι χρησιμοποιείται ο σωστός αριθμός σειράς από τον κατάλογο ανταλλακτικών. 4. Βρείτε κωδικό ανταλλακτικού και ποσότητα. Μην παραγγέλνετε βάσει σελίδας ή αριθμών αναφοράς. 5. Δώστε το όνομα σας, όνομα εταιρείας, ID (κωδικό) πελάτη, διεύθυνση τιμολόγησης και αποστολής, αριθμό τηλεφώνου και αριθμό εντολής προμήθειας. 6. Δώστε λεπτομερείς πληροφορίες αποστολής.	
	(D) ▽ - υποδηλώνει υποσύστημα ▲ - υποδηλώνει τα μέρη που περιλαμβάνονται στο υποσύστημα	Παρακαλούμε συμπληρώστε κατά την ώρα της εγκατάστασης για μελλοντική αναφορά. Αρ. Μοντέλου - _____ Αρ. σειράς - _____ Επιλογές Μηχανήματος - _____ Εκπ. πωλήσεων - _____ Τηλ. εκπροσώπου πωλήσεων - _____ Αριθμός πελάτη - _____ Ημερομηνία εγκατάστασης - _____

HU	HOGYAN RENDELJÜNK ALKATRÉSZEKET - Lásd: fenti diagramm.	
	Kizárólag TENNANT vagy azzal egyenértékű cserealkatrészeket használjon. Az alkatrészeket és anyagokat meg lehet rendelni az Interneten keresztül, vagy telefonon, faxon és e-mailben. A pontos szállítás érdekében kövesse az alábbi lépéseket. 1. (A) Adja meg a gép típusát. 2. (B) Az adatcímké alapján adja meg a gép gyártási számát. 3. (C) Ügyeljen arra, hogy a megfelelő gyártási számot válassza ki az alkatrésztárláról. 4. Adja meg a rendelési számot és a mennyiséget. A rendeléshez ne az oldalszámot vagy a hivatkozási számot használja. 5. Adja meg a nevét, a cége nevét, az ügyfélazonosító számát, a számlázási és szállítási címét, a telefonszámát és a rendelési számot. 6. Adjon részletes szállítási utasításokat.	
	(D) ▽ - a jel csomagra utal ▲ - a jel a csomagban található alkatrészekre utal	A későbbi visszakeresések érdekében kérjük, hogy a rovatokat az első üzembehelyezéskor töltsse ki. Típuszám - _____ Gyártási szám - _____ A gép felszereltsége - _____ Kereskedelmi képviselő - _____ Kereskedelmi képviselő telefonszáma - _____ Ügyfél azonosító száma - _____ Üzembehelyezés dátuma - _____

HR	NARUIVANJE DIJELOVA - Pogledajte dijagram iznad	
	Koristite isključivo dijelove tvrtke TENNANT ili jednakovrijedne dijelove. Dijelove i potrošni materijal možete naručiti preko interneta, telefonom, faksom ili poštom. Slijedite sljedeće korake kako biste osigurali brzu isporuku. 1. (A) Ustanovite model stroja. 2. (B) Ustanovite serijski broj stroja s pločice s podacima. 3. (C) Provjerite da koristite odgovarajući serijski broj sa spiska dijelova. 4. Odredite broj dijela i količinu. Ne naručujte na osnovu brojeva stranice ili referentnih brojeva. 5. Navedite vaše ime, ime tvrtke, korisnički identifikacijski broj, adresu za naplatu i dostavu, broj telefona i broj kupovine. 6. Navedite detaljne upute za dostavu.	
	(D) ▽ - Odredite sklop ▲ - Odredite dijelove uključene u sklop	Molimo ispunite prilikom montaže za buduće potrebe. Broj modela - _____ Serijski broj - _____ Mogućnosti stroja - _____ Prodajni predstavnik - _____ Br. telefona prod. predst. - _____ Korisnički identifikacijski broj - _____ Datum montaže - _____

IT	COME ORDINARE LE PARTI - Vedere schema precedente.
	Utilizzare solo ricambi forniti da TENNANT o equivalenti. Ricambi e forniture possono essere ordinati online, per telefono, via fax o per posta elettronica. Per ottenere una consegna rapida, seguire i passaggi indicati di seguito. 1. (A) Identificare il modello della macchina. 2. (B) Identificare il numero di serie della macchina dall'etichetta dei dati. 3. (C) Utilizzare il numero di serie corretto presente nell'elenco delle parti di ricambio. 4. Identificare numero di parte e quantità. Non ordinare per numero di pagina o di riferimento. 5. Fornire nome del contatto, nome della società, numero di ID cliente, indirizzo di fatturazione e di spedizione, numero di telefono e numero di ordine di acquisto. 6. Fornire istruzioni dettagliate per la spedizione.
	(D) ▽ - identifica un gruppo ▲ - identifica parti comprese in un gruppo Compilare il modulo al momento dell'installazione per poterlo consultare in futuro in caso di necessità. N. Modello - _____ N. Serie - _____ Opzioni della macchina - _____ Venditore - _____ Tel. venditore - _____ Numero ID cliente - _____ Data di installazione - _____

JP	パーツの発注方法 ? 上記の図を参照してください TENNANT社製のパーツまたは同等品のみをお使いください。 パーツやサブライ品のご注文は、オンライン、電話、FAX、または手紙でお願いいたします。 確実にお届けできるように、以下の情報お知らせください。 1. (A) 製品のモデル名をお知らせください。 2. (B) 製品のデータラベルに印刷されているシリアル番号をお知らせください。 3. (C) パーツリストを参照して、シリアル番号が正しいかご確認ください。 4. パーツ番号と数量をお知らせください。マニュアル/カタログのページ番号や参照番号でのご注文はご遠慮ください。 5. お客様のお名前、会社名、顧客ID番号、請求/発送先住所、電話番号、注文書番号をお知らせください。 6. 発送に関するご希望があれば、明記してください。
	(D) ▽ - アセンブリを示します ▲ - アセンブリに含まれるパーツを示します 後日確認できるように、設置時に記入してください。 モデルNo. - _____ シリアルNo. - _____ 製品のオプション - _____ 販売代理店 - _____ 販売代理店の電話番号 - _____ 顧客ID番号 - _____ 設置日 - _____

LT	KAIP UŽSISAKYTI DALIS - žr. diagramą viršuje Naudokite tik "Tennant" kompanijos tiekiamas arba lygiavertes joms dalis. Dalis galite užsisakyti internetu, telefonu, faksu bei elektroniniu paštu. Kad užsakymas būtų greitai įvykdytas, laikykitės išvardytų taisyklių. 1. (A) Nurodykite mašinos modelį. 2. (B) Norodykite mašinos serijos numerį, kurį rasite ant duomenų žymės. 3. (C) Įsitinkite, kad nurodomas tikslus serijos numeris iš dalių sąrašo. 4. Nurodykite dalies numerį ir reikiamą kiekį. Neužsakinėkite pagal puslapius ar nuorodos numerius. 5. Nurodykite savo vardą, kompanijos pavadinimą, kliento ID numerį, sąskaitos išrašymo ir vežimo adresą, telefono numerį ir pirkimo užsakymo numerį. 6. Nurodykite išsamias gabenimo instrukcijas.
	(D) ▽ - žymi sistemą ▲ - nurodo sistemos dalis Prašome užpildyti montavimo metu, siekiant gauti informaciją ateityje. Modelio nr. - _____ Serijos nr. - _____ Mašinos parinktis - _____ Prekybos atstovas - _____ Komivojažieriaus tel. nr. - _____ Pirkėjo ID numeris - _____ Sumontavimo data - _____

LV	KĀ PASŪTĪT REZERVES DETALĀS - Skat. diagrammu iepriekš izmantojiet tikai TENNANT Company piegādātās vai tām līdzvērtīgas rezerves detaļas. Daļas un piegādi var pasūtīt internetā, pa tālruni, pa faksu vai pastu. Lai nodrošinātu savlaicīgu piegādi, sekojiet zemāk aprakstītajiem soļiem. 1. (A) Nosakiet mašīnas modeli. 2. (B) Nosakiet mašīnas sērijas numuru uz tehnisko datu uzlīmes. 3. (C) Pārīcinieties, ka tiek uzrakstīts attiecīgais sērijas numurs no detaļu saraksta. 4. Nosakiet detaļas numuru un skaitu. Veicot pasūtījumus neatsaucieties uz lapušu vai norādes numuriem. 5. Uzrakstiet savu vārdu, uzņēmuma nosaukumi, klienta identitātes numuru, adresi rēķina piesūtīšanai un piegādei un pirkuma pasūtījuma numuru. 6. Sniedziet detalizētu informāciju par piegādi.
	(D) ▽ - nosaka ierīci ▲ - nosaka detaļas, kas ir komplektā ar ierīci Veicot uzstādīšanu, lūdzam pierakstīt attiecīgo informāciju izmantošanai turpmāk. Modeļa Nr. - _____ Sērijas Nr. - _____ Iekārtas papildaprīkojums - _____ Pārdošanas pārst. - _____ Pārdošanas pārst. tālr. Nr. - _____ Klienta identitātes numuru - _____ Uzstādīšanas datums - _____

NL	HOE ONDERDELEN TE BESTELLEN - Zie schema hierboven. Gebruik alleen onderdelen die door TENNANT Company zijn geleverd of soortgelijke onderdelen. Onderdelen en voorraden kunnen online, per telefoon, fax of schriftelijk besteld worden. Volg de stappen hieronder om een juiste levering te garanderen. 1. (A) Bepaal het machinemodel. 2. (B) Lees het serienummer van de machine af van het gegevenslabel. 3. (C) Zorg dat het juiste serienummer wordt gebruikt uit de onderdelenlijst. 4. Bepaal het artikelnummer en het aantal. Bestel niet aan de hand van pagina's of referentienummers. 5. Geef uw naam, bedrijfsnaam, klantnummer, factuur- en leveringsadres, telefoonnummer en bestelnummer op. 6. Geef gedetailleerde leveringsinstructies op. (D) ▽ - geeft een eenheid aan ▲ - geeft de onderdelen van de eenheid aan	Vul tijdens installatie de onderstaande gegevens in voor eventueel toekomstig gebruik. Modelnr. - _____ Serienr. - _____ Machine-opties - _____ Verkoopvert. - _____ Telnr. verkoopvert. - _____ Klantnummer - _____ Installatiedatum - _____
-----------	---	--

NO	HVORDAN BESTILLE DELER - Se diagram over. Bruk kun deler levert av TENNANT Company eller ekvivalente deler. Deler og forsyninger kan bestilles online, per telefon, per faks eller per post. Følg trinnene under for å sikre rask levering. 1. (A) Angi maskinmodellen. 2. (B) Angi maskinens serienummer fra typeskiltet. 3. (C) Forsikre deg om at korrekt serienummer brukes fra delelisten. 4. Angi delennummer og antall. Bestill ikke ut fra side- eller referansenumre. 5. Angi ditt navn, firmanavn, kunde- ID- nummer, fakturerings- og forsendelsesadresse, telefonnummer og innkjøpsordrenummer. 6. Angi detaljerte forsendelsesinstruksjoner. (D) ▽ - angir en delegruppe ▲ - angir deler inkludert i en delegruppe	Fyll ut ved installasjonstidspunkt for fremtidig bruk. Modellnr. - _____ Serienr. - _____ Maskinens tillegg - _____ Salgsrep. - _____ Salgsrep. telefonnr. - _____ Kunde- ID- nummer - _____ Installasjonsdato - _____
-----------	--	---

PL	JAK ZAMAWIAĆ CZĘŚCI - patrz schemat powyżej. Należy używać wyłącznie części dostarczanych przez firmę TENNANT Company lub równoważnych. Części i dostawy mogą być zamawiane online, przez telefon, faksem lub pocztą. Aby zapewnić szybką dostawę, należy przestrzegać następujących wskazówek. 1. (A) Określić model maszyny. 2. (B) Określić numer seryjny maszyny znajdujący się na tabliczce znamionowej. 3. (C) Odszukać ten numer seryjny w wykazie części. 4. Określić numer części i ilość. Nie zamawiać na podstawie numeru strony lub liczby porządkowej wykazu. 5. Podać swoje nazwisko, nazwę firmy, numer identyfikacyjny klienta, adres dostawy i dostarczenia rachunku, numer telefonu i numer zamówienia zakupu. 6. Podać dokładne instrukcje dotyczące dostawy. (D) ▽ - oznacza zespół ▲ - oznacza część w zespole	Prosimy wpisać datę instalacji do późniejszego wykorzystania. Nr modelu - _____ Nr seryjny - _____ Opcje maszyny - _____ Przedst. sprzedaży - _____ Nr tel. przedst. sprzed. - _____ Nr ident. klienta - _____ Data instalacji - _____
-----------	--	---

PT G	COMO ENCOMENDAR PEÇAS - Consulte o diagrama acima. Utilize apenas peças fornecidas pela TENNANT Company ou equivalentes. As peças e consumíveis podem ser encomendados online, por telefone, fax ou correio. Siga os passos abaixo para garantir uma entrega rápida. 1. (A) Identifique o modelo da máquina. 2. (B) Identifique o número de série da máquina que se encontra na etiqueta de dados. 3. (C) Certifique-se de que usa o número de série correcto da lista de peças. 4. Identifique o número de produto e a quantidade. Não encomende através de números de página ou de referência. 5. Forneça o seu nome, o nome da empresa, o número de ID do cliente, os endereços de facturação e entrega, o número de telefone e o número da nota de encomenda. 6. Forneça instruções de entrega detalhadas. (D) ▽ - identifica uma unidade ▲ - identifica peças incluídas numa unidade	Preencha na altura da instalação para futura referência. Modelo nº - _____ Nº de série - _____ Opções da máquina - _____ Vendedor - _____ Telefone do vendedor - _____ Número de ID do cliente - _____ Data de instalação - _____
-------------	--	--

RU	КАК ЗАКАЗАТЬ ЗАПЧАСТИ - См. схему ниже. Используйте только запчасти, поставляемые компанией TENNANT или их аналоги. Запасные части и расходные материалы можно заказать в режиме онлайн, телефоном, факсом или электронной почтой. Для своевременной доставки следуйте описанным ниже инструкциям.	Во время установки заполните, пожалуйста, эти сведения для того, чтобы ссылаться в дальнейшем. Модель Э - _____ Серийный Э - _____ Опции машины - _____ Торговый представитель - _____ Телефон торгового представителя - _____ Идент. номер покупателя - _____ Дата установки - _____
	1. (A) Укажите модель машины. 2. (B) Укажите серийный номер машины, обозначенный на табличке технических данных. 3. (C) Удостоверьтесь, что надлежащий серийный номер перечислен в списке запчастей. 4. Укажите номер детали и нужное количество. Не используйте номера страниц или ссылок. 5. Укажите свое имя, название компании, идентификационный номер покупателя, расчетный адрес и адрес доставки, телефонный номер и номер заказа на покупку. 6. Укажите подробные сведения о доставке.	
	(D) ▽ - означает узел ▲ - обозначает деталь узла	

SE	BESTÄLLNING AV RESERVDELAR - Se ovanstående schema. Använd endast delar från Tennant Company eller likvärdiga. Delar och material kan beställas online, telefoniskt, per fax eller post. Följ nedanstående steg för en snabb leverans.	Fyll i vid installation och spar för framtida bruk. Modellnr. - _____ Serienr. - _____ Tilvalsutrustning - _____ Försäljare - _____ Försäljarens tel.nr. - _____ Kundnummer - _____ Installationsdatum - _____
	1. (A) Identifiera maskinens modell. 2. (B) Identifiera maskinens serienummer på typskylten. 3. (C) Kontrollera att rätt serienummer används från dellistan. 4. Identifiera artikelnumret och mängden. Beställ inte med hjälp av sido- eller referensnummer. 5. Uppge ditt namn, företagets namn, kundens ID- nummer, faktura- och leveransadress, telefonnummer och ordernummer vid inköp. 6. Ge detaljerade transportanvisningar.	
	(D) ▽ - identifierar en modul ▲ - identifierar delar som ingår i en modul	

SK	POSTUP PRI OBJEDNÁVANÍ ČASTÍ - Pozri vyššie uvedený diagram. Využívajte výhradne dielce dodané spoločnosťou TENNANT, alebo ich ekvivalenty. Dielce a položky je možné objednať online, telefonicky, faxom, alebo poštou. Na zabezpečenie promptného doručenia sa riadte nasledovnými krokmi.	Vypíšte prosím pri inštalácii pre prípad potreby v budúcnosti. č. modelu - _____ Sériové č. - _____ Zvláštne príslušenstvo stroja - _____ Obchodné zastúpenie - _____ Obch. zastúpenie tel. č. - _____ ID č. zákazníka - _____ Dátum inštalácie - _____
	1. (A) Identifikujte model stroja. 2. (B) Z etikety s údajmi identifikujte sériové číslo stroja. 3. (C) Ubezpečte sa, že ste zadali správne sériové číslo zo zoznamu dielcov. 4. Identifikujte číslo dielu a množstvo. Neobjednávajte pomocou čísel strán, alebo referenčných čísel. 5. Zadať Vaše meno, meno spoločnosti, ID číslo zákazníka, fakturačnú a prepravnú adresu, telefónne číslo a objednávacie číslo dielu. 6. Uveďte podrobné prepravné pokyny.	
	(D) ▽ - identifikuje sadu ▲ - identifikuje časti sady	

SL	NAROČANJE NADOMESTNIH DELOV - glejte zgornjo sliko. Uporabljajte samo originalne nadomestne dele Tennant ali enakovredne dele. Dele in potrošni material lahko naročite prek spleta, po telefonu, faksu ali pošti. Za zagotovitev čimbolj hitre dostave sledite spodnjim navodilom.	Prosim, da ob vgradnji izpolnite te podatke, da vam bodo v prihodnje na voljo. Št. modela - _____ Serijska številka - _____ Dodatna oprema stroja - _____ Prodajni predstavnik - _____ Telefonska št. prodajnega predstavnika - _____ Številka stranke - _____ Datum vgradnje - _____
	1. (A) Ugotovite model stroja. 2. (B) Na ploščici s podatki poiščite serijsko številko stroja. 3. (C) Poskrbite, da na seznamu nadomestnih delov poiščete pravilno serijsko številko. 4. Poiščite številko dela in potrebno količino. Pri naročilih ne navajajte strani ali referenčne številke. 5. Navedite svoje ime, ime podjetja, ID številko stranke, naslova za dostavo in izdajo računa, telefonsko številko in številko naročila. 6. Navedite podrobna navodila za dostavo.	
	(D) ▽ - označuje sklop ▲ - označuje dele sklopa	

TR

PARÇALARIN S PAR ED LMES - Yukarıdaki emaya bakın.

Yalnızca TENNANT Company'den sağlanan veya eğerde parçalar kullanın. Parça veya sarf malzemeleri çevrimiçi olarak, telefonla, faksla veya postayla sipariş edilebilir.

Zamanında teslimat sağlamak için aşağıdaki adımları izleyin.

1. (A) Makine modelini belirtin.
2. (B) Veri etiketinden makine seri numarasını belirtin.
3. (C) Parça listesinden uygun seri numarasını kullanıldığınından emin olun.
4. Parça numarasını ve miktarını belirtin. Sayfa veya referans numaralarını kullanarak sipariş vermeyin.
5. Adınızı, şirketinizin adını, müşteri kimlik numaranızı, faturalama ve sevkiyat adreslerini, telefon numarasını ve satınalma siparişi numarasını belirtin.
6. Ayrıntılı sevkiyat talimatlarını belirtin.

- (D) ▽ - bir tertibat belirtir
▲ - tertibattaki parçaları belirtir

İleri tarihlerde başvurmak için lütfen kurulum sırasında doldurun.

Model No. - _____

Seri No. - _____

Makine Seçenekleri - _____

Satın Temsilcisi - _____

Satın Temsilcisi telefon no. - _____

Müşteri Kimlik Numarası - _____

Kurulum Tarihi - _____

GENERAL RECOMMENDED MAINTENANCE

Fig. 1 - General Recommended Maintenance Items

Ref.	Part No.	Serial Number	Description	Qty.
▽	9004644	(006501-	) Maint Kit, 400Hr, Diesel [S30]	1
▲	369746	(006501-	) Element, Fltr, Air [Dn]	1
▲	9005007	(006501-	) Element, Fltr, Oil, Spin- on [Ku]	1
▲	1017126	(006501-	) Element, Fltr, Fuel [Dn]	1
▲	25643	(006501-	) Belt, V, 42.5l [3v]	1
▲	31613	(006501-	) Strainer, Hyd, 025gpm 100mesh 03psi	1
▲	1021579	(006501-	) Filter Assy, Hyd, 10mic	1
▲	398279	(006501-	) Element, Fltr, Air, Safety	1
▽	9013115	(006501-	) Skirt Kit, Hppr, Maint [S30]	1
▲	1035684	(006501-	) Bolt, Carriage, M8 X 1.25 X 30	10
▲	08713	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI, Ss	10
▲	1212460	(006501-	) Bracket, Sppt, Hppr Seal	1
▲	1212516	(006501-	) Skirt, Lip	1
▲	1212509	(006501-	) Skirt, Lip, Hppr	1
▲	1026798	(006501-	) Strap, Main, Lip	1
▲	32491	(006501-	) Washer, Flat, 0.31, Std	10
▲	1038037	(006501-	) Skirt, Hppr	1
▲	41178	(006501-	) Washer, Flat, 0.25, Fendr	6
▲	11635	(006501-	) Screw, Hex, M6 X 1.00 X 12, NI, Ss	6
▲	1212510	(006501-	) Skirt, Neo, .12, 15.9w, 20.8l, 03/SI	1
▲	11635	(006501-	) Screw, Hex, M6 X 1.00 X 12, NI, Ss	5
▽	9013116	(006501-	) Skirt Kit, Door, Hppr, Maint [S30]	1
▲	1212570	(006501-	) Seal, Wiper, Door	1
▲	1212756	(006501-	) Retainer, Seal	2
▲	1037345	(006501-	) Screw, Hex, M6 X 1.00 X 30, 9.8, Sems	16
▲	32490	(006501-	) Washer, Flat, 0.25, Std	34
▲	08712	(006501-	) Nut, Hex, Lock, M6 X 1.00, NI, Ss	28
▲	1044950	(006501-	) Strap, Door, Dump, Side	2
▲	1030218	(006501-	) Cord, Sponge	1
▲	1212440	(006501-	) Seal, Door, Dump	1
▲	1044419	(006501-	) Plate, Retainer, Door, Dump	1
▲	06946	(006501-	) Screw, Hex, M6 X 1.00 X 35, 8.8	12
	1045900	(006501-	) Filter, Cyl, 11.09d, 13.31l, 6.724 ld	1
	9004545	(006501-	) Key, Ignition [Replmt W/O Dust Boot]	1
	393244	(006501-	) Belt, V, 42.0l [Hc41]	1
	1058133	(006501-	) Belt, V, 37.3l [Ax]	1
	1045366	(006501-	) Skirt, Door, Brush	1
	1045354	(006501-	) Skirt, Door, Brush	1
	54190	(006501-	) Skirt, Neo, .37, 06.00w 44.65l, 04/ SI Recirculation	1
	1045348	(006501-	) Skirt, Neo, .18, 06.74w 50.00l, 04/ SI	1
	1032012	(006501-	) Skirt, Deflector Wheel Pocket Skirt	2
	1061961	(006501-	) Tire Assy, Solid, 20.8 X 5.0, W/ Brg, Front Tire	2
	53817	(006501-	) Tire Assy, Solid, 18.0x4.3 4.5bc/5bolt Solid Rear Tire	1
	1032515	(006501-	) Tire Assy, Pneu, 600x9 4.5bc/5bolt, Ce Pneumatic Front	2
	1005229	(006501-	) Tire Assy, Pneu, 5.00 4.5bc/5blt[R8ic70] Pneumatic Rear	1
	16411	(006501-	) Paint, Airdry, Off- White, 12oz (NOT EUROPE)	1
	16412	(006501-	) Paint, Airdry, Teal, 12oz, Solid (NOT EUROPE)	1
	377540	(006501-	) Paint, Airdry, Blk, 12oz (NOT EUROPE)	1
	377538	(006501-	) Paint, Airdry, Gray, 12oz (NOT EUROPE)	1
	377537	(006501-	) Paint, Airdry, Iron Gray, 12oz (NOT EUROPE)	1

GENERAL RECOMMENDED MAINTENANCE

Fig. 1 - General Recommended Maintenance Items

Ref.	Part No.	Serial Number	Description	Qty.
	1057710	(006501-)	Oil, Hyd [El, Iso 100, 01gal]	1
	1057711	(006501-)	Oil, Hyd [El, Iso 100, 05gal]	1
	1069019	(006501-)	Oil, Hyd [El, Iso 68, 01gal]	1
	1069020	(006501-)	Oil, Hyd [El, Iso 68, 05gal]	1
	1057707	(006501-)	Oil, Hyd [El, Iso 32, 01gal]	1
	1057708	(006501-)	Oil, Hyd [El, Iso 32, 05gal]	1
	99321	(006501-)	Oil, Hydraulic 68 [20l] (Europe Only)	1

SECTION 2

Contents	Page
Fig. 1 - Brushes, Replacement	2- 2
Fig. 2 - Main Frame Group	2- 4
Fig. 3 - Brush Door Group, Right	2- 6
Fig. 4 - Brush Door Group, Left	2- 8
Fig. 5 - Operator Station Group	2-10
Fig. 6 - Seat and Shroud Group	2-12
Fig. 7 - Engine Cover Group, Rear	2-14
Fig. 8 - Engine Cover Group, Top	2-16
Fig. 9 - Engine Cover Group, Side	2-18
Fig. 10 - Instrument Panel Group, S30	2-20
Fig. 11 - Instrument Panel Group, S30 XP and X4	2-22
Fig. 12 - Steering Group	2-24
Fig. 13 - Engine and Mount Group, Diesel .	2-26
Fig. 14 - Engine Governor and Electrical Group, Diesel	2-28
Fig. 15 - Engine Fuel Tank Group, Diesel .	2-30
Fig. 16 - Engine Air Cleaner Group, Diesel	2-32
Fig. 17 - Engine Alternator and Battery Group, Diesel	2-34
Fig. 18 - Engine Muffler Group, Diesel S30 and XP	2-36
Fig. 19 - Engine Muffler Group, Diesel S30 X4	2-38
Fig. 20 - Engine Radiator Hoses Group, Diesel	2-40
Fig. 21 - Engine Radiator Mount and Fan Group	2-42
Fig. 22 - Wheel Group, Rear Drive S30 and XP	2-44
Fig. 23 - Wheel Group, Rear Drive, S30 X4	2-46
Fig. 24 - Wheel Suspension Group, Rear Drive, S30 X4	2-48
Fig. 25 - Wheel Assembly, Rear, S30 and XP	2-50
Fig. 26 - Wheel Assembly, Rear, S30 X4 ..	2-51
Fig. 27 - Wheel and Brakes Group, Front Solid (Standard)	2-52
Fig. 28 - Wheel and Brakes Group, Front Pneumatic (Option)	2-54
Fig. 29 - Brake Pedal and Parking Brake Group	2-56
Fig. 30 - Directional Pedal Group	2-58
Fig. 31 - Hydraulic Pump Linkage Group, S30 and XP	2-60
Fig. 32 - Hydraulic Pump Linkage Group, S30 X4	2-62
Fig. 33 - Hopper Group, Plastic	2-64
Fig. 34 - Hopper Group, Steel	2-66
Fig. 35 - Hopper Cylinder and Dump Door Group, Plastic	2-68
Fig. 36 - Hopper Cylinder and Dump Door Group, Steel	2-70
Fig. 37 - Hopper Cover Group	2-72

Contents	Page
Fig. 38 - Hopper Lift Arms and Bumper Group	2- 74
Fig. 39 - Hopper Counter Weight Group, Steel	2- 76
Fig. 40 - Hopper Pre- Filter Group	2- 78
Fig. 41 - Hopper Vacuum Fan Group	2- 80
Fig. 42 - Hopper Filter Shaker Group	2- 82
Fig. 43 - Side Brush Lift Group, S30	2- 84
Fig. 44 - Side Brush Motor and Pivot Group, S30	2- 86
Fig. 45 - Side Brush Motor Group, S30 XP and X4	2- 88
Fig. 46 - Side Brush Lift and Pivot Group, S30 XP and X4	2- 90
Fig. 47 - Main Brush Lift Group, S30	2- 92
Fig. 48 - Main Brush Lift Group, S30 XP and X4	2- 94
Fig. 49 - Main Brush Drive Group	2- 96
Fig. 50 - Hydraulic Schematic, S30 and XP	2- 98
Fig. 51 - Hydraulic Schematic, S30 X4 ...	2-100
Fig. 52 - Hydraulic Hose Group, S30	2-102
Fig. 53 - Hydraulic Hose Group, S30 XP .	2-104
Fig. 54 - Hydraulic Hose Group, S30 X4 .	2-106
Fig. 55 - Hydraulic Reservoir Group	2-108
Fig. 56 - Hydraulic Cooler and Tubes Group	2-110
Fig. 57 - Hydraulic Pumps Group, S30 and XP	2-112
Fig. 58 - Hydraulic Pumps Group, S30 X4	2-114
Fig. 59 - Hydraulic Valve Group, S30	2-116
Fig. 60 - Hydraulic Valve Group, S30 XP and X4	2-118
Fig. 61 - Hydraulic Priority and Flow Divider Valve Group, S30 X4 ..	2-120
Fig. 62 - Electrical Schematic, S30	2-122
Fig. 63 - Electrical Schematic, S30 XP ...	2-128
Fig. 64 - Electrical Wire Harnesses Group	2-133
Fig. 65 - Label Group	2-140

Fig. 1 - Brushes, Replacement

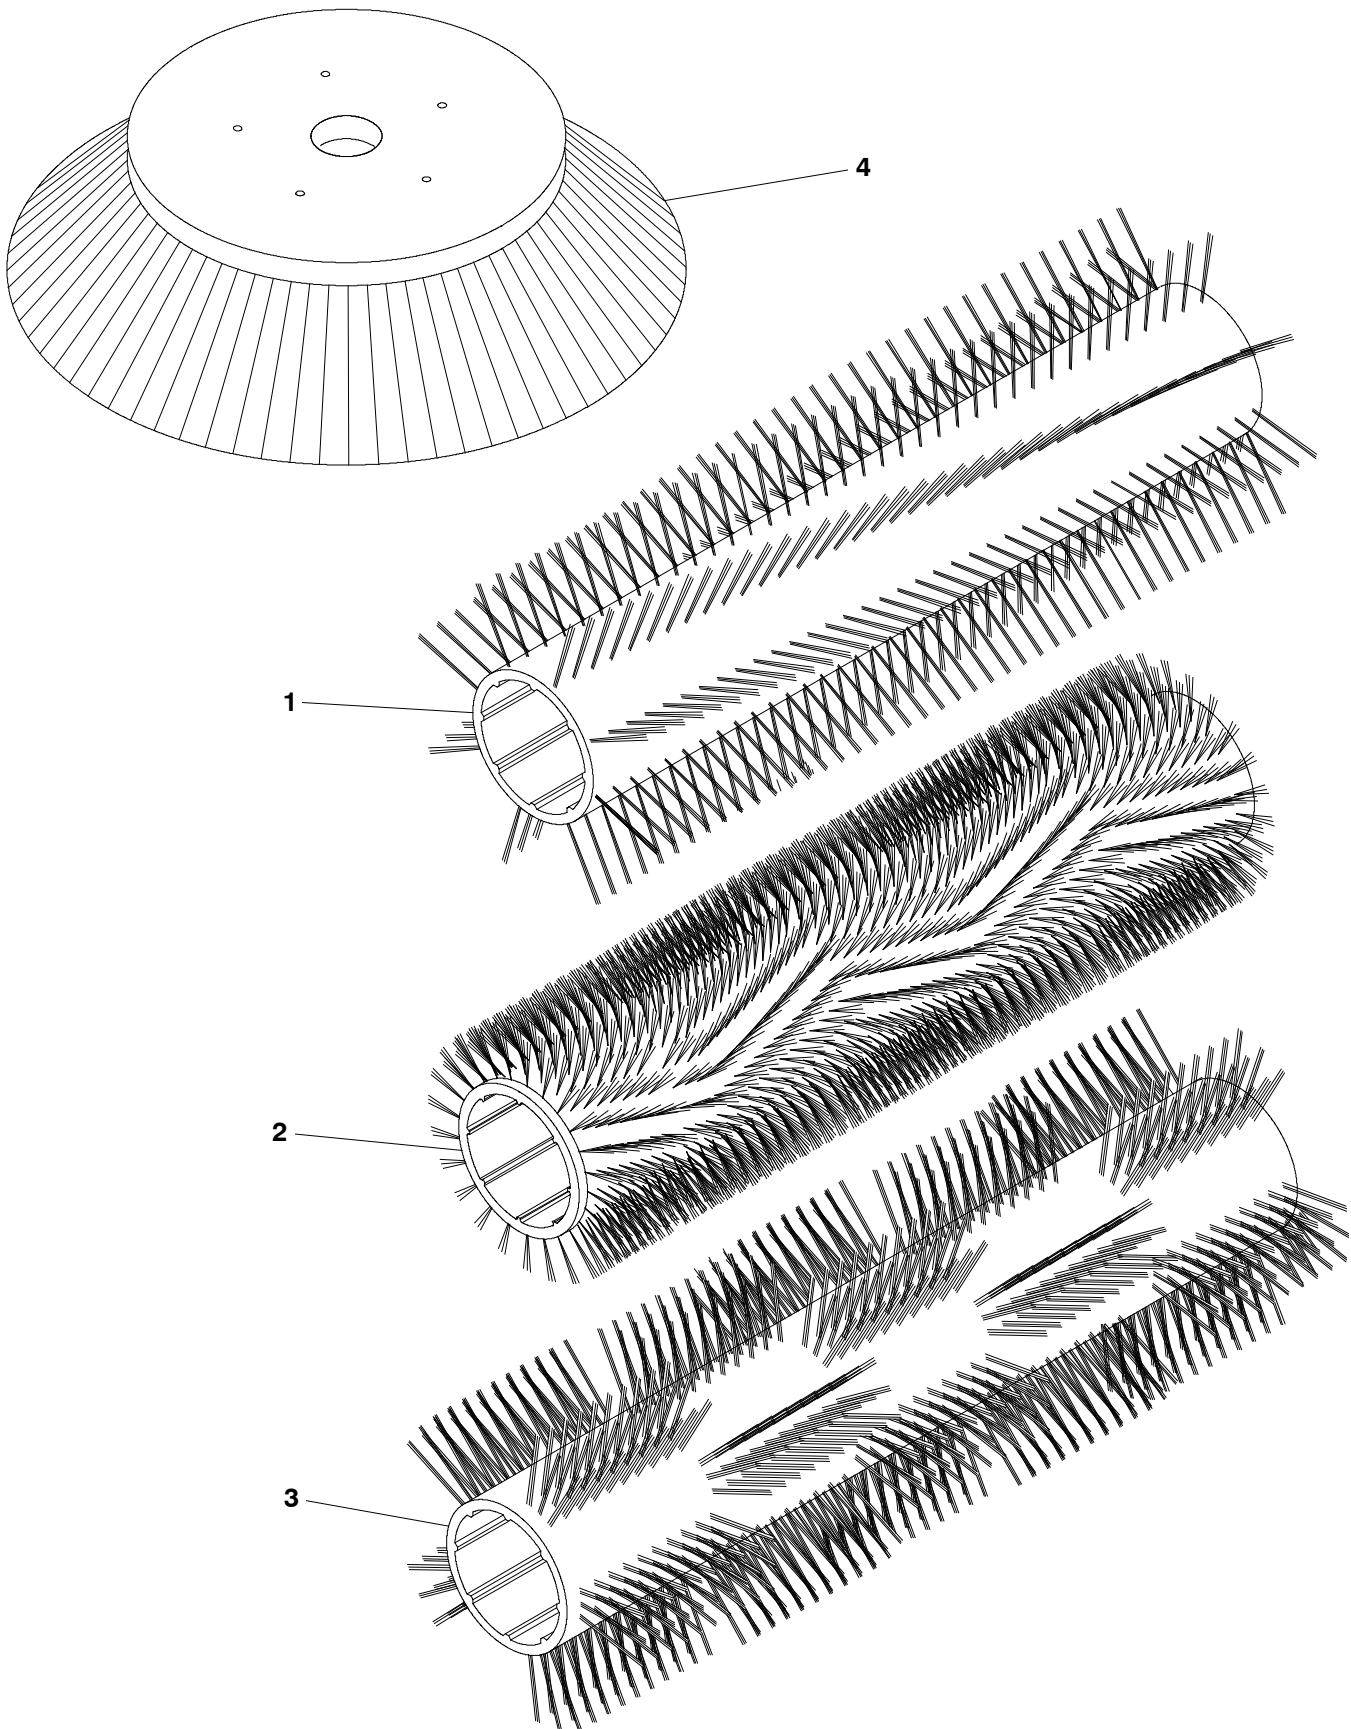


Fig. 1 - Brushes, Replacement

Ref.	Part No.	Serial Number	Description	Qty.
1	54927	(006501-	) Brush, Swp, 45L, 24 Single Row, Natural Fiber & Wire	1
1	54922	(006501-	) Brush, Swp, 45L, 24 Single Row, Nylon	1
1	54923	(006501-	) Brush, Swp, 45L, 8 Double Row, Nylon	1
1	54925	(006501-	) Brush, Swp, 45L, 8 Double Row, Polypropylene & Wire	1
1	59440	(006501-	) Brush, Swp, 45L, 8 Double Row, Wire	1
1	66019	(006501-	) Brush, Swp, 45L, 8 Double Row, Polypropylene	1
1	66018	(006501-	) Brush, Swp, 45L, 5 Double Row Patrol, Nylon	1
2	370008	(006501-	) Brush, Swp, 45L, Sand Wedge, Polypropylene	1
3	370009	(006501-	) Brush, Swp, 45L, Window , Polypropylene	1
4	1027380	(006501-	) Brush, Disk, Swp, 26.0 D, Polypropylene	1
4	1041102	(006501-	) Brush, Disk, Swp, 26.0 D, Nylon	1
4	1042097	(006501-	) Brush, Disk, Swp, 25.4 D, Flat Wire	1

Fig. 2 - Main Frame Group

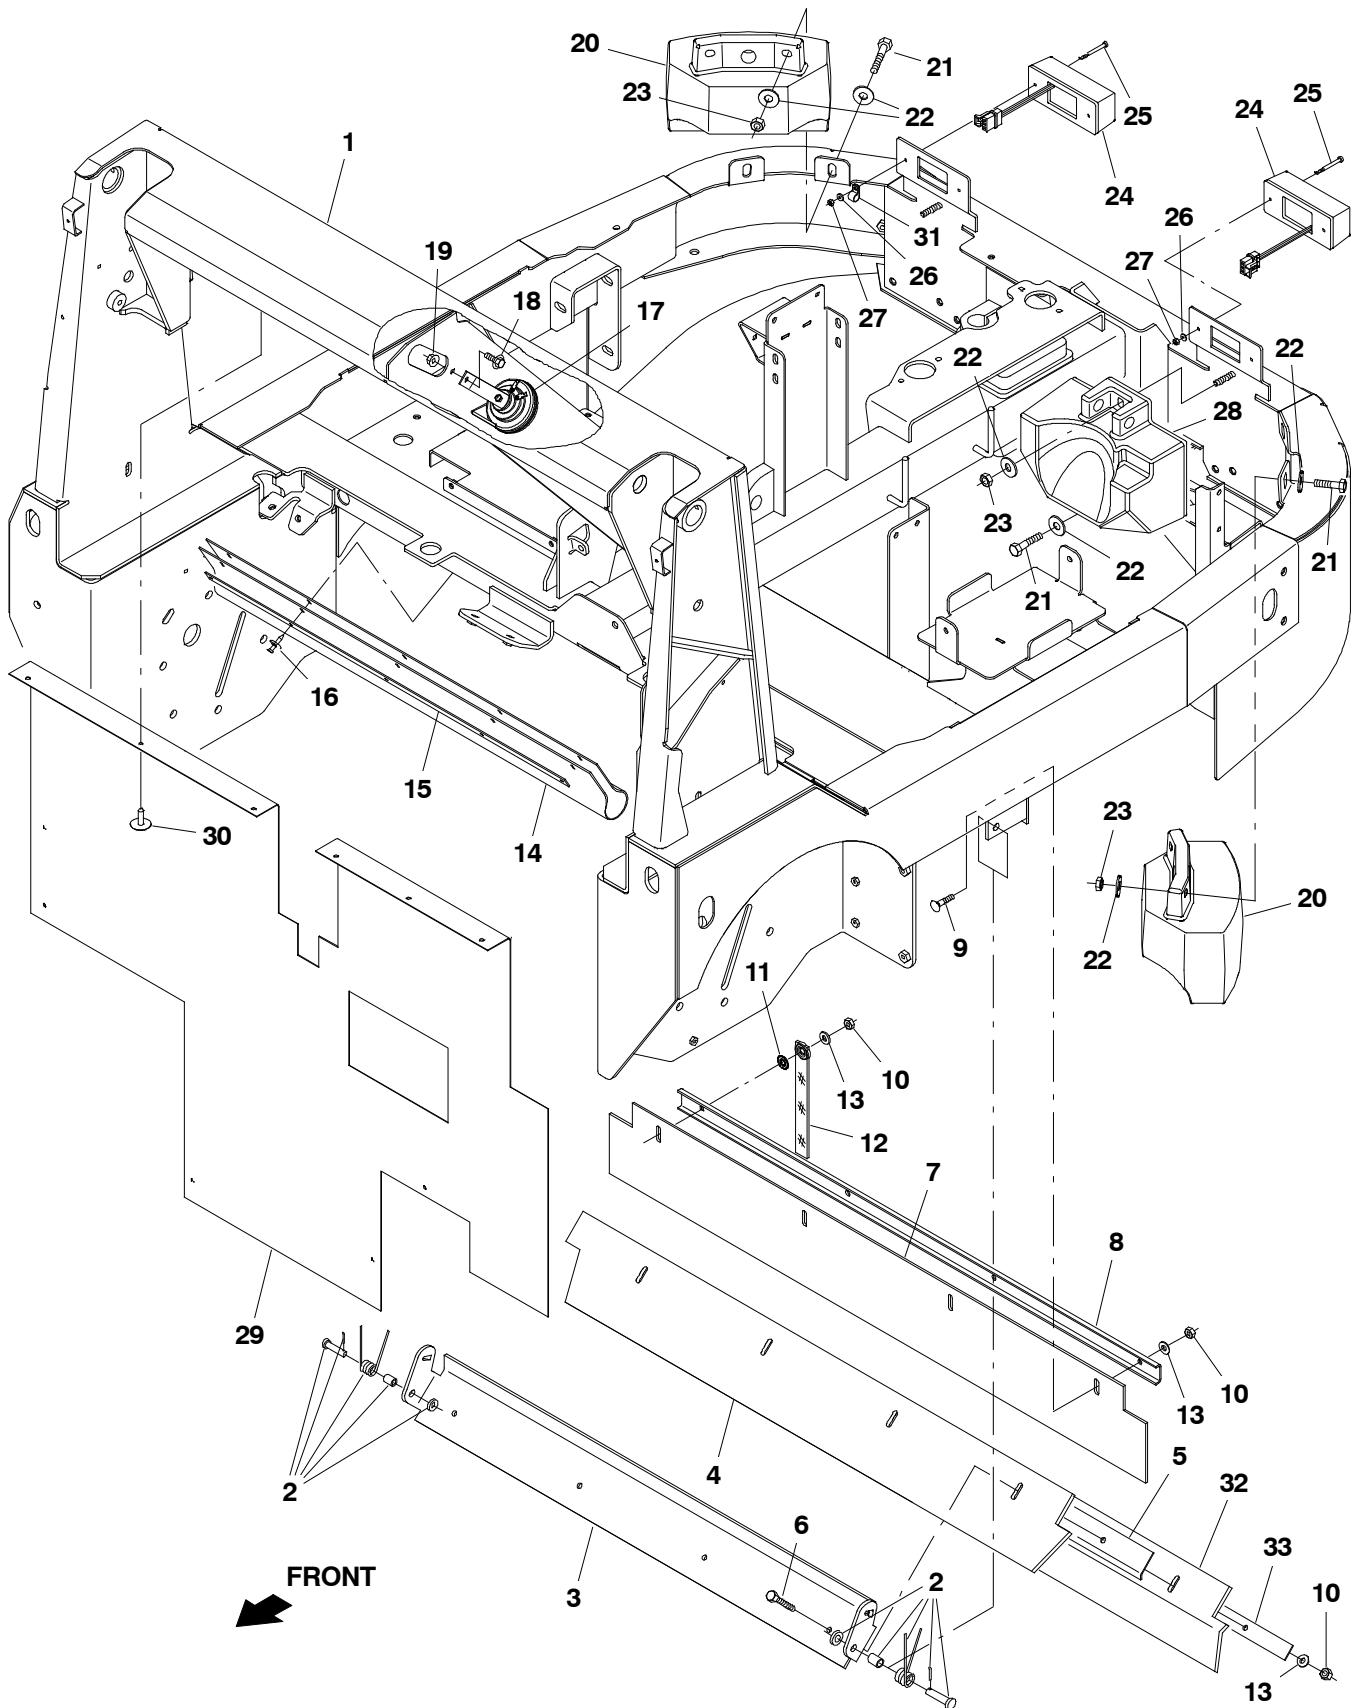


Fig. 2 - Main Frame Group

Ref.	Part No.	Serial Number	Description	Qty.
1	1028252	(006501-	) Frame Wldt, Main [S30]	1
2	69904	(006501-	) Spring Assy Kit	3
3	54182	(006501-	) Bracket, Flap, Recirculation	1
4	1212137	(006501-	) Skirt, Neo, .37, 06.00w 44.65l, 04/SI	1
5	1212908	(006501-	) Retainer, Blade, Deflector	1
6	41342	(006501-	) Screw, Hex, M8 X 1.25 X 40, 8.8	4
7	1045348	(006501-	) Skirt, Neo, .18, 06.74w 50.00l, 04/ SI	1
8	383161	(006501-	) Channel, .12, 1.5w 0.5 44.6l, 3/0.4h	1
9	69915	(006501-	) Bolt, Carriage, M8 X 1.25 X 40	4
10	08709	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI	8
11	41142	(006501-	) Washer, Lock, Int- Ext, 0.38	1
12	71579	(006501-	) Strap, Static, W/Grommet, .19 1.1w 25.0l	1
13	32491	(006501-	) Washer, Flat, 0.31, Std	8
14	1036913	(006501-	) Skirt, Rbr, .12, 10.66w 43.00l, 10/ SI	1
15	1040146	(006501-	) Strip, Backing, Hppr	1
16	21246	(006501-	) Rivet, Plstc, .325d X 0.79	5
17	369704	(006501-	) Horn, 12vdc, DbA [Wolo]	1
18	1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	1
19	07791	(006501-	) Nut, Hex, Flng, M8 X 1.25	2
20	1036819	(006501-	) Weight, Counter, Casting, 79.9 Lb	2
21	16930	(006501-	) Screw, Hex, M10 X 1.50 X 50, 8.8	5
22	32493	(006501-	) Washer, Flat, 0.50, Std	10
23	41430	(006501-	) Nut, Hex, Lock, M10 X 1.5, NI	5
▽ 24	1033578	(006501-	) Taillight, 12vdc, 6.3 X 2.5	2
▲	45780	(006501-	) Lamp, 12vdc, 0.5a, 04cp [#1157]	1
25	377165	(006501-	) Screw, Pan, Phl, M4 X 0.70 X 60, 4.8	4
26	19065	(006501-	) Washer, Flat, 08	4
27	02850	(006501-	) Nut, Hex, Lock, M4 X 0.70, NI	4
28	1031503	(006501-	) Weight, Counter, Casting, 72.8lb (S30 and S30XP Only)	1
29	1212838	(006501-	) Skirt, Rubber	1
30	72968	(006501-	) Rivet, Plstc, .250d X 0.90	13
31	26395- 2	(006501-	) Clamp, Cable, Stl, 0.38d X 0.38w, 1hole	1
32	1212912	(006501-	) Skirt, Neo, .18, 6.42w X 48.73l, 04/SI	1
33	1212959	(006501-	) Retainer, Blade, Deflector	1

Fig. 3 - Brush Door Group, Right

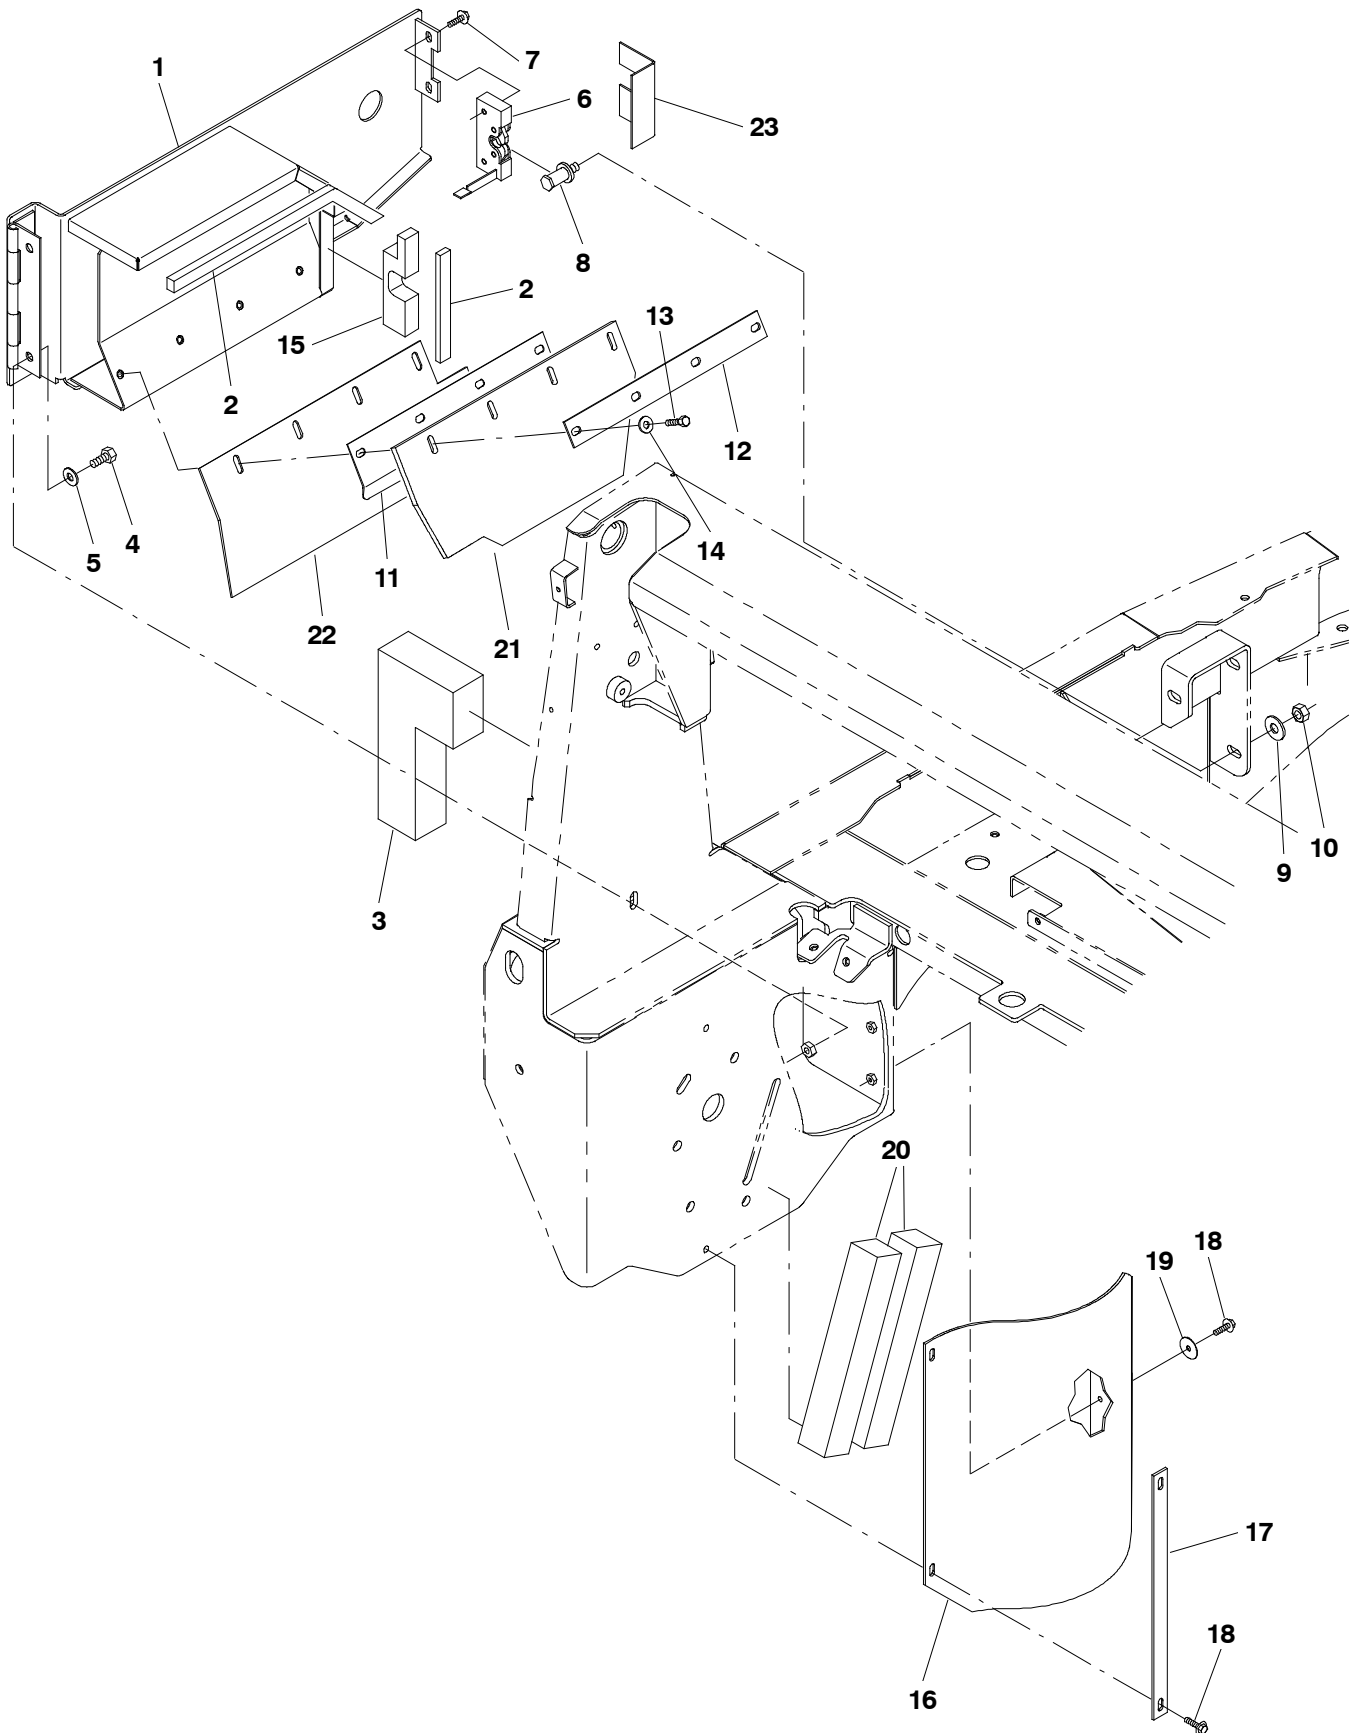


Fig. 3 - Brush Door Group, Right

Ref.	Part No.	Serial Number	Description	Qty.
1	1029580	(006501-	) Door Wldt, Brush, Rh	1
2	1046428	(006501-	) Seal, Afmkt, Rbr, Clsd, Adh, 02ft	2
3	1042812	(006501-	) Seal, Rbr, Clsd, 2.00w 09.8l Rh	1
4	370181	(006501-	) Screw, Hex, M10 X 1.50 X 25, 10.9	2
5	32492	(006501-	) Washer, Flat, 0.38, Std	2
6	59195	(006501-	) Latch, Hook	1
7	1036892	(006501-	) Screw, Hex, M6 X 1.00 X 25, 9.8 Sems	2
8	59192	(006501-	) Latch, Bolt	1
9	41619	(006501-	) Washer, Flat, 0.56b 1.38d .11, Ss	1
10	07788	(006501-	) Nut, Hex, Std, M12 X 1.75, Ss	1
11	1045352	(006501-	) Bracket, Skirt	1
12	1039320	(006501-	) Retainer, Skirt, .12, 1.5w X 14.4l, Blk	1
13	76570	(006501-	) Screw, Hex, M8 X 1.25 X 30, 8.8	4
14	32491	(006501-	) Washer, Flat, 0.31, Std	4
15	1212451	(006501-	) Seal, Rbr, Clsd, 1.50, Door, Brush, Rh	1
16	1214146	(006501-	) Skirt, Deflector	1
17	1033343	(006501-	) Bracket, Retainer, Seal	2
18	1037345	(006501-	) Screw, Hex, M6 X 1.00 X 30, 9.8, Sems	8
19	41187	(006501-	) Washer, Flat, Belleville, .38	4
20	1042791	(006501-	) Insulation, Acstc, 2.0, 02.0 X 12.0	2
21	1212911	(006501-	) Skirt Assy, Door, Brush, Rh	1
22	1212134	(006501-	) Skirt, Door, Brush	1
23	1213336	(006501-	) Skirt, Brush Arm	1

Fig. 4 - Brush Door Group, Left

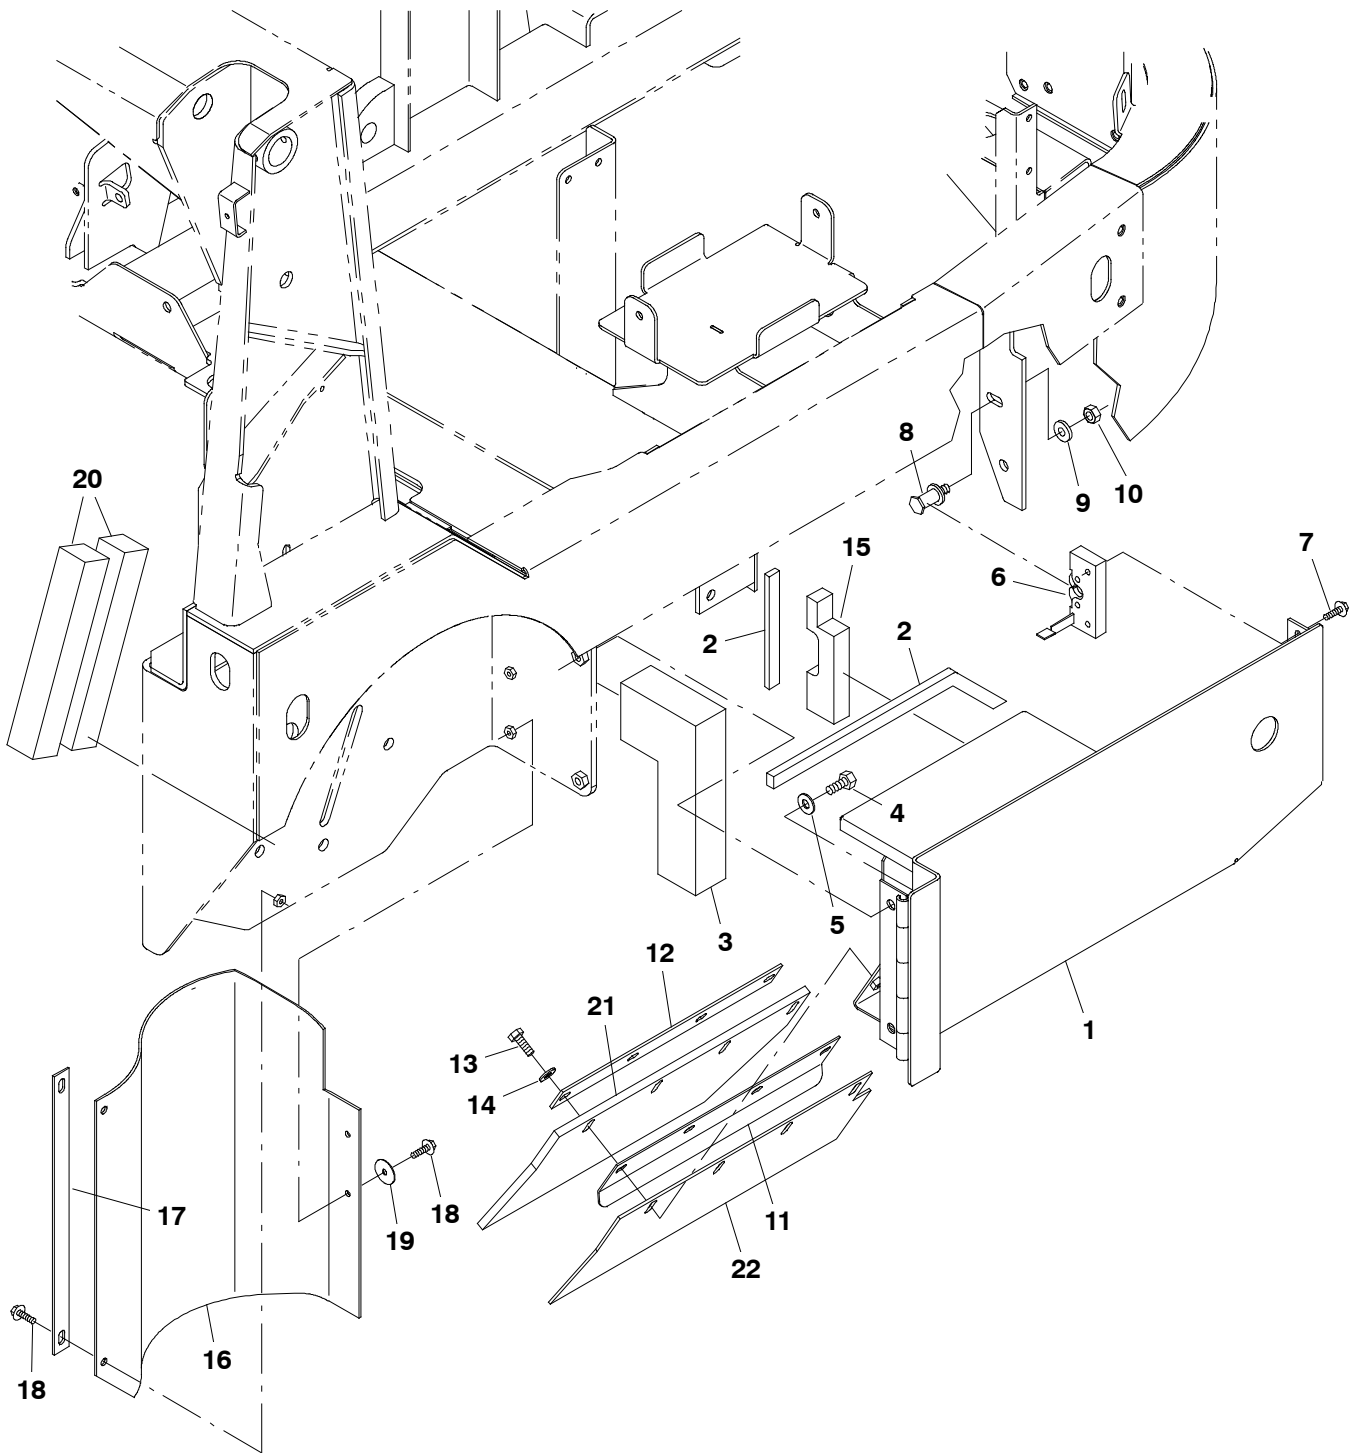


Fig. 4 - Brush Door Group, Left

Ref.	Part No.	Serial Number	Description	Qty.
1	1029801	(006501-	) Door Wldt, Brush, Lh	1
2	1046428	(006501-	) Seal, Afmkt, Rbr, Clsd, Adh, 02ft	2
3	1042829	(006501-	) Seal, Rbr, Clsd, 2.00w 09.8l Lh	1
4	370181	(006501-	) Screw, Hex, M10 X 1.50 X 25, 10.9	2
5	32492	(006501-	) Washer, Flat, 0.38, Std	2
6	59194	(006501-	) Latch, Hook	1
7	1036892	(006501-	) Screw, Hex, M6 X 1.00 X 25, 9.8 Sems	2
8	59192	(006501-	) Latch, Bolt	1
9	41619	(006501-	) Washer, Flat, 0.56b 1.38d .11, Ss	1
10	07788	(006501-	) Nut, Hex, Std, M12 X 1.75, Ss	1
11	1045352	(006501-	) Bracket, Skirt	1
12	1039320	(006501-	) Retainer, Skirt, .12, 1.5w X 14.4l, Blk	1
13	76570	(006501-	) Screw, Hex, M8 X 1.25 X 30, 8.8	4
14	32491	(006501-	) Washer, Flat, 0.31, Std	4
15	1212452	(006501-	) Seal, Rbr, Clsd, 1.00, Door, Brush, Lh	1
16	1214146	(006501-	) Skirt, Deflector	1
17	1033343	(006501-	) Bracket, Retainer, Seal	2
18	1037345	(006501-	) Screw, Hex, M6 X 1.00 X 30, 9.8, Sems	8
19	41187	(006501-	) Washer, Flat, Belleville, .38	4
20	1042791	(006501-	) Insulation, Acstc, 2.0, 02.0 X 12.0	2
21	1212910	(006501-	) Skirt Assy, Door, Brush, Lh	1
22	1212134	(006501-	) Skirt, Door, Brush	1

Fig. 5 - Operator Station Group

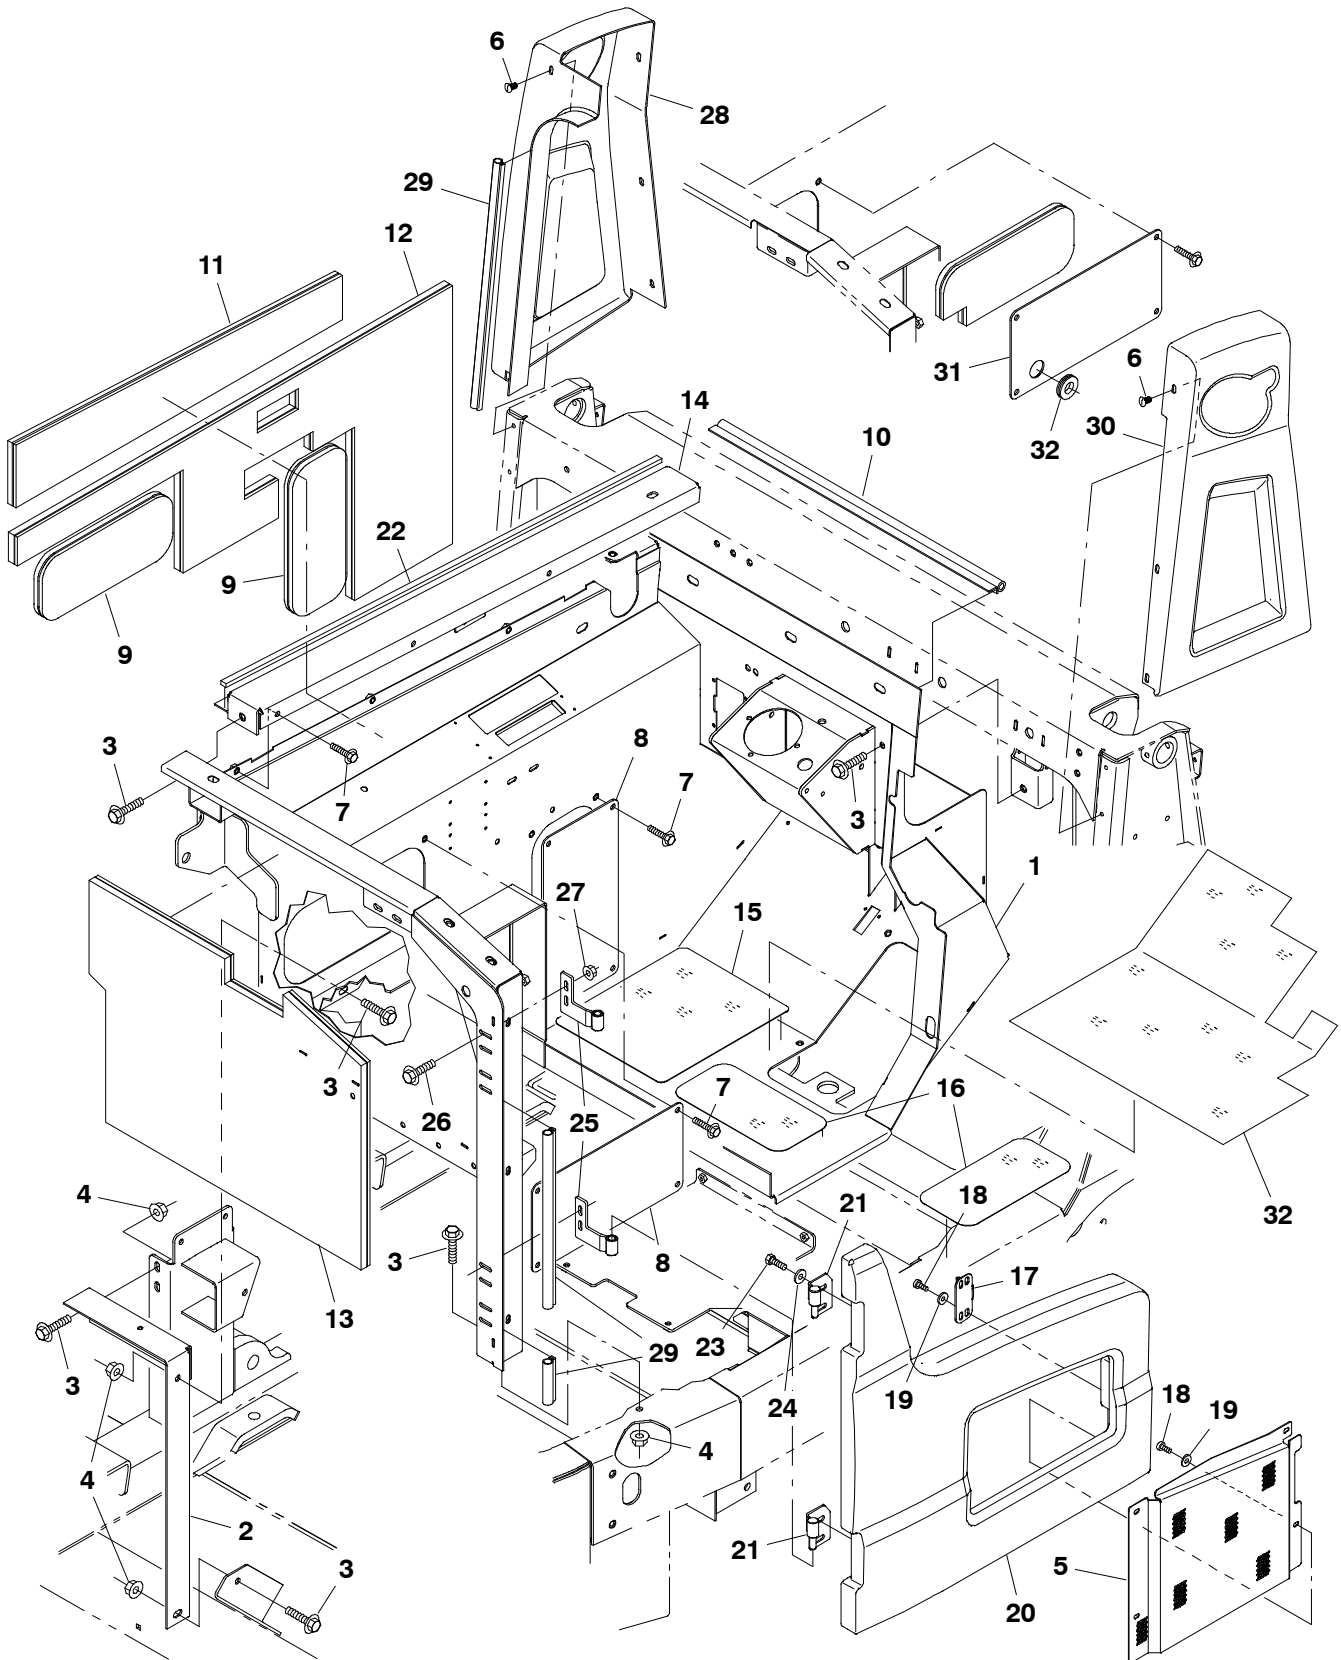


Fig. 5 - Operator Station Group

Ref.	Part No.	Serial Number	Description	Qty.
1	1058273	(006501-	) Shroud Wldt, Station, Oprtr	1
2	1032315	(006501-	) Channel	1
3	1037358	(006501-	) Screw, Hex, M10 X 1.50 X 35, 9.8, Sems	9
4	07792	(006501-	) Nut, Hex, Flng, M10 X 1.50	5
5	1064528	(006501-	) Panel, Shrd, Seat	1
6	21168	(006501-	) Clip, .250h, Plstc [Pine- Tree]	12
7	1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	14
8	1028201	(006501-	) Panel, Side, Access	2
9	1038806	(006501-	) Insulation, Flame- Retardant, 0.75- 0.88	2
10	1038959	(006501-	) Seal, Trim, Bulb, 90 Degree	1
11	1033288	(006501-	) Insulation, Flame- Retardant, 0.75- 0.88	1
12	1033287	(006501-	) Insulation, Flame- Retardant, 0.75- 0.88	1
13	1033286	(006501-	) Insulation, Flame- Retardant, 0.75- 0.88	1
14	1059307	(006501-	) Lip Wldt, Station, Oprtr	1
15	86799	(006501-	) Tread, Non- Skid, 10.0w 12.0l	1
16	223350	(006501-	) Tread, Non- Skid, 04.5w 10.0l	2
17	1026825	(006501-	) Bracket, Latch, Shrd, Seat	1
18	09200	(006501-	) Screw, Pan, Phl, M5 X 0.80 X 12, Ss	6
19	19066	(006501-	) Washer, Flat, 10	6
20	9007979	(006501-	) Cover, Seat, Rotomold, Afmkt [S30]	1
21	1057880	(006501-	) Hinge Wldt, Shrd, Rh	2
22	1046426	(006501-	) Seal, Afmkt, Rbr, Clsd, Adh, 08ft	1
23	16735	(006501-	) Screw, Hex, M8 X 1.25 X 16, 8.8	4
24	32491	(006501-	) Washer, Flat, 0.31, Std	4
25	1057875	(006501-	) Hinge Wldt, Shrd, Rh	2
26	1036892	(006501-	) Screw, Hex, M6 X 1.00 X 25, 9.8, Sems	4
27	07790	(006501-	) Nut, Hex, Flng, M6 X 1.00	4
28	9007977	(006501-	) Cover, Lntl, Lh, Rotomold, Afmkt [S30]	1
29	1030588	(006501-	) Seal, Afmkt, Bulb, 90, 0.75d F/11ga 02ft	2
30	9007978	(006501-	) Cover, Lntl, Rh, Rotomold, Afmkt [S30]	1
31	1047691	(006501-	) Panel, Side, Access, Ce (Europe Only)	1
32	10632- 8	(006501-	) Grommet, Rbr, 0.75id, F/1.3h, .12 Matl (S30XP Only) (Europe Only)	1

Fig. 6 - Seat and Shroud Group

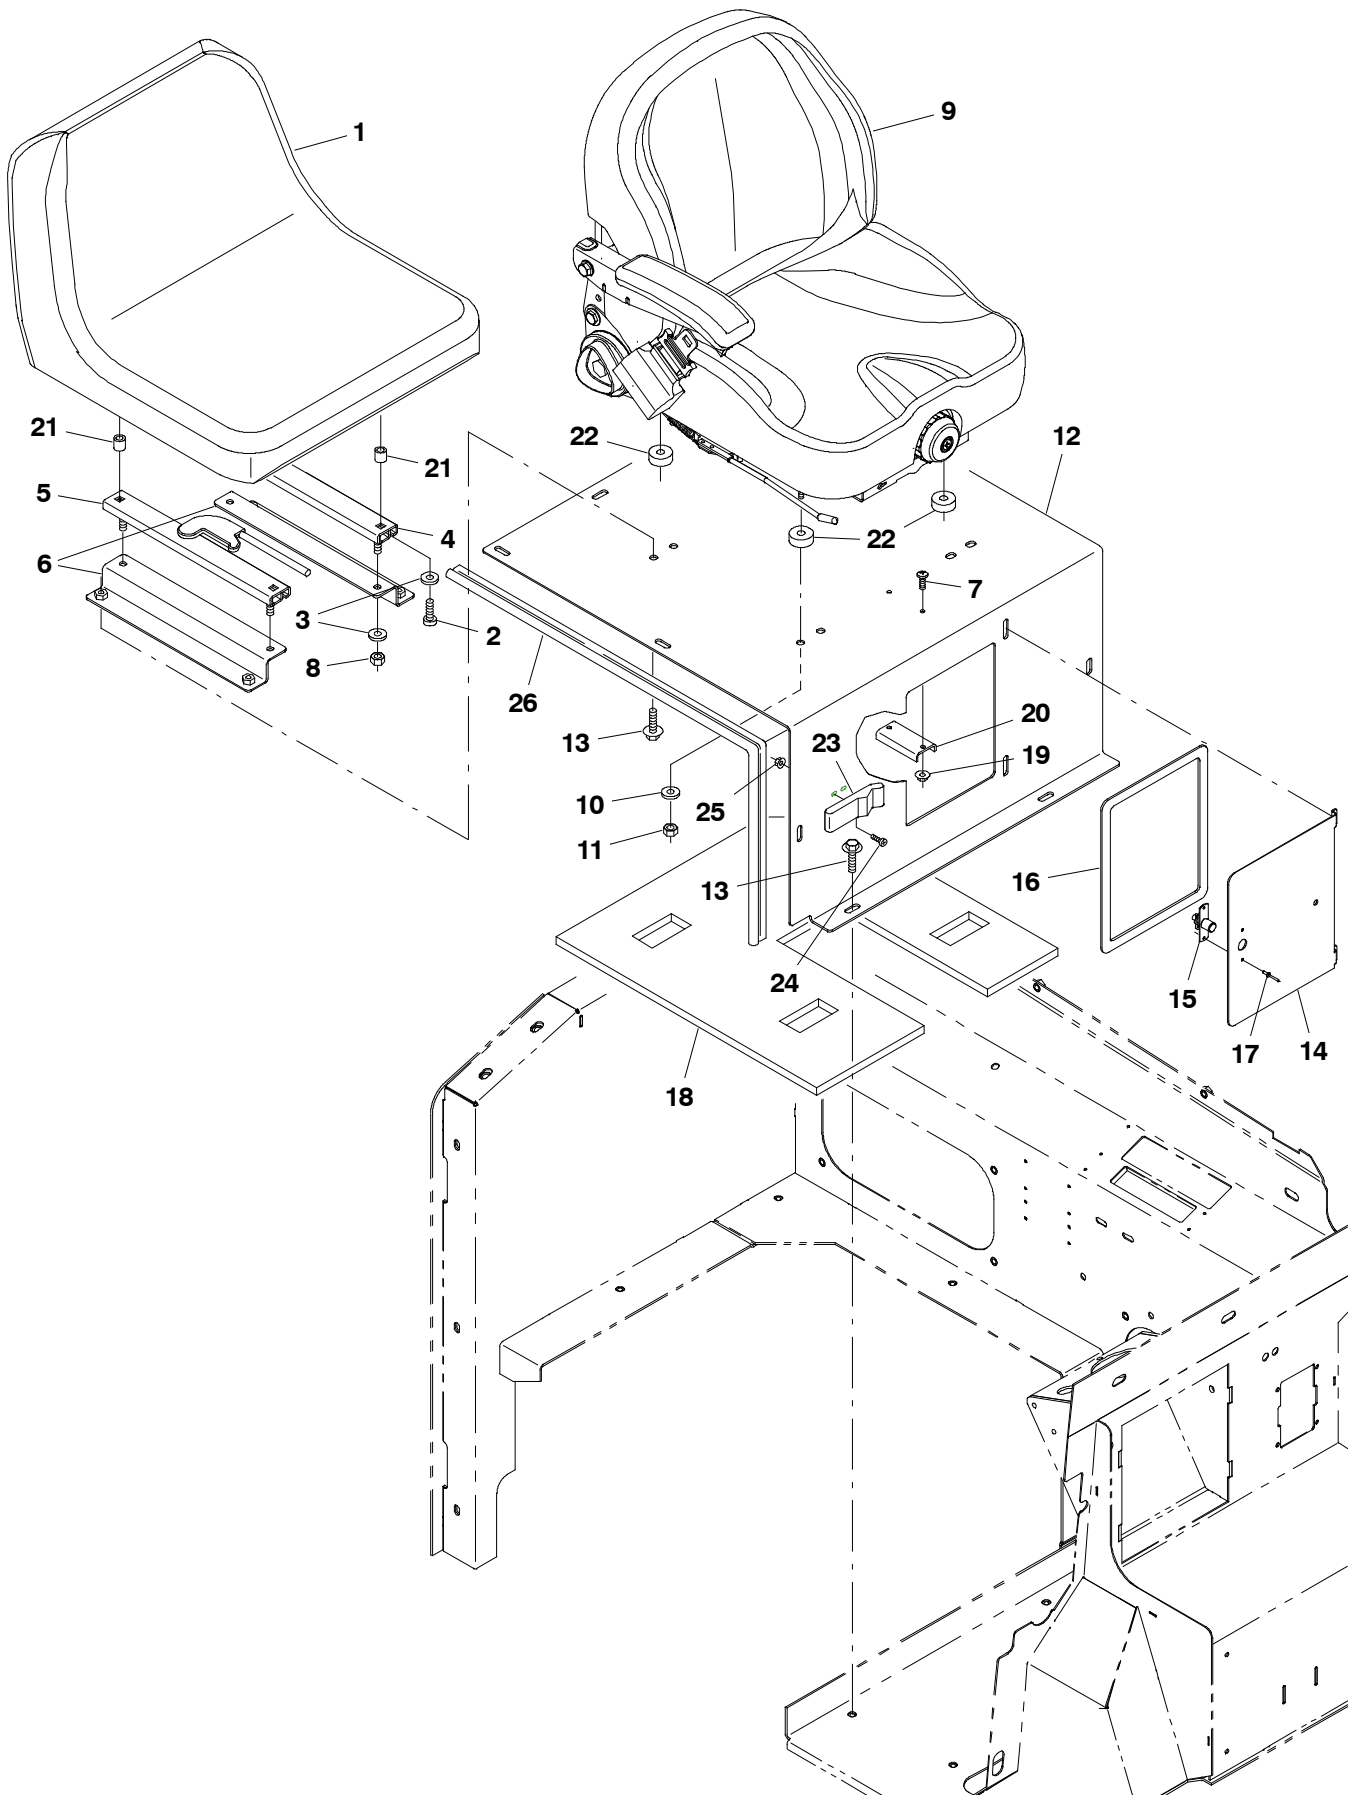


Fig. 6 - Seat and Shroud Group

Ref.	Part No.	Serial Number	Description	Qty.
1	1201894	(006501-	) Seat, Std [Milsco] (S30 Only)	1
2	49177	(006501-	) Screw, Pan, Phl, .31- 18 X 1.00, G2	4
3	69461	(006501-	) Washer, Flat, 0.38b 0.88d .12, Stl, PI	12
4	360369	(006501-	) Track, Slide, Seat Adj, 12.5l	1
5	360370	(006501-	) Track, Slide, Seat Adj, 12.5l, W/Latch	1
6	1040363	(006501-	) Bracket, Angle, Mtg, Seat	2
7	06933	(006501-	) Screw, Pan, Phl, M5 X 0.80 X 16, 4.8	2
8	32983	(006501-	) Nut, Hex, Lock, .31- 18, NI	4
9	9018735	(006501-	) Seat, Deluxe, Replmt (S30XP Only) (See Breakdowns)	1
10	32491	(006501-	) Washer, Flat, 0.31, Std (S30XP Only)	4
11	32983	(006501-	) Nut, Hex, Lock, .31- 18, NI (S30XP Only)	4
12	1036502	(006501-	) Panel, Seat	1
13	1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	13
14	1036489	(006501-	) Door, Access	1
15	140962	(006501-	) Latch, Cmpr, Spring, Knurled Knob, PI	1
16	1036500	(006501-	) Gasket, Rbr, .13, 07.87w 09.84l, Adh	1
17	87316	(006501-	) Rivet, Blind, .125d X 0.32 X .25d, Alm	2
18	1033291	(006501-	) Insulation, Flame- Retardant, 1.00	1
19	07789	(006501-	) Nut, Hex, Flng, M5 X 0.80	2
20	63378	(006501-	) Magnet, Drive Brush	1
21	1051052	(006501-	) Spacer, Rnd, .38b .88d .38l	4
22	1048261	(006501-	) Spacer, 0.32d, 1.00d, 0.38l, PI (Europe Only)	4
23	49800	(006501-	) Latch	1
24	06928	(006501-	) Screw, Pan, Phl, M4 X 0.70 X 20, 4.8	2
25	02850	(006501-	) Nut, Hex, Lock, M4 X 0.70, NI	2
26	1031625	(006501-	) Seal, Afmkt, Bulb, Str, .50d F/11ga 03ft	1

Fig. 7 - Engine Cover Group, Rear

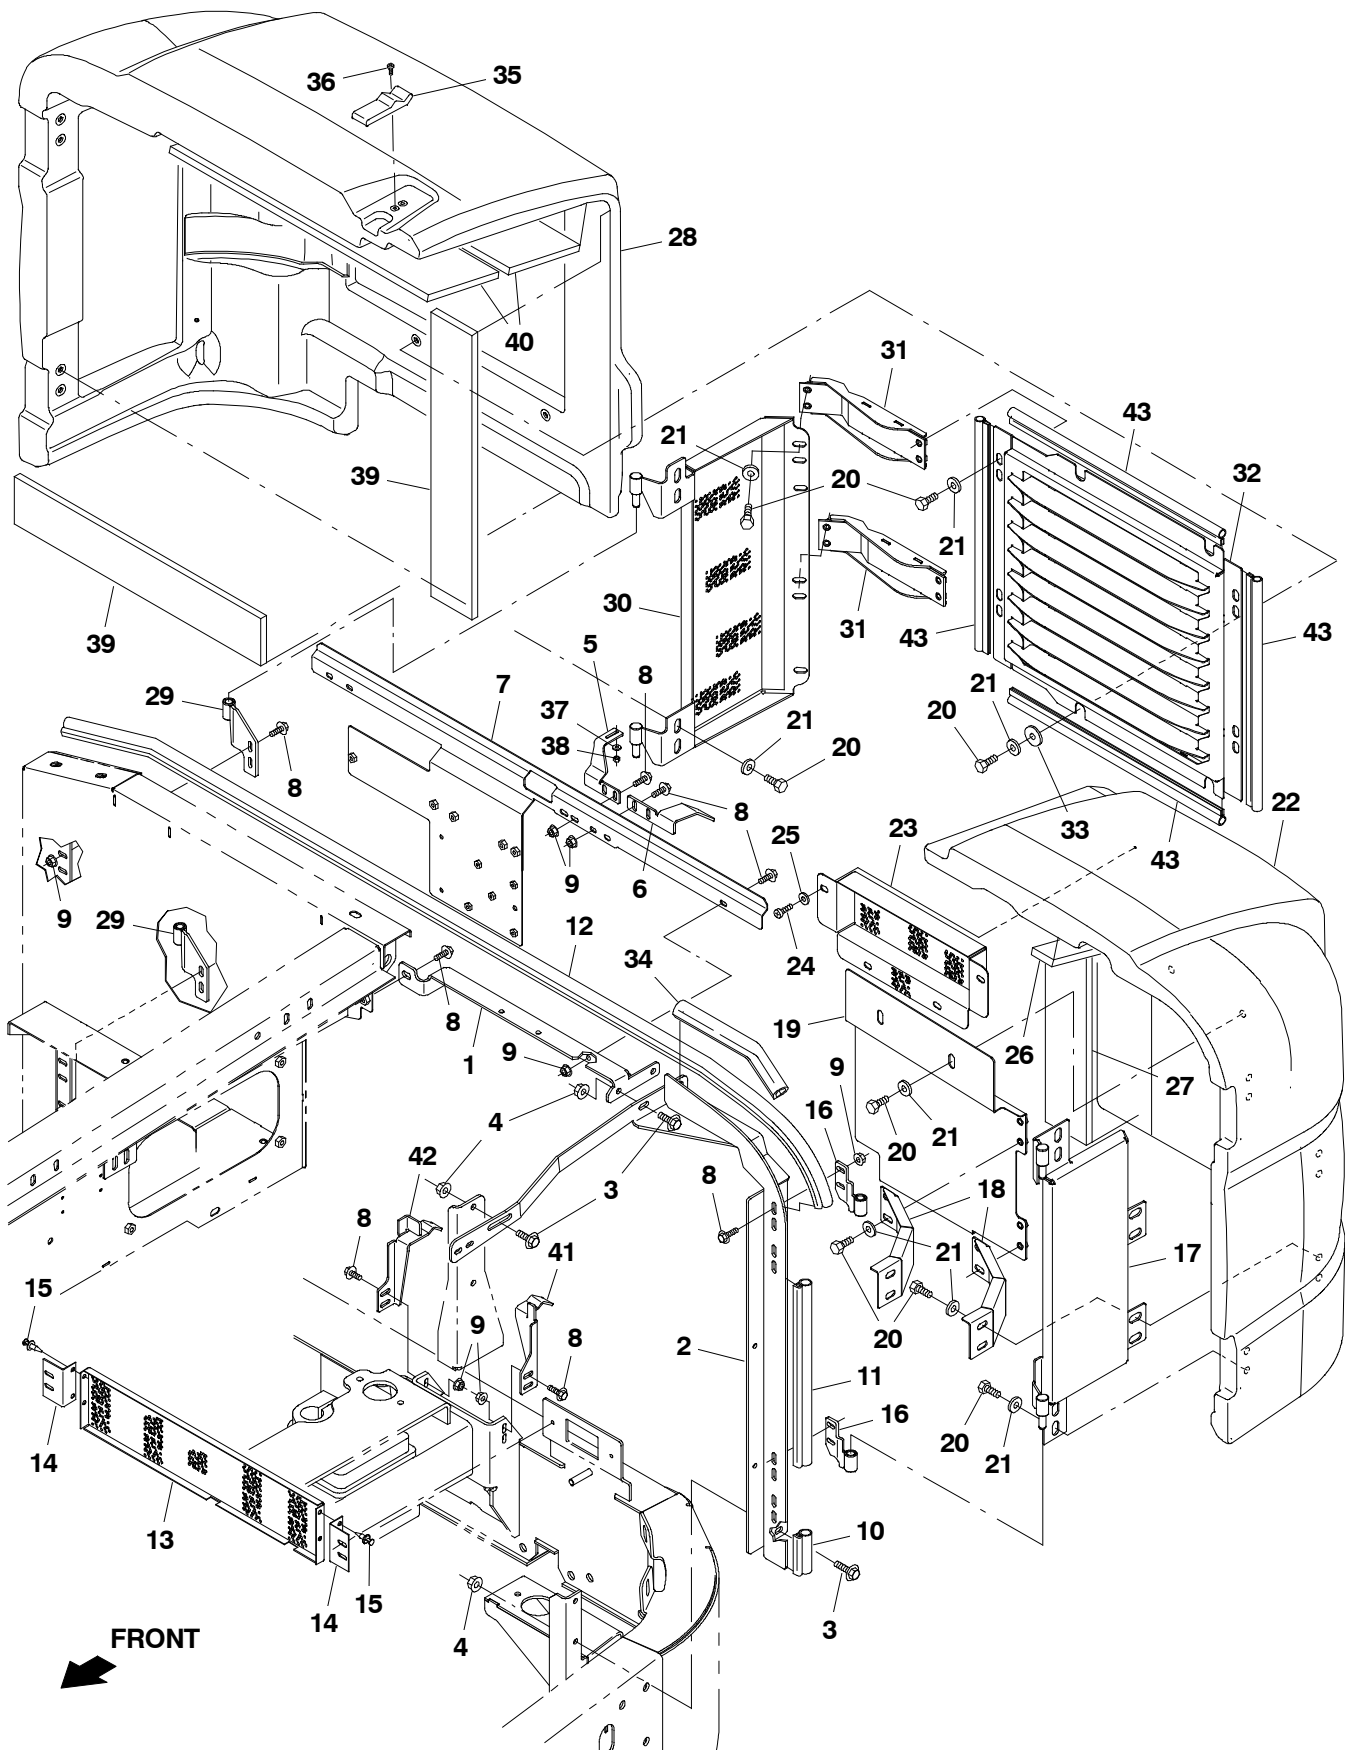


Fig. 7 - Engine Cover Group, Rear

Ref.	Part No.	Serial Number	Description	Qty.
1	1057778	(006501-	) Bracket, Sppt, Cover, Rear, Lh	1
2	1057776	(006501-	) Brace Wldt, Sppt	1
3	1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	5
4	07791	(006501-	) Nut, Hex, Flng, M8 X 1.25	5
5	1060449	(006501-	) Bracket, Latch, Shrd	1
6	1059479	(006501-	) Bracket, Sppt, Shrd, Rear, Upper, Lh	1
7	1057786	(006501-	) Bracket, Sppt, Rear, Shrd	1
8	1036892	(006501-	) Screw, Hex, M6 X 1.00 X 25, 9.8, Sems	20
9	07790	(006501-	) Nut, Hex, Flng, M6 X 1.00	9
10	1030585	(006501-	) Seal, Afmkt, Bulb, 90, 0.75d F/11ga 01ft	1
11	1030588	(006501-	) Seal, Afmkt, Bulb, 90, 0.75d F/11ga 02ft	1
12	1030593	(006501-	) Seal, Afmkt, Bulb, 90, 0.75d F/11ga 08ft	1
13	1032962	(006501-	) Grill	1
14	1034378	(006501-	) Bracket, Grill	2
15	1040816	(006501-	) Rivet, Plstc, .250d X 0.90	4
16	1059874	(006501-	) Hinge Wldt, Shrd, Lh	2
17	1059996	(006501-	) Panel Wldt, Heat, Shield, Lh	1
18	1059211	(006501-	) Bracket, Sppt, Cover, Rear, Lh	2
19	1061000	(006501-	) Panel, Heat, Shield, Rear, Lh	1
20	16735	(006501-	) Screw, Hex, M8 X 1.25 X 16, 8.8	31
21	32491	(006501-	) Washer, Flat, 0.31, Std	21
22	9007974	(006501-	) Cover, Rear, Lh, Rotomold, Afmkt [S30]	1
23	1059440	(006501-	) Panel, Shrd, Eng	1
24	360973	(006501-	) Screw, Pan, 12- 16 X 0.50, F/ Plstc	4
25	19066	(006501-	) Washer, Flat, 10	4
26	1061147	(006501-	) Insulation, Acstc, 0.5, 11.5 X 14.5 Adh	1
27	1061145	(006501-	) Insulation, Acstc, 0.5, 03.0 X 23.0 Adh	1
28	9007975	(006501-	) Cover, Rear, Rh, Rotomold, Afmkt [S30]	1
29	1060639	(006501-	) Hinge Wldt, Shrd, Rh	2
30	1059520	(006501-	) Grill Wldt, Screen, Rear, Rh	1
31	1059516	(006501-	) Bracket Wldt, Sppt, Cover, Rear, Rh	2
32	1059481	(006501-	) Grill Wldt, Rear, Rh	1
33	30013	(006501-	) Washer, Flat, 0.31, Fendr	4
34	1015274	(006501-	) Seal, Afmkt, Bulb, Str, 0.76, 0.93w 01ft	1
35	49800	(006501-	) Latch	1
36	06927	(006501-	) Screw, Pan, Phl, M4 X 0.70 X 16, 4.8	4
37	19064	(006501-	) Washer, Flat, 0.16b 0.38d .05, Pl, 06	2
38	02850	(006501-	) Nut, Hex, Lock, M4 X 0.70, NI	2
39	1061145	(006501-	) Insulation, Acstc, 0.5, 03.0 X 23.0 Adh	2
40	1061146	(006501-	) Insulation, Acstc, 0.5, 05.5 X 23.0 Adh	2
41	1059477	(006501-	) Bracket, Sppt, Shrd, Rear, Lower, Lh	1
42	1059478	(006501-	) Bracket, Sppt, Shrd, Rear, Lower, Rh	1
43	1031623	(006501-	) Seal, Afmkt, Bulb, Str, .50d F/11ga 02ft	4

Fig. 8 - Engine Cover Group, Top

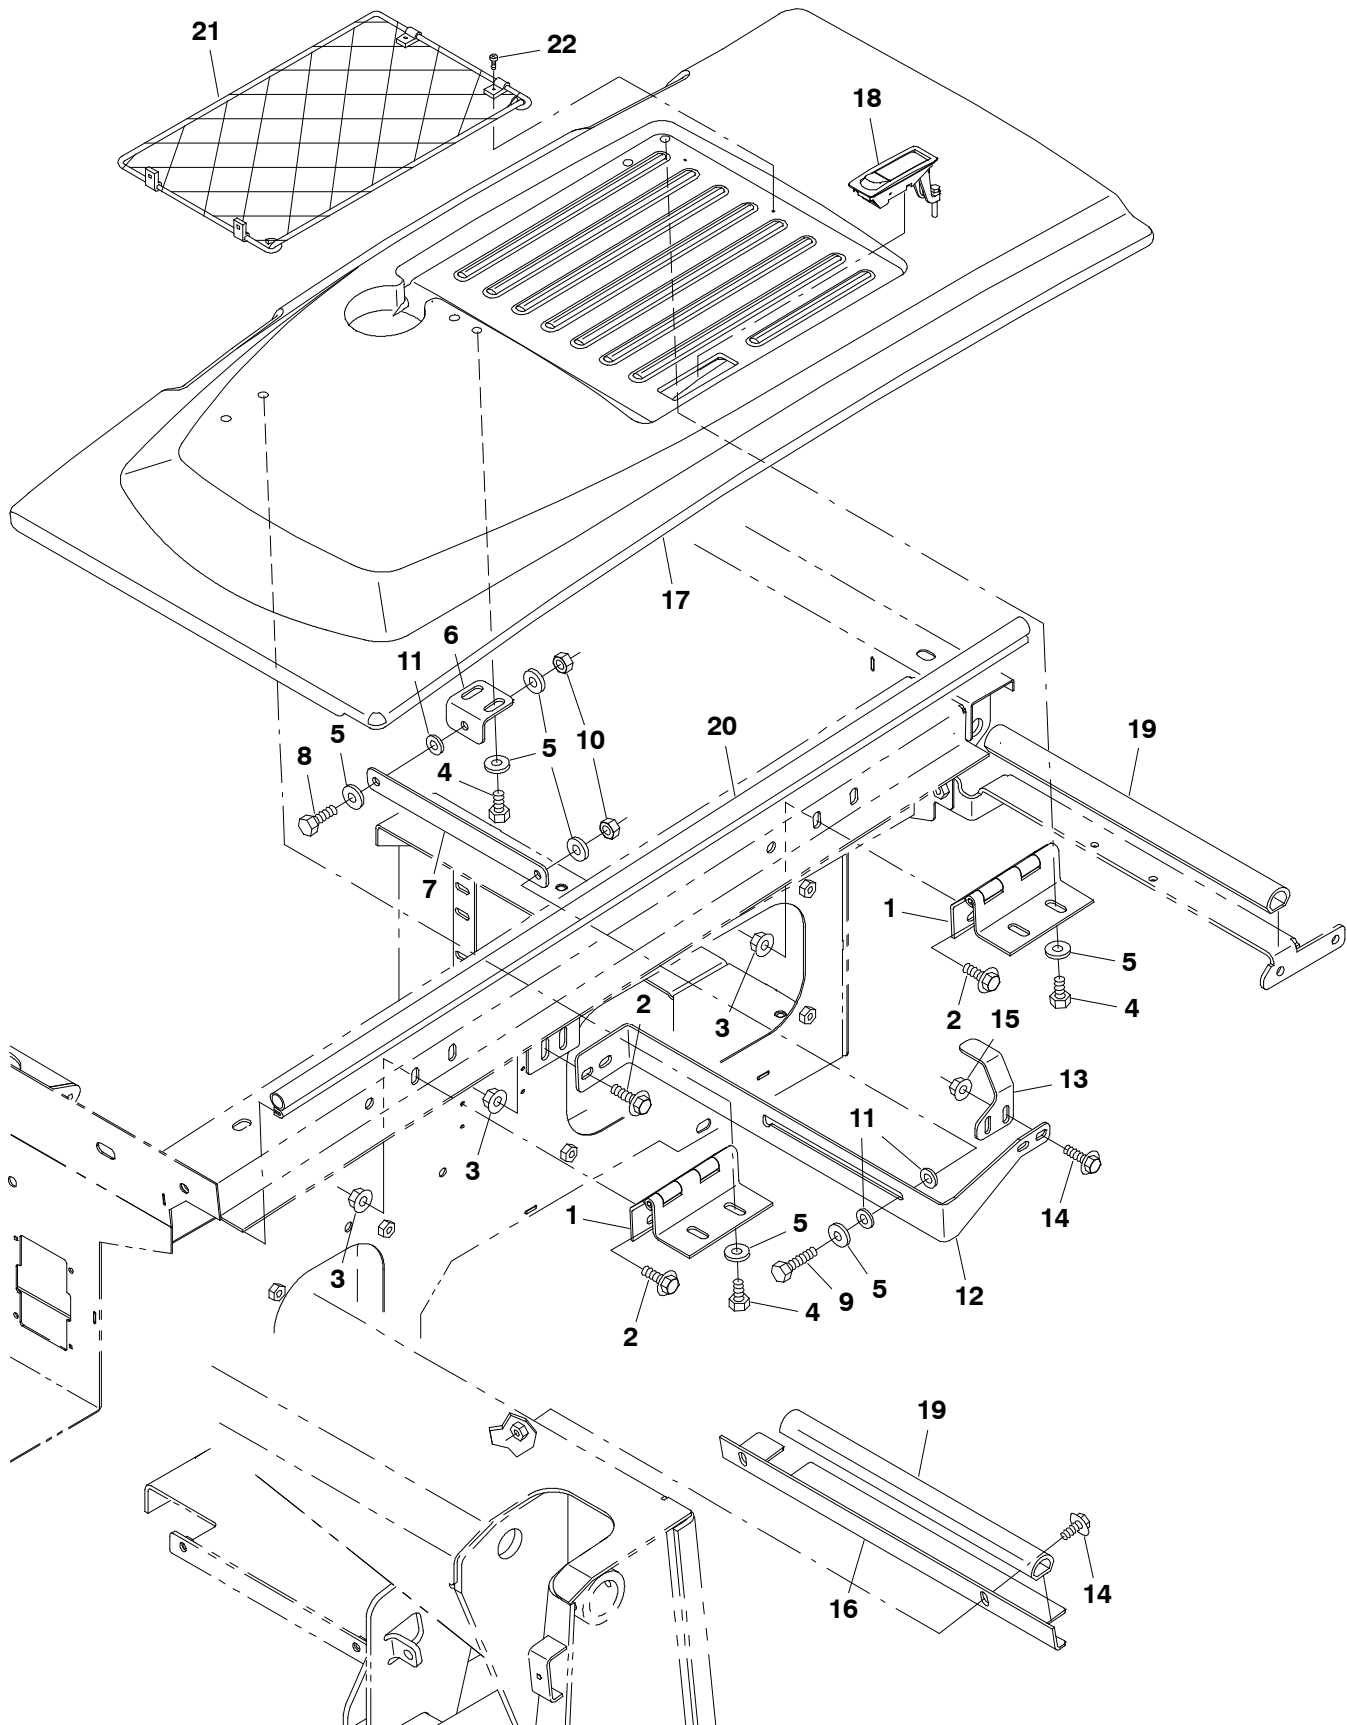


Fig. 8 - Engine Cover Group, Top

Ref.	Part No.	Serial Number	Description	Qty.
1	1057961	(006501-	) Hinge, .25pin .12, Cover, Top	2
2	1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	6
3	07791	(006501-	) Nut, Hex, Flng, M8 X 1.25	6
4	16735	(006501-	) Screw, Hex, M8 X 1.25 X 16, 8.8	6
5	32491	(006501-	) Washer, Flat, 0.31, Std	10
6	1059285	(006501-	) Bracket, Prop, Rod, Cover	1
7	1059286	(006501-	) Plate, Prop, Rod	1
8	39277	(006501-	) Screw, Hex, M8 X 1.25 X 25, 8.8	1
9	06955	(006501-	) Screw, Hex, M8 X 1.25 X 35, 8.8	1
10	08709	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI	2
11	43611	(006501-	) Washer, Flat, 0.39b 0.75d .06, Nyl	3
12	1059276	(006501-	) Bracket, Sppt, Prop, Rod	1
13	1059291	(006501-	) Bracket, Latch, Cover, Top	1
14	1036892	(006501-	) Screw, Hex, M6 X 1.00 X 25, 9.8, Sems	4
15	07790	(006501-	) Nut, Hex, Flng, M6 X 1.00	2
16	1059269	(006501-	) Bracket, Angle, Lintel	1
17	9007976	(006501-	) Cover, Top, Rotomold, Afmkt [S30]	1
18	398806	(006501-	) Latch	1
19	1015273	(006501-	) Seal, Afmkt, Bulb, Str, 0.76, 0.93w 02ft	2
20	1030593	(006501-	) Seal, Afmkt, Bulb, 90, 0.75d F/11ga 08ft	1
21	CD001	(006501-	) Glovenet- 525 Document Rack/Net 60200104-	1
22	1053318	(006501-	) Screw, Pan, Phl, 08- 16 X 1.00, F/ Plstc	4

Fig. 9 - Engine Cover Group, Side

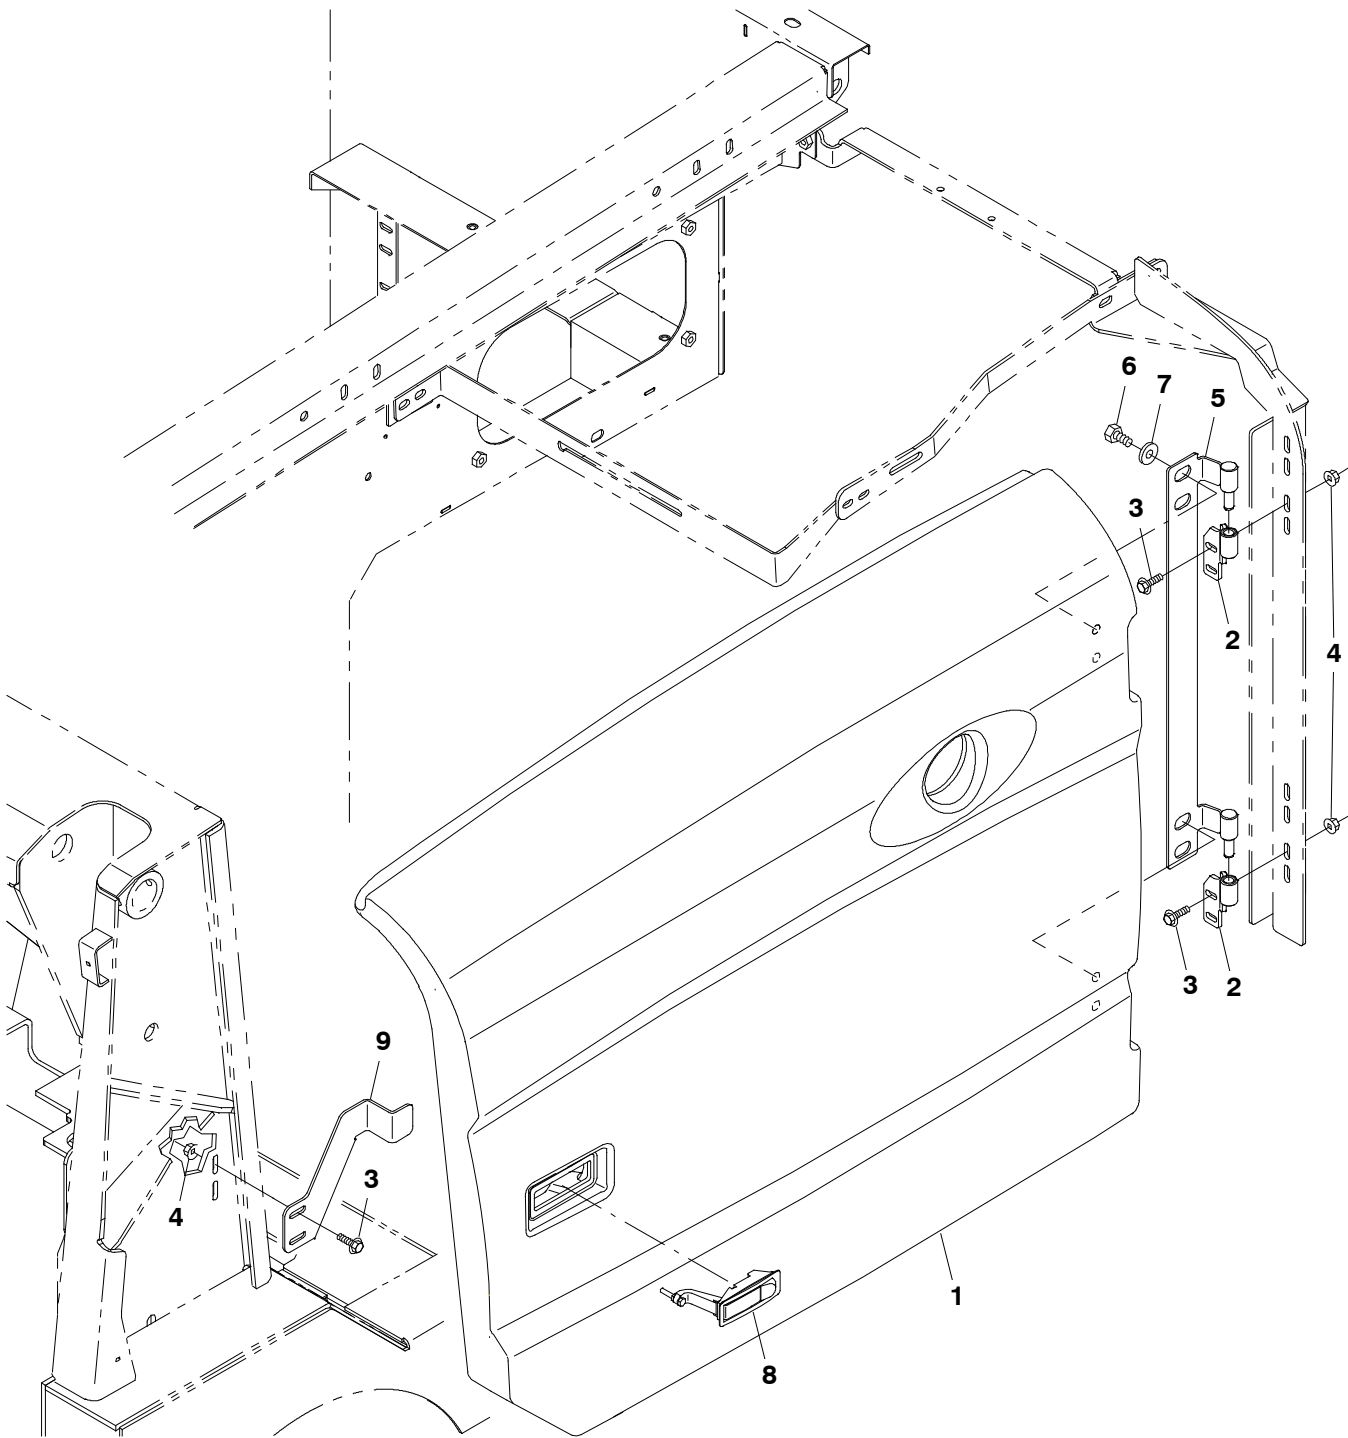


Fig. 9 - Engine Cover Group, Side

Ref.	Part No.	Serial Number	Description	Qty.
1	9007973	(006501-	) Cover, Side, Rotomold, Afmkt [S30]	1
2	1059874	(006501-	) Hinge Wldt, Shrd, Lh	2
3	1036892	(006501-	) Screw, Hex, M6 X 1.00 X 25, 9.8, Sems	6
4	07790	(006501-	) Nut, Hex, Flng, M6 X 1.00	6
5	1059868	(006501-	) Hinge Wldt, Shrd, Side, Lh	1
6	16735	(006501-	) Screw, Hex, M8 X 1.25 X 16, 8.8	4
7	1017218	(006501-	) Washer, Flat, 0.32b 1.00d .12, Ss	4
8	398806	(006501-	) Latch	1
9	1059221	(006501-	) Bracket, Latch, Side, Door	1

Fig. 10 - Instrument Panel Group, S30

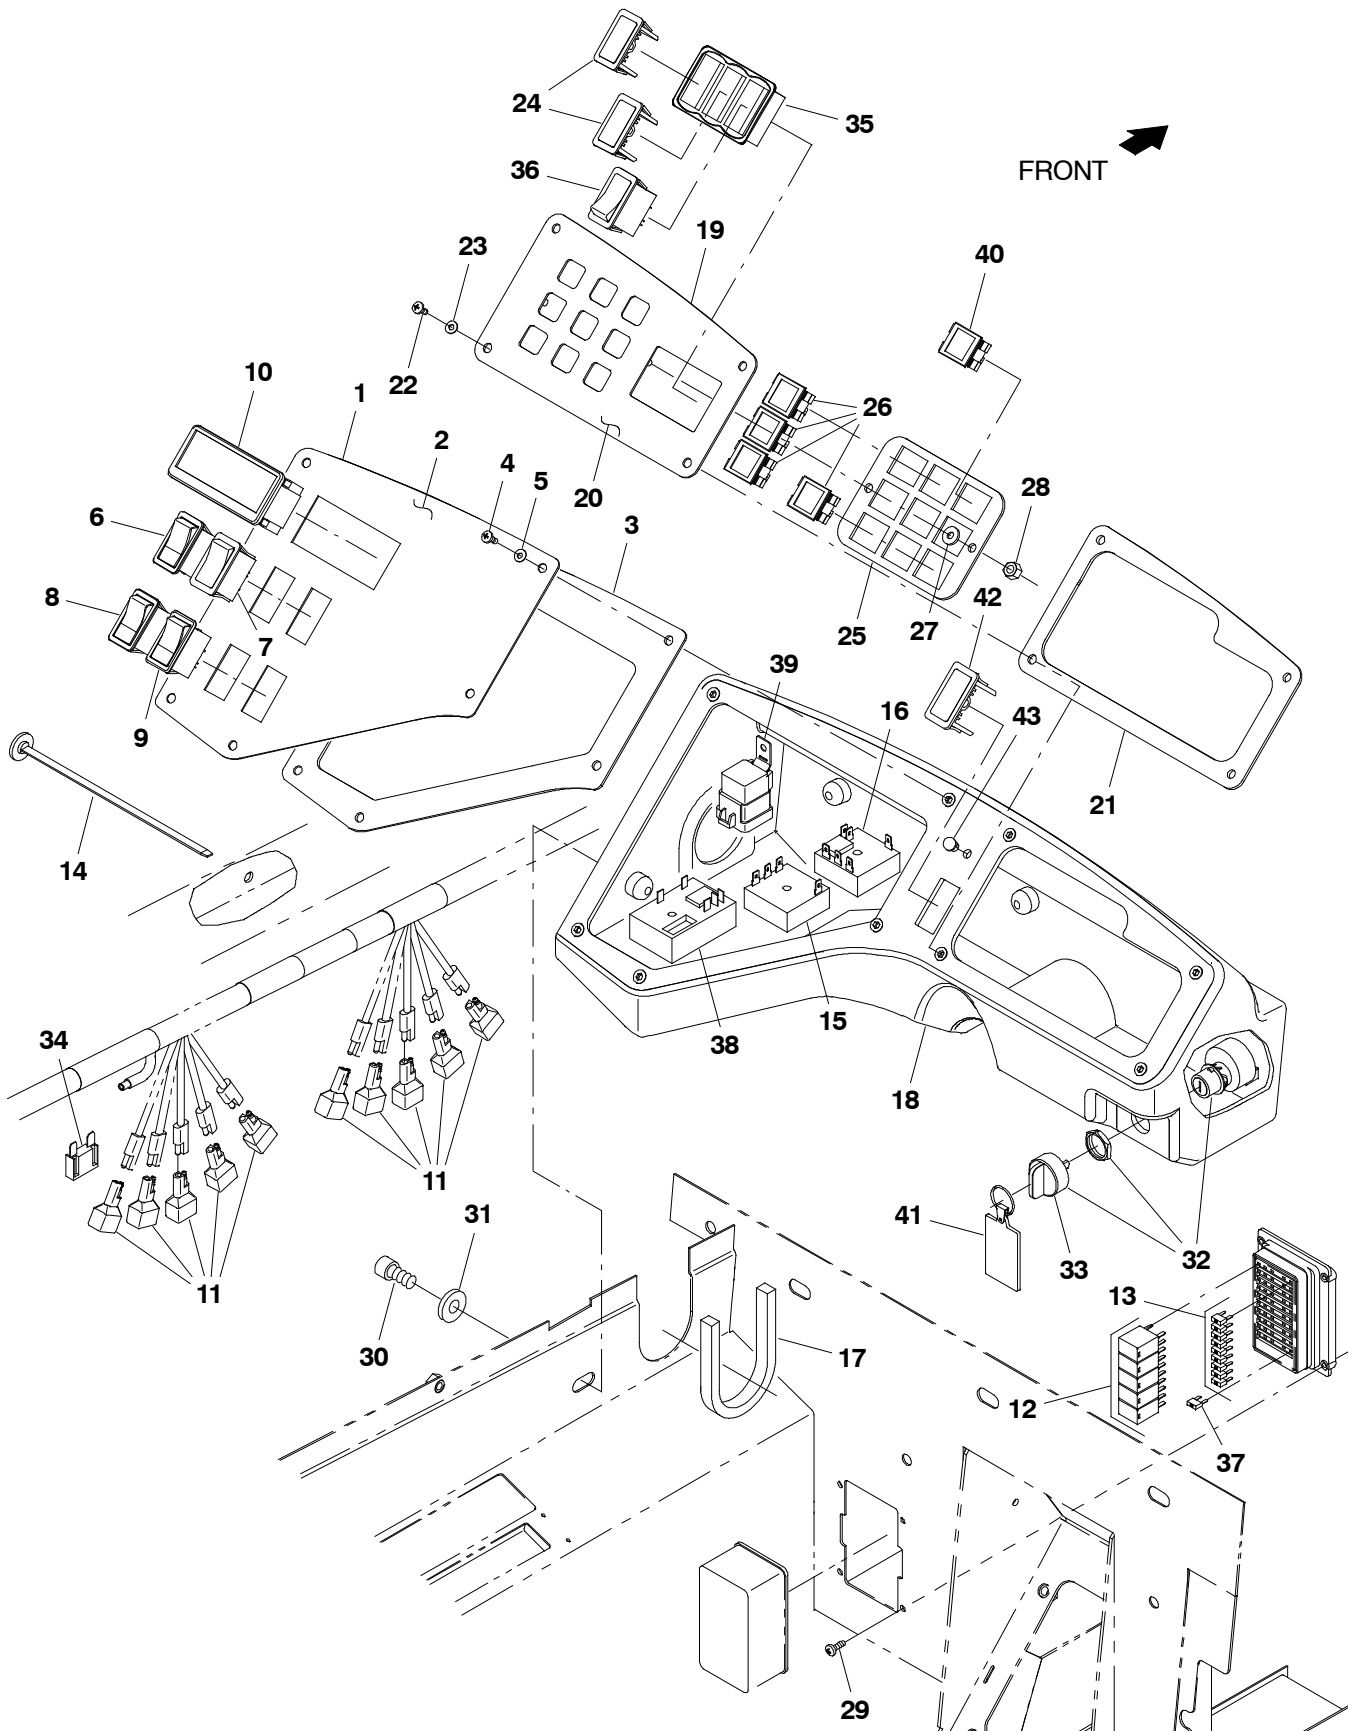


Fig. 10 - Instrument Panel Group, S30

	Ref.	Part No.	Serial Number	Description	Qty.
▽		9004529	(006501-	) Panel Assy, Instmt, Basic, Replmt	1
▲	1	1031683	(006501-	) Panel, Instrument, Basic	1
▲	2	1033884	(006501-	) Label, Panl, Instmt, Basic	1
▲	3	1031211	(006501-	) Gasket, Panel, Instmt	1
▲	4	1045487	(006501-	) Screw, Pan, Phl, M5 X 0.80 X 16, Blk	5
▲	5	1012615	(006501-	) Washer, Flat, 0.19b 0.44d .03, Nyl, Blk	5
	6	377084	(006501-	) Switch, Rocker, Prgrsv	1
	7	398528	(006501-	) Switch, Rocker, Dpdt, On / Off / Mom	1
	8	398508	(006501-	) Switch, Rocker, Dpdt, Mom / Off / Mom	1
	9	397889	(006501-	) Switch, Rocker, Dpst, On / None / On	1
	10	1028750	(006501-	) Indicator, Ele, [Multi- Display]	1
	11	222290	(006501-	) Diode, Ele, Plug	10
	12	1028832	(006501-	) Relay, 12vdc, 35a, Spdt [Micro 280]	5
	13	1030985	(006501-	) Fuse, Blade, 15a, 32v [Mini]	9
	14	1041873	(006501-	) Fastener, Wire, Tie [Button Head]	2
	15	34816	(006501-	) Timer, 12vdc, 30sec On	1
	16	1030813	(006501-	) Timer, 12vdc, 6sec Spcl [Tosr116]	1
	17	1035153	(006501-	) Gasket, Harness	1
	18	1035507	(006501-	) Box, Instrument, li, Trimmed	1
▽		9004528	(006501-	) Panel Assy, Switch, Replmt	1
▲	19	1033771	(006501-	) Panel, Switch li	1
▲	20	1033883	(006501-	) Label, Panl, Instmt, Rh	1
▲	21	1031664	(006501-	) Gasket, Panel, Switch	1
▲	22	1045487	(006501-	) Screw, Pan, Phl, M5 X 0.80 X 16, Blk	4
▲	23	1012615	(006501-	) Washer, Flat, 0.19b 0.44d .03, Nyl, Blk	4
	24	398501	(006501-	) Plug, Hole, Rt, Rocker Switch, .87 X 1.7	2
	25	1033760	(006501-	) Panel, Light	1
	26	361075	(006501-	) Light, Panl, 14vdc, 1.1 X 1.0	4
	27	19066	(006501-	) Washer, Flat, 10	2
	28	08708	(006501-	) Nut, Hex, Lock, M6 X 1.00, NI	2
	29	39239	(006501-	) Screw, Pan, Phl, 10- 32 X 0.50, G2, Blk	4
	30	1056769	(006501-	) Screw, Soc, M10 X 1.50 X 16, 12.9	4
	31	32485	(006501-	) Washer, Flat, 0.38, Sae	4
▽	32	1028790	(006501-	) Switch, Key, 4 Pos [Honeywell]	1
▲	33	9004545	(006501-	) Key, Ignition [Replmt W/O Dust Boot]	1
	34	394922	(006501-	) Fuse, Blade, 060a [Maxi]	1
	35	1029951	(006501-	) Bezel, Switch [3 Gang]	1
	36	377084	(006501-	) Switch, Rocker, Prgrsv	1
	37	1036014	(006501-	) Fuse, Blade, 25a, 32vdc [Mini]	1
	38	1046893	(006501-	) Timer, 12vdc, 10a [Ce Seat Switch] (Europe Only)	1
	39	56186	(006501-	) Relay, 12vdc, 040a, Spdt No (Europe Only)	1
	40	361075	(006501-	) Light, Panl, 14vdc, 1.1 X 1.0 (Europe Only)	1
	41	1075003	(006501-	) Keychain, Rectangle, Parts & Service	1
	42	398501	(008041-	) Plug, Hole, Rt, Rocker Switch, .87 X 1.7 (No. Amer. Only)	1
	43	80061	(008041-	) Plug, Hole, Rnd, 0.30h 0.3l (No. Amer. Only)	1

Fig. 11 - Instrument Panel Group, S30 XP and X4

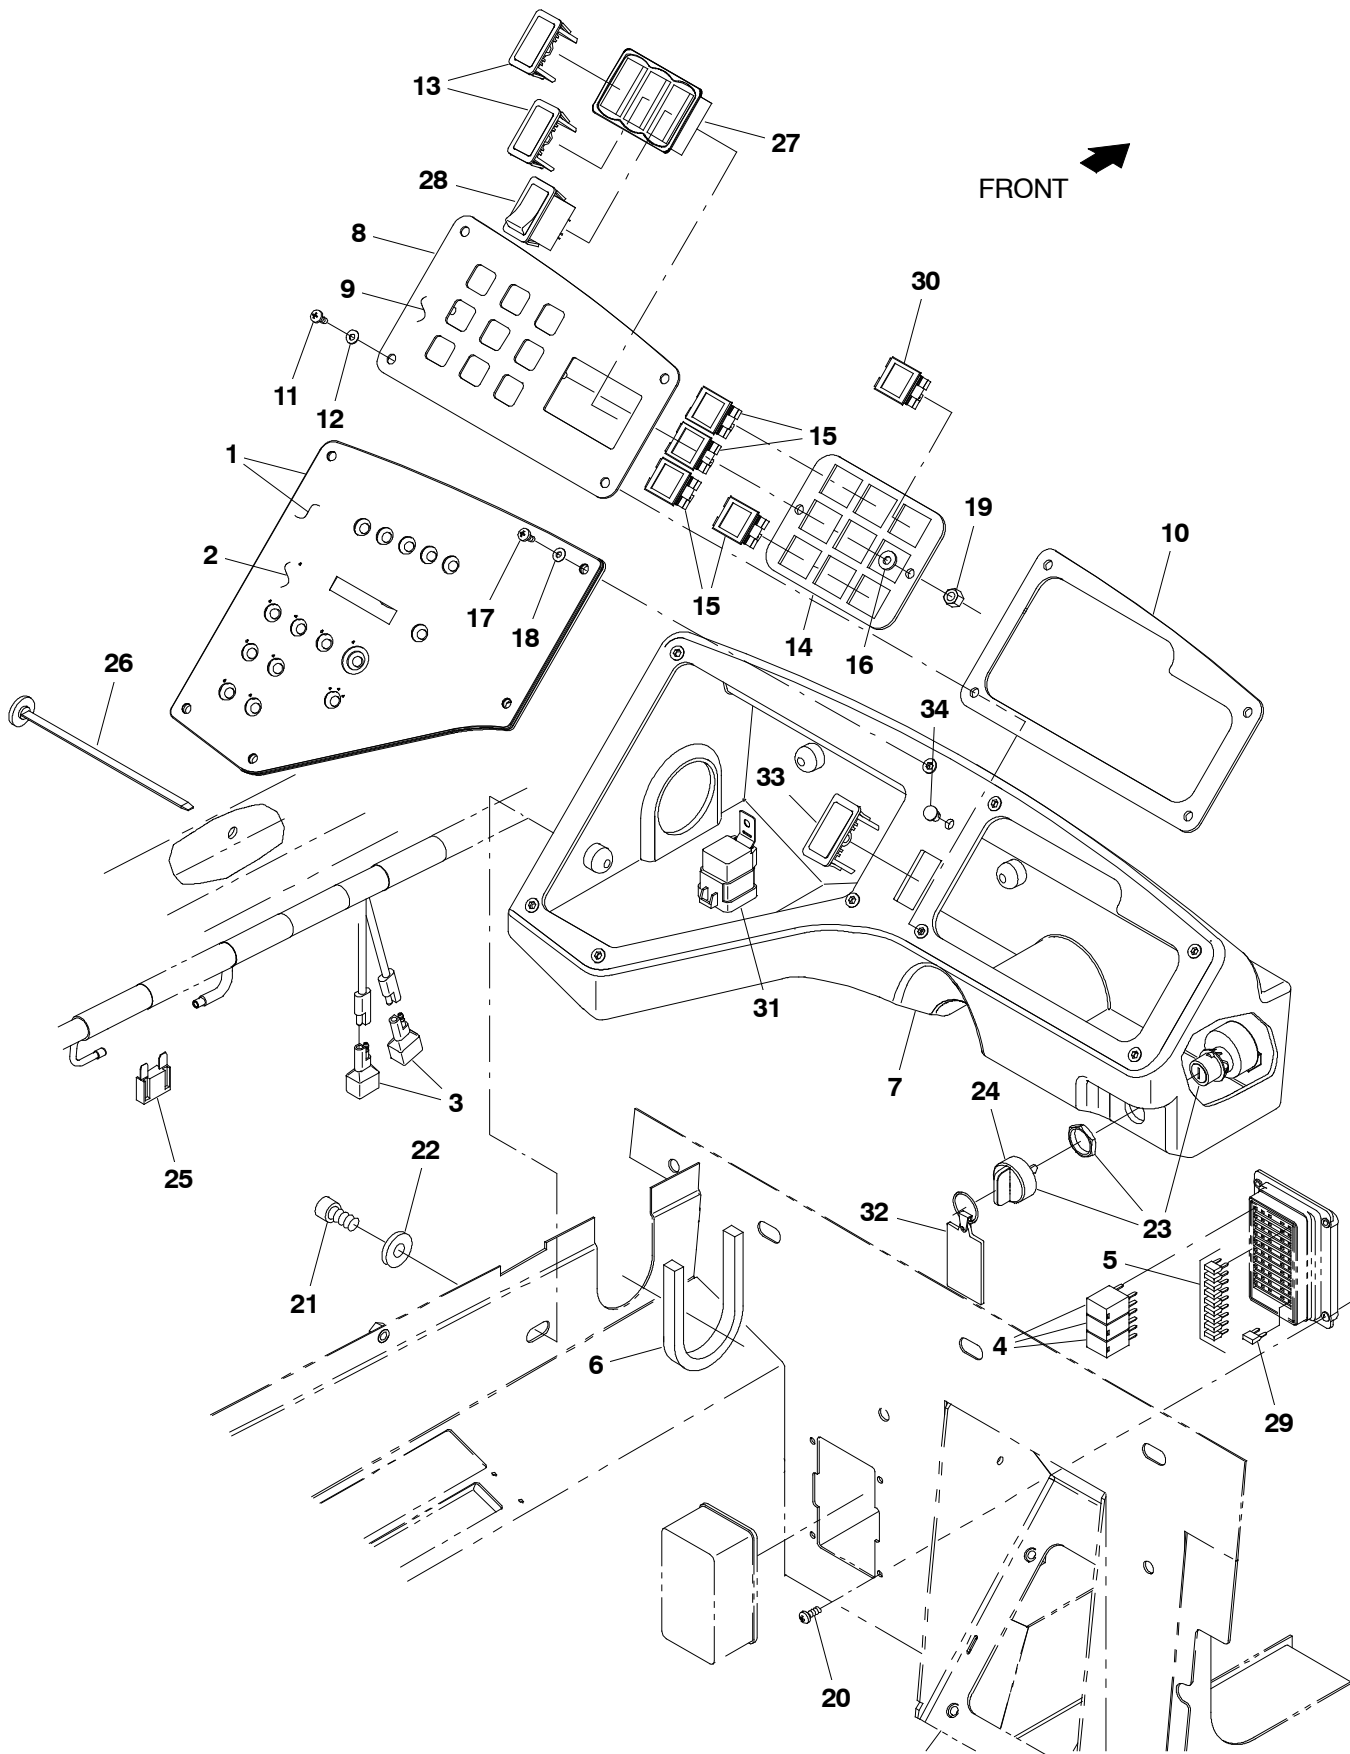


Fig. 11 - Instrument Panel Group, S30 XP and X4

Ref.	Part No.	Serial Number	Description	Qty.
1	9004513	(006501-	) Panel Kit, Replmt [S30] (Includes Control Board and Label Overlay Panel)	1
2	9004325	(006501-	) Label, Overlay Panel, Replmt [S30]	1
3	222290	(006501-	) Diode, Ele, Plug	2
4	1028832	(006501-	) Relay, 12vdc, 35a, Spdt [Micro 280]	3
5	1030985	(006501-	) Fuse, Blade, 15a, 32v [Mini]	9
6	1035153	(006501-	) Gasket, Harness	1
7	1035507	(006501-	) Box, Instrument, li, Trimmed	1
▽	9004528	(006501-	) Panel Assy, Switch, Replmt	1
▲	8 1033771	(006501-	) Panel, Switch li	1
▲	9 1033883	(006501-	) Label, Panl, Instmt, Rh	1
▲	10 1031664	(006501-	) Gasket, Panel, Switch	1
▲	11 1045487	(006501-	) Screw, Pan, Phl, M5 X 0.80 X 16, Blk	4
▲	12 1012615	(006501-	) Washer, Flat, 0.19b 0.44d .03, Nyl, Blk	4
13	398501	(006501-	) Plug, Hole, Rt, Rocker Switch, .87 X 1.7	2
14	1033760	(006501-	) Panel, Light	1
15	361075	(006501-	) Light, Panl, 14vdc, 1.1 X 1.0	4
16	19066	(006501-	) Washer, Flat, 10	2
17	1045487	(006501-	) Screw, Pan, Phl, M5 X 0.80 X 16, Blk	5
18	1012615	(006501-	) Washer, Flat, 0.19b 0.44d .03, Nyl, Blk	5
19	08708	(006501-	) Nut, Hex, Lock, M6 X 1.00, NI	2
20	39239	(006501-	) Screw, Pan, Phl, 10- 32 X 0.50, G2, Blk	4
21	1056769	(006501-	) Screw, Soc, M10 X 1.50 X 16, 12.9	4
22	32485	(006501-	) Washer, Flat, 0.38, Sae	4
▽	23 1028790	(006501-	) Switch, Key, 4 Pos [Honeywell]	1
▲	24 9004545	(006501-	) Key, Ignition [Replmt W/O Dust Boot]	1
25	394922	(006501-	) Fuse, Blade, 060a [Maxi]	1
26	1041873	(006501-	) Fastener, Wire, Tie [Button Head]	2
27	1029951	(006501-	) Bezel, Switch [3 Gang]	1
28	377084	(006501-	) Switch, Rocker, Prgrsv	1
29	1036014	(006501-	) Fuse, Blade, 25a, 32vdc [Mini]	1
30	361075	(006501-	) Light, Panl, 14vdc, 1.1 X 1.0 (Europe Only)	1
31	56186	(006501-	) Relay, 12vdc, 040a, Spdt No (Europe Only)	1
32	1075003	(006501-	) Keychain, Rectangle, Parts & Service	1
33	398501	(008041-	) Plug, Hole, Rt, Rocker Switch, .87 X 1.7 (No. Amer. Only)	1
34	80061	(008041-	) Plug, Hole, Rnd, 0.30h 0.3l (No. Amer. Only)	1

Fig. 12 - Steering Group

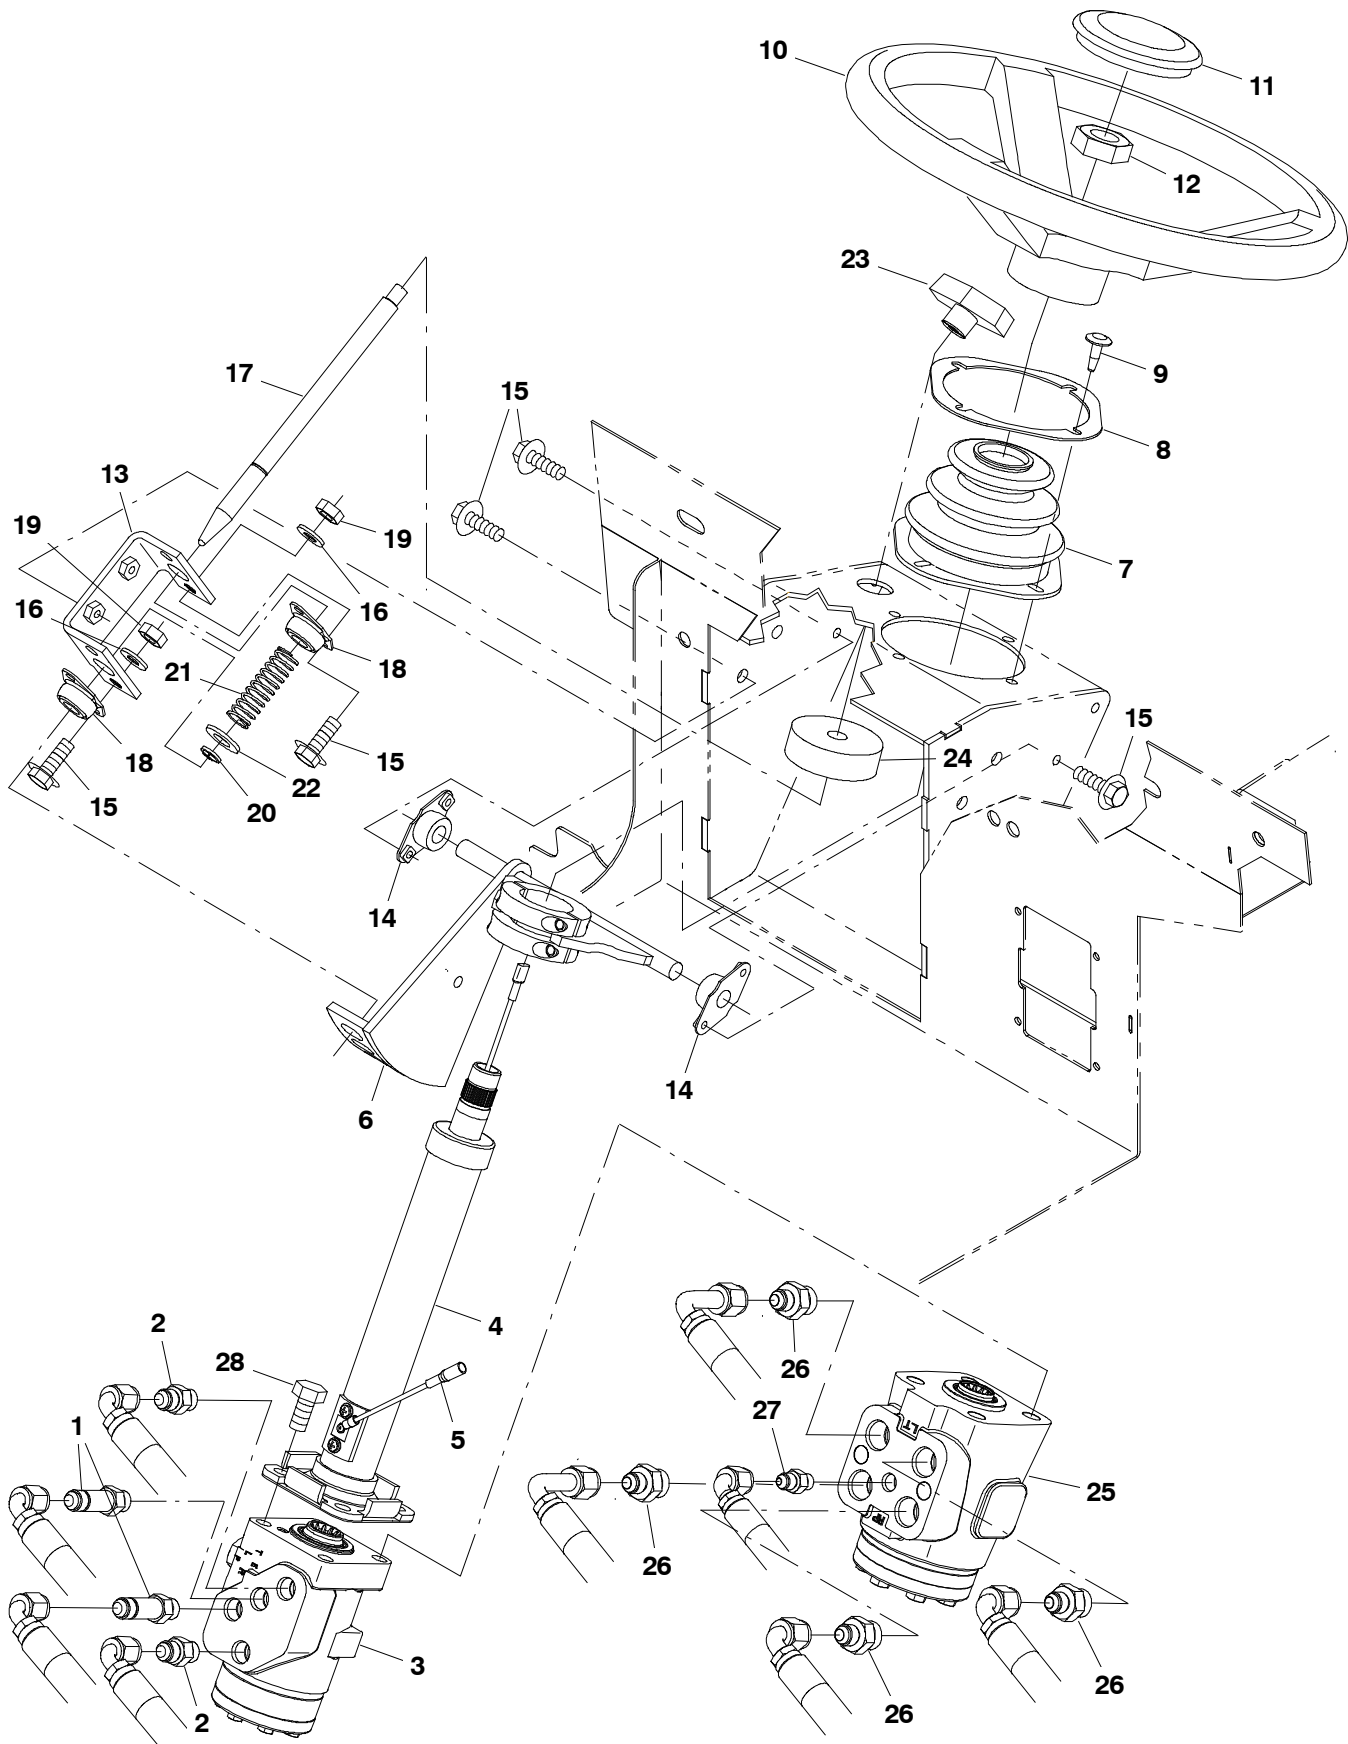


Fig. 12 - Steering Group

	Ref.	Part No.	Serial Number	Description	Qty.
	1	771090	(006501-	) Fitting, Hyd, Str, Fm06/Om06, Long	1
	2	762433	(006501-	) Fitting, Hyd, Str, Fm06/Om06	1
	3	1024260	(006501-	) Steer- Control, Hyd05, 06.1 2030	1
▽	4	1021265	(006501-	) Column, Steering, 09.9l 0.86d 36tooth	1
▲	5	388153	(006501-	) Contact Kit, W/ Brush [En]	1
	6	1058784	(006501-	) Bracket Wldt, Steering, Tilt	1
	7	70622	(006501-	) Boot, Bellows, 3.1l 4.4w 2.8h 1hole, Neo	1
	8	70623	(006501-	) Retainer, Boot, Steering Column	1
	9	72970	(006501-	) Rivet, Plstc, .250d X 0.90	4
	10	1058996	(006501-	) Wheel, Steering, 14.0d 0.81b 36tooth	1
	11	1024478	(006501-	) Button, Cntrl, Horn	1
	12	56185	(006501-	) Nut, Hex, Jam, M20 X 1.5	1
	13	1058807	(006501-	) Flange, Brg, Mount	1
	14	70709	(006501-	) Bearing, Flng, 2hole, 0.50b	2
	15	1040467	(006501-	) Screw, Hex, M6 X 1.00 X 20, 9.8, Sems	8
	16	32483	(006501-	) Washer, Flat, 0.25, Sae	4
	17	1058785	(006501-	) Pin, Locking, Steering, Tilt [S30]	1
	18	47585	(006501-	) Bearing, Flng, 2hole, 0.50b [Nyl]	2
	19	08708	(006501-	) Nut, Hex, Lock, M6 X 1.00, NI	4
	20	70717	(006501-	) Ring, Retaining, Ext, 0.50d, Hd	1
	21	22290	(006501-	) Spring, Cmpr, 0.72od .06wir 02.3l	1
	22	32486	(006501-	) Washer Flat, 0.50, Sae	1
	23	04706	(006501-	) Knob, Tee, 0.38- 16, 2.5 X 1.0 1.1l, Plstc	1
	24	75968	(006501-	) Insulation, Acstc, Rnd, 0.8, 02.5d 0.5h	1
▽	25	1033969	(006501-	) Steer- Control, Hyd#10 04.5 4000 (S30 X4 Only)	1
▲		373704	(006501-	) Steer- control, Info, Repair	1
▲		373619	(006501-	) Seal Kit, Scu	1
	26	762438	(006501-	) Fitting, Hyd, Str, Fm06/Om08 (S30 X4 Only)	4
	27	762428	(006501-	) Fitting, Hyd, Str, Fm04/Om04 (S30 X4 Only)	1
	28	06961	(006501-	) Screw, Hex, M10 X 1.50 X 20, 8.8	4

Fig. 13 - Engine and Mount Group, Diesel

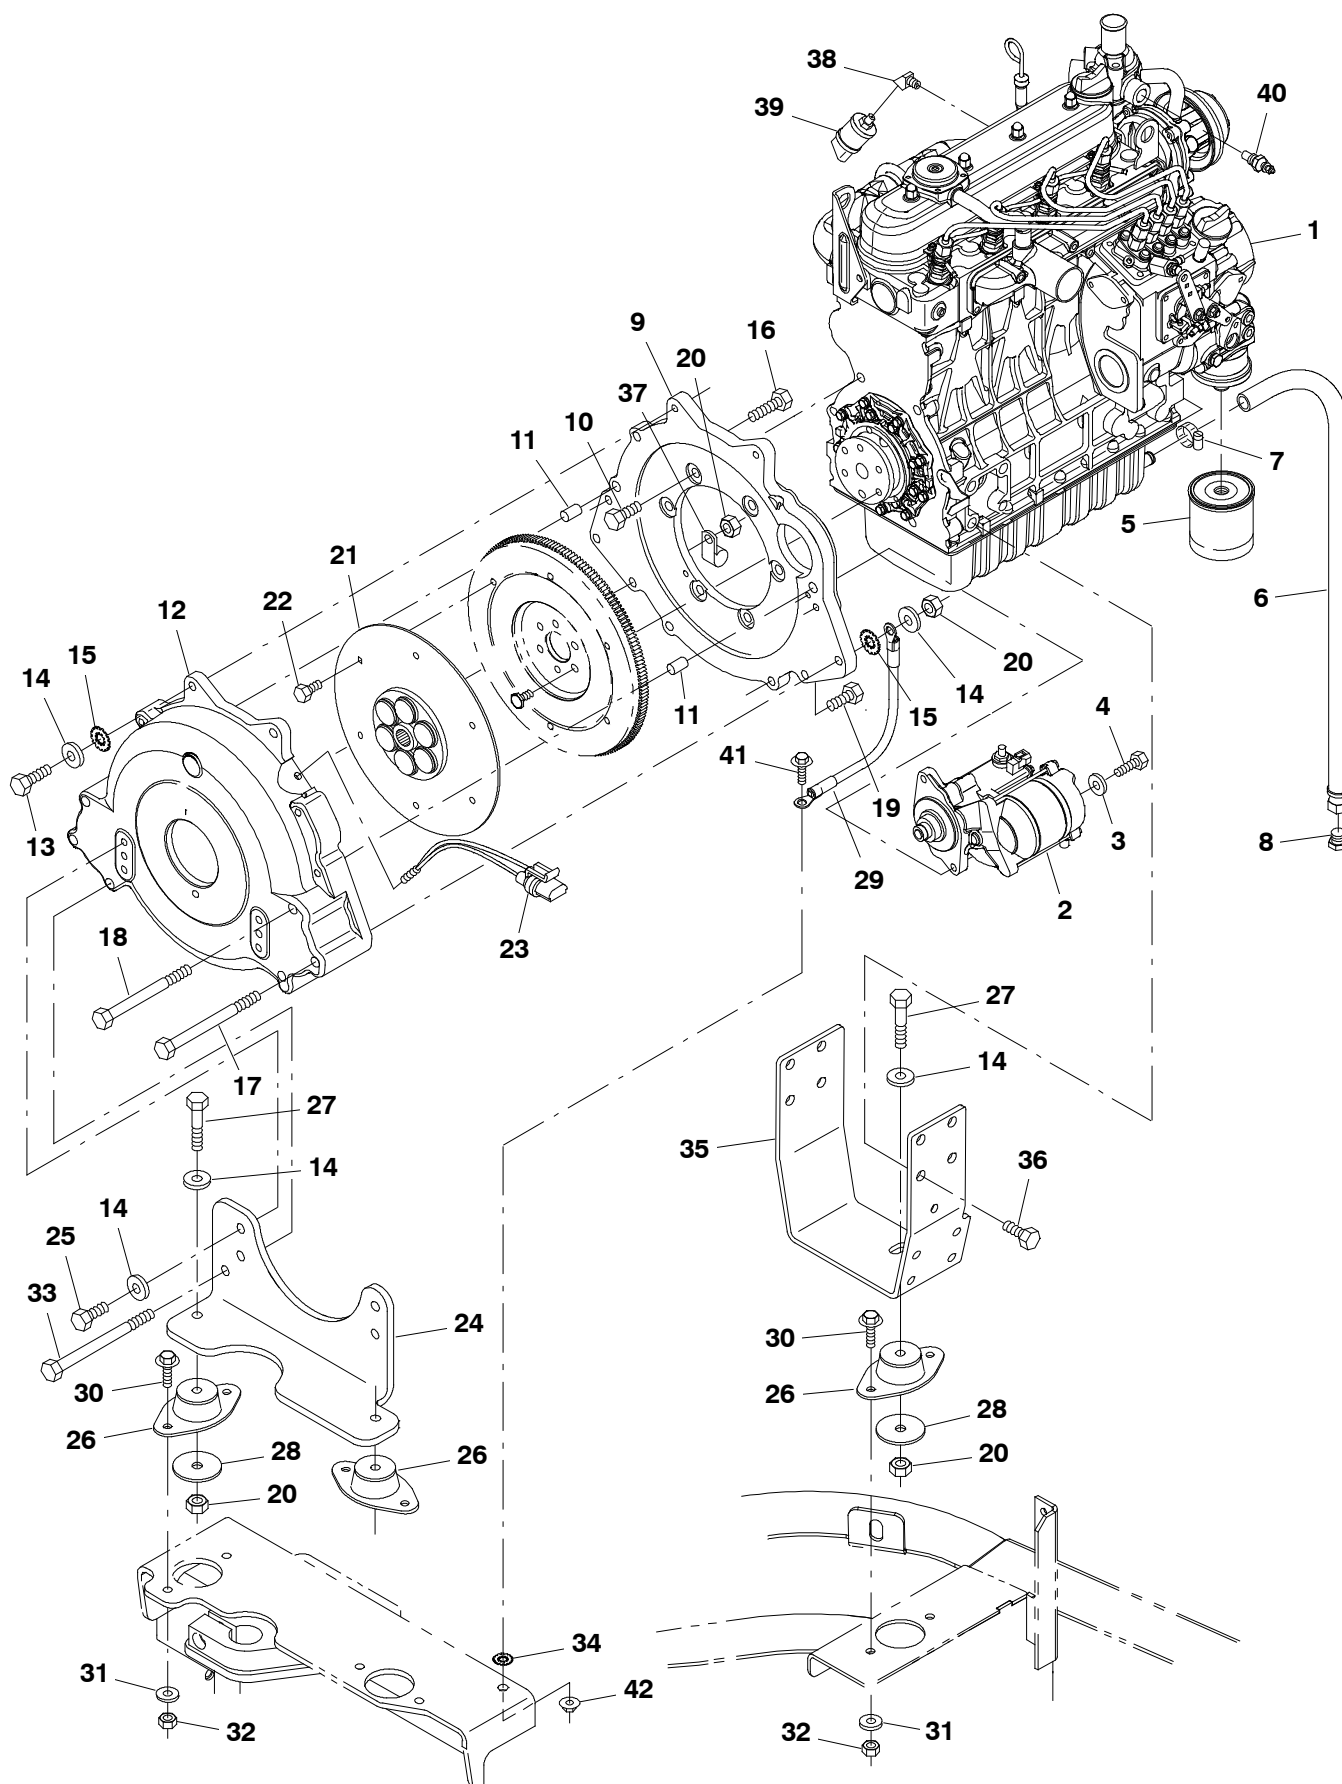


Fig. 13 - Engine and Mount Group, Diesel

	Ref.	Part No.	Serial Number	Description	Qty.
▽	1	1072224	(006501-	Engine Assy, Dsl, 25hp [Ku V1505 Tier4f] (See Engine Breakdown)	1
▲	2	74405	(006501-	Motor, Starter, 12vdc [Kubota] (See Engine Breakdown)	1
▲	3	39349	(006501-	Washer, Flat, 0.31, Sae	2
▲	4	76570	(006501-	Screw, Hex, M8 X 1.25 X 30, 8.8	2
▲	5	55849	(006501-	Element, Fltr, Oil, Eng, Spin- On[Ku]	1
	6	1027273	(006501-	Hose, 0300, 08, Jf08str / None, 19.0	1
	7	63810	(006501-	Clamp, Hose, Wormdrive, 0.56- 1.06d, .56w	1
	8	16376	(006501-	Fitting, Hyd, Plug, Jm08	1
	9	55837	(006501-	Adapter, Hsng, Flywheel [1505, Kubo]	1
	10	07299	(006501-	Screw, Hex, M10 X 1.25 X 25, 8.8	6
	11	54911- 16	(006501-	Pin, Dowel, Cyl Block [1pk=4]	2
	12	1035999	(006501-	Housing, Flywheel, Mach, Dsl, 3 Wheel (S30 Only)	1
	12	1032919	(006501-	Housing, Flywheel, Mach, Dsl, 4 Wheel (S30 X4 Only)	1
	13	39284	(006501-	Screw, Hex, M10 X 1.50 X 35, 8.8	3
	14	32492	(006501-	Washer, Flat, 0.38, Std	13
	15	41142	(006501-	Washer, Lock, Int- Ext, 0.38	3
	16	39285	(006501-	Screw, Hex, M10 X 1.50 X 40, 8.8	1
	17	06966	(006501-	Screw, Hex, M10 X 1.50 X 110, 8.8	4
	18	34877	(006501-	Screw, Hex, M10 X 1.50 X 100, 8.8	1
	19	03192	(006501-	Screw, Hex, M10 X 1.50 X 30, 8.8	2
	20	41430	(006501-	Nut, Hex, Lock, M10 X 1.5, NI	9
	21	19252	(006501-	Coupling, Drive, Flex, 09.5d /13tooth (S30 Only)	1
	21	77214	(006501-	Coupling, Drive, Flex, 09.5d /15tooth (S30 X4 Only)	1
	22	16735	(006501-	Screw, Hex, M8 X 1.25 X 16, 8.8	1
	23	380521	(006501-	Magnet, Pickup	1
	24	1032108	(006501-	Bracket, Mtg, Eng, Rear [Kubota]	1
	25	39283	(006501-	Screw, Hex, M10 X 1.50 X 25, 8.8	4
	26	1029018	(006501-	Isolator, Vib, Flng, 1.3h .4b 2/.34h	3
	27	06963	(006501-	Screw, Hex, M10 X 1.50 X 60, 8.8	3
	28	58228	(006501-	Washer, Flat, 0.44b 2.00d .12, Stl, Pl	1
	29	57773	(006501-	Cable, 06ga 13.0l Blk	1
	30	1037354	(006501-	Screw, Hex, M8 X 1.25 X 30, 9.8, Sems	6
	31	32491	(006501-	Washer, Flat, 0.31, Std	6
	32	08709	(006501-	Nut, Hex, Lock, M8 X 1.25, NI	6
	33	06537	(006501-	Screw, Hex, M10 X 1.50 X 120, 8.8, FI	1
	34	41140	(006501-	Washer, Lock, Int- ext, 0.25	1
	35	1032184	(006501-	Bracket, Mtg, Eng [Kubota]	1
	36	58286	(006501-	Screw, Hex, M10 X 1.25 X 20, 8.8	8
	37	30407	(006501-	Clip, Keeper, Open	1
	38	24976	(006501-	Fitting, Brs, E45, Pf02/Pm02	1
	39	1055106	(006501-	Switch, Press, 0006psi Dpdt	1
	40	1050757	(006501-	Switch, Thermostat, Water	1
	41	1036892	(006501-	Screw, Hex, M6 X 1.00 X 25, 9.8 Sems	1
	42	07790	(006501-	Nut, Hex, Flng, M6 X 1.00	1

Fig. 14 - Engine Governor and Electrical Group, Diesel

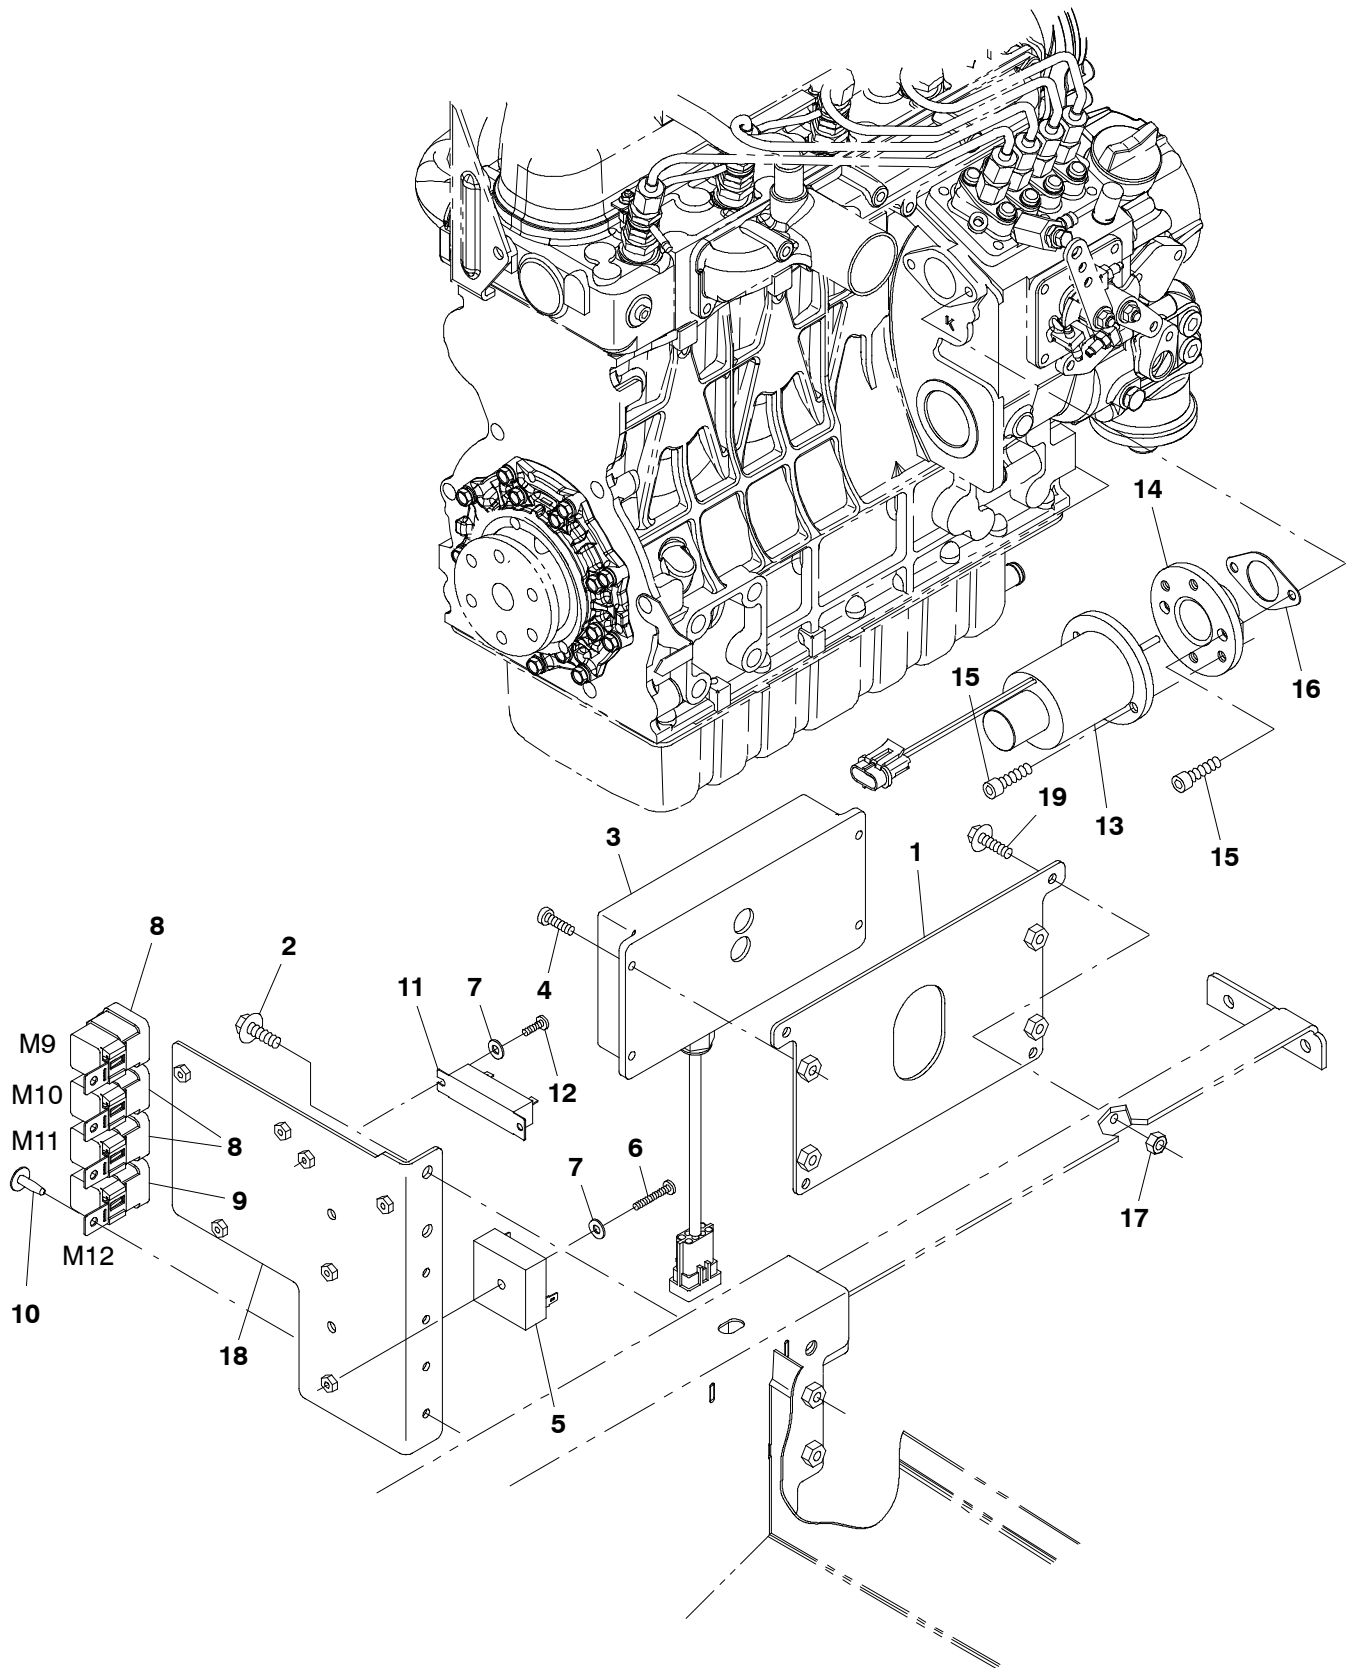


Fig. 14 - Engine Governor and Electrical Group, Diesel

Ref.	Part No.	Serial Number	Description	Qty.
1	1045865	(006501-	) Plate, Mtg, Cntrl, Eng	1
2	1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	2
3	1040835	(006501-	) Control, Govnr [All Purpose]	1
4	06934	(006501-	) Screw, Pan, Phl, M5 X 0.80 X 20, 4.8	4
5	379656	(006501-	) Timer, 12vdc, 1a [10s Sgl Shot]	1
6	06938	(006501-	) Screw, Pan, Phl, M5 X 0.80 X 40, 4.8	1
7	19066	(006501-	) Washer, Flat, 10	3
8	56186	(006501-	) Relay, 12vdc, 040a, Spdt No	3
9	380559	(006501-	) Relay, 12vdc, 070a, Spst No [Potter]	1
10	72970	(006501-	) Rivet, Plstc, .250d X 0.90	4
11	71539	(006501-	) Resistor, 022.00ohm, 0040watt	1
12	06933	(006501-	) Screw, Pan, Phl, M5 X 0.80 X 16, 4.8	2
13	71385	(006501-	) Actuator, Govnr, Dsl	1
14	393401	(006501-	) Adapter, Actuator, Govnr, Eng, Dsl	1
15	71388	(006501-	) Screw, Soc, M6 X 1.00 X 16, 12.9	4
16	70165	(006501-	) Gasket, Solenoid, Throttle [Ku]	1
17	08708	(006501-	) Nut, Hex, Lock, M6 X 1.00, NI	2
18	1045999	(006501-	) Bracket, Mtg, Cntrl, Eng	1
19	1040467	(006501-	) Screw, Hex, M6 X 1.00 X 20, 9.8, Sems	2

Fig. 15 - Engine Fuel Tank Group, Diesel

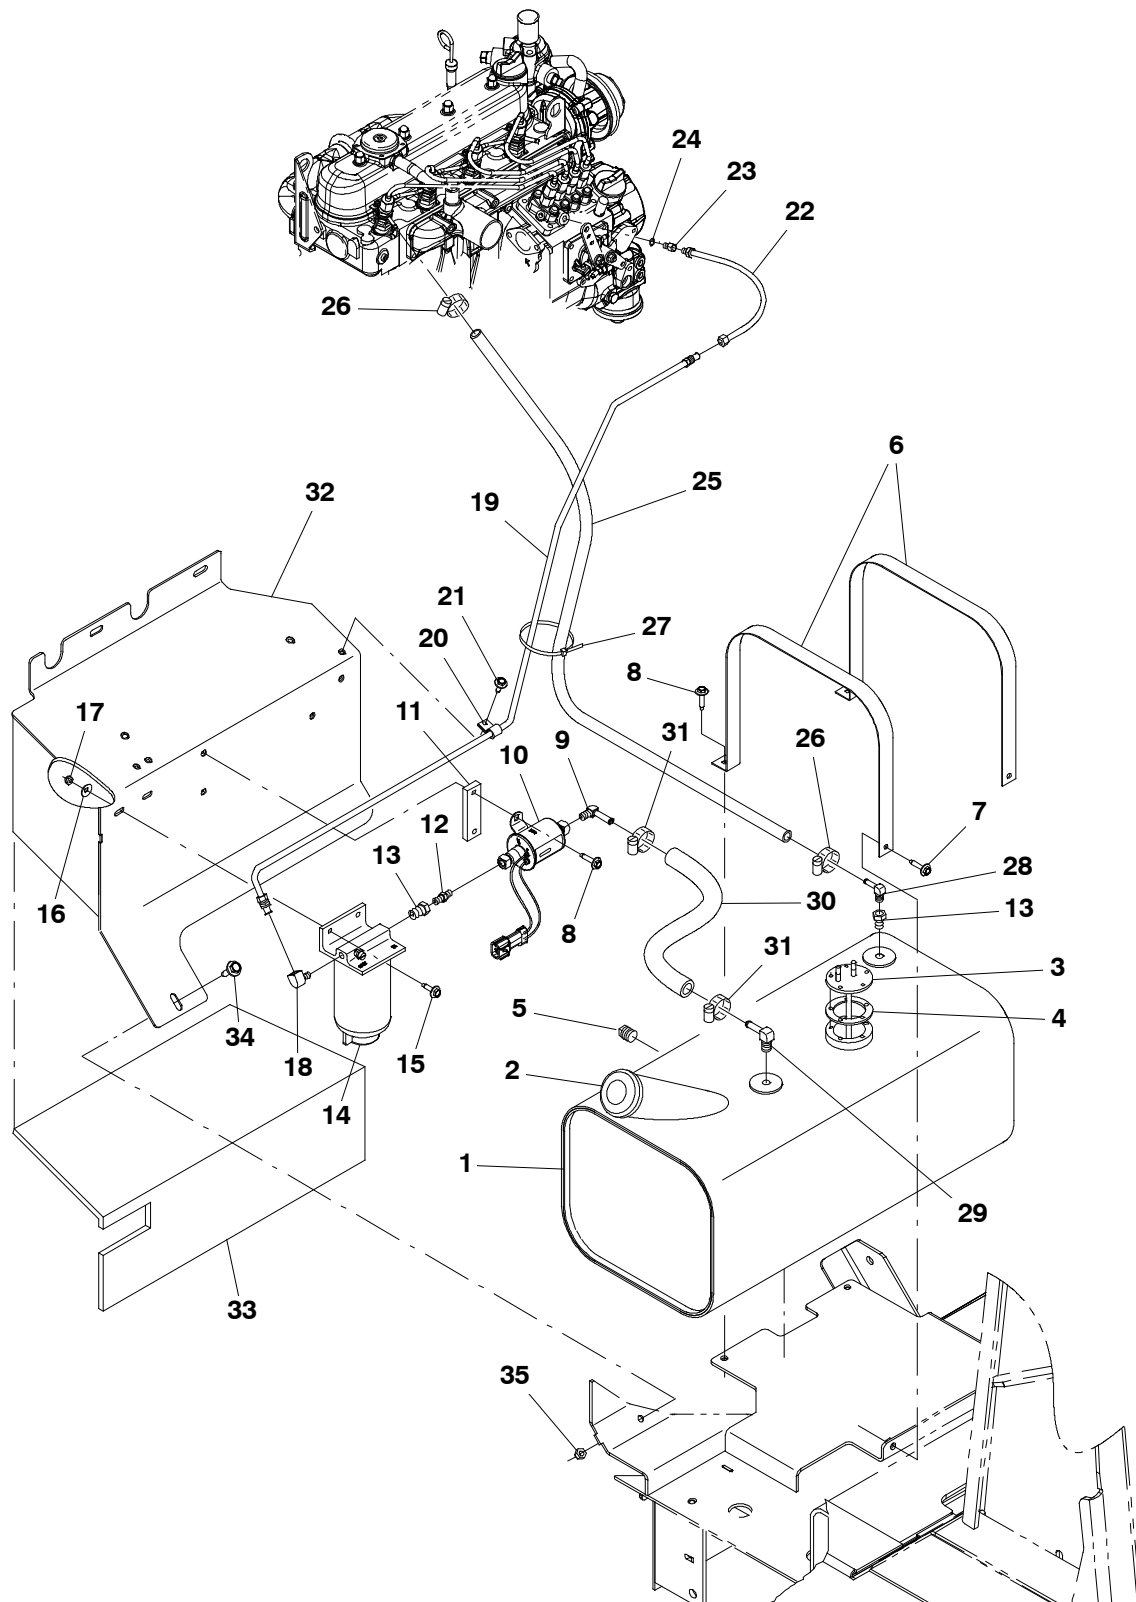


Fig. 15 - Engine Fuel Tank Group, Diesel

	Ref.	Part No.	Serial Number	Description	Qty.
▽	1	1033575	(006501-	) Tank, Fuel	1
▲	2	1032812	(006501-	) Cap, Fuel, Tank	1
▲	3	1046613	(006501-	) Send- Unit, Fuel	1
▲	4	1033897	(006501-	) Gasket, Sender, Fuel	1
▲	5	02351	(006501-	) Fitting, Pipe, Plug, Pm04, Sq Head	1
	6	1033630	(006501-	) Strap, Tank, Fuel	2
	7	1040467	(006501-	) Screw, Hex, M6 X 1.0 X 20, 9.8, Sems	2
	8	1037345	(006501-	) Screw, Hex, M6 X 1.00 X 30, 9.8, Sems	4
	9	53029	(006501-	) Fitting, Brs, E90, Em05/Pm02	1
	10	59015	(006501-	) Pump, Fuel	1
	11	364779	(006501-	) Bar, Flat, Stl 0.38, 01.00 X 03.3l	1
	12	47566	(006501-	) Fitting, Hyd, Str, Pm02/Pm02	1
	13	17414	(006501-	) Fitting, Hyd, Str, Pf02/Pm04	2
▽	14	1016827	(006501-	) Filter Assy, Fuel, Dsl	1
▲		1017126	(006501-	) Element, Fltr, Fuel [Dn]	1
	15	1036892	(006501-	) Screw, Hex, M6 X 1.00 X 25, 9.8 Sems	2
	16	32490	(006501-	) Washer, Flat, 0.25, Std	2
	17	08708	(006501-	) Nut, Hex, Lock, M6 X 1.00, NI	2
	18	15555- 2	(006501-	) Fitting, Brs, E90, lf05/Pm04	1
	19	1037786	(006501-	) Fuelline, .31d 05if/05if, Stl	1
	20	40678	(006501-	) Clamp, Cable, Stl, 0.44d X 0.62w, 1hole	1
	21	1040467	(006501-	) Screw, Hex, M6 X 1.0 X 20, 9.8, Sems	1
	22	70173	(006501-	) Hose, 0050, 04, lf05str / lm05str, 10.0	1
	23	365066	(006501-	) Fitting, Hyd, Str, Metric, Om10/lf05	1
	24	77002	(006501-	) Seal, Org, .064 X 00.30id #03	1
	25	72489	(006501-	) Hose, Fuel, 0.18id, 54.0l	1
	26	43844	(006501-	) Clamp, Hose, Wormdrive, 0.25- 0.62d, .31w	2
	27	49266	(006501-	) Tie, Cable, Nyl, 07.3l .19w 1.8 Max D	3
	28	32183	(006501-	) Fitting, Brs, E90, Bm03/Pm02	1
	29	9000355	(006501-	) Fitting, Brs, E90, Em05/Pm04	1
	30	1033746	(006501-	) Hose, Fuel, 0.31id [Evap Emission 07]	1
	31	54333	(006501-	) Clamp, Hose, Wormdrive, 0.31- 0.88d, .31w	2
	32	1044992	(006501-	) Panel Wldt, Deflector, Heat	1
	33	1035813	(006501-	) Insulation, Flame- Retardant, 0.5	1
	34	1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	3
	35	07791	(006501-	) Nut, Hex, Flng, M8 X 1.25	3

Fig. 16 - Engine Air Cleaner Group, Diesel

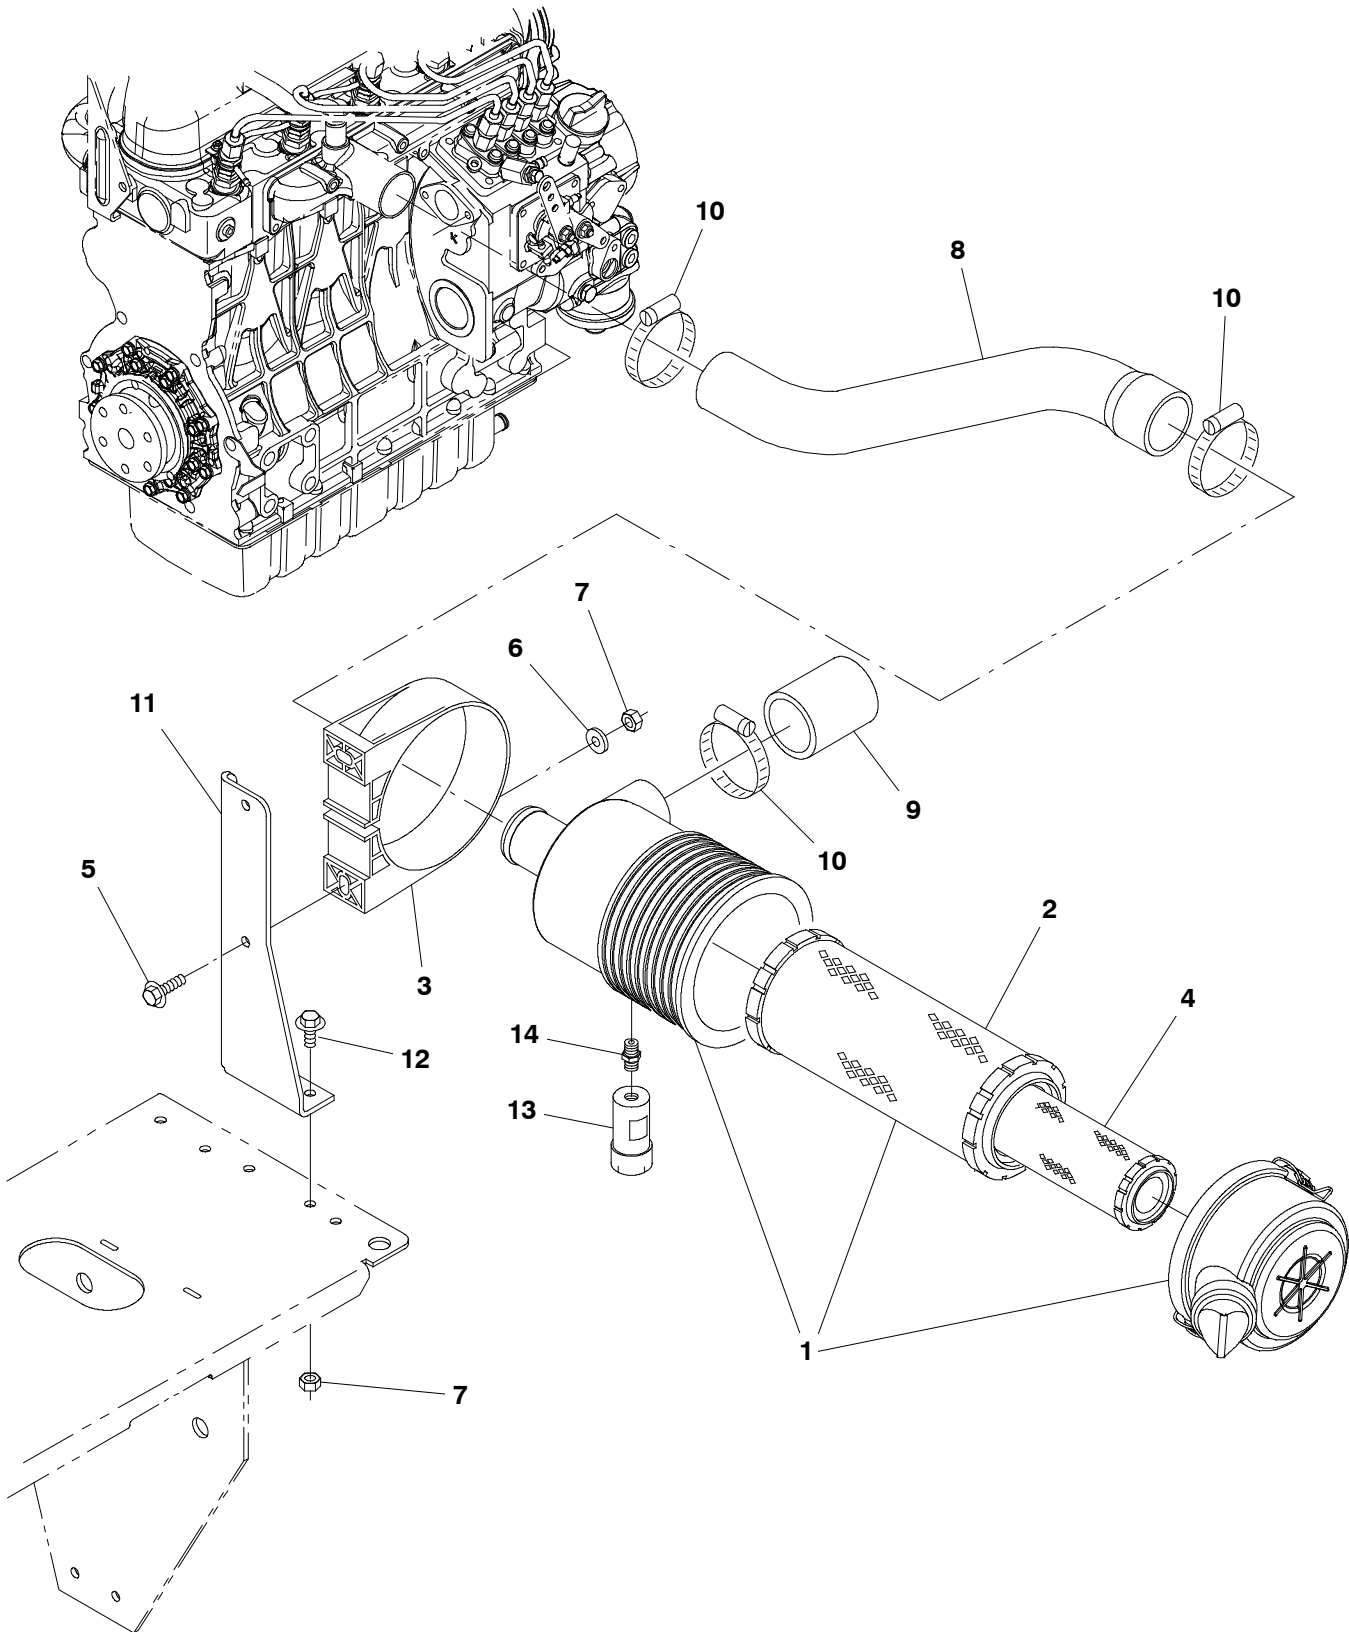


Fig. 16 - Engine Air Cleaner Group, Diesel

	Ref.	Part No.	Serial Number	Description	Qty.
▽	1	1032119	(006501-	) Filter, Air, 2.0 Inlet, Str	1
▲	2	369746	(006501-	) Element, Fltr, Air [Dn]	1
	3	369747	(006501-	) Clamp, Mtg, Fltr, Air	1
	4	398279	(006501-	) Element, Fltr, Air, Safety	1
	5	1037355	(006501-	) Screw, Hex, M8 X 1.25 X 35, 9.8, Sems	2
	6	32491	(006501-	) Washer, Flat, 0.31, Std	2
	7	08709	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI	4
	8	1036377	(006501-	) Hose, Intake, Mold, 1.75id 2.00id [Epdm]	1
	9	1038209	(006501-	) Hose, Rbr, 2.00id 2.50od 02.5l	1
	10	14432	(006501-	) Clamp, Hose, Wormdrive, 1.81-2.75d, .50w	3
	11	1057890	(006501-	) Bracket, Mtg, Air- Clnr	1
	12	1037354	(006501-	) Screw, Hex, M8 X 1.25 X 30, 9.8, Sems	2
	13	03026	(006501-	) Indicator, Service, Fltr, Air [20h20 Dn]	1
	14	51560-5	(006501-	) Fitting, Brs, Str, Pm02, Service	1

Fig. 17 - Engine Alternator and Battery Group, Diesel

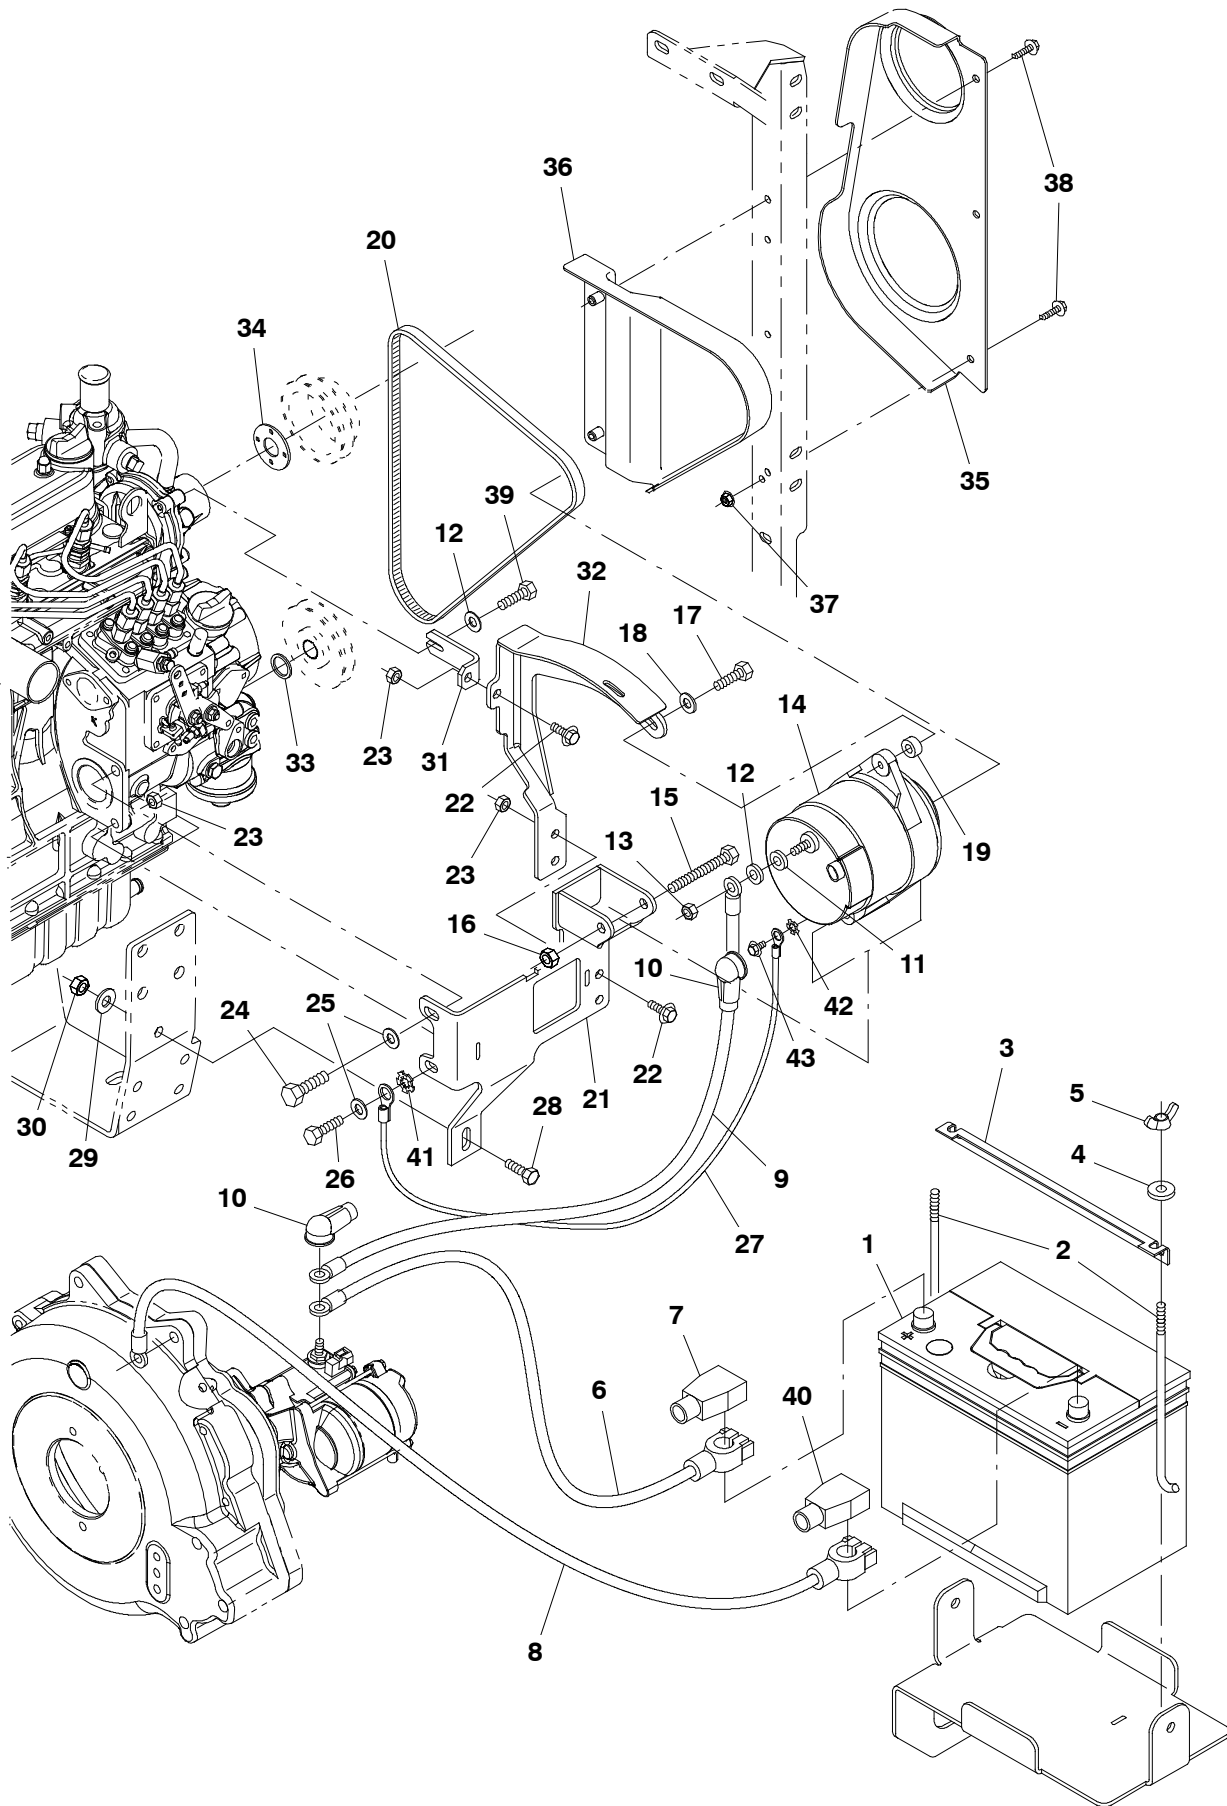


Fig. 17 - Engine Alternator and Battery Group, Diesel

Ref.	Part No.	Serial Number	Description	Qty.
1	10143	(006501-	) Battery, Wet, 12vdc 0600cca	1
2	13015	(006501-	) Bolt, Hold- Down, Battery 08.5l	2
3	72977	(006501-	) Bracket, Angle, Hold- Down, Battery	1
4	01685	(006501-	) Washer, Flat, 0.38b 0.88d .08, Ss	2
5	39272	(006501-	) Nut, Wing, .31- 18	2
6	34823	(006501-	) Cable, Battery, 02ga 33.0l Red .38ring	1
7	1016314	(006501-	) Boot, 90deg .50id 1.00id 2.50l, Red	1
8	34821	(006501-	) Cable, Battery, 02ga 36.0l Blk .38ring	1
9	1029689	(006501-	) Cable, 06ga 16.0l Red .38ring /.38ring	1
10	1016314	(006501-	) Boot, 90deg .50id 1.00id 2.50l, Red	2
11	32984	(006501-	) Washer, Lock, Int, 0.31	1
12	39349	(006501-	) Washer, Flat, 0.31, Sae	1
13	41361	(006501-	) Nut, Hex, Std, M8 X 1.25, Brs	1
14	392611	(006501-	) Alternator, 12vdc, 075a [Valeo]	1
15	35707	(006501-	) Screw, Hex, .38- 16 X 3.00, G5	1
16	36643	(006501-	) Nut, Hex, Lock, .38- 16, NI, Thin	1
17	76956	(006501-	) Screw, Hex, .31- 18 X 1.25, G5	1
18	41186	(006501-	) Washer, Flat, Belleville, .31	1
19	73737	(006501-	) Tube, 0.38id 0.75od 00.3l, Ss	1
20	393244	(006501-	) Belt, V, 42.0l [Hc41]	1
21	1036844	(006501-	) Bracket Wldt, Mtg, Alternator, Dsl	1
22	1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	3
23	08709	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI	4
24	58286	(006501-	) Screw, Hex, M10 X 1.25 X 20, 8.8	1
25	39349	(006501-	) Washer, Flat, 0.31, Sae	2
26	41342	(006501-	) Screw, Hex, M8 X 1.25 X 40, 8.8	1
27	31525	(006501-	) Wire, 10ga 16.0l Blk .25ring /.38ring	1
28	39283	(006501-	) Screw, Hex, M10 X 1.50 X 25, 8.8	1
29	32492	(006501-	) Washer, Flat, 0.38, Std	1
30	41430	(006501-	) Nut, Hex, Lock, M10 X 1.5, NI	1
31	1036859	(006501-	) Bracket, Sppt, Alternator, Dsl	1
32	1036847	(006501-	) Arm Wldt, Alternator, Dsl	1
33	1039208	(006501-	) Washer, Flat, 1.10b 1.50d .12, Stl, Pl	1
34	1039212	(006501-	) Spacer, Fan	1
35	9004523	(006501-	) Guard, Belt, Dsl, W/ Label, Replmt	1
36	9004522	(006501-	) Guard, Belt, Dsl, W/ Label, Replmt	1
37	07790	(006501-	) Nut, Hex, Flng, M6 X 1.00	1
38	1036892	(006501-	) Screw, Hex, M6 X 1.00 X 25, 9.8 Sems	3
39	39277	(006501-	) Screw, Hex, M8 X 1.25 X 25, 8.8	1
40	68872	(006501-	) Boot, Terminal, Battery, 02- 01ga, Blk	1
41	41141	(006501-	) Washer, Lock, Int- ext, 0.31	1
42	41139	(006501-	) Washer, Lock, Int- ext, 10	1
43	42011	(006501-	) Screw, Hex, 10- 24 X 0.50, Ss	1

Fig. 18 - Engine Muffler Group, Diesel S30 and XP

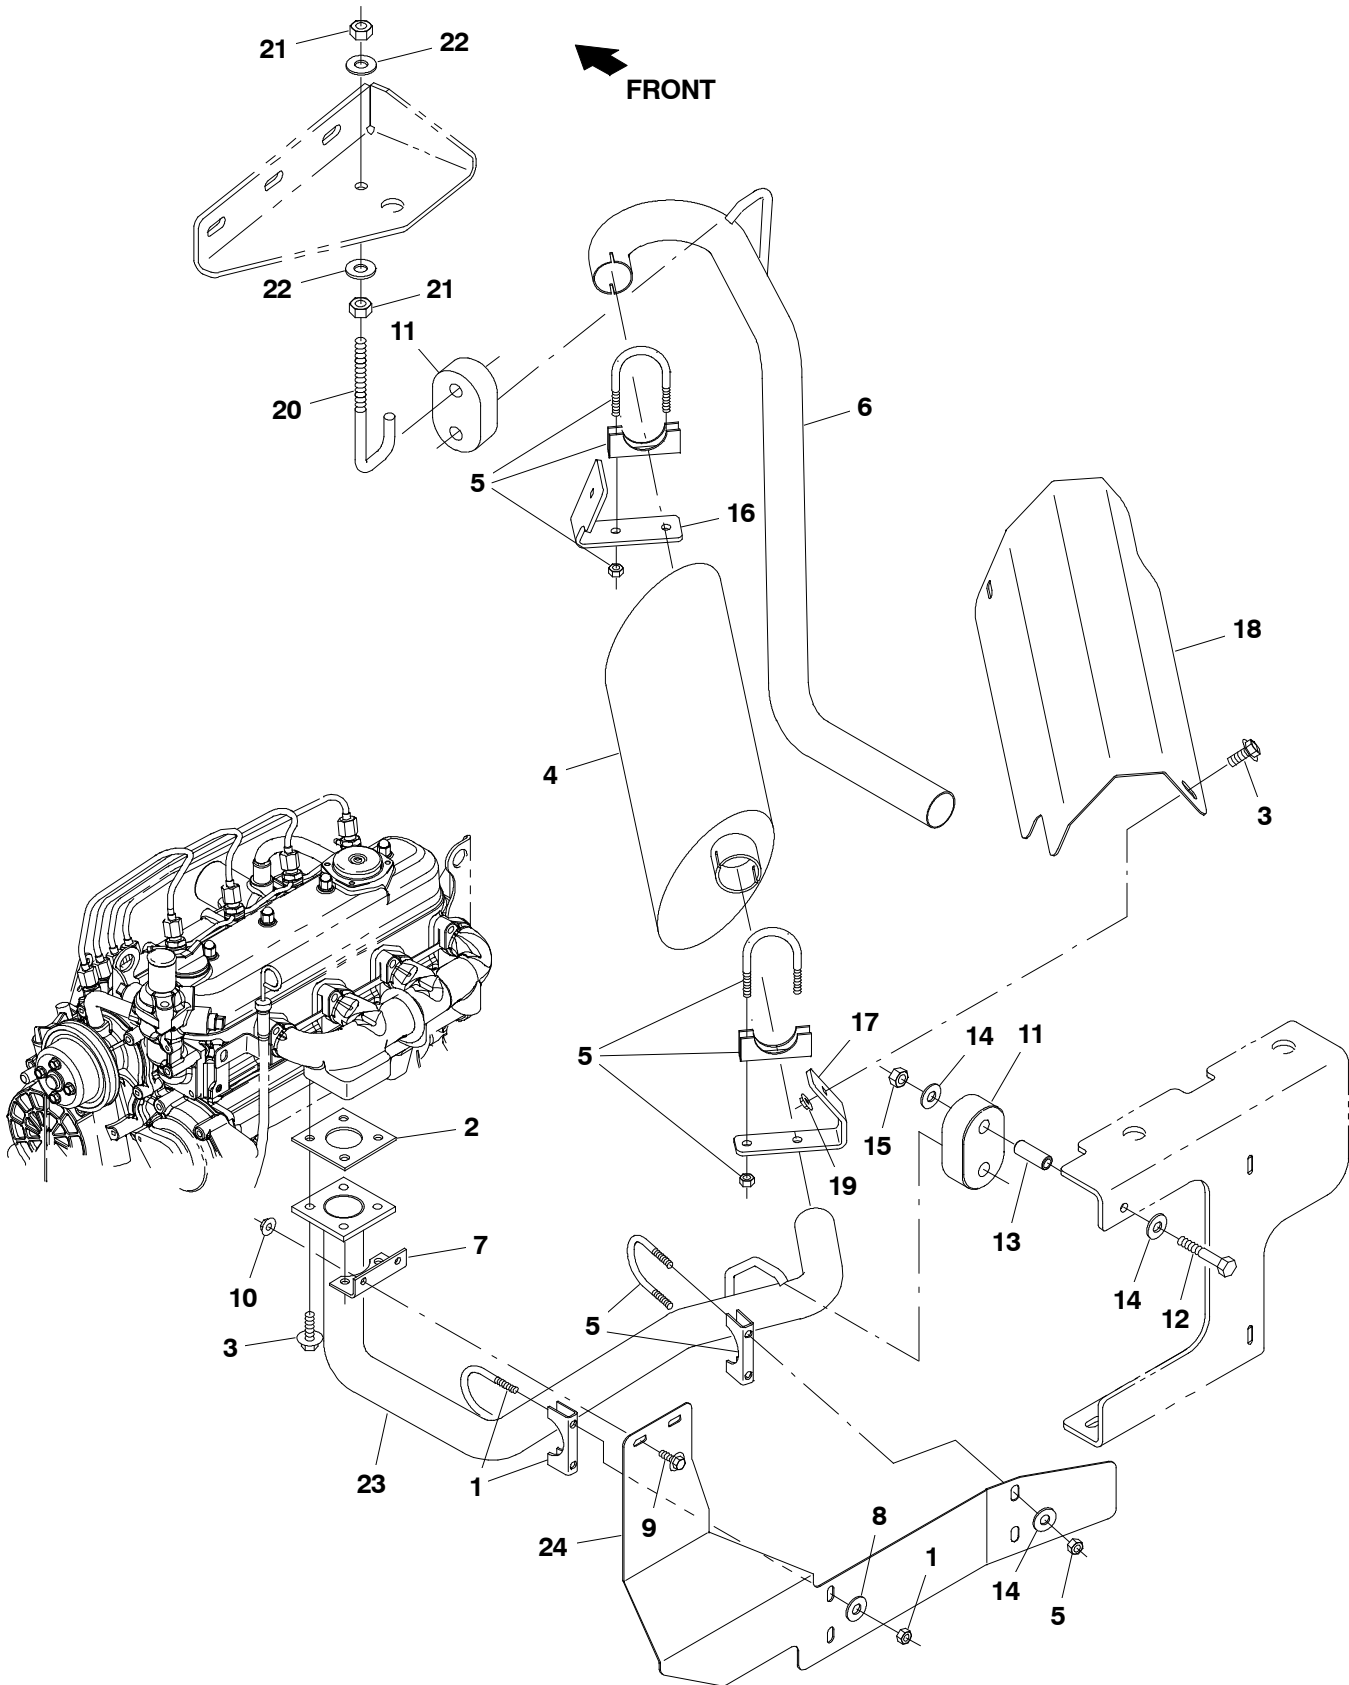


Fig. 18 - Engine Muffler Group, Diesel S30 and XP

Ref.	Part No.	Serial Number	Description	Qty.
1	24012	(006501-	) Clamp, Muffler, 1.62d	1
2	51332	(006501-	) Gasket [Ku]	1
3	1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	6
4	364805	(006501-	) Muffler, Exhaust	1
5	24012	(006501-	) Clamp, Muffler, 1.62d	3
6	1035857	(006501-	) Tube, Exhaust, Tailpipe, 3 Wheel	1
7	1036103	(006501-	) Bracket, Mtg, Heat Shield	1
8	32491	(006501-	) Washer, Flat, 0.31, Std	2
9	1040467	(006501-	) Screw, Hex, M6 X 1.0 X 20, 9.8, Sems	2
10	07790	(006501-	) Nut, Hex, Flng, M6 X 1.00	2
11	1013031	(006501-	) Isolator, Rbr	2
12	39278	(006501-	) Screw, Hex, M8 X 1.25 X 50, 8.8	1
13	222497	(006501-	) Sleeve, P/M, 0.31b 0.50d 1.3l [430ss]	1
14	32491	(006501-	) Washer, Flat, 0.31, Std	4
15	08709	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI	1
16	1043613	(006501-	) Bracket, Mtg, Heat Shield	1
17	1043610	(006501-	) Bracket, Mtg, Heat Shield	1
18	1027148	(006501-	) Channel, Shield, Muffler	1
19	07791	(006501-	) Nut, Hex, Flng, M8 X 1.25	2
20	1013117	(006501-	) Rod, Hanger, Isolator	1
21	25014	(006501-	) Nut, Hex, Std, .38- 16	2
22	32492	(006501-	) Washer, Flat, 0.38, Std	2
23	1059532	(006501-	) Tube Wldt, Exhaust, Dsl [Roto Cover]	1
24	9004517	(006501-	) Shield, Heat, Dsl, W/ Label, Replmt	1

Fig. 19 - Engine Muffler Group, Diesel S30 X4

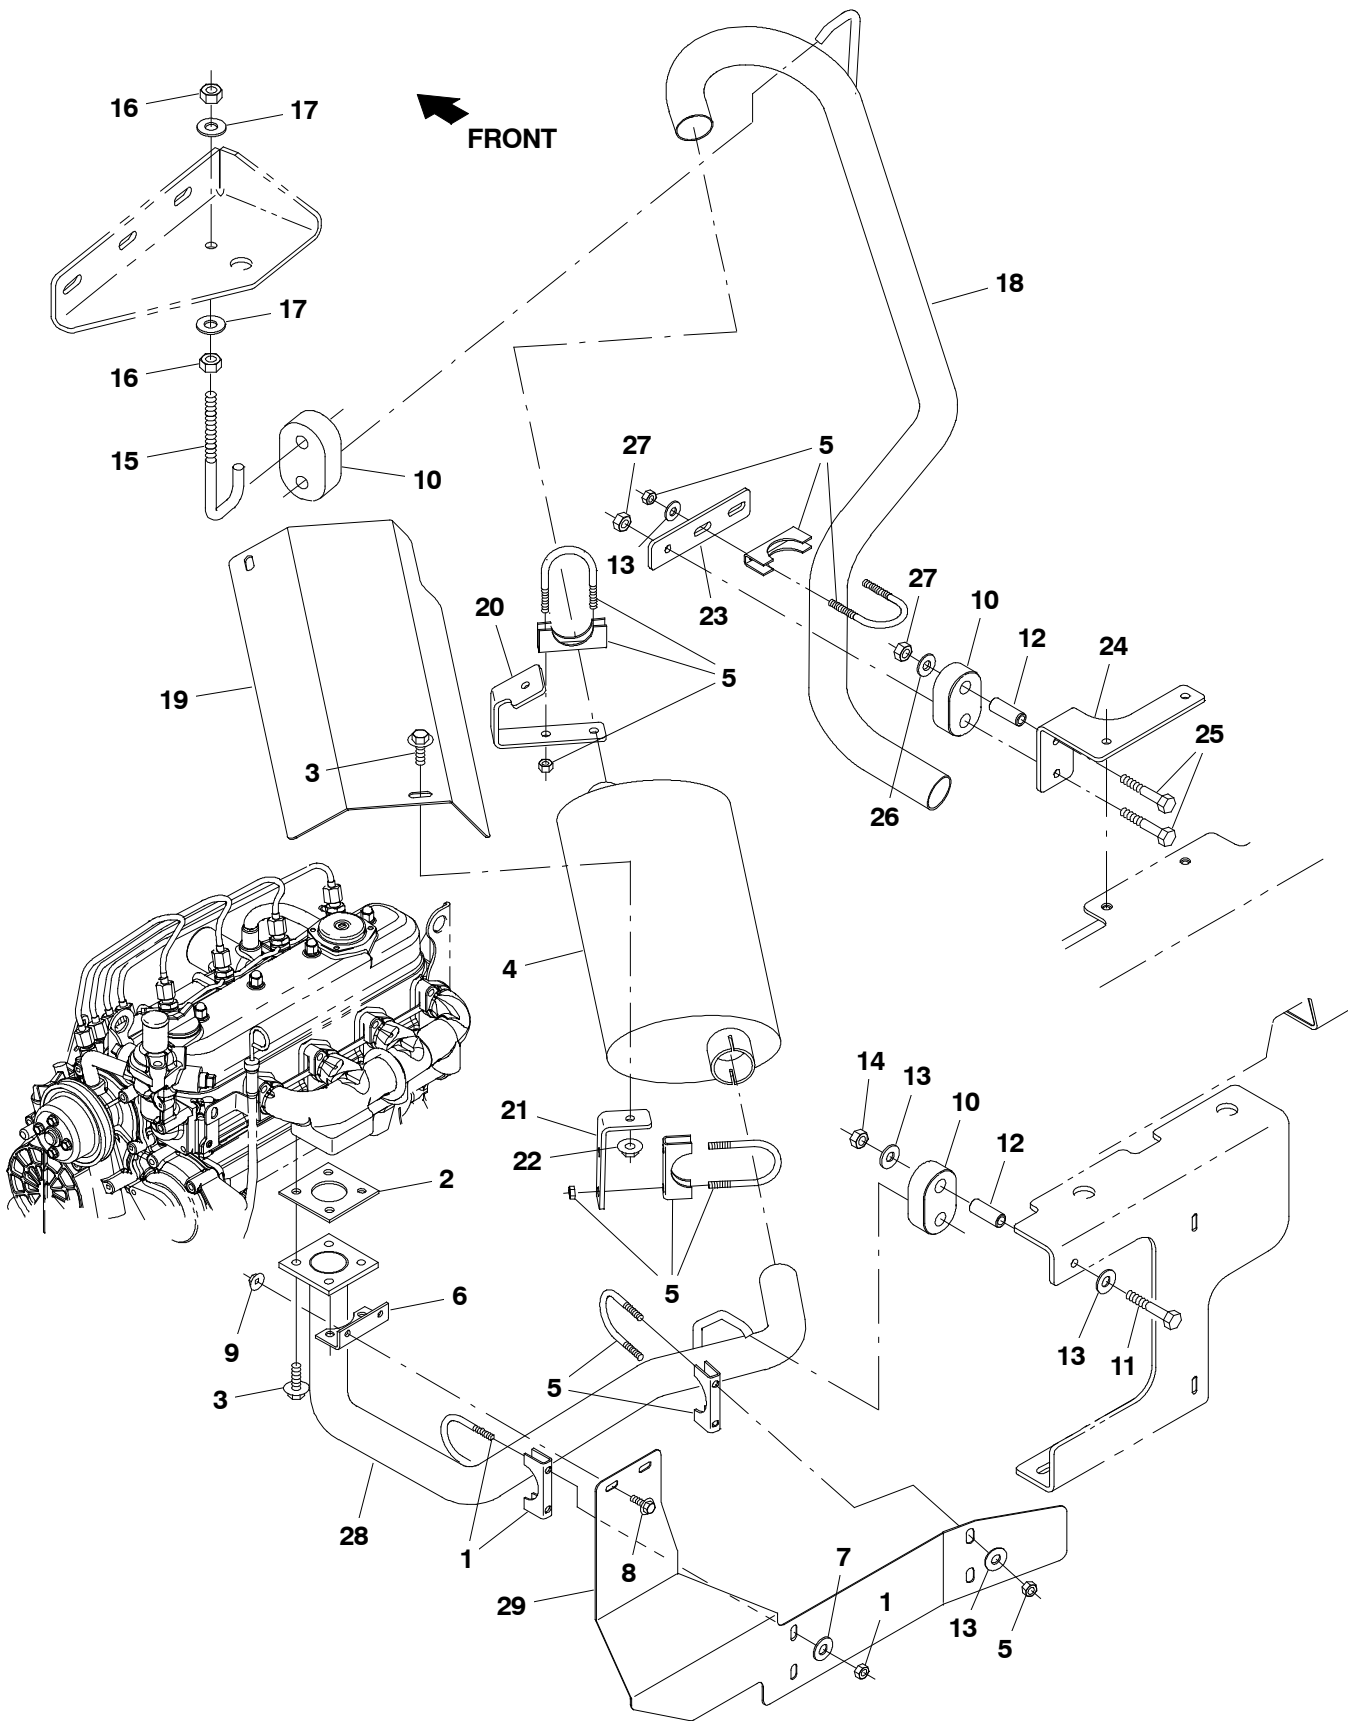


Fig. 19 - Engine Muffler Group, Diesel S30 X4

Ref.	Part No.	Serial Number	Description	Qty.
1	24012	(006501-	) Clamp, Muffler, 1.62d	1
2	51332	(006501-	) Gasket [Ku]	1
3	1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	6
4	364805	(006501-	) Muffler, Exhaust	1
5	24012	(006501-	) Clamp, Muffler, 1.62d	4
6	1036103	(006501-	) Bracket, Mtg, Heat Shield	1
7	32491	(006501-	) Washer, Flat, 0.31, Std	2
8	1040467	(006501-	) Screw, Hex, M6 X 1.0 X 20, 9.8, Sems	2
9	07790	(006501-	) Nut, Hex, Flng, M6 X 1.00	2
10	1013031	(006501-	) Isolator, Rbr	3
11	39278	(006501-	) Screw, Hex, M8 X 1.25 X 50, 8.8	1
12	222497	(006501-	) Sleeve, P/M, 0.31b 0.50d 1.3l [430ss]	2
13	32491	(006501-	) Washer, Flat, 0.31, Std	5
14	08709	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI	1
15	1013117	(006501-	) Rod, Hanger, Isolator	1
16	25014	(006501-	) Nut, Hex, Std, .38- 16	2
17	32492	(006501-	) Washer, Flat, 0.38, Std	2
18	1039290	(006501-	) Tube, Exhaust, Tailpipe, 4 Wheel	1
19	1039295	(006501-	) Channel, Shield, Muffler	1
20	1044752	(006501-	) Bracket, Mtg, Heat Shield	1
21	1044754	(006501-	) Bracket, Mtg, Heat Shield	1
22	07791	(006501-	) Nut, Hex, Flng, M8 X 1.25	2
23	1039388	(006501-	) Bracket, Mtg, Isolator	1
24	1039389	(006501-	) Bracket, Mtg, Isolator	1
25	16930	(006501-	) Screw, Hex, M10 X 1.50 X 50, 8.8	2
26	32493	(006501-	) Washer, Flat, 0.50, Std	1
27	41430	(006501-	) Nut, Hex, Lock, M10 X 1.5, NI	2
28	1059532	(006501-	) Tube Wldt, Exhaust, Dsl [Roto Cover]	1
29	9004517	(006501-	) Shield, Heat, Dsl, W/ Label, Replmt	1

Fig. 20 - Engine Radiator Hoses Group, Diesel

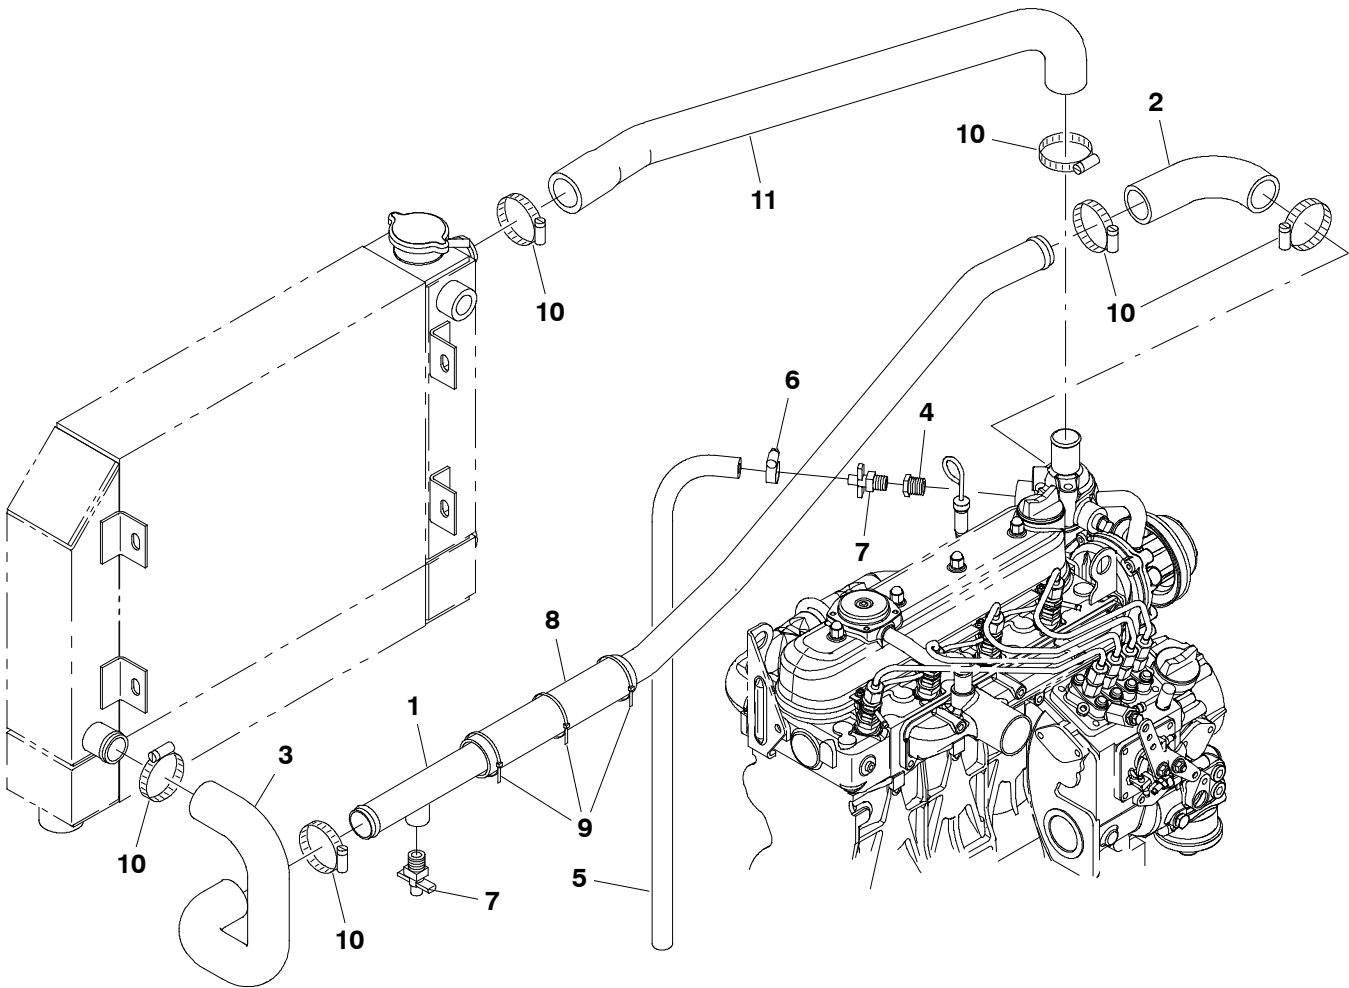


Fig. 20 - Engine Radiator Hoses Group, Diesel

Ref.	Part No.	Serial Number	Description	Qty.
1	1059468	(006501-	) Tube, Coolant, Lower, Dsl [Roto- mold]	1
2	1038570	(006501-	) Hose, Rbr, E90, 1.25id 1.25id 04.2 02.6	1
3	1055029	(006501-	) Hose, Rbr, 1.25id 1.25id	1
4	150006	(006501-	) Fitting, Brs, Str, Pf04/Pm06, Bshg	1
5	73471	(006501-	) Hose, Pvc, Clr, 0.38id 0.56od 022.0l	1
6	43844	(006501-	) Clamp, Hose, Wormdrive, 0.25- 0.62d, .31w	1
7	54911- 32	(006501-	) Fitting, Draincock, .25npt	2
8	762180	(006501-	) Guard, Hose, Rbr, 8.0l	1
9	44961	(006501-	) Tie, Cable, Nyl, 14.5l .30w 4.0 Max D	3
10	79381	(006501-	) Clamp, Hose, Wormdrive, 1.25- 2.00d, .50w	6
11	1031820	(006501-	) Hose, Coolant, Upper, Dsl	1

Fig. 21 - Engine Radiator Mount and Fan Group

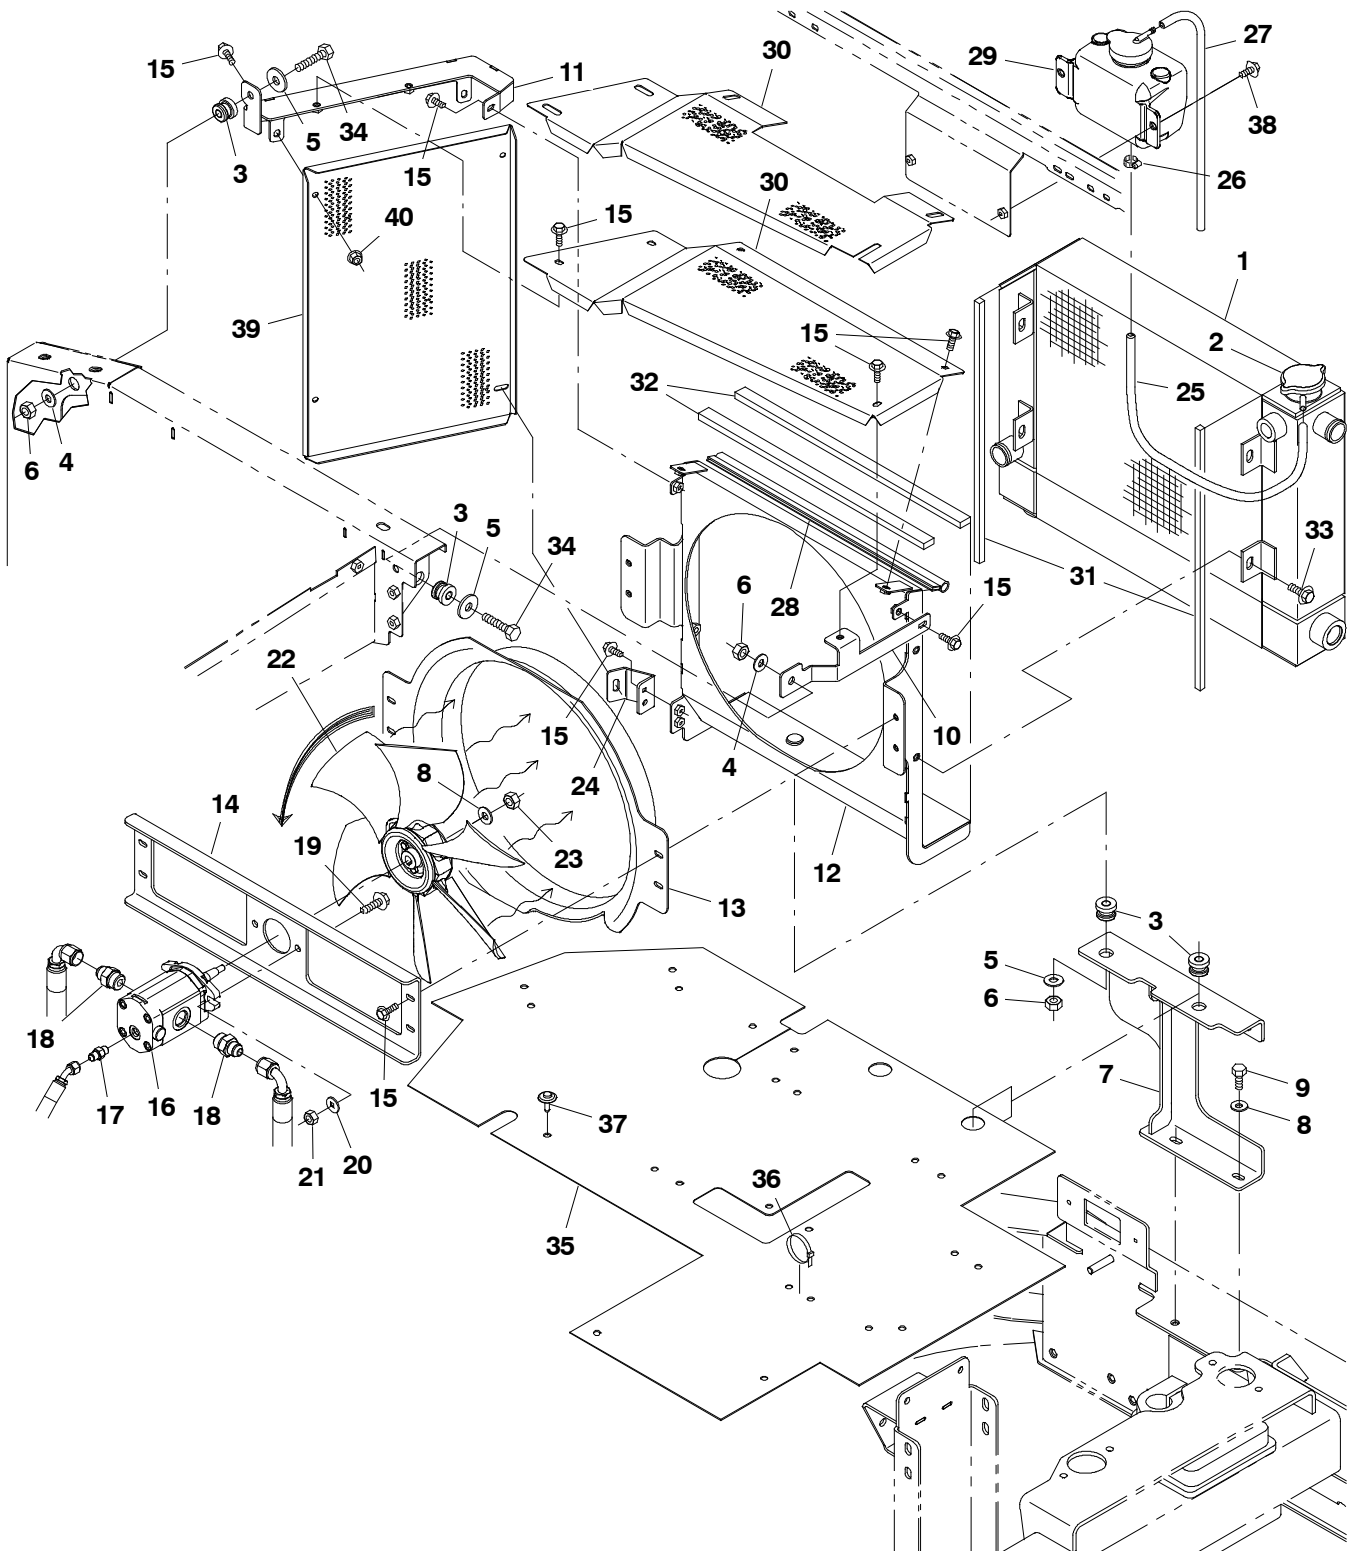


Fig. 21 - Engine Radiator Mount and Fan Group

Ref.	Part No.	Serial Number	Description	Qty.
1	1051863	(006501-	) Radiator, W/ Hyd Cooler [Side X Side]	1
2	1045764	(006501-	) Cap, Radiator, 14psi [Stant Ao- 2516]	1
3	54274	(006501-	) Isolator, Vib, Bshg, 1.1d 0.6l .4b 0.78h	4
4	32492	(006501-	) Washer, Flat, 0.38, Std	2
5	1014563	(006501-	) Washer, Flat, 0.40b 1.12d .12, Ss	3
6	41430	(006501-	) Nut, Hex, Lock, M10 X 1.5, NI	4
7	1027589	(006501-	) Bracket Wldt, Mtg, Radiator	1
8	32491	(006501-	) Washer, Flat, 0.31, Std	3
9	39277	(006501-	) Screw, Hex, M8 X 1.25 X 25, 8.8	2
10	1058670	(006501-	) Bracket, Sppt, Radiator	1
11	1058404	(006501-	) Bracket Wldt, Sppt, Radiator, Rh	1
12	1055564	(006501-	) Bracket Wldt, Radiator (S30 and XP only)	1
12	1052552	(006501-	) Bracket Wldt, Radiator (S30 X4 only)	1
13	1054428	(006501-	) Shroud, Fan	1
14	1060343	(006501-	) Bracket Wldt, Mtg, Motor (S30 and XP only)	1
14	1030306	(006501-	) Channel, Mtg, Fan Motor (S30 X4 only)	1
15	1036892	(006501-	) Screw, Hex, M6 X 1.00 X 25, 9.8 Sems	15
16	1031026	(006501-	) Motor, Hyd, Gear, Ext 0.67 Rh 2500	1
17	762428	(006501-	) Fitting, Hyd, Str, Fm04/Om04	1
18	762456	(006501-	) Fitting, Hyd, Str, Fm08/Om10	2
19	1037355	(006501-	) Screw, Hex, M8 X 1.25 X 35, 9.8, Sems	2
20	39349	(006501-	) Washer, Flat, 0.31, Sae	2
21	08709	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI	2
22	1031566	(006501-	) Fan, Cooling, 14.1d, 6 Blade, 0.5b Taper	1
23	32960	(006501-	) Nut, Hex, Lock, .31- 24, NI	1
24	1055002	(006501-	) Bracket, Mtg, Condenser	1
25	381391	(006501-	) Hose, Drain, Overflow, Radiator	1
26	43844	(006501-	) Clamp, Hose, Wormdrive, 0.25- 0.62d, .31w	1
27	87738	(006501-	) Hose, Fuel, 0.18id, 29.0l	1
28	1031623	(006501-	) Seal, Afmkt, Bulb, Str, .50d F/11ga 02ft	1
29	1054382	(006501-	) Tank, Coolant, 03.6w 04.1hi 05.5l, 1liter	1
30	1059052	(006501-	) Guard, Fan (S30 and XP only)	1
30	1074093	(006501-	) Guard, Fan (S30 X4 only)	1
31	1015205	(006501-	) Seal, Afmkt, Ure, Adh, 0.38, 0.38w 02ft	2
32	1015314	(006501-	) Seal, Afmkt, Bulb, Adh 0.38, 0.75w 02ft	2
33	1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	4
34	06962	(006501-	) Screw, Hex, M10 X 1.50 X 45, 8.8	1
35	1061498	(006501-	) Skirt, Neo, .06, 30.00w 41.00l [3 Wheel] (S30 and XP only)	1
35	1061503	(006501-	) Skirt, Neo, .06, 30.00w 41.00l [4 Wheel] (S30 X4 only)	1
36	49266	(006501-	) Tie, Cable, Nyl, 07.3l .19w 1.8 Max D	8
37	72968	(006501-	) Rivet, Plstc, .250d X 0.90	3
38	1040467	(006501-	) Screw, Hex, M6 X 1.00 X 20, 9.8, Sems	2
39	1060009	(006501-	) Guard, Fan	1
40	07790	(006501-	) Nut, Hex, Fling, M6 X 1.00	3

Fig. 22 - Wheel Group, Rear Drive S30 and XP

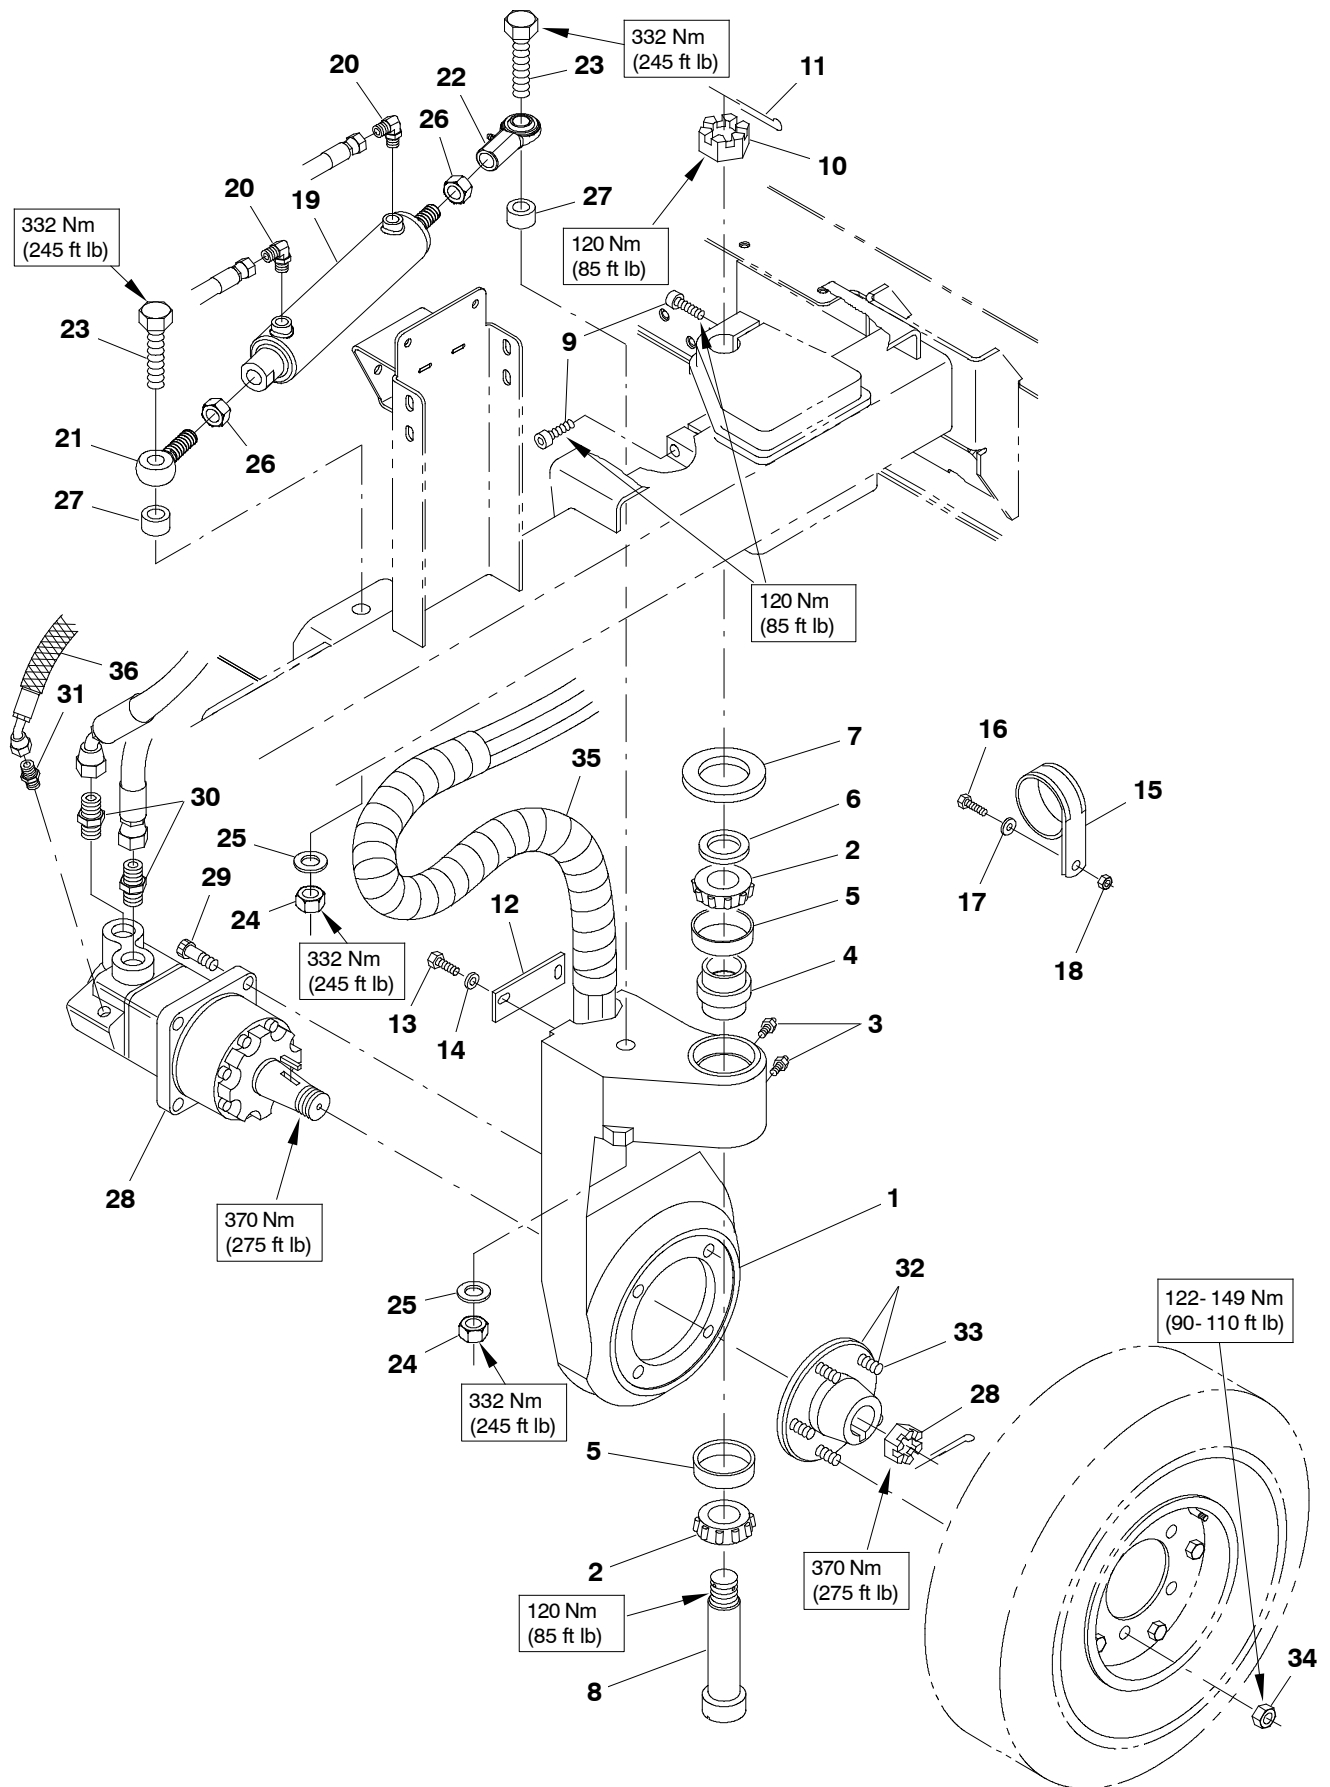


Fig. 22 - Wheel Group, Rear Drive S30 and XP

Ref.	Part No.	Serial Number	Description	Qty.
1	1071053	(006501-	) Housing, Sppt, Drive	1
2	51339	(006501-	) Bearing, Cone, 1.38b 0.71w	2
3	47801	(006501-	) Fitting, Grease, Str Pm04 .63l	2
4	374560	(006501-	) Seal, Drive, Rear, Grease Cav	1
5	51338	(006501-	) Bearing, Cup, 2.56d 0.55w	2
6	54051	(006501-	) Washer, Flat, 1.39b 2.12d .13, Stl	1
7	374563	(006501-	) Washer, Flat, 2.16b 3.50d .16, Felt	1
8	73281	(006501-	) Bolt, Shld, 1.37d X 5.13l, 1.1- 18 Drilled	1
9	72926	(006501-	) Screw, Soc, M16 X 2.00 X 50, 12.9	2
10	54052	(006501-	) Nut, Hex, Sltld, 1.12- 18	1
11	08329	(006501-	) Pin, Cotter, .125 X 2.50	1
12	58842	(006501-	) Bar, Flat, Stl 0.19, 01.50 X 04.1l	1
13	09011	(006501-	) Screw, Hex, M8 X 1.25 X 30, Ss	2
14	32491	(006501-	) Washer, Flat, 0.31, Std	2
15	70157	(006501-	) Clamp, Cable, Ss, 2.50d X 1.00w, 1hole	1
16	09740	(006501-	) Screw, Hex, M8 X 1.25 X 20, Ss	1
17	39349	(006501-	) Washer, Flat, 0.31, Sae	1
18	07791	(006501-	) Nut, Hex, Flng, M8 X 1.25	1
▽ 19	1028492	(006501-	) Cylinder, Hyd, 2.0b 15.0l 08.00strk 1500	1
▲	373698	(006501-	) Seal Kit	1
20	762432	(006501-	) Fitting, Hyd, E90, Fm06/Om06	2
21	64886	(006501-	) Rod- End, 0.75- 16rh Mal 0.75b [Teflon]	1
22	64887	(006501-	) Rod- End, 0.75- 16rh Fem 0.75b	1
23	77345	(006501-	) Screw, Hex, .75- 10 X 3.25, G5	2
24	32987	(006501-	) Nut, Hex, Std, .75- 10	2
25	39350	(006501-	) Washer, Flat, 0.75, Sae	2
26	35886	(006501-	) Nut, Hex, Jam, .75- 16	2
27	1034806	(006501-	) Tube, 0.77id 1.75od 00.7l, Stl, Pntd	2
28	1054901	(006501-	) Motor, Hyd, Gear, Int 17.1 Bi- Dir 3000 (See Breakdowns)	1
29	19583	(006501-	) Screw, Soc, .50- 13 X 1.50, Al	4
30	762468	(006501-	) Fitting, Hyd, Str, Fm10/Om12	2
31	762426	(006501-	) Fitting, Hyd, Str, Fm04/Om06	1
▽ 32	54087	(006501-	) Hub Assy, Wheel, 5 Bolt 4.50bc Taper B	1
▲ 33	32126	(006501-	) Stud, Wheel, .50- 20 X 1.50l, 0.370th	5
34	24339	(006501-	) Nut, Wheel, .50- 20 X 60 Angle	5
35	1041393	(006501-	) Guard, Hose, Wrap, Plstc, 37.0	1
36	57315	(006501-	) Sleeve, Nyl, 2.38id 05.0l	1

Fig. 23 - Wheel Group, Rear Drive, S30 X4

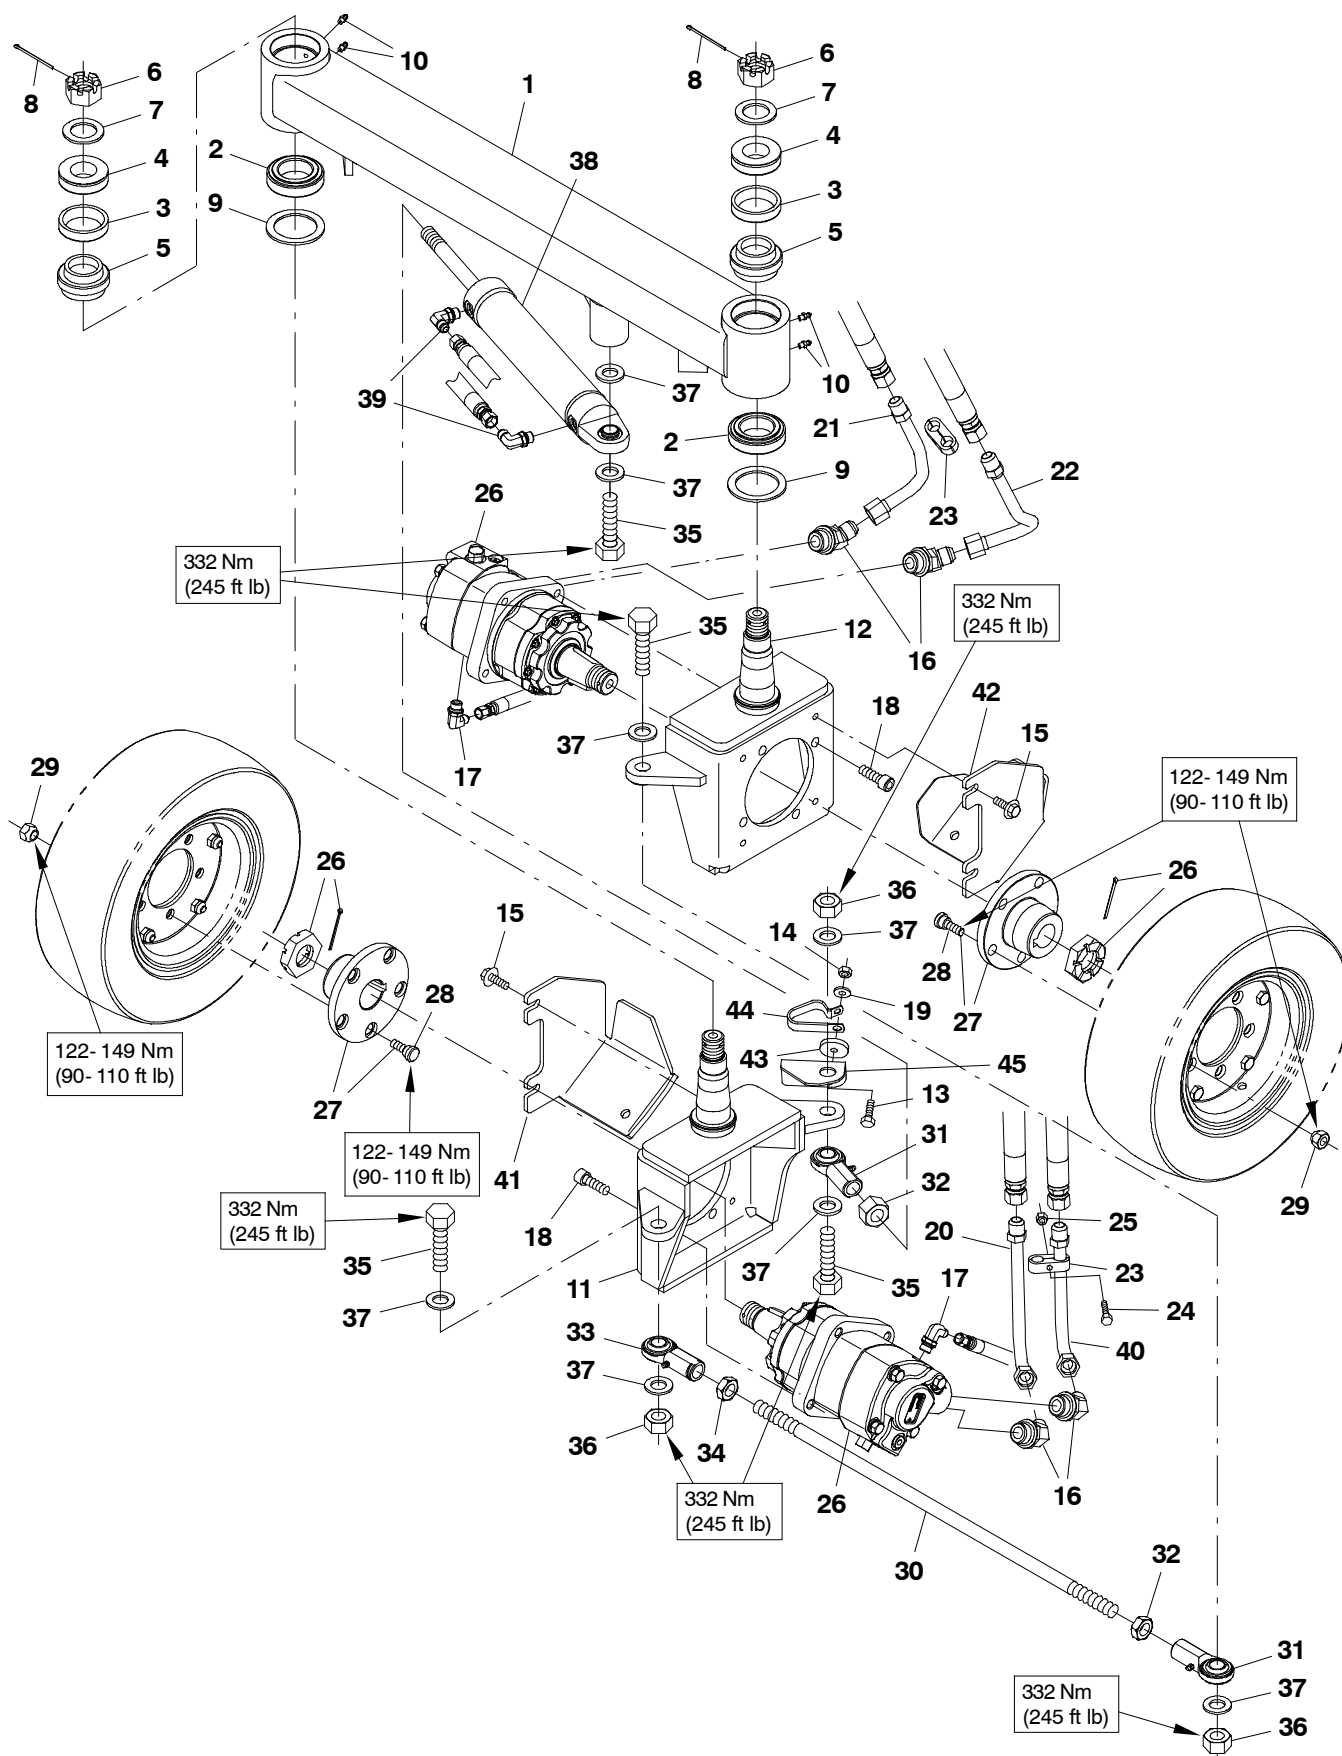


Fig. 23 - Wheel Group, Rear Drive, S30 X4

Ref.	Part No.	Serial Number	Description	Qty.
1	1022569	(006501-	) Axle Wldt, Rear, 4 Wheel	1
2	1035922	(006501-	) Bearing Assy, Cup / Cone, 45mmb	2
3	51338	(006501-	) Bearing, Cup, 2.56d 0.55w	2
4	51339	(006501-	) Bearing, Cone, 1.38b 0.71w	2
5	1041558	(006501-	) Seal, Cavity, Grease, 4 Wheel	2
6	54052	(006501-	) Nut, Hex, Sltd, 1.12- 18	2
7	54051	(006501-	) Washer, Flat, 1.39b 2.12d .13, Stl	2
8	08329	(006501-	) Pin, Cotter, .125 X 2.50	2
9	1034943	(006501-	) Washer, Flat, 2.24b 3.03d .12, Ni	2
10	47801	(006501-	) Fitting, Grease, Str Pm04 .63l	4
11	1023862	(006501-	) Housing Wldt, Sppt, Drive, Rh	1
12	1032393	(006501-	) Housing Wldt, Sppt, Drive, Lh	1
13	39277	(006501-	) Screw, Hex, M8 X 1.25 X 25, 8.8	1
14	07791	(006501-	) Nut, Hex, Flng, M8 X 1.25	1
15	1037358	(006501-	) Screw, Hex, M10 X 1.50 X 35, 9.8, Sems	8
16	1024249	(006501-	) Fitting, Hyd, E45, Jm10/Om12	4
17	762427	(006501-	) Fitting, Hyd, E90, Fm04/Om06	2
18	19583	(006501-	) Screw, Soc, .50- 13 X 1.50, Al	8
19	32491	(006501-	) Washer, Flat, 0.31, Std	1
20	1047806	(006501-	) Tube, Hyd, Right Outside	1
21	1032993	(006501-	) Tube Assy, Hyd, Motor [Lh- Inner]	1
22	1032995	(006501-	) Tube Assy, Hyd, Motor [Lh- Outer]	1
23	1033034	(006501-	) Clamp, Tube, 0.63d 0.63d, 2 Hole	2
24	06945	(006501-	) Screw, Hex, M6 X 1.00 X 30, 8.8	2
25	08708	(006501-	) Nut, Hex, Lock, M6 X 1.00, NI	2
26	1044109	(006501-	) Motor, Hyd, Gear, Int 07.9 Bi- Dir 3000	2
▽ 27	54087	(006501-	) Hub Assy, Wheel, 5 Bolt 4.50bc Taper B	2
▲ 28	54086	(006501-	) Stud, Wheel, .50- 20 X 1.50l, 0.297th	5
29	24339	(006501-	) Nut, Wheel, .50- 20 X 60 Angle	10
30	1027079	(006501-	) Rod, Tie, 4 Wheel	1
31	1042515	(006501-	) Rod- End, 0.75- 16rh Fem 0.75b Zerk	2
32	35886	(006501-	) Nut, Hex, Jam, .75- 16	2
33	1028094	(006501-	) Rod- End, 0.75- 16lh Fem 0.75b Zerk	1
34	1028190	(006501-	) Nut, Hex, Jam, .75- 16, Lh	1
35	58056	(006501-	) Screw, Hex, .75- 10 X 3.00, G5	4
36	32987	(006501-	) Nut, Hex, Lock, .75- 10, NI	3
37	39350	(006501-	) Washer, Flat, 0.75, Sae	8
38	1032456	(006501-	) Cylinder, Hyd, 2.0b 16.8l 09.50strk 3000	1
39	762432	(006501-	) Fitting, Hyd, E90, Fm06/Om06	2
40	1047720	(006501-	) Tube, Hyd, Right Inside	1
41	1047929	(006501-	) Guard, Rear, Rh [4- Wheel]	1
42	1048072	(006501-	) Guard, Rear, Lh [4- Wheel]	1
43	1048084	(006501-	) Spacer, 0.35b, 1.50d, 0.25l, PI	1
44	09570	(006501-	) Clamp, Cable, Stl, 0.9x1.8x0.62w, 1hole	1
45	1048061	(006501-	) Bracket, Support, Tube	1

Fig. 24 - Wheel Suspension Group, Rear Drive, S30 X4


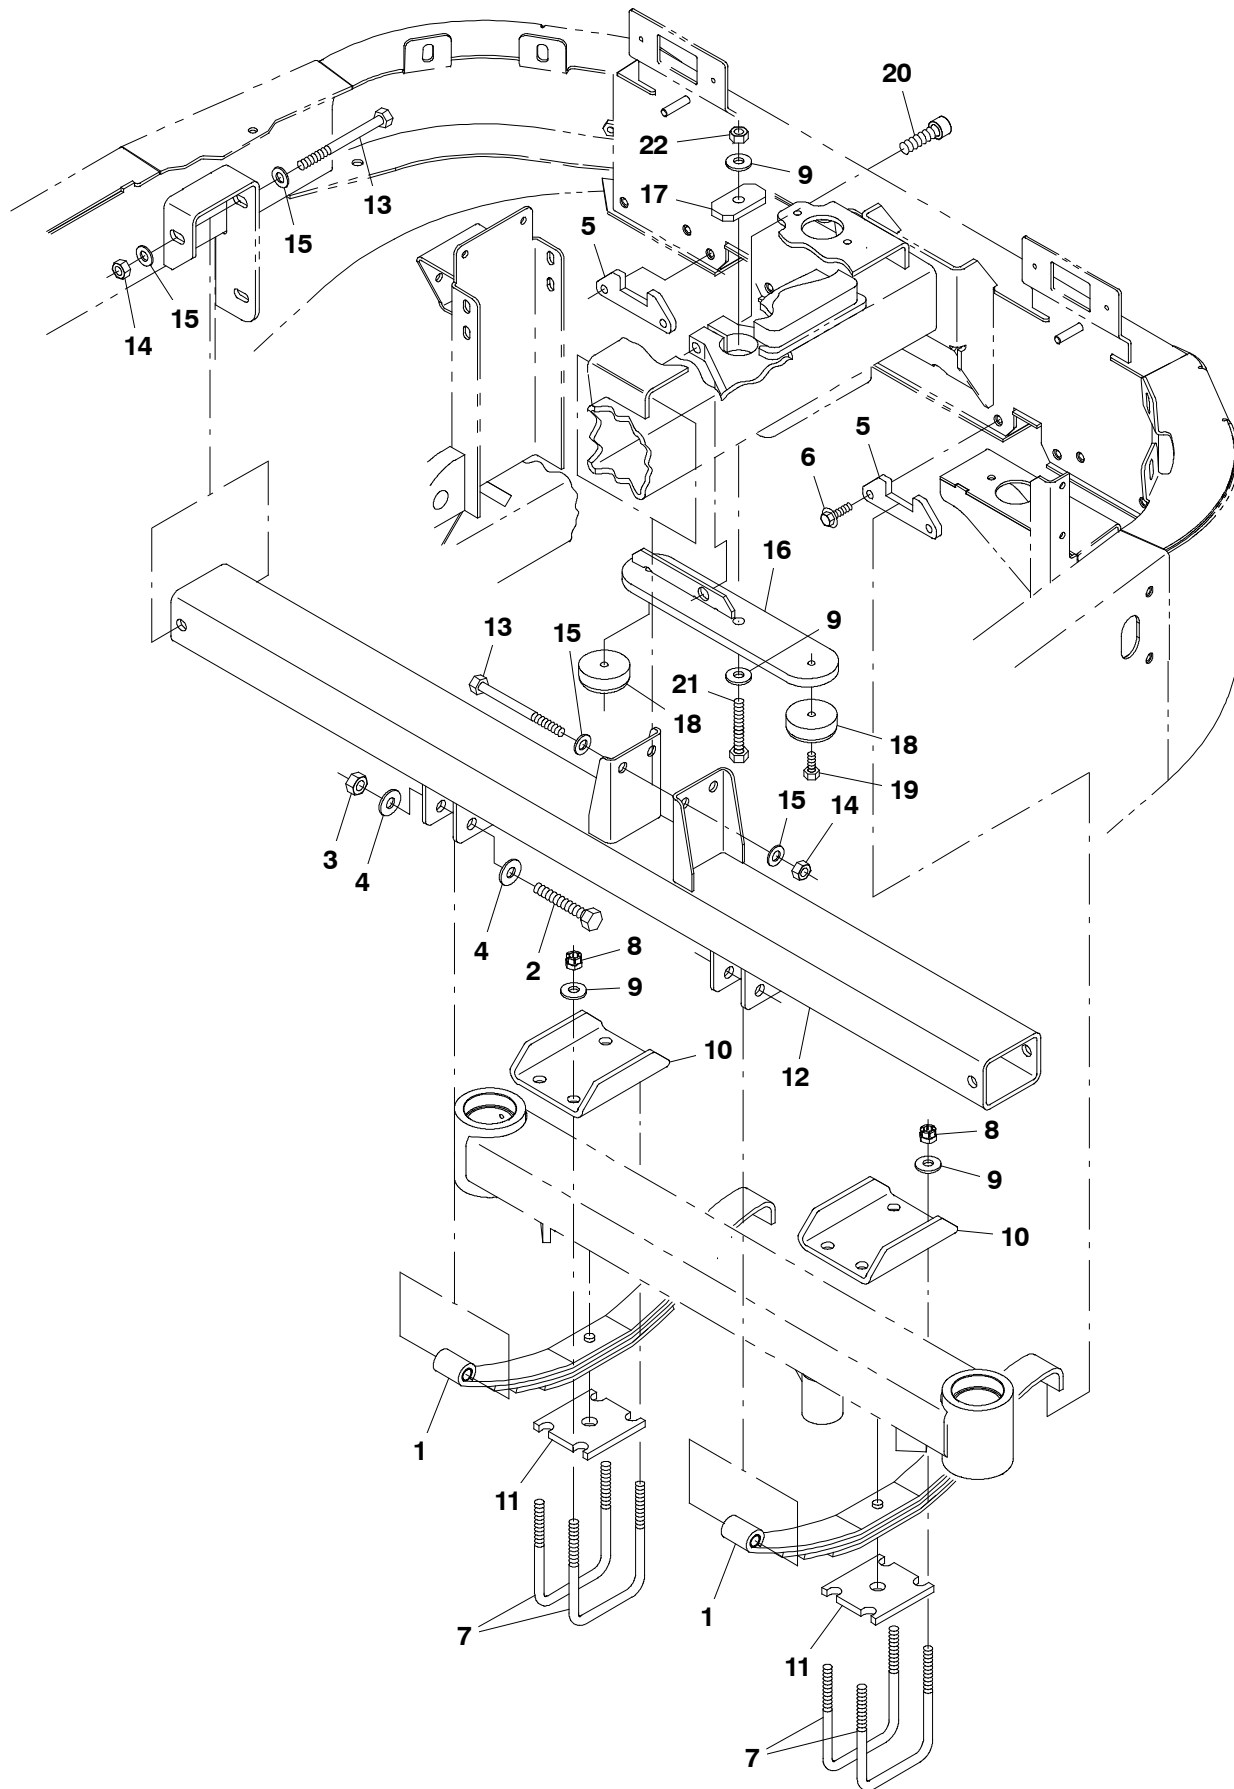


Fig. 24 - Wheel Suspension Group, Rear Drive, S30 X4

Ref.	Part No.	Serial Number	Description	Qty.
1	1026833	(006501-	) Spring, Leaf, 21.5inch [Slipper]	2
2	1035488	(006501-	) Screw, Hex, M14 X 2.00 X 90, 8.8	2
3	41517	(006501-	) Nut, Hex, Lock, M14 X 2.00, NI	2
4	41619	(006501-	) Washer, Flat, 0.56b 1.38d .11, Ss	4
5	1035138	(006501-	) Plate, Retainer, Leaf Spring	2
6	1037358	(006501-	) Screw, Hex, M10 X 1.50 X 35, 9.8, Sems	4
7	1027317	(006501-	) Bolt, U, .50- 20 X 6.00, 4.13id	4
8	31701	(006501-	) Nut, Hex, Flexlock, .50- 20	8
9	36328	(006501-	) Washer, Flat, Belleville, .50	10
10	1027293	(006501-	) Plate, Spring, U Bolt, Upper	2
11	1027332	(006501-	) Plate, Spring, U Bolt, Lower	2
12	1026019	(006501-	) Frame Wldt, Crossmember, 4 Wheel	1
13	383255	(006501-	) Screw, Hex, M12 X 1.75 X 140, 8.8	4
14	08711	(006501-	) Nut, Hex, Lock, M12 X 1.75, NI	4
15	32486	(006501-	) Washer, Flat, 0.50, Sae	8
16	1039286	(006501-	) Stop Wldt, Suspension, 4 Wheel	1
17	1039327	(006501-	) Bar, Flt, Stl 0.38, 01.50 X 03.0l, 1/.6h	1
18	369481	(006501-	) Bumper, Rbr, 2.5d X 1.00	2
19	39283	(006501-	) Screw, Hex, M10 X 1.50 X 25, 8.8	2
20	72926	(006501-	) Screw, Soc, M16 X 2.00 X 50, 12.9	1
21	06974	(006501-	) Screw, Hex, M12 X 1.75 X 80, 8.8	1
22	39313	(006501-	) Nut, Hex, Std, M12 X 1.75	1


Fig. 25 - Wheel Assembly, Rear, S30 and XP

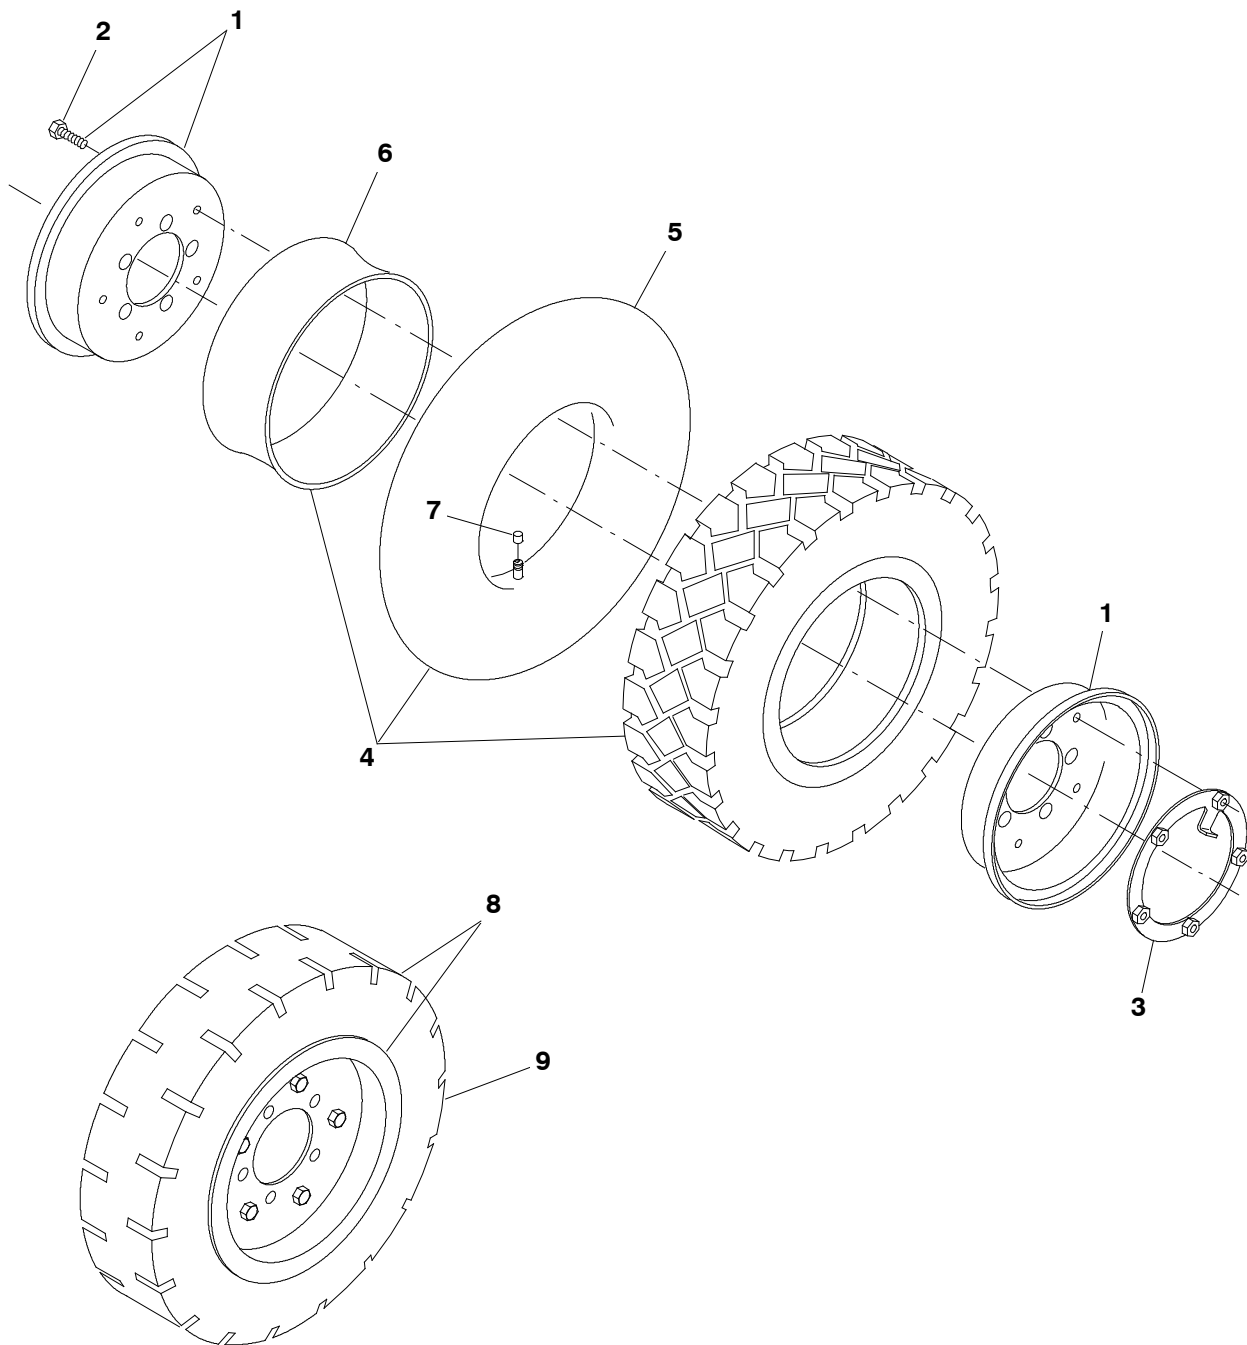

354702

Ref.	Part No.	Serial Number	Description	Qty.
▽	1005229	(006501-	) Tire Assy, Pneu, 570/500- 08 4.5bc 5bolt (Standard)	1
▲▽	1 53818	(006501-	) Rim Assy, 08.0 X 3.8, 4.5bc /5bolt	1
▲▲	2 370181	(006501-	) Screw, Hex, M10 X 1.50 X 25, 10.9	5
▲	3 99997	(006501-	) Plate, Lock Plate	1
▲▽	4 53819	(006501-	) Tire, W/ Tube, W/ Flap	1
▲▲	5 70280	(006501-	) Inners tube, Valve [5.00r- 8, Js2, 500- 8]	1
▲▲	6 53819- 2	(006501-	) Flap, Tire/Tube, 570/500- 8	1
▲▲	7 45786	(006501-	) Cap, Valve, Tire, Tubeless [Schrader]	1
▽	8 53817	(006501-	) Tire Assy, Solid, 18.0 X 4.3 4.5bc 5bolt (Option)	1
▲	9 53816	(006501-	) Tire, Solid, 18.0 X 7.0 X 8.0[4.33 Sc15]	1

Fig. 26 - Wheel Assembly, Rear, S30 X4

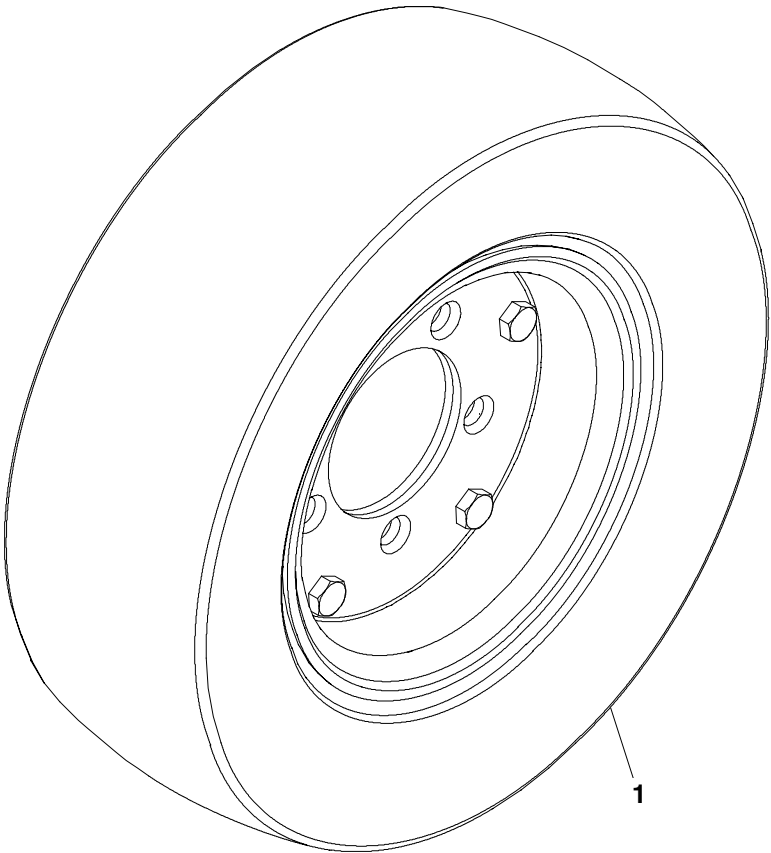

354805

Ref.	Part No.	Serial Number	Description	Qty.
1	1053523	(006501-	) Tire Assy, Foam- filled, 125/75- 08 5bolt (Standard)	1

Fig. 27 - Wheel and Brakes Group, Front Solid (Standard)

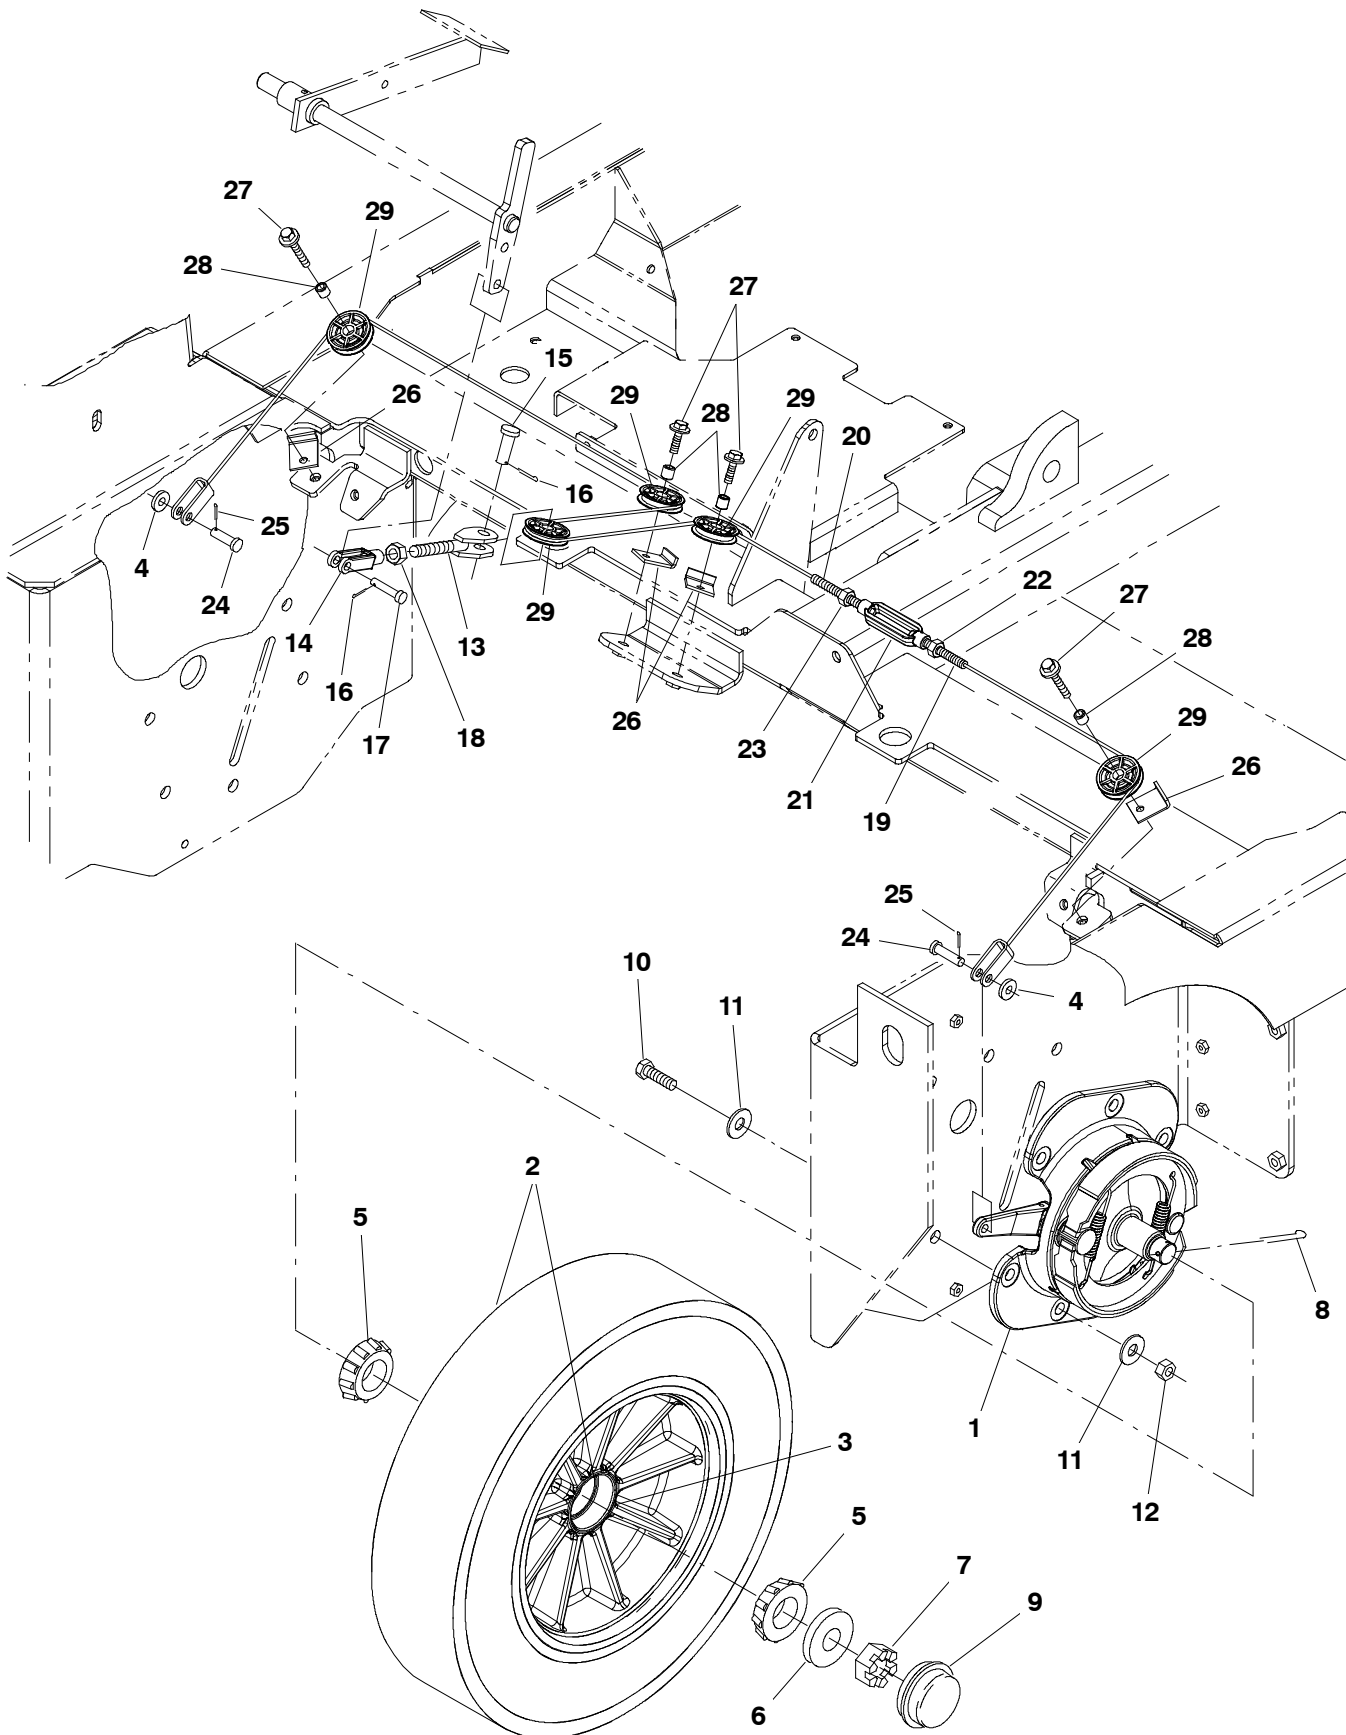


Fig. 27 - Wheel and Brakes Group, Front Solid (Standard)

	Ref.	Part No.	Serial Number	Description	Qty.
▽	1	54577	(006501-	) Brake Assy, Drum, Mech, 07.9d [6600]]	2
▲		66211	(006501-	) Shoe Set, Brake [1 Set=1pkg=2 Shoes]	2
▲▽		66213	(006501-	) Brake Kit, Repair	1
▲▲		70161	(006501-	) Shaft	1
▲		70158	(006501-	) Spring	2
▽	2	1061961	(006501-	) Tire Assy, Solid, 20.8 X 5.0, W/ Brg, Front Tire	2
▲	3	51338	(006501-	) Bearing, Cup, 2.56d 0.55w	2
	4	32485	(006501-	) Washer, Flat, 0.38, Sae	2
	5	51339	(006501-	) Bearing, Cone, 1.38b 0.71w	4
	6	32598	(006501-	) Washer, Flat, 1.02b 1.75d .12, Stl	2
	7	14242	(006501-	) Nut, Hex, Sltd, 1.00- 20	2
	8	08202	(006501-	) Pin, Cotter, .125 X 1.75	2
	9	54390	(006501-	) Cap, Hub, Dust, 2.57d 0.77l	2
	10	06969	(006501-	) Screw, Hex, M12 X 1.75 X 40, 8.8	12
	11	32486	(006501-	) Washer, Flat, 0.50, Sae	24
	12	08711	(006501-	) Nut, Hex, Lock, M12 X 1.75, NI	12
	13	71373	(006501-	) Clevis Wldt, Adj, .50pin 0.50- 20, PI	1
	14	374710	(006501-	) Clevis, Adj, 0.38pin, 0.50- 20thd	1
	15	58078	(006501-	) Pin, Clevis, 0.50d X 1.25l	1
	16	08182	(006501-	) Pin, Cotter, .125 X 1.00	2
	17	86240	(006501-	) Pin, Clevis, 0.38d X 1.13l	1
	18	48985	(006501-	) Nut, Hex, Jam, .50- 20	1
	19	1034462	(006501-	) Cable, Brake	1
	20	1034455	(006501-	) Cable, Brake	1
	21	40352	(006501-	) Turnbuckle, Body, .38thread, 03.9l	1
	22	32522	(006501-	) Nut, Hex, Jam, .38- 16	1
	23	39562	(006501-	) Nut, Hex, Jam, .38- 16, Lh	1
	24	09088	(006501-	) Pin, Clevis, 0.37d X 1.00l	2
	25	39005	(006501-	) Pin, Cotter, .094 X 0.75	2
	26	54400	(006501-	) Bracket, Angle, Keeper, Cable	4
	27	1037355	(006501-	) Screw, Hex, M8 X 1.25 X 35, 9.8, Sems	4
	28	222460	(006501-	) Sleeve, P/M, 0.31b 0.50d 0.5l [430ss]	4
	29	369781	(006501-	) Pulley, Cable, 1.5d Nyl	5

STANDARD PARTS

Fig. 28 - Wheel and Brakes Group, Front Pneumatic (Option)

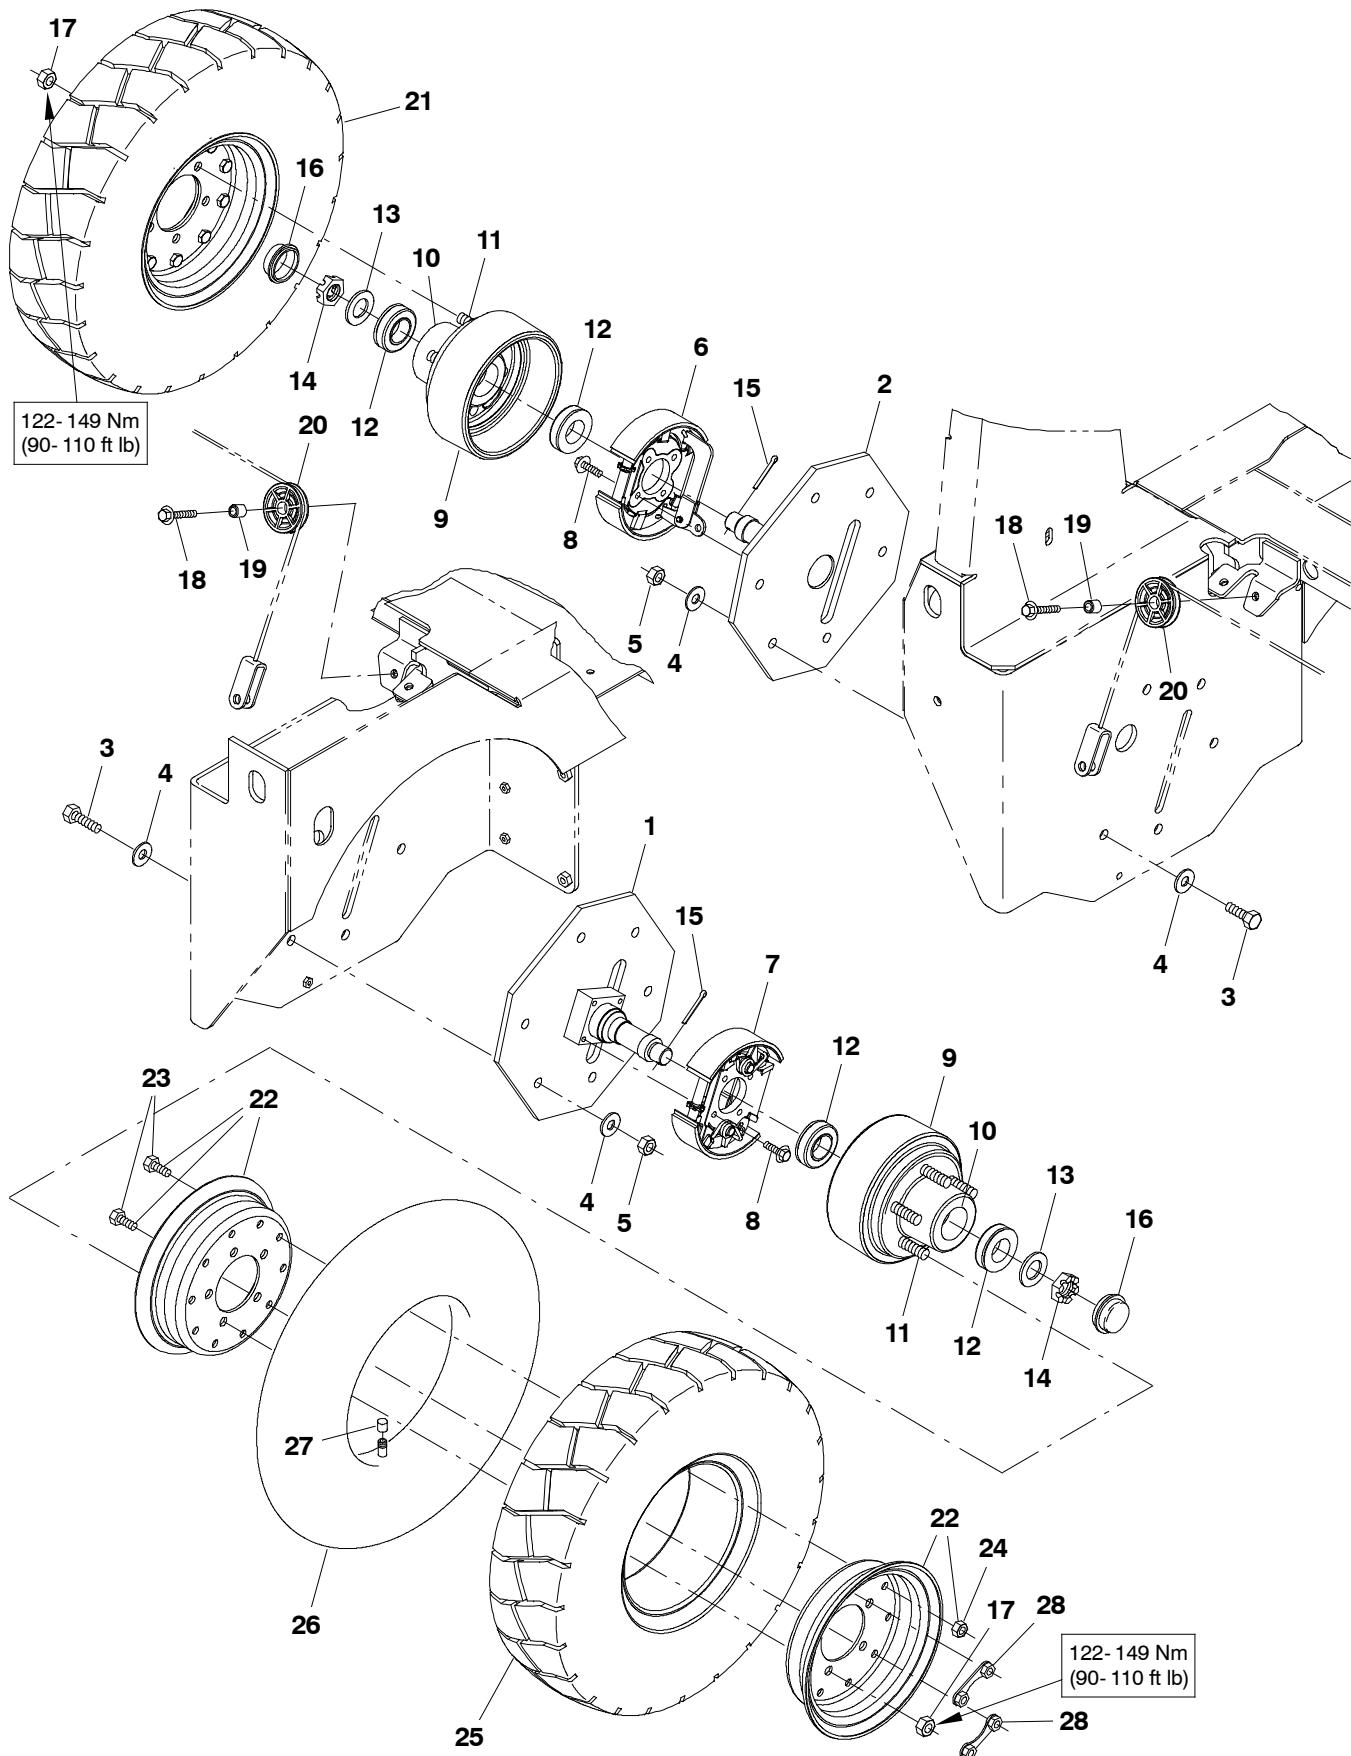


Fig. 28 - Wheel and Brakes Group, Front Pneumatic (Option)

Ref.	Part No.	Serial Number	Description	Qty.
1	1028159	(006501-	) Spindle Wldt, Wheel, Front, Lh	1
2	1028146	(006501-	) Spindle Wldt, Wheel, Front, Rh	1
3	06969	(006501-	) Screw, Hex, M12 X 1.75 X 40, 8.8	12
4	32486	(006501-	) Washer, Flat, 0.50, Sae	24
5	08711	(006501-	) Nut, Hex, Lock, M12 X 1.75, NI	12
▽	6	1026856	(006501-) Brake, Knot, Rh, 7.0d	1
▲		9004865	(006501-) Shoe Assy, Brake, 177.8 X 45	2
▲		9004867	(006501-) Lever Assy, 177.8 X 45	1
▲		9004868	(006501-) Spring, Tens, Brake	1
▲		9004870	(006501-) Spring, Tors, 0.61id .18wir 02.0coil	1
▲		9004871	(006501-) Adjuster Kit, Manual, W/ Pivot	1
▲		9004869	(006501-) Spring, Tors, 0.61id .18wir 02.0coil	1
▲		9004873	(006501-) Clip, Spring	2
▽	7	1026841	(006501-) Brake, Knot, Lh, 7.0d	1
▲		9004865	(006501-) Shoe Assy, Brake, 177.8 X 45	2
▲		9004867	(006501-) Lever Assy, 177.8 X 45	1
▲		9004868	(006501-) Spring, Tens, Brake	1
▲		9004870	(006501-) Spring, Tors, 0.61id .18wir 02.0coil	1
▲		9004871	(006501-) Adjuster Kit, Manual, W/ Pivot	1
▲		9004869	(006501-) Spring, Tors, 0.61id .18wir 02.0coil	1
▲		9004873	(006501-) Clip, Spring	2
	8	1037354	(006501-) Screw, Hex, M8 X 1.25 X 30, 9.8, Sems	8
▽	9	1036027	(006501-) Drum Assy, Brake	2
▲	10	51338	(006501-) Bearing, Cup, 2.56d 0.55w	2
▲	11	67665	(006501-) Stud, Wheel, .50- 20 X 1.88l, 0.560th	5
	12	51339	(006501-) Bearing, Cone, 1.38b 0.71w	4
	13	32598	(006501-) Washer, Flat, 1.02b 1.75d .12, Stl	2
	14	14242	(006501-) Nut, Hex, Sltd, 1.00- 20	2
	15	08202	(006501-) Pin, Cotter, .125 X 1.75	2
	16	54390	(006501-) Cap, Hub, Dust, 2.57d 0.77l	2
	17	24339	(006501-) Nut, Wheel, .50- 20 X 60 Angle	10
	18	1037355	(006501-) Screw, Hex, M8 X 1.25 X 35, 9.8, Sems	2
	19	222460	(006501-) Sleeve, P/M, 0.31b 0.50d 0.5l [430ss]	2
	20	369781	(006501-) Pulley, Cable, 1.5d Nyl	2
▽	21	1032515	(006501-) Tire Assy, Pneu, 21 X 6.0- 12 4.5bc, Ce	2
▲▽	22	1039523	(006501-) Rim Assy, 09.0 X 4.0, 4.5bc /5bolt	1
▲▲	23	370181	(006501-) Screw, Hex, M10 X 1.50 X 25, 10.9	10
▲▲	24	41430	(006501-) Nut, Hex, Lock, M10 X 1.5, NI	6
▲	25	1039520	(006501-) Tire, Pneu, 21 X 6.0 X 9.0 12 Ply [lc40]	1
▲	26	1039517	(006501-) Innertube, 6.00 X 9.00 [Js- 2]	1
▲	27	45786	(006501-) Cap, Valve, Tire, Tubeless [Schrader]	1
▲	28	1032488	(006501-) Plate, Wheel, Ce	2

Fig. 29 - Brake Pedal and Parking Brake Group

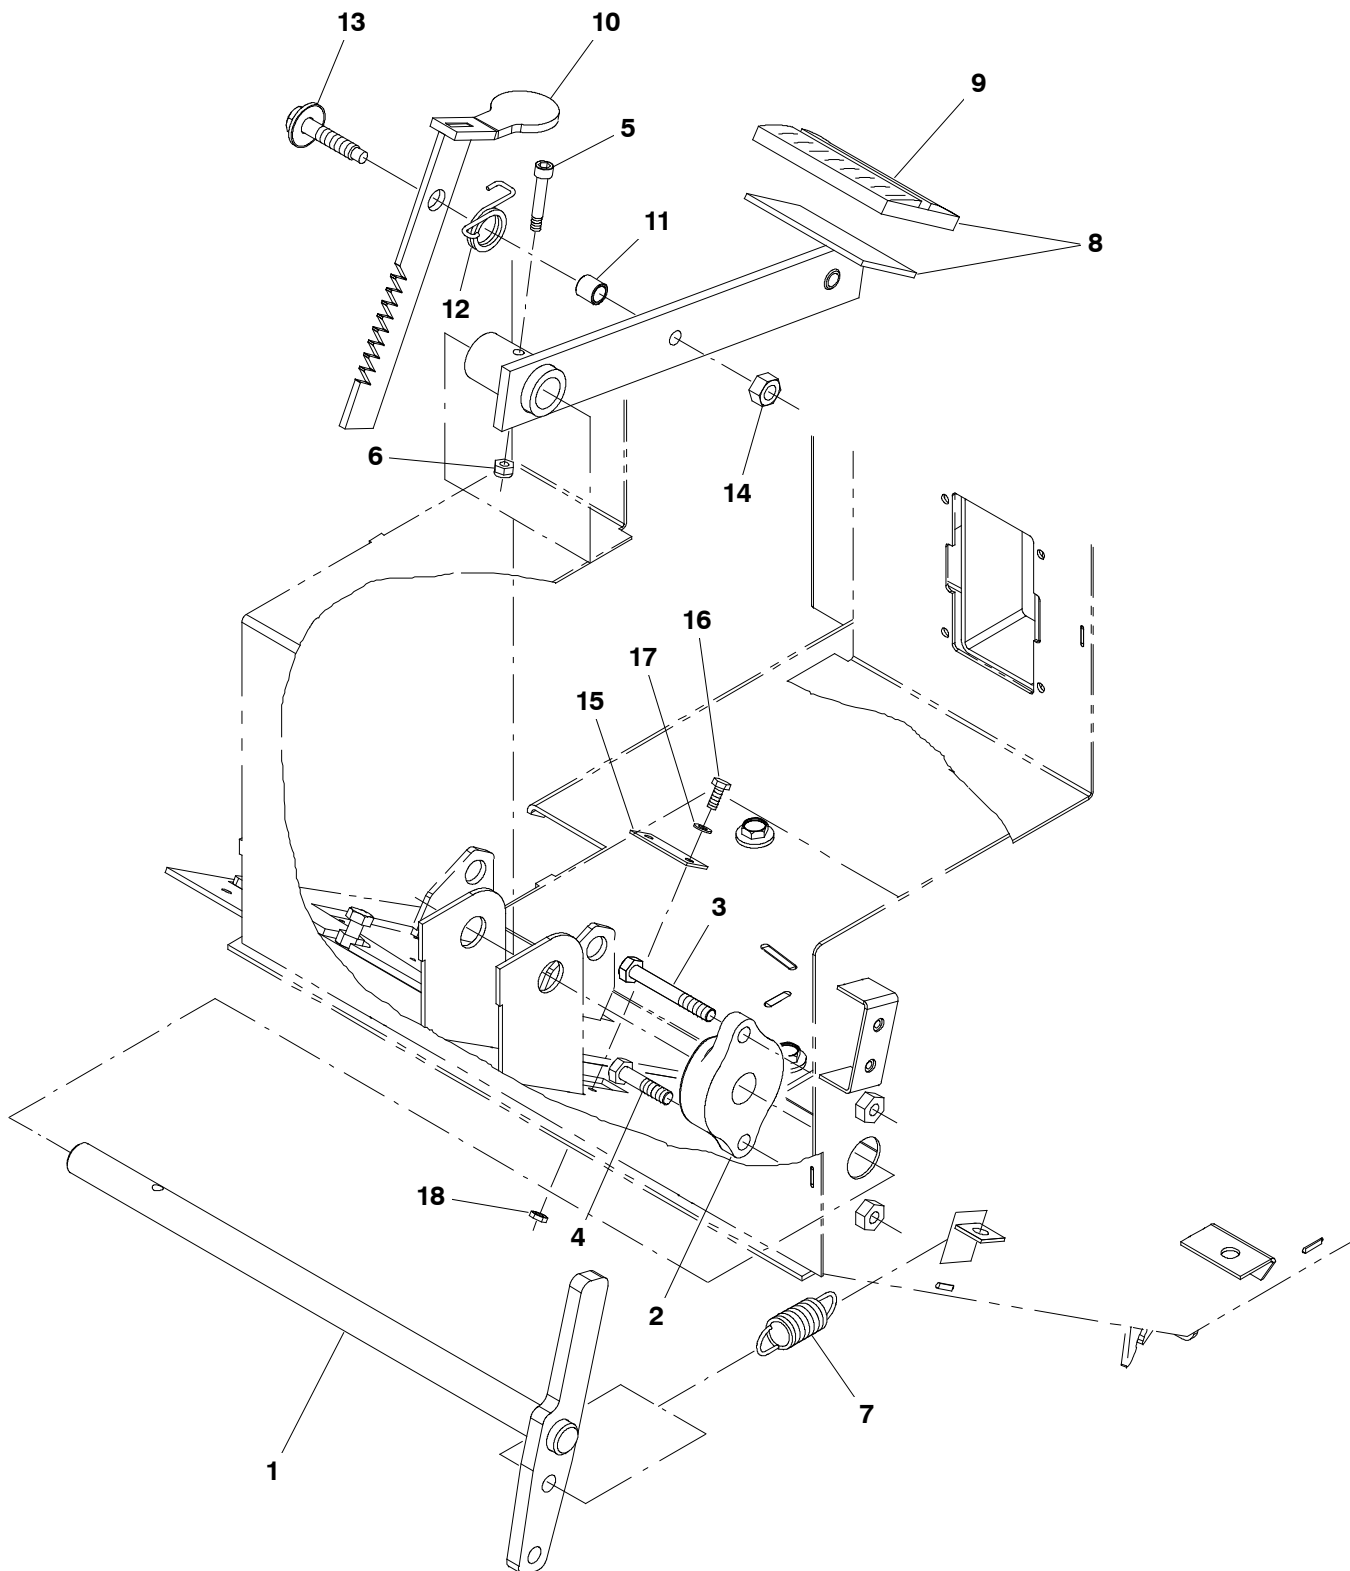


Fig. 29 - Brake Pedal and Parking Brake Group

Ref.	Part No.	Serial Number	Description	Qty.
1	1026605	(006501-	) Rod Wldt, Brake	1
2	26663	(006501-	) Bearing, Flng, 2hole, 0.75b	1
3	363976	(006501-	) Screw, Hex, M8 X 1.25 X 60, 8.8, FI	1
4	39277	(006501-	) Screw, Hex, M8 X 1.25 X 25, 8.8	1
5	31249	(006501-	) Bolt, Shld, .25d X 1.25, #10- 24	1
6	45181	(006501-	) Nut, Hex, Lock, #10- 24, NI	1
7	87816	(006501-	) Spring, Extn, 0.75od 0.09wir 02.5l	1
▽ 8	1026610	(006501-	) Pedal Wldt, Brake	1
▲ 9	51109	(006501-	) Pad, Pedal, Brake, 3.96l 2.36w 0.75	1
10	1042021	(006501-	) Brake Wldt, Parking	1
11	46563	(006501-	) Bushing, Sleeve, 0.37b 0.50d 0.50l, Oib	1
12	59009	(006501-	) Spring, Tors, 0.75id .06wir 02.8coil	1
13	06955	(006501-	) Screw, Hex, M8 X 1.25 X 35, 8.8	1
14	08709	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI	1
15	1042024	(006501-	) Plate, Stop, Parking	1
16	33928	(006501-	) Screw, Hex, M4 X 0.70 X 20, Ss	2
17	19065	(006501-	) Washer, Flat, 08	2
18	33932	(006501-	) Nut, Hex, Lock, M4 X 0.70, NI, Ss	2

Fig. 30 - Directional Pedal Group

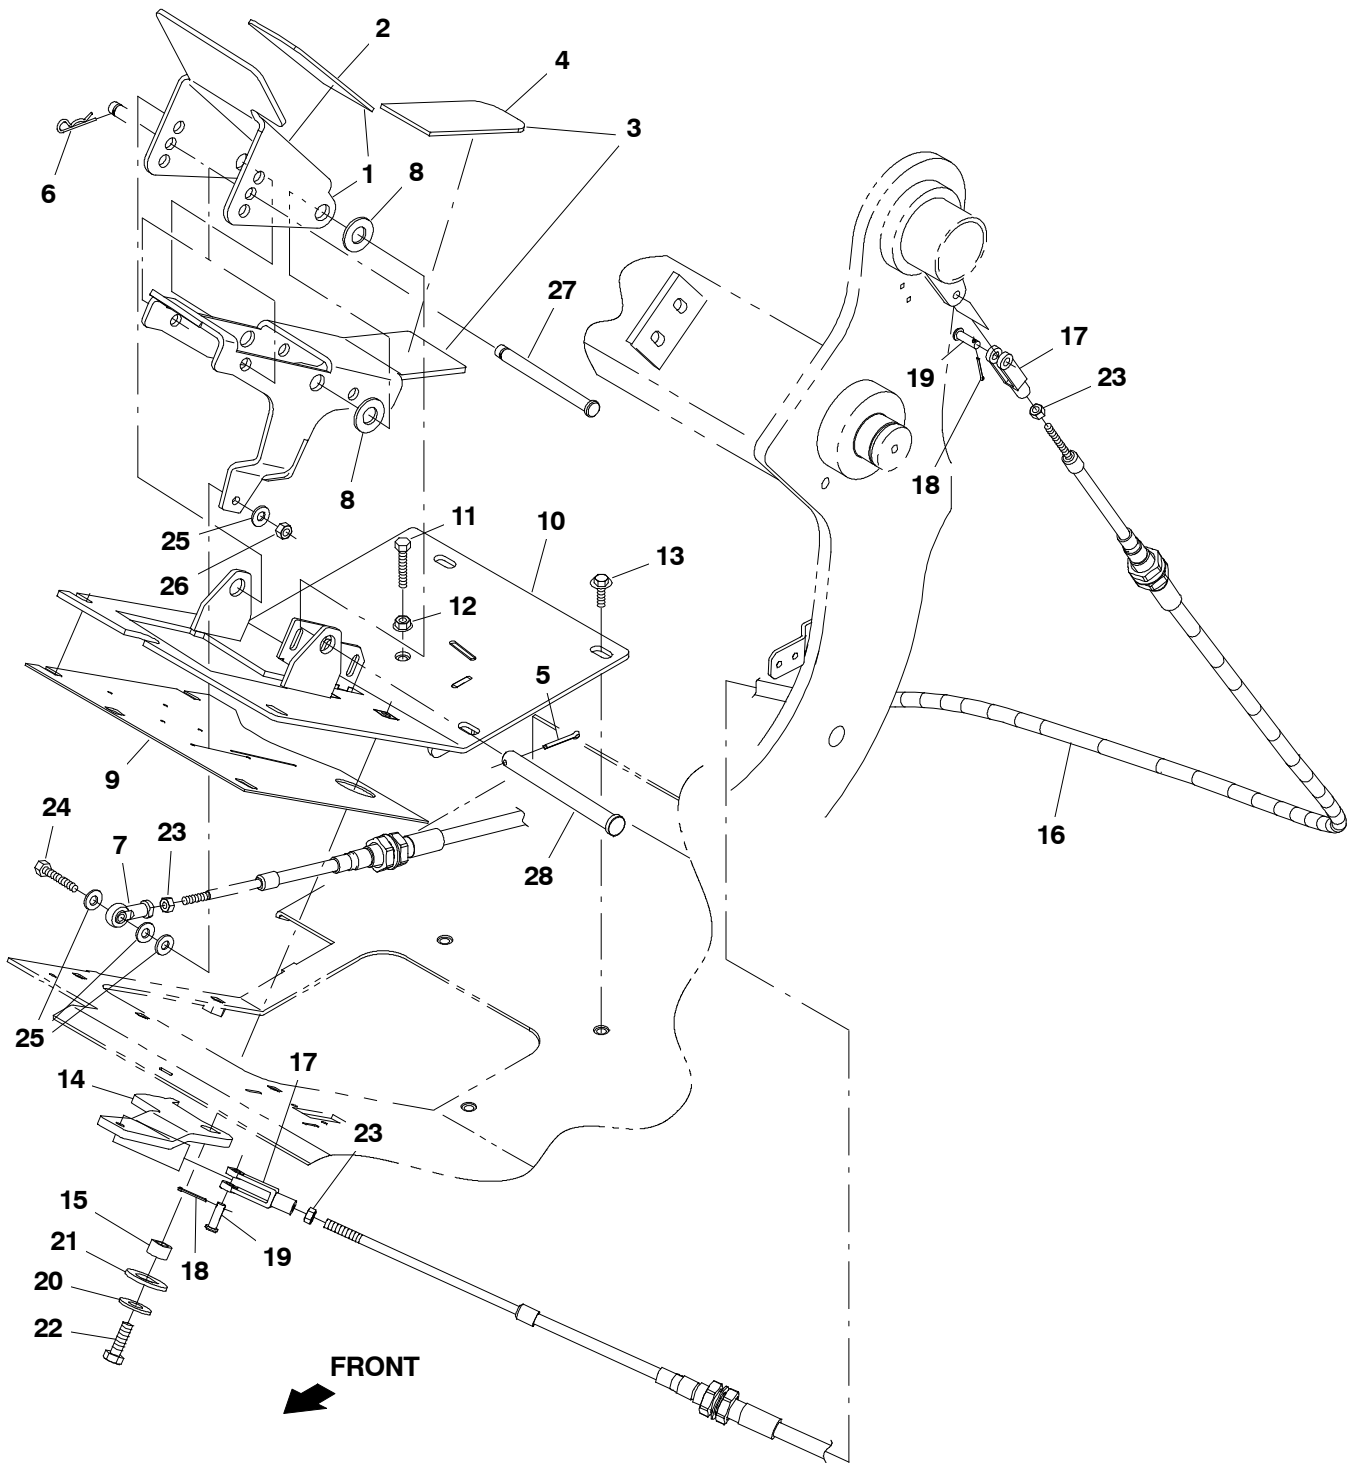


Fig. 30 - Directional Pedal Group

	Ref.	Part No.	Serial Number	Description	Qty.
▽	1	9004575	(006501-	) Pedal, Propel, Upper, W/Tread	1
▲	2	82839	(006501-	) Tread, Non- Skid, 02.2w 11.5l	1
▽	3	9004574	(006501-	) Pedal, Propel, Lower, W/Tread	1
▲	4	82839	(006501-	) Tread, Non- Skid, 02.2w 11.5l	1
	5	08182	(006501-	) Pin, Cotter, .125 X 1.00	1
	6	86866	(006501-	) Pin, Cotter, Hair, 0.38d .072 Wir	1
	7	1033995	(006501-	) Rod- End, M6 X 1.0rh Fem 6mmb [Nylon]	2
	8	32486	(006501-	) Washer, Flat, 0.50, Sae	2
	9	1038360	(006501-	) Gasket, Rbr, Pedal, Propel	1
	10	1026688	(006501-	) Panel Wldt, Access	1
	11	76570	(006501-	) Screw, Hex, M8 X 1.25 X 30, 8.8	1
	12	07791	(006501-	) Nut, Hex, Flng, M8 X 1.25	1
	13	1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	6
	14	1034910	(006501-	) Link, Crank, Limiter	1
	15	1040761	(006501-	) Bushing, Sleeve, 0.31b 0.55d 0.38l, Oib	1
	16	1035620	(006501-	) Cable, Push / Pull, 070.4l M6x1.0/M6x1.0	1
	17	1035826	(006501-	) Clevis, Adj, M6 Pin, M6 X 1.0 Rh, Pl	2
	18	08178	(006501-	) Pin, Cotter, .062 X 0.75	2
	19	14605	(006501-	) Pin, Clevis, 0.25d X 0.75l	2
	20	32492	(006501-	) Washer, Flat, 0.38, Std	1
	21	15331	(006501-	) Washer, Flat, 0.62, Sae	1
	22	09010	(006501-	) Screw, Hex, M8 X 1.25 X 25, Ss	1
	23	41359	(006501-	) Nut, Hex, Std, M6 X 1.00, 8	3
	24	09007	(006501-	) Screw, Hex, M6 X 1.00 X 25, Ss	1
	25	01684	(006501-	) Washer, Flat, 0.27b 0.69d .05, Ss	4
	26	08712	(006501-	) Nut, Hex, Lock, M6 X 1.00, NI, Ss	1
	27	1040162	(006501-	) Pin, Clevis, 0.37d X 4.33l	1
	28	51538	(006501-	) Pin, Clevis, 0.50d X 5.00l	1

Fig. 31 - Hydraulic Pump Linkage Group, S30 and XP

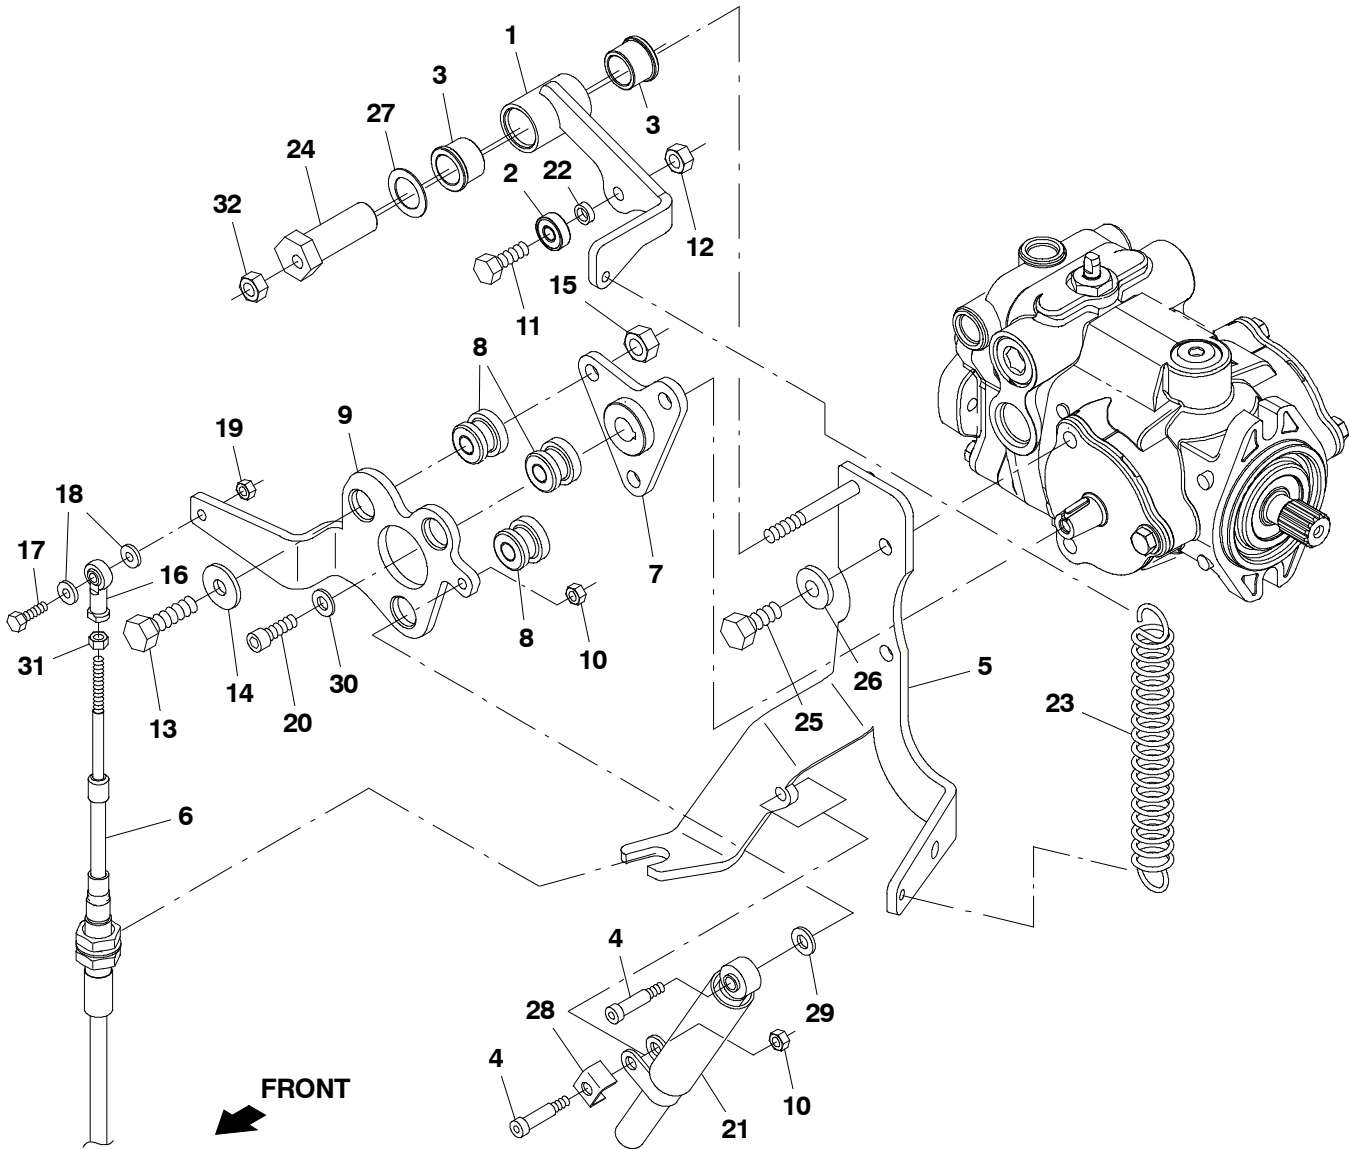


Fig. 31 - Hydraulic Pump Linkage Group, S30 and XP

Ref.	Part No.	Serial Number	Description	Qty.
1	1031921	(006501-	) Arm Wldt, Neutral	1
2	1027651	(006501-	) Bearing, Ball, 8mmb X 22mmd X 7mmw	1
3	1028246	(006501-	) Bearing, Flng, 0.75b 1.00d 0.75l, Bnz	2
4	16213	(006501-	) Bolt, Shld, .31d X 1.00, .25- 20	2
5	1072476	(006501-	) Bracket Wldt, Linkage, Propel [Mits]	1
6	1035619	(006501-	) Cable, Push / Pull, 062.5l M6x1.0/M6x1.0	1
7	1031939	(006501-	) Hub Wldt	1
8	59649	(006501-	) Isolator, Vib, Bshg, 1.1d 0.6l .4b 0.78h	3
9	1034244	(006501-	) Lever, Pump	1
10	75934	(006501-	) Nut, Hex, Lock, .25- 20, NI	2
11	76570	(006501-	) Screw, Hex, M8 X 1.25 X 30, 8.8	1
12	08709	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI	1
13	39284	(006501-	) Screw, Hex, M10 X 1.50 X 35, 8.8	3
14	13248	(006501-	) Washer, Flat, 0.40b 1.12d .12, Stl, PI	3
15	41430	(006501-	) Nut, Hex, Lock, M10 X 1.5, NI	3
16	1033995	(006501-	) Rod- End, M6 X 1.0rh Fem 6mmb [Nylon]	1
17	06945	(006501-	) Screw, Hex, M6 X 1.00 X 30, 8.8	1
18	32483	(006501-	) Washer, Flat, 0.25, Sae	2
19	08708	(006501-	) Nut, Hex, Lock, M6 X 1.00, NI	1
20	1033237	(006501-	) Screw, Soc, .31- 24 X 1.00, Al	1
21	73411	(006501-	) Shock Absorber, 2.3 Strk	1
22	1027531	(006501-	) Spacer, 0.33b 0.50d 0.15l, PI	1
23	222236	(006501-	) Spring, Extn, 1.00od 0.12wir 05.0l	1
24	1027533	(006501-	) Pin, Pivot, 0.75d 02.1l, Int 0.33b	1
25	21198	(006501-	) Screw, Hex, .38- 16 X 1.25, G5	2
26	32491	(006501-	) Washer, Flat, 0.31, Std	2
27	64489	(006501-	) Washer, Flat, 0.81b 1.24d .03, Stl, PI	1
28	84170	(006501-	) Bracket, Retainer, Safety	1
29	39349	(006501-	) Washer, Flat, 0.31, Sae	1
30	41186	(006501-	) Washer, Flat, Belleville, .31	1
31	41359	(006501-	) Nut, Hex, Std, M6 X 1.00, 8	1
32	08709	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI	1

Fig. 32 - Hydraulic Pump Linkage Group, S30 X4

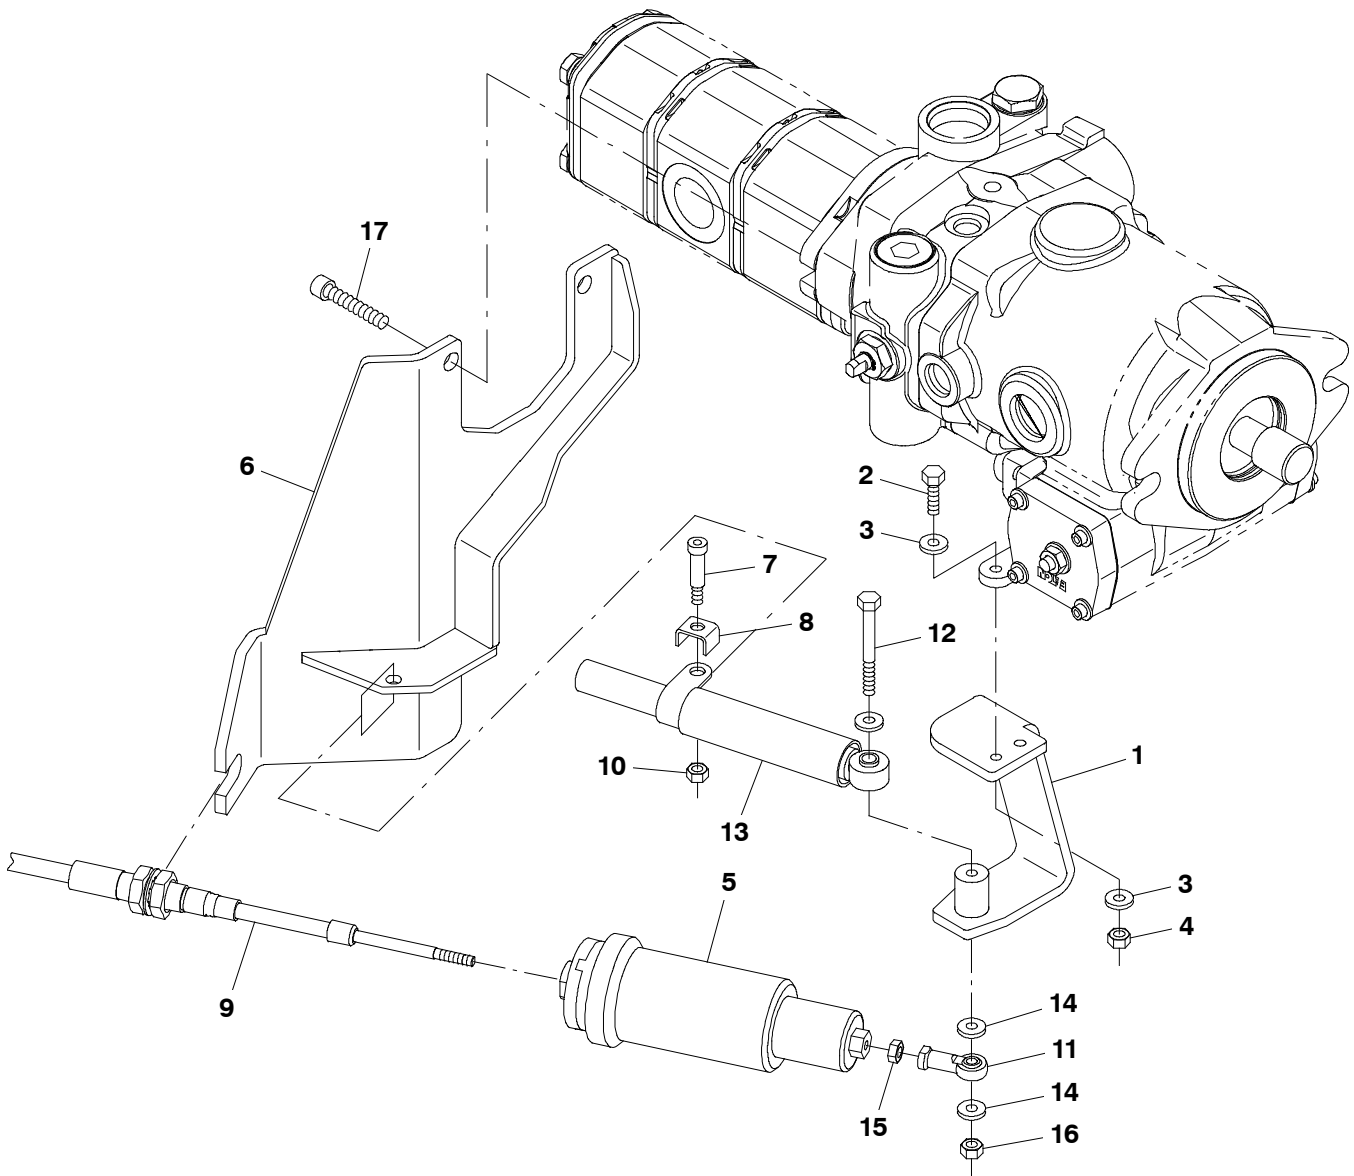


Fig. 32 - Hydraulic Pump Linkage Group, S30 X4

Ref.	Part No.	Serial Number	Description	Qty.
1	1036157	(006501-	) Plate Wldt, Pump	1
2	06944	(006501-	) Screw, Hex, M6 X 1.00 X 25, 8.8	2
3	32483	(006501-	) Washer, Flat, 0.25, Sae	4
4	08708	(006501-	) Nut, Hex, Lock, M6 X 1.00, NI	2
5	1037139	(006501-	) Spring Assy, Centering, 10lb, 75mm Travel	1
6	1040198	(006501-	) Bracket Wldt, Mtg, Propel	1
7	16213	(006501-	) Bolt, Shld, .31d X 1.00, .25- 20	1
8	84170	(006501-	) Bracket, Retainer, Safety	1
9	1039752	(006501-	) Cable, Push / Pull, 057.1l M6x1.0/M6x1.0	1
10	75934	(006501-	) Nut, Hex, Lock, .25- 20, NI	1
11	1033995	(006501-	) Rod- End, M6 X 1.0rh Fem 6mmb [Nylon]	2
12	09771	(006501-	) Screw, Hex, M6 X 1.00 X 70, Ss	1
13	73411	(006501-	) Shock Absorber, 2.3 Strk	1
14	32483	(006501-	) Washer, Flat, 0.25, Sae	9
15	41359	(006501-	) Nut, Hex, Std, M6 X 1.00, 8	2
16	08712	(006501-	) Nut, Hex, Lock, M6 X 1.00, NI, Ss	1
17	19580	(006501-	) Screw, Soc, .38- 16 X 2.00, Al	2

Fig. 33 - Hopper Group, Plastic

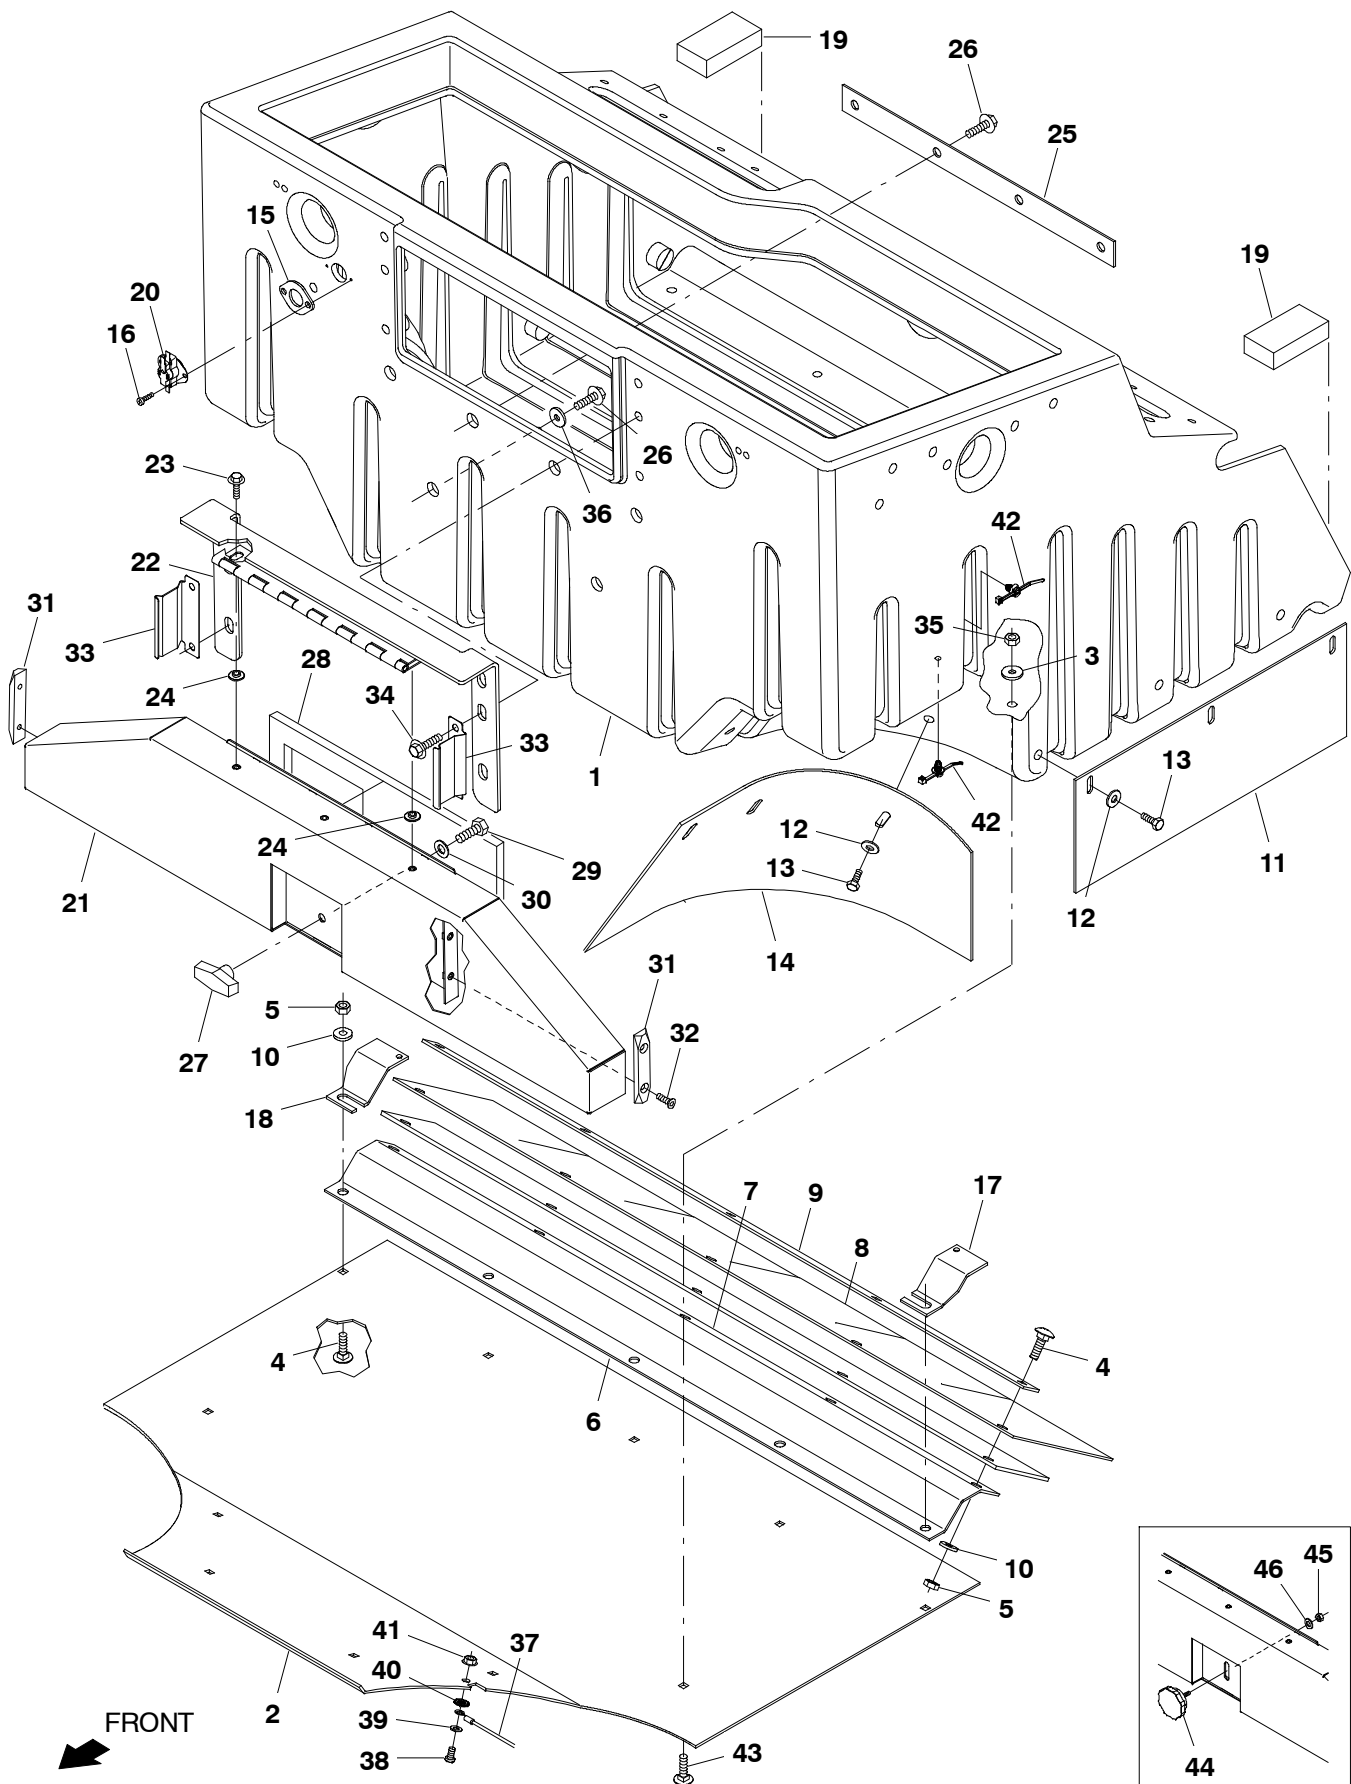


Fig. 33 - Hopper Group, Plastic

	Ref.	Part No.	Serial Number	Description	Qty.
	1	1210993	(006501-	Hopper, Plstc, Trimmed [S30]	1
	2	1214092	(006501-	Plate Wldt, Sppt, Hppr Bottom	1
	3	1017218	(006501-	Washer, Flat, 0.32b 1.00d .12, Ss	6
▽		9013115	(006501-	Skirt Kit, Hppr, Maint [S30]	1
▲	4	1035684	(006501-	Bolt, Carriage, M8 X 1.25 X 30	10
▲	5	08713	(006501-	Nut, Hex, Lock, M8 X 1.25, NI, Ss	10
▲	6	1212460	(006501-	Bracket, Sppt, Hppr Seal	1
▲	7	1212516	(006501-	Skirt, Lip	1
▲	8	1212509	(006501-	Skirt, Lip, Hppr	1
▲	9	1026798	(006501-	Strap, Main, Lip	1
▲	10	32491	(006501-	Washer, Flat, 0.31, Std	10
▲	11	1038037	(006501-	Skirt, Hppr	1
▲	12	41178	(006501-	Washer, Flat, 0.25, Fendr	6
▲	13	11635	(006501-	Screw, Hex, M6 X 1.00 X 12, NI, Ss	6
▲	14	1212510	(006501-	Skirt, Neo, .12, 15.9w, 20.8l, 03/SI	1
	15	82733	(006501-	Gasket, Sensor, Thermal	1
	16	360943	(006501-	Screw, Pan, Phl, 10- 14 X 0.75, F/ Plstc	2
	17	1044768	(006501-	Bracket, Seal, Lh	1
	18	1044764	(006501-	Bracket, Seal, Rh	1
	19	1049158	(006501-	Insulation, Acstc, 1.0, 2.0 X 03.8 Adh	2
	20	367679	(006501-	Switch, Thermal, 160deg, Spdt	1
	21	1213278	(006501-	Door Wldt, Hppr	1
	22	1213263	(006501-	Bracket Wldt, Door, Front	1
	23	1040467	(006501-	Screw, Hex, M6 X 1.00 X 20, 9.8, Sems	3
	24	1213565	(006501-	Sleeve, Flange	2
	25	1213673	(006501-	Bar, Flat, Ss 0.12 1.5 X 18.5l, 4/0.5h	1
	26	1037355	(006501-	Screw, Hex, M8 X 1.25 X 35, 9.8, Sems	6
▽		9013366	(006501-	Latch Kit, Door, Access, Ci [S30]	1
▲	27	04706	(006784-	Knob, Tee, 0.38- 16, 2.5 X 1.0 1.1l, Plstc	1
▲	28	1035660	(006501-	Gasket, Ure, .50, 07.47w, 15.47l, Adh	1
▲	29	21195	(006784-	Screw, Hex, .38- 16 X 0.75, G5	1
▲	30	32492	(006784-	Washer, Flat, 0.38, Std	1
▲	31	1213971	(006501-	Block, Nylon	2
▲	32	09062	(006501-	Screw, Flt, Soc, M6 X 1.00 X 16, 10.9	4
▲	33	1213604	(006501-	Latch, Door	2
▲	34	1020341	(006501-	Screw, Hex, M8 X 1.25 X 20, 9.8, Sems	4
	35	08713	(006501-	Nut, Hex, Lock, M8 X 1.25, NI, Ss	6
	36	30013	(006501-	Washer, Flat, 0.31, Fendr	2
	37	1074155	(006501-	Wire, 10ga, 35.0l, Grn, M8 Ring/M6 Ring	1
	38	09145	(006501-	Screw, Pan, Phl, M6 X 1.00 X 16, 4.8	1
	39	32483	(006501-	Washer, Flat, 0.25, Sae	1
	40	41140	(006501-	Washer, Lock, Int- Ext, 0.25	1
	41	07790	(006501-	Nut, Hex, Flng, M6 X 1.00	1
	42	1210807	(006501-	Wire, Tie [W/.25" Fir Tree Clip]	3
	43	1035684	(006501-	Bolt, Carriage, M8 X 1.25 X 30	6
	44	1047543	(006501- 006783)	Knob, Rnd, 2.38d 0.88l M6 X 1.0, Plstc	1
	45	08708	(006501- 006783)	Nut, Hex, Lock, M6 X 1.00, NI	1
	46	01684	(006501- 006783)	Washer, Flat, 0.27b 0.69d .05, Ss	1

Fig. 34 - Hopper Group, Steel

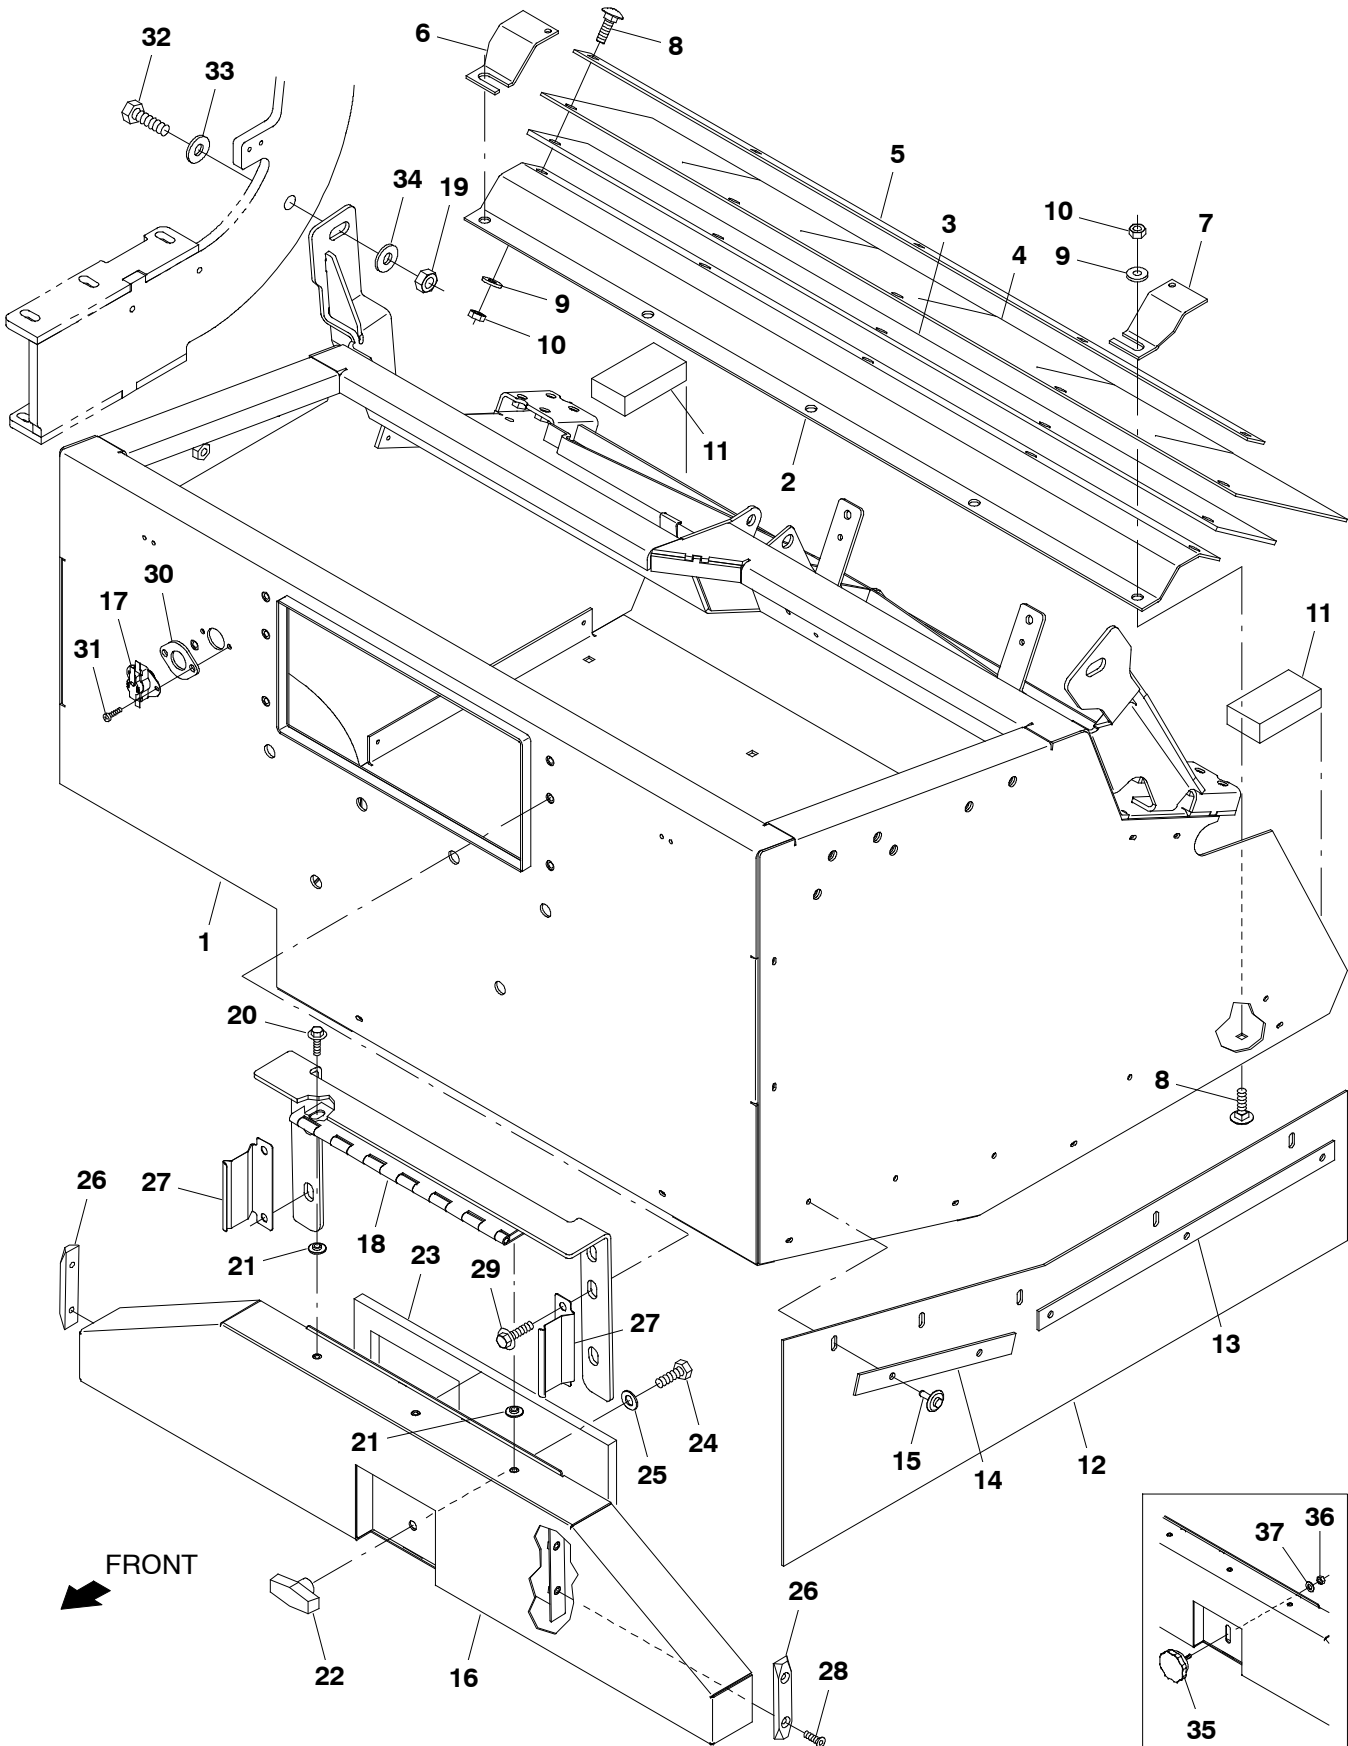


Fig. 34 - Hopper Group, Steel

Ref.	Part No.	Serial Number	Description	Qty.
1	1211585	(006501-	) Hopper Wldt, Stl [S30]	1
2	1212460	(006501-	) Bracket, Sppt, Hppr Seal	1
3	1212516	(006501-	) Skirt, Lip	1
4	1040590	(006501-	) Skirt, Lip, Hppr, Stl	1
5	1026798	(006501-	) Strap, Main, Lip	1
6	1044764	(006501-	) Bracket, Seal, Rh	1
7	1044768	(006501-	) Bracket, Seal, Lh	1
8	1035684	(006501-	) Bolt, Carriage, M8 X 1.25 X 30	10
9	32491	(006501-	) Washer, Flat, 0.31, Std	10
10	08713	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI, Ss	10
11	1049158	(006501-	) Insulation, Acstc, 1.0, 2.0 X 03.8 Adh	2
12	1040276	(006501-	) Skirt, Deflector	1
13	1040400	(006501-	) Retainer, Skirt, .12, 1.0w X 18.0l, Gray	1
14	1040408	(006501-	) Retainer, Skirt, .12, 1.0w X 09.8l, Gray	1
15	72968	(006501-	) Rivet, Plstc, .250d X 0.90	5
16	1213278	(006501-	) Door Wldt, Hppr	1
17	367679	(006501-	) Switch, Thermal, 160deg, Spdt	1
18	1213263	(006501-	) Bracket Wldt, Door, Front	1
19	08711	(006501-	) Nut, Hex, Lock, M12 X 1.75, NI	2
20	1040467	(006501-	) Screw, Hex, M6 X 1.00 X 20, 9.8, Sems	3
21	1213565	(006501-	) Sleeve, Flange	2
▽	9013366	(006501-	) Latch Kit, Door, Access, Ci [S30]	1
▲	22 04706	(006784-	) Knob, Tee, 0.38- 16, 2.5 X 1.0 1.1l, Plstc	1
▲	23 1035660	(006501-	) Gasket, Ure, .50, 07.47w, 15.47l, Adh	1
▲	24 21195	(006784-	) Screw, Hex, .38- 16 X 0.75, G5	1
▲	25 32492	(006784-	) Washer, Flat, 0.38, Std	1
▲	26 1213971	(006501-	) Block, Nylon	2
▲	27 1213604	(006501-	) Latch, Door	2
▲	28 09062	(006501-	) Screw, Flt, Soc, M6 X 1.00 X 16, 10.9	4
▲	29 1020341	(006501-	) Screw, Hex, M8 X 1.25 X 20, 9.8, Sems	4
30	82733	(006501-	) Gasket, Sensor, Thermal	1
31	24265	(006501-	) Screw, Pan, Phl, M4 X 0.70 X 16, Ss	2
32	69972	(006501-	) Screw, Hex, M12 X 1.75 X 40, 10.9	2
33	36328	(006501-	) Washer, Flat, Belleville, .50	2
34	32493	(006501-	) Washer, Flat, 0.50, Std	2
35	1047543	(006501- 006783)	) Knob, Rnd, 2.38d 0.88l M6 X 1.0, Plstc	1
36	08708	(006501- 006783)	) Nut, Hex, Lock, M6 X 1.00, NI	1
37	01684	(006501- 006783)	) Washer, Flat, 0.27b 0.69d .05, Ss	1

Fig. 35 - Hopper Cylinder and Dump Door Group, Plastic

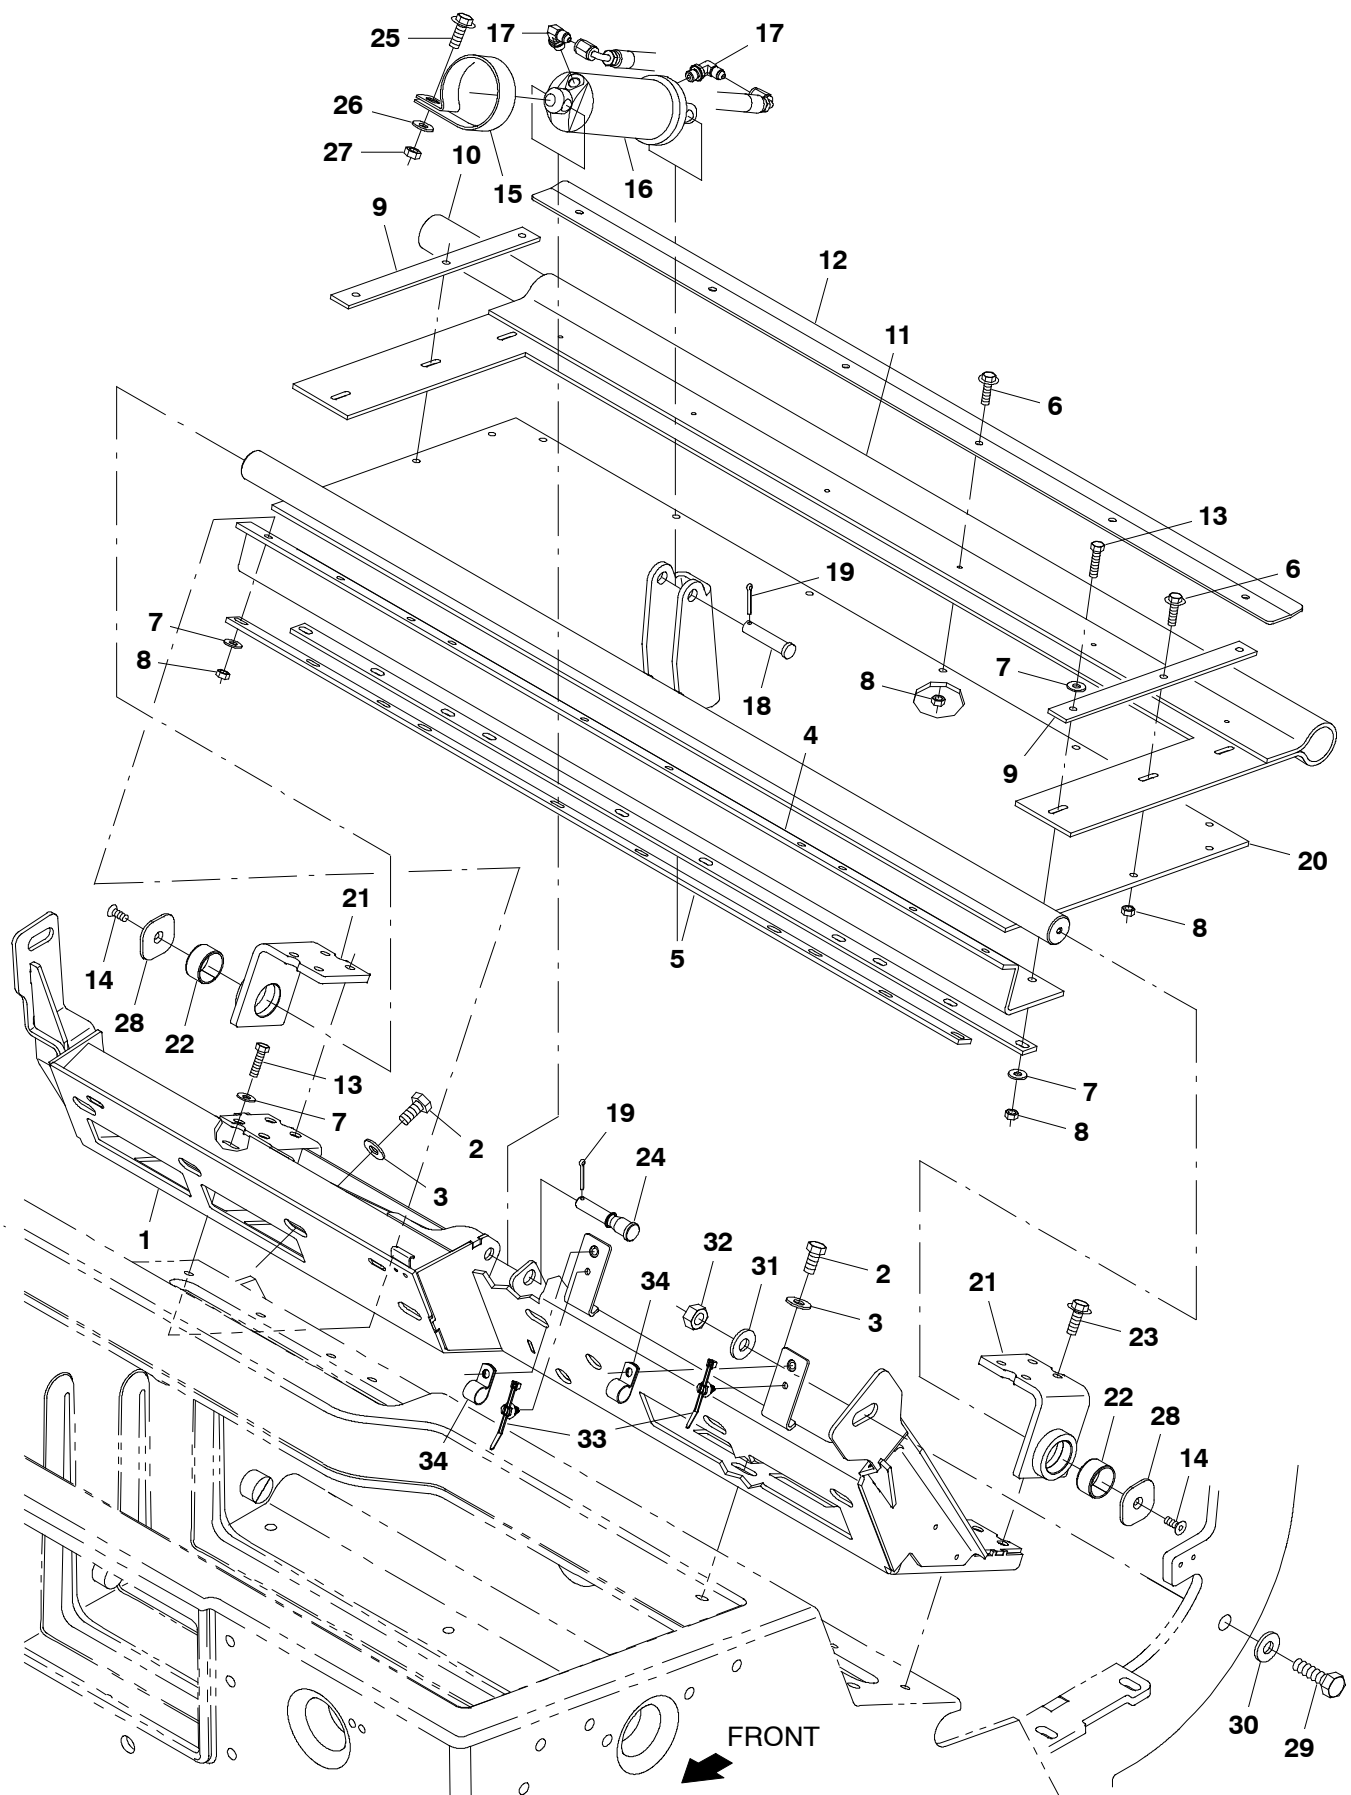


Fig. 35 - Hopper Cylinder and Dump Door Group, Plastic

Ref.	Part No.	Serial Number	Description	Qty.
	1	1211089	(006501-) Bracket Wldt, Mtg, Door, Hppr	1
	2	10959	(006501-) Screw, Hex, M10 X 1.50 X 20, NI, Ss	13
	3	01686	(006501-) Washer, Flat, 0.44b 1.00d .08, Ss	13
▽		9013116	(006501-) Skirt Kit, Door, Hppr, Maint [S30]	1
▲	4	1212570	(006501-) Seal, Wiper, Door	1
▲	5	1212756	(006501-) Retainer, Seal	2
▲	6	1037345	(006501-) Screw, Hex, M6 X 1.00 X 30, 9.8, Sems	16
▲	7	32490	(006501-) Washer, Flat, 0.25, Std	34
▲	8	08712	(006501-) Nut, Hex, Lock, M6 X 1.00, NI, Ss	28
▲	9	1044950	(006501-) Strap, Door, Dump, Side	2
▲	10	1030218	(006501-) Cord, Sponge	1
▲	11	1212440	(006501-) Seal, Door, Dump	1
▲	12	1044419	(006501-) Plate, Retainer, Door, Dump	1
▲	13	06946	(006501-) Screw, Hex, M6 X 1.00 X 35, 8.8	12
	14	09062	(006501-) Screw, Flt, Soc, M6 X 1.00 X 16, 10.9	2
	15	70157	(006501-) Clamp, Cable, Ss, 2.50d X 1.00w, 1hole	1
	16	1038176	(006501-) Cylinder, Hyd, 2.0b 08.0l 04.00strk 2500	1
	17	762427	(006501-) Fitting, Hyd, E90, Fm04/Om04	2
	18	630448	(006501-) Pin, Clevis, 0.50d X 2.25l	1
	19	08236	(006501-) Pin, Cotter, .156 X 1.25	2
	20	1211061	(006501-) Door Wldt, Hppr	1
	21	1211096	(006501-) Bracket Wldt, Door	2
	22	1040759	(006501-) Bearing, Journal- 1.25 I.D. X .75 Lg	2
	23	1037354	(006501-) Screw, Hex, M8 X 1.25 X 30, 9.8, Sems	8
	24	1213549	(006501-) Pin, Clevis (Shoulder)	1
	25	1037355	(006501-) Screw, Hex, M8 X 1.25 X 35, 9.8, Sems	1
	26	32491	(006501-) Washer, Flat, 0.31, Std	1
	27	08713	(006501-) Nut, Hex, Lock, M8 X 1.25, NI, Ss	1
	28	1212373	(006501-) Washer, Retainer, Door, Dump	2
	29	69972	(006501-) Screw, Hex, M12 X 1.75 X 40, 10.9	2
	30	36328	(006501-) Washer, Flat, Belleville, .50	2
	31	32493	(006501-) Washer, Flat, 0.50, Std	2
	32	08711	(006501-) Nut, Hex, Lock, M12 X 1.75, NI	2
	33	1210807	(006501-) Wire, Tie [W/.25" Fir Tree Clip]	2
	34	67767	(006501-) Clamp, Cable, Stl, 0.69d X 0.62w, 1hole	2

Fig. 36 - Hopper Cylinder and Dump Door Group, Steel

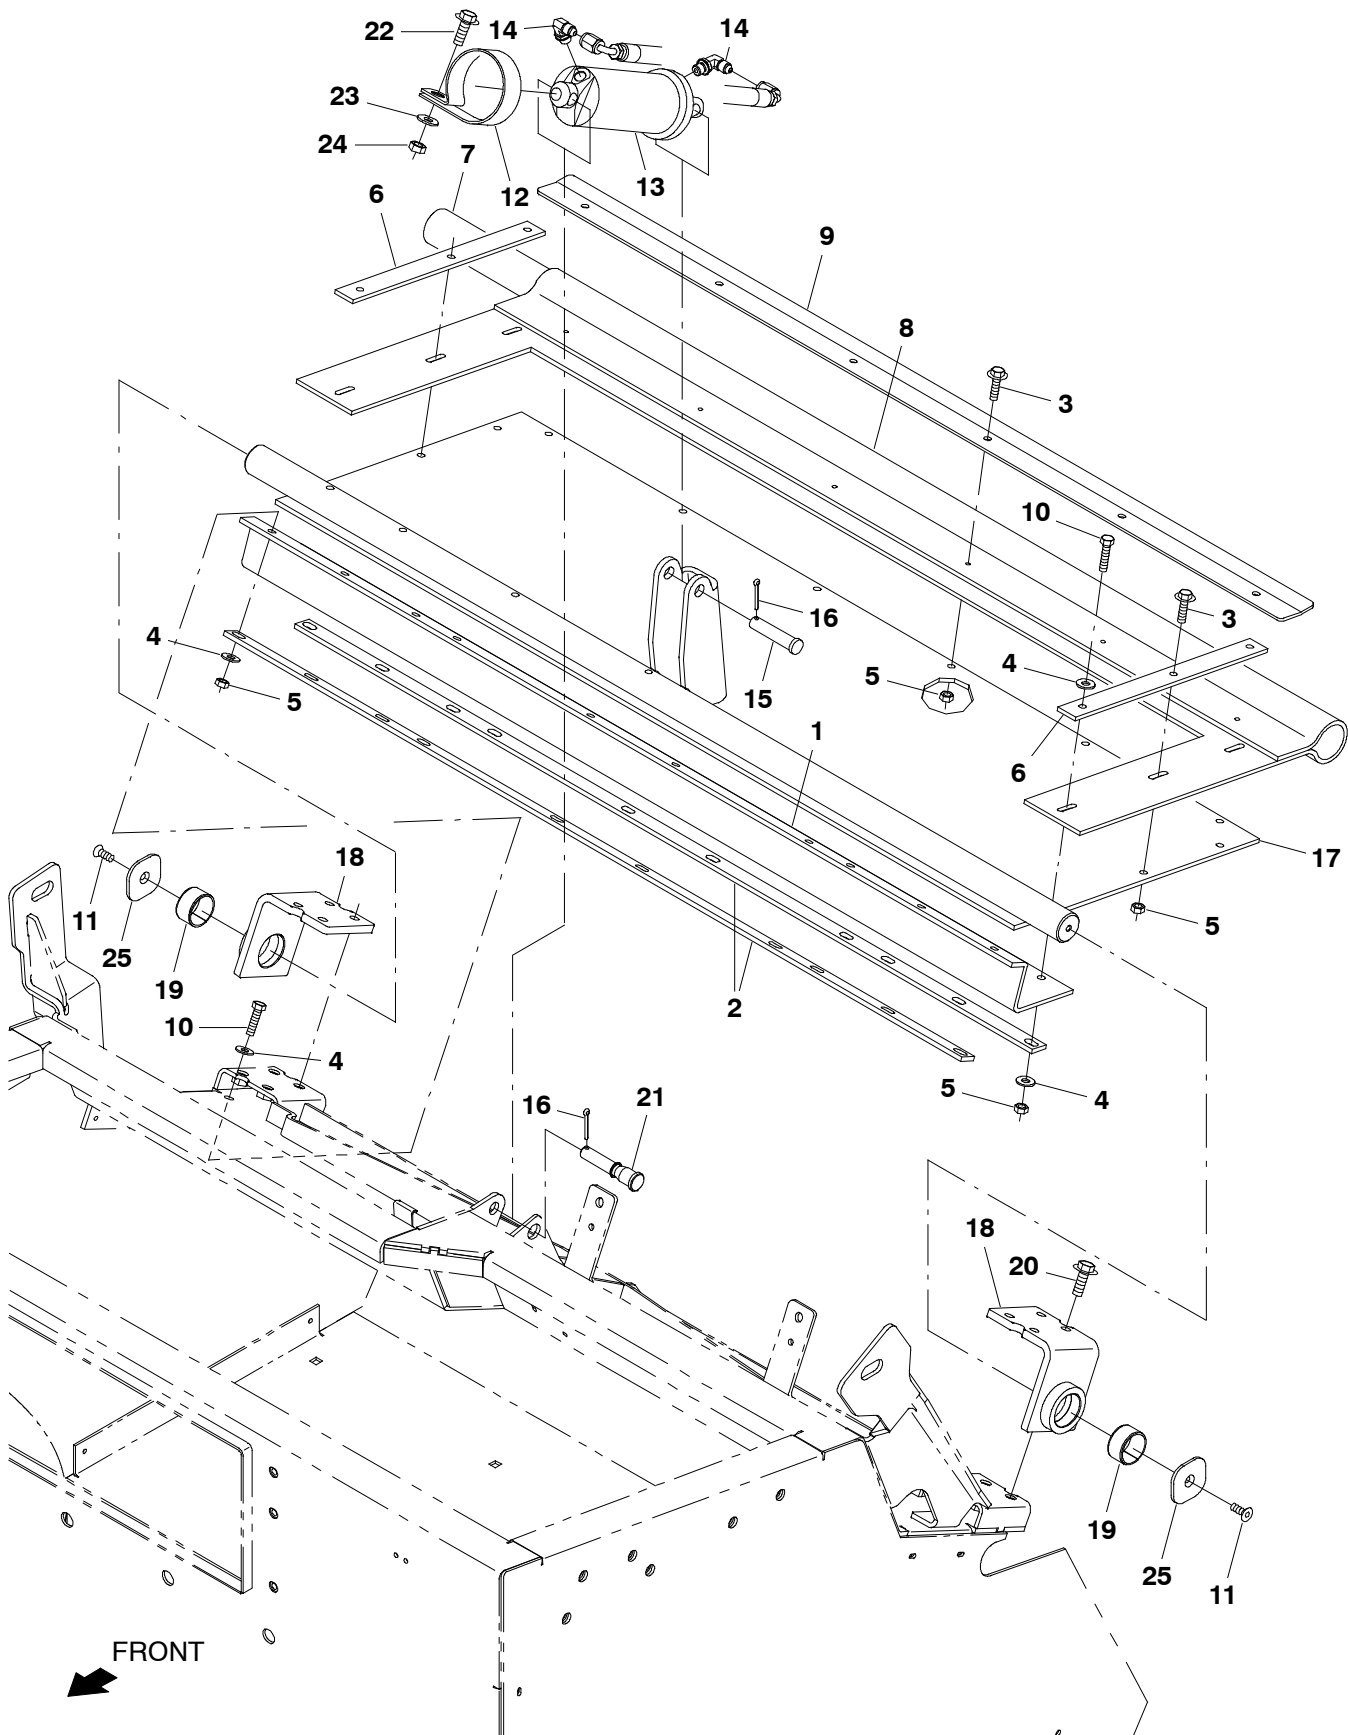


Fig. 36 - Hopper Cylinder and Dump Door Group, Steel

	Ref.	Part No.	Serial Number	Description	Qty.
▽		9013116	(006501-	) Skirt Kit, Door, Hppr, Maint [S30]	1
▲	1	1212570	(006501-	) Seal, Wiper, Door	1
▲	2	1212756	(006501-	) Retainer, Seal	2
▲	3	1037345	(006501-	) Screw, Hex, M6 X 1.00 X 30, 9.8, Sems	16
▲	4	32490	(006501-	) Washer, Flat, 0.25, Std	34
▲	5	08712	(006501-	) Nut, Hex, Lock, M6 X 1.00, NI, Ss	28
▲	6	1044950	(006501-	) Strap, Door, Dump, Side	2
▲	7	1030218	(006501-	) Cord, Sponge	1
▲	8	1212440	(006501-	) Seal, Door, Dump	1
▲	9	1044419	(006501-	) Plate, Retainer, Door, Dump	1
▲	10	06946	(006501-	) Screw, Hex, M6 X 1.00 X 35, 8.8	12
	11	09062	(006501-	) Screw, Flt, Soc, M6 X 1.00 X 16, 10.9	2
	12	70157	(006501-	) Clamp, Cable, Ss, 2.50d X 1.00w, 1hole	1
	13	1038176	(006501-	) Cylinder, Hyd, 2.0b 08.0l 04.00strk 2500	1
	14	762427	(006501-	) Fitting, Hyd, E90, Fm04/Om04	2
	15	630448	(006501-	) Pin, Clevis, 0.50d X 2.25l	1
	16	08236	(006501-	) Pin, Cotter, .156 X 1.25	2
	17	1211061	(006501-	) Door Wldt, Hppr	1
	18	1211096	(006501-	) Bracket Wldt, Door	2
	19	1040759	(006501-	) Bearing, Journal- 1.25 I.D. X .75 Lg	2
	20	1037354	(006501-	) Screw, Hex, M8 X 1.25 X 30, 9.8, Sems	8
	21	1213549	(006501-	) Pin, Clevis (Shoulder)	1
	22	1037355	(006501-	) Screw, Hex, M8 X 1.25 X 35, 9.8, Sems	1
	23	32491	(006501-	) Washer, Flat, 0.31, Std	1
	24	08713	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI, Ss	1
	25	1212373	(006501-	) Washer, Retainer, Door, Dump	2

Fig. 37 - Hopper Cover Group

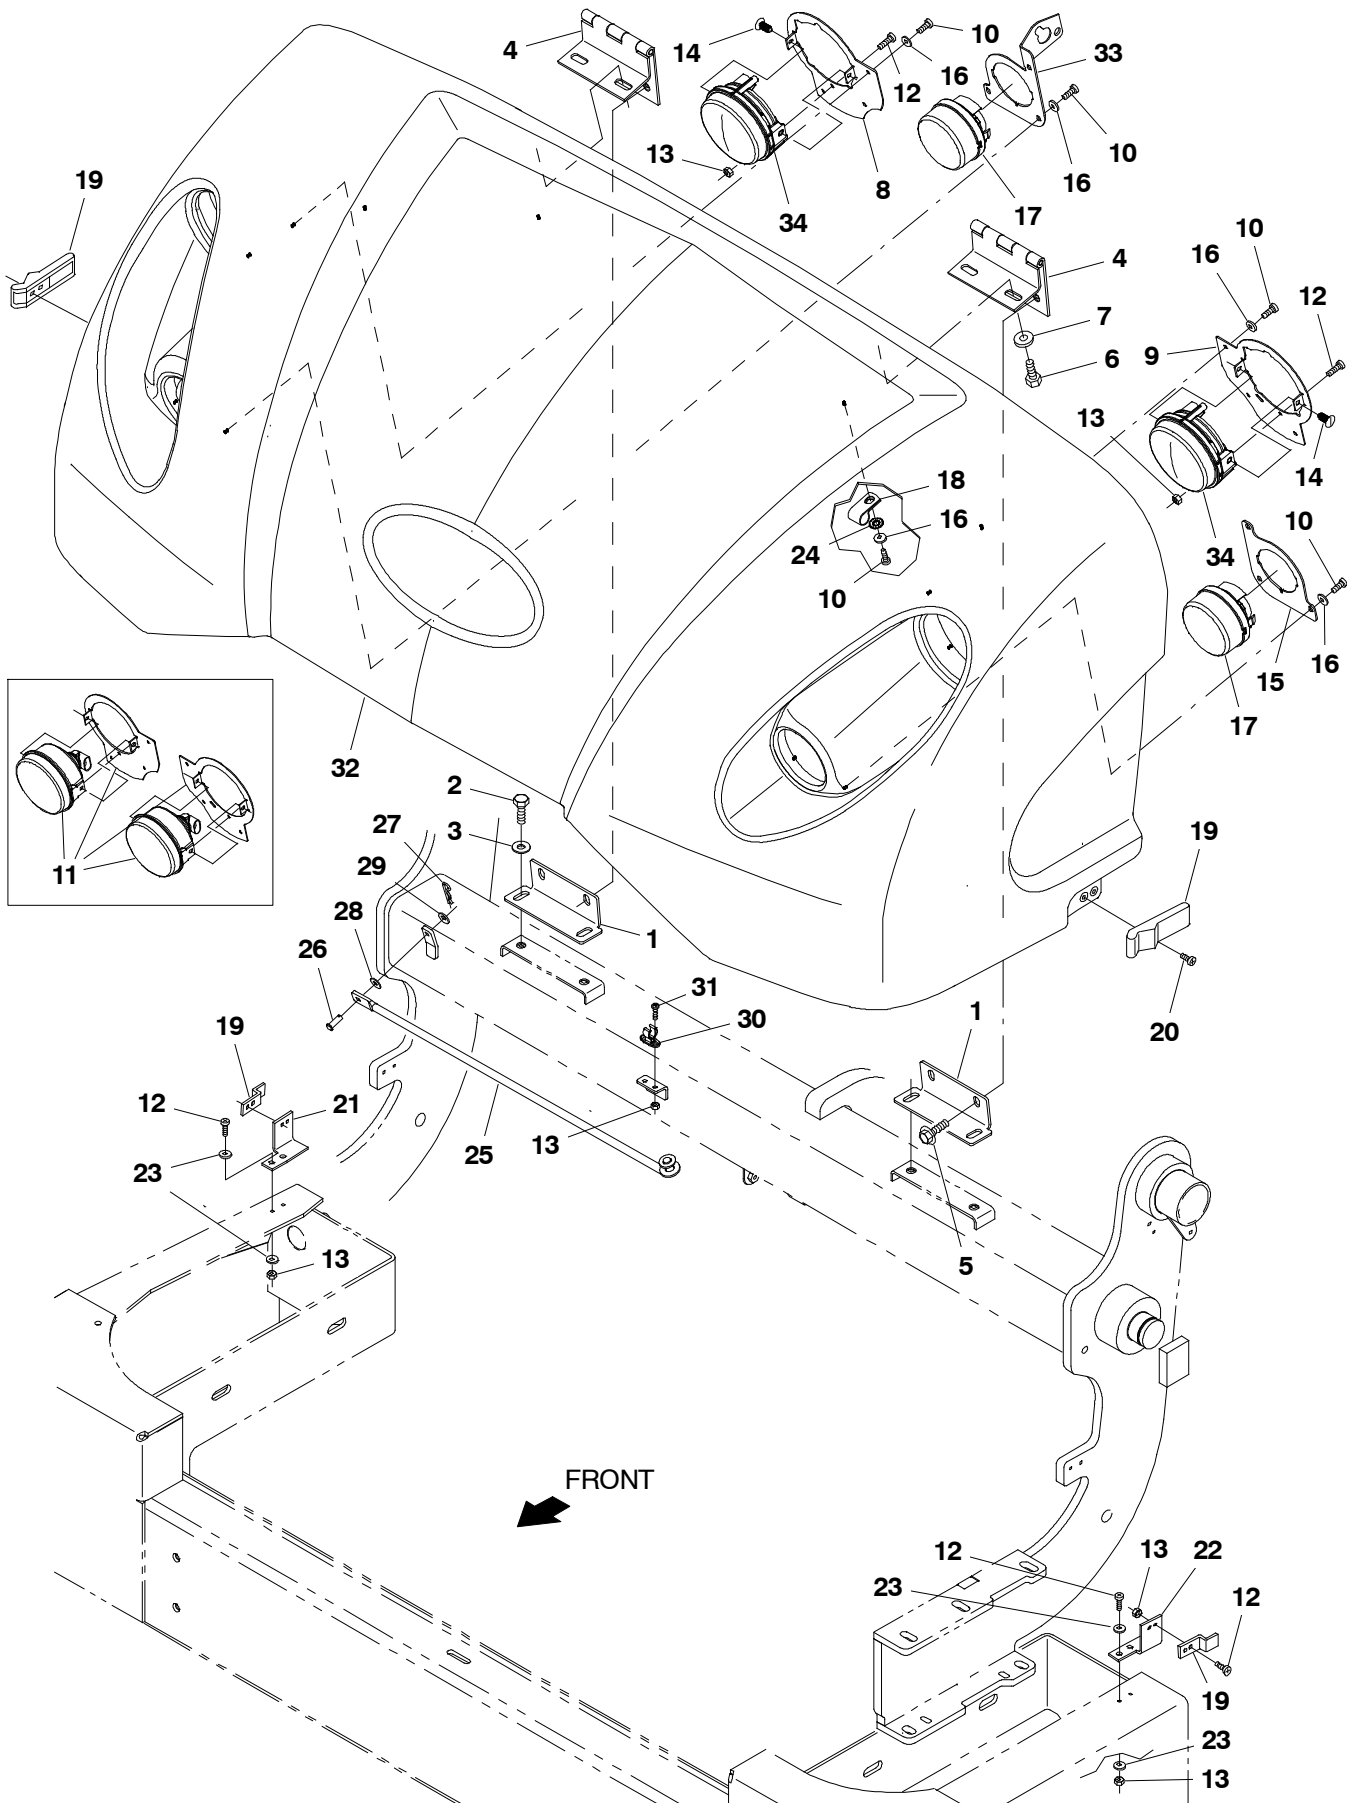


Fig. 37 - Hopper Cover Group

Ref.	Part No.	Serial Number	Description	Qty.
1	1211012	(006501-	) Angle, Mtg, Cover, Hppr	2
2	09740	(006501-	) Screw, Hex, M8 X 1.25 X 20, Ss	4
3	01685	(006501-	) Washer, Flat, 0.38b 0.88d .08, Ss	4
4	1211024	(006501-	) Hinge Wldt, Mtg, Cover, Hppr [S30]	2
5	1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	4
6	15675	(006501-	) Screw, Hex, M8 X 1.25 X 16, Ss	4
7	32491	(006501-	) Washer, Flat, 0.31, Std	4
8	1242881	(006948-	) Plate, Ring, Headlight, Rh	1
9	1242555	(006948-	) Plate, Ring, Headlight, Lh	1
10	360943	(006501-	) Screw, Pan, 12- 16 X 0.75, F/ Plstc	17
▽	11	9018569	(006501- 006947) Headlight Kit, Led, Replmt [S30]	1
▲		1060413	(006501- 006947) Lamp, 12vdc, 37.5watt, Halogen	1
12	06927	(006501-	) Screw, Pan, Phl, M4 X 0.70 X 16, 4.8	10
13	02850	(006501-	) Nut, Hex, Lock, M4 X 0.70, NI	12
14	1066063	(006501-	) Plug, Hole, Rnd, 0.25h 0.43l, Brb, Nyl	4
15	1057934	(006501-	) Plate, Ring, Light	1
16	19066	(006501-	) Washer, Flat, 10	17
17	1029238	(006501-	) Lens Assy, W/ Reflector	2
18	82829	(006501-	) Clamp, Cable, Stl, 0.63d X 0.75w, 1hole	4
19	49800	(006501-	) Latch	2
20	49697	(006501-	) Screw, Pan, Phl, M4 X 0.70 X 10, Ss	4
21	1039971	(006501-	) Bracket, Latch, Rh	1
22	1039999	(006501-	) Bracket, Latch, Lh	1
23	19065	(006501-	) Washer, Flat, 08	8
24	41139	(006501-	) Washer, Lock, Int- ext, 10	4
25	1212389	(006501-	) Rod Wldt, Prop, Cover, Hppr	1
26	28296	(006501-	) Pin, Clevis, 0.25d X 0.50l	1
27	44906	(006501-	) Pin, Cotter, Hair, 0.38d .093 Wir	1
28	43454	(006501-	) Washer, Flat, 0.34b 0.69d .06, Nyl	1
29	32483	(006501-	) Washer, Flat, 0.25, Sae	1
30	1061002	(006501-	) Clip, Grip, Rod, 0.49- 0.63, Blk Plstc.	1
31	06927	(006501-	) Screw, Pan, Phl, M4 X 0.70 X 16, 4.8	2
32	1056815	(006501-	) Cover, Hppr, Rm- Cptl, Trimmed	1
33	1215646	(006501-	) Plate, Ring, Light	1
34	1242544	(006948-	) Headlight, Led, Rnd [S20/S30 lc]	2

Fig. 38 - Hopper Lift Arms and Bumper Group

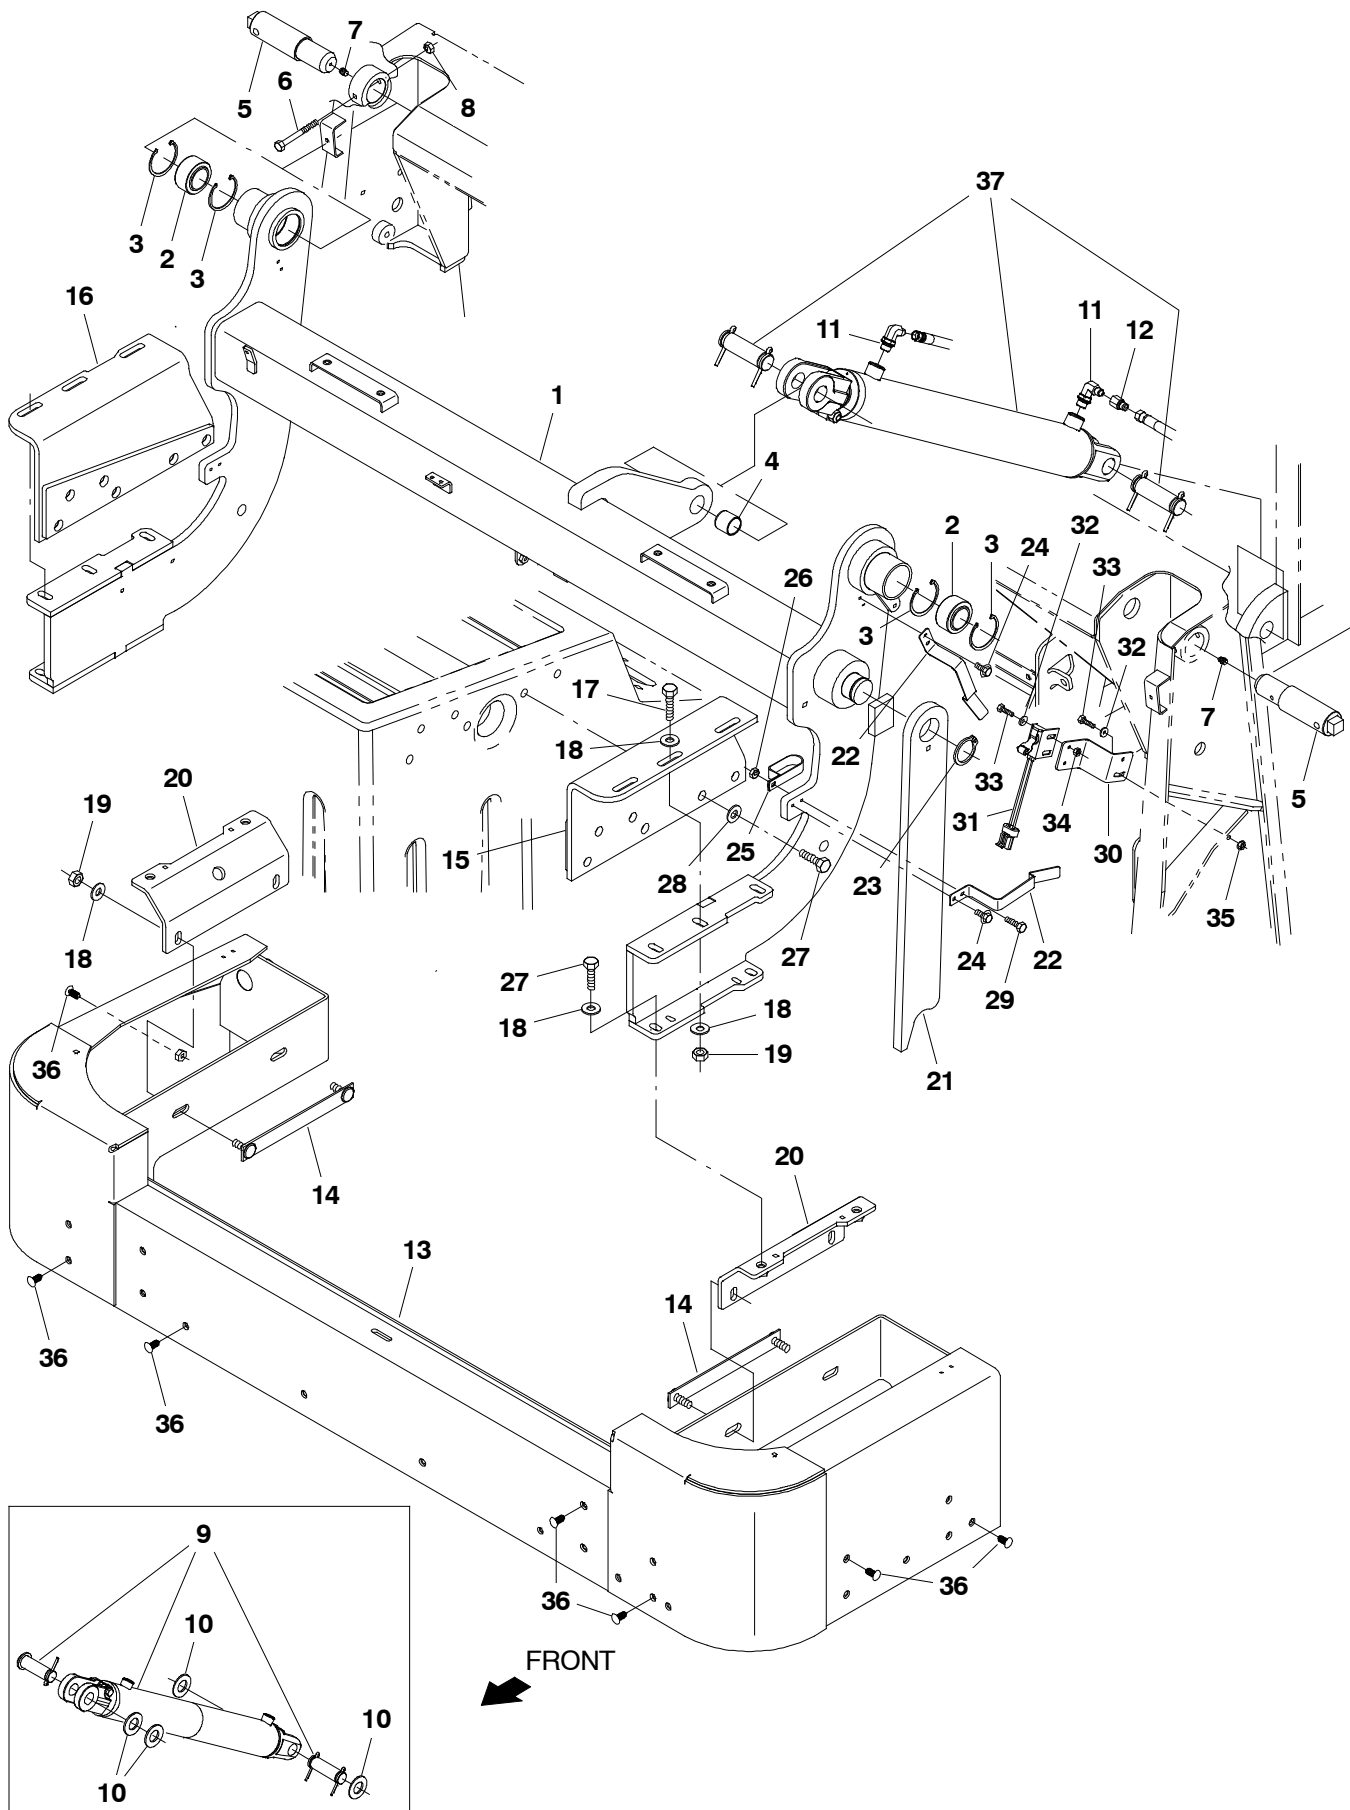


Fig. 38 - Hopper Lift Arms and Bumper Group

Ref.	Part No.	Serial Number	Description	Qty.	
1	1210785	(006501-	) Arm Wldt, Hppr, Rear Dump	1	
2	42120- 1	(006501-	) Bearing, Self Align, 1.25b 2.00d	2	
3	59542	(006501-	) Ring, Retaining, Int, 2.00d	4	
4	35529	(006501-	) Bushing, Sleeve, 1.00b 1.13d 0.99l, Fgl	1	
5	1212820	(006501-	) Pin, Lift, Hppr	2	
6	39279	(006501-	) Screw, Hex, M8 X 1.25 X 70, 8.8	2	
7	07259	(006501-	) Fitting, Grease, Str Pm04 .47l	2	
8	08709	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI	2	
▽	9	1038915	(006501- 006823) Cylinder, Hyd, 2.5b 28.6l 18.62strk 3000	1	
▲		373702	(006501- 006823) Seal Kit	1	
10	32598	(006501- 006823)	Washer, Flat, 1.02b 1.75d .12, Stl	4	
11	762425	(006501-	) Fitting, Hyd, E90, Fm04/Om06	2	
12	1067059	(006501-	) Fitting, Hyd, Rst, Fm04/Of04, .047	1	
13	1212410	(006501-	) Bumper Wldt, Front	1	
14	1210948	(006501-	) Plate Wldt, Mtg, Bumper	2	
15	1210931	(006501-	) Bracket Wldt, Mtg, Hppr, Rh	1	
16	1210940	(006501-	) Bracket Wldt, Mtg, Hppr, Lh	1	
17	39285	(006501-	) Screw, Hex, M10 X 1.50 X 40, 8.8	6	
18	01686	(006501-	) Washer, Flat, 0.44b 1.00d .08, Ss	16	
19	41430	(006501-	) Nut, Hex, Lock, M10 X 1.5, NI	10	
20	1210954	(006501-	) Bracket Wldt, Mtg, Bumper	2	
21	9004527	(006501-	) Arm, Safety, Hppr, W/ Label, Replmt	1	
22	1210813	(006501-	) Clip, Spring, Prop Arm	2	
23	63296	(006501-	) Plate, Brake, Pedal	1	
24	222158	(006501-	) Screw, Hex, M6 X 1.00 X 10, Fmg	4	
25	67366	(006501-	) Clamp, Cable, Stl, 1.0x2.0x0.62w, 1hole	1	
26	08708	(006501-	) Nut, Hex, Lock, M6 X 1.00, NI	1	
27	39284	(006501-	) Screw, Hex, M10 X 1.50 X 35, 8.8	16	
28	32492	(006501-	) Washer, Flat, 0.38, Std	12	
29	06944	(006501-	) Screw, Hex, M6 X 1.00 X 25, 8.8	1	
30	1212087	(006501-	) Bracket, Mtg, Switch	1	
31	367404	(006501-	) Switch, Snap, 15a No, Rlr	1	
32	19066	(006501-	) Washer, Flat, 0.25b 0.56d .05, Pl, 10	4	
33	09252	(006501-	) Screw, Hex, M5 X 0.80 X 20, 8.8	4	
34	06549	(006501-	) Nut, Hex, Lock, M5 X 0.80, NI	4	
35	07789	(006501-	) Nut, Hex, Fing, M5 X 0.80	2	
36	21168	(006501-	) Plug, Hole, Rnd, 0.25h 0.8l, Brb, Nyl	26	
▽	37	1048538	(006824-	) Cylinder, Hyd, 2.5b 28.6l 18.62strk 3000	1
▲		9011419	(006824-	) Seal Kit, Cyl, Hyd	1

Fig. 39 - Hopper Counter Weight Group, Steel

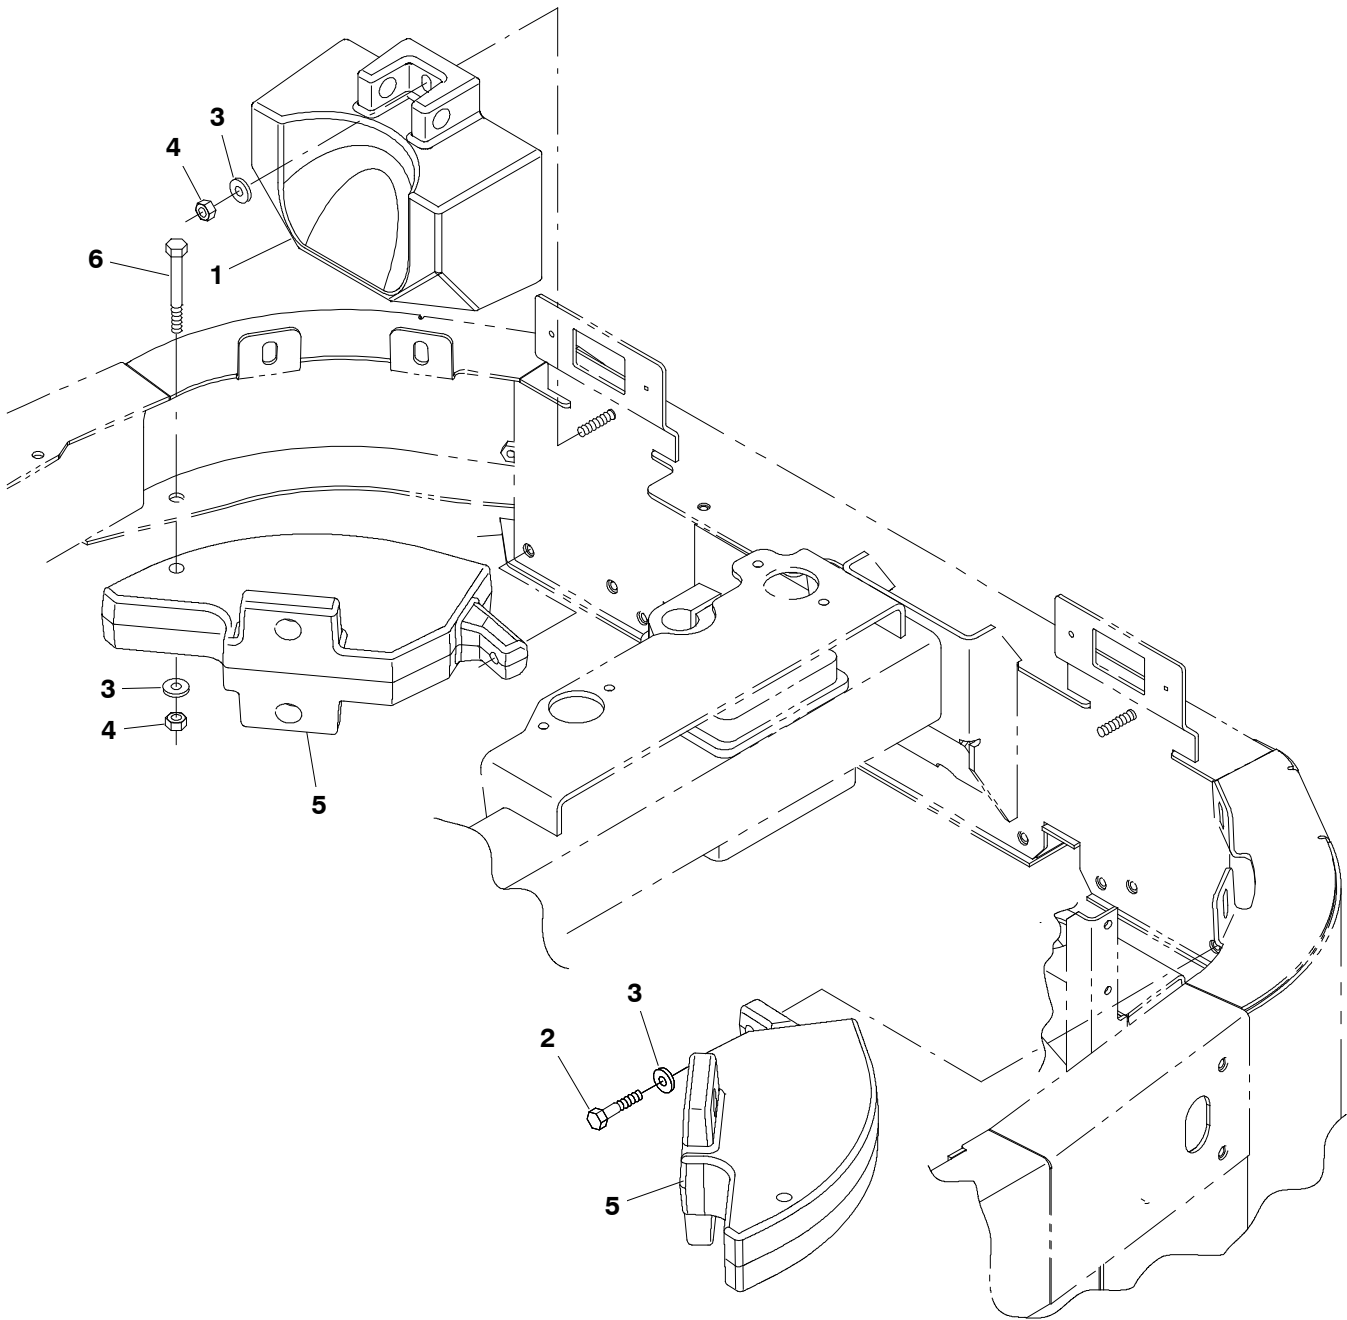


Fig. 39 - Hopper Counter Weight Group, Steel

Ref.	Part No.	Serial Number	Description	Qty.
1	1031503	(006501-	) Weight, Counter, Casting, 72.8lb	1
2	16930	(006501-	) Screw, Hex, M10 X 1.50 X 50, 8.8	3
3	32493	(006501-	) Washer, Flat, 0.50, Std	6
4	08714	(006501-	) Nut, Hex, Lock, M10 X 1.5, NI, Ss	3
5	1034978	(006501-	) Weight, Counter, Casting, 52.8lb	2
6	03193	(006501-	) Screw, Hex, M10 X 1.50 X 90, 8.8	2

Fig. 40 - Hopper Pre-Filter Group

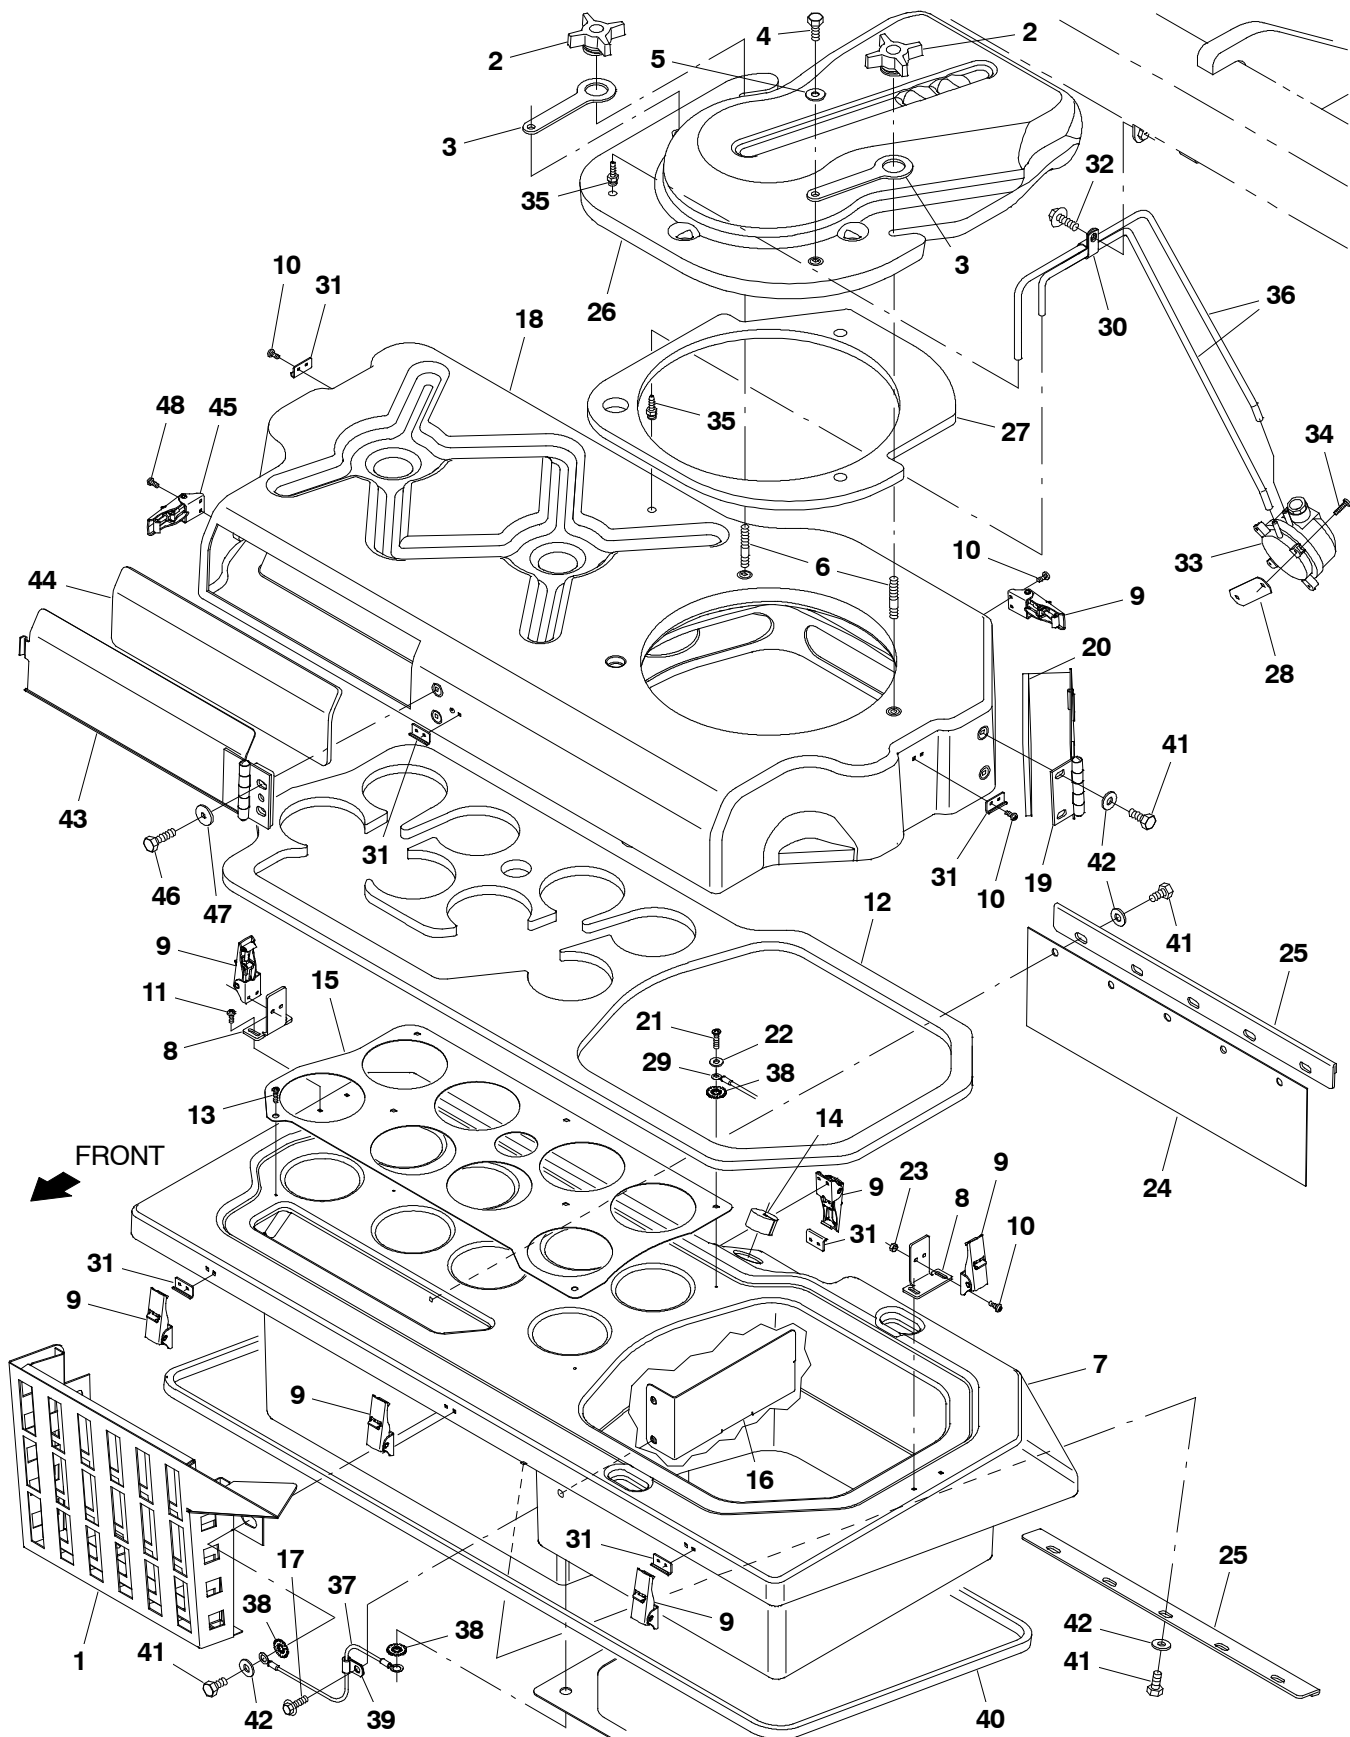


Fig. 40 - Hopper Pre-Filter Group

Ref.	Part No.	Serial Number	Description	Qty.
	1	1211263	(006501-) Panel Wldt, Perma Filter	1
▽	9013364	(006501-)	Strap Kit, Knob, Fltr Box [S30]	1
▲	2	1048335	(006501-) Knob, Star, 2.75d 4ear 1.1l M8x1.25	2
▲	3	1048353	(006501-) Strap, Rbr	2
▲	4	15675	(006501-) Screw, Hex, M8 X 1.25 X 16, Ss	2
▲	5	01685	(006501-) Washer, Flat, 0.38b 0.88d .08, Ss	2
▲	6	1049860	(006501-) Stud, M8 X 1.25 [55.0]	2
	7	1210746	(006501-) Box, Lower, Cyclone, Trimmed	1
	8	1213221	(006501-) Bracket, Mtg, Cyclonics	2
	9	384418	(006501-) Latch, Door [Southco 91- 562- 07]	7
	10	06925	(006501-) Screw, Pan, Phl, M4 X 0.70 X 6, 4.8	16
	11	24265	(006501-) Screw, Pan, Phl, M4 X 0.70 X 16, Ss	4
	12	1210796	(006501-) Gasket, Tray, Cyclonic	1
	13	360943	(006501-) Screw, Pan, Phl, 10- 14 X 0.75, F/ Plstc	7
	14	1049982	(006501-) Seal, Foam	1
	15	1213817	(006501-) Plate, Grounding, Cyclone	1
	16	1213825	(006501-) Bracket Wldt	1
	17	1040467	(006501-) Screw, Hex, M6 X 1.00 X 20, 9.8, Sems	3
	18	1211007	(006501-) Box, Pre- Filter, Upper	1
	19	1212149	(006501-) Door Wldt, Cleanout	1
	20	1212512	(006501-) Seal, Cleanout Door	1
	21	09200	(006501-) Screw, Pan, Phl, M5 X 0.80 X 12, Ss	1
	22	01683	(006501-) Washer, Flat, 10, Ss	1
	23	02850	(006501-) Nut, Hex, Lock, M4 X 0.70, NI	4
	24	1211566	(006501-) Seal Assy, Door, Cyclonics	1
	25	1211554	(006501-) Retainer, Seal, Door	2
	26	1210996	(006501-) Cover, Filter, Trimmed	1
	27	1213191	(006501-) Gasket, Cover	1
	28	1213382	(006501-) Plate, Sensor, Pressure	1
	29	1074155	(006501-) Wire, 10ga, 35.0l, Grn, M8 Ring/M6 Ring	1
	30	67767	(006501-) Clamp, Cable, Stl, 0.69d X 0.62w, 1hole	1
	31	384419	(006501-) Bracket, Latch, Keeper [Southco]	6
	32	1037346	(006501-) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	1
	33	9009247	(006501-) Switch Kit, Press, Replmt[S30]	1
	34	06927	(006501-) Screw, Pan, Phl, M4 X 0.70 X 16, 4.8	2
	35	40607	(006501-) Fitting, Brs, Str, Bm03/Pm02	2
	36	1031576	(006501-) Hose, Afmkt, Vacuum, 0.16id, 08ft	1
	37	1074156	(006501-) Wire, 10ga, 15.0l, Grn, M8 Ring/M8 Ring	1
	38	41140	(006501-) Washer, Lock, Int- Ext, 0.25	3
	39	46236	(006501-) Clamp, Cable, Stl, 0.25d X 0.56w, 1hole	1
	40	1211682	(006501-) Seal, Hopper, Box, Lower	1
	41	15675	(006501-) Screw, Hex, M8 X 1.25 X 16, Ss	14
	42	01685	(006501-) Washer, Flat, 0.38b 0.88d .08, Ss	14
	43	1233504	(008826-) Door Wldt, Cleanout [S30]	1
	44	1236153	(008826-) Seal, Cleanout Door	1
	45	384418	(008826-) Latch, Door [Southco 91- 562- 07]	1
	46	1037355	(008826-) Screw, Hex, M8 X 1.25 X 35, 9.8, Sems	2
	47	32491	(008826-) Washer, Flat, 0.31, Std	2
	48	24265	(008826-) Screw, Pan, Phl, M4 X 0.70 X 16, Ss	2

Fig. 41 - Hopper Vacuum Fan Group

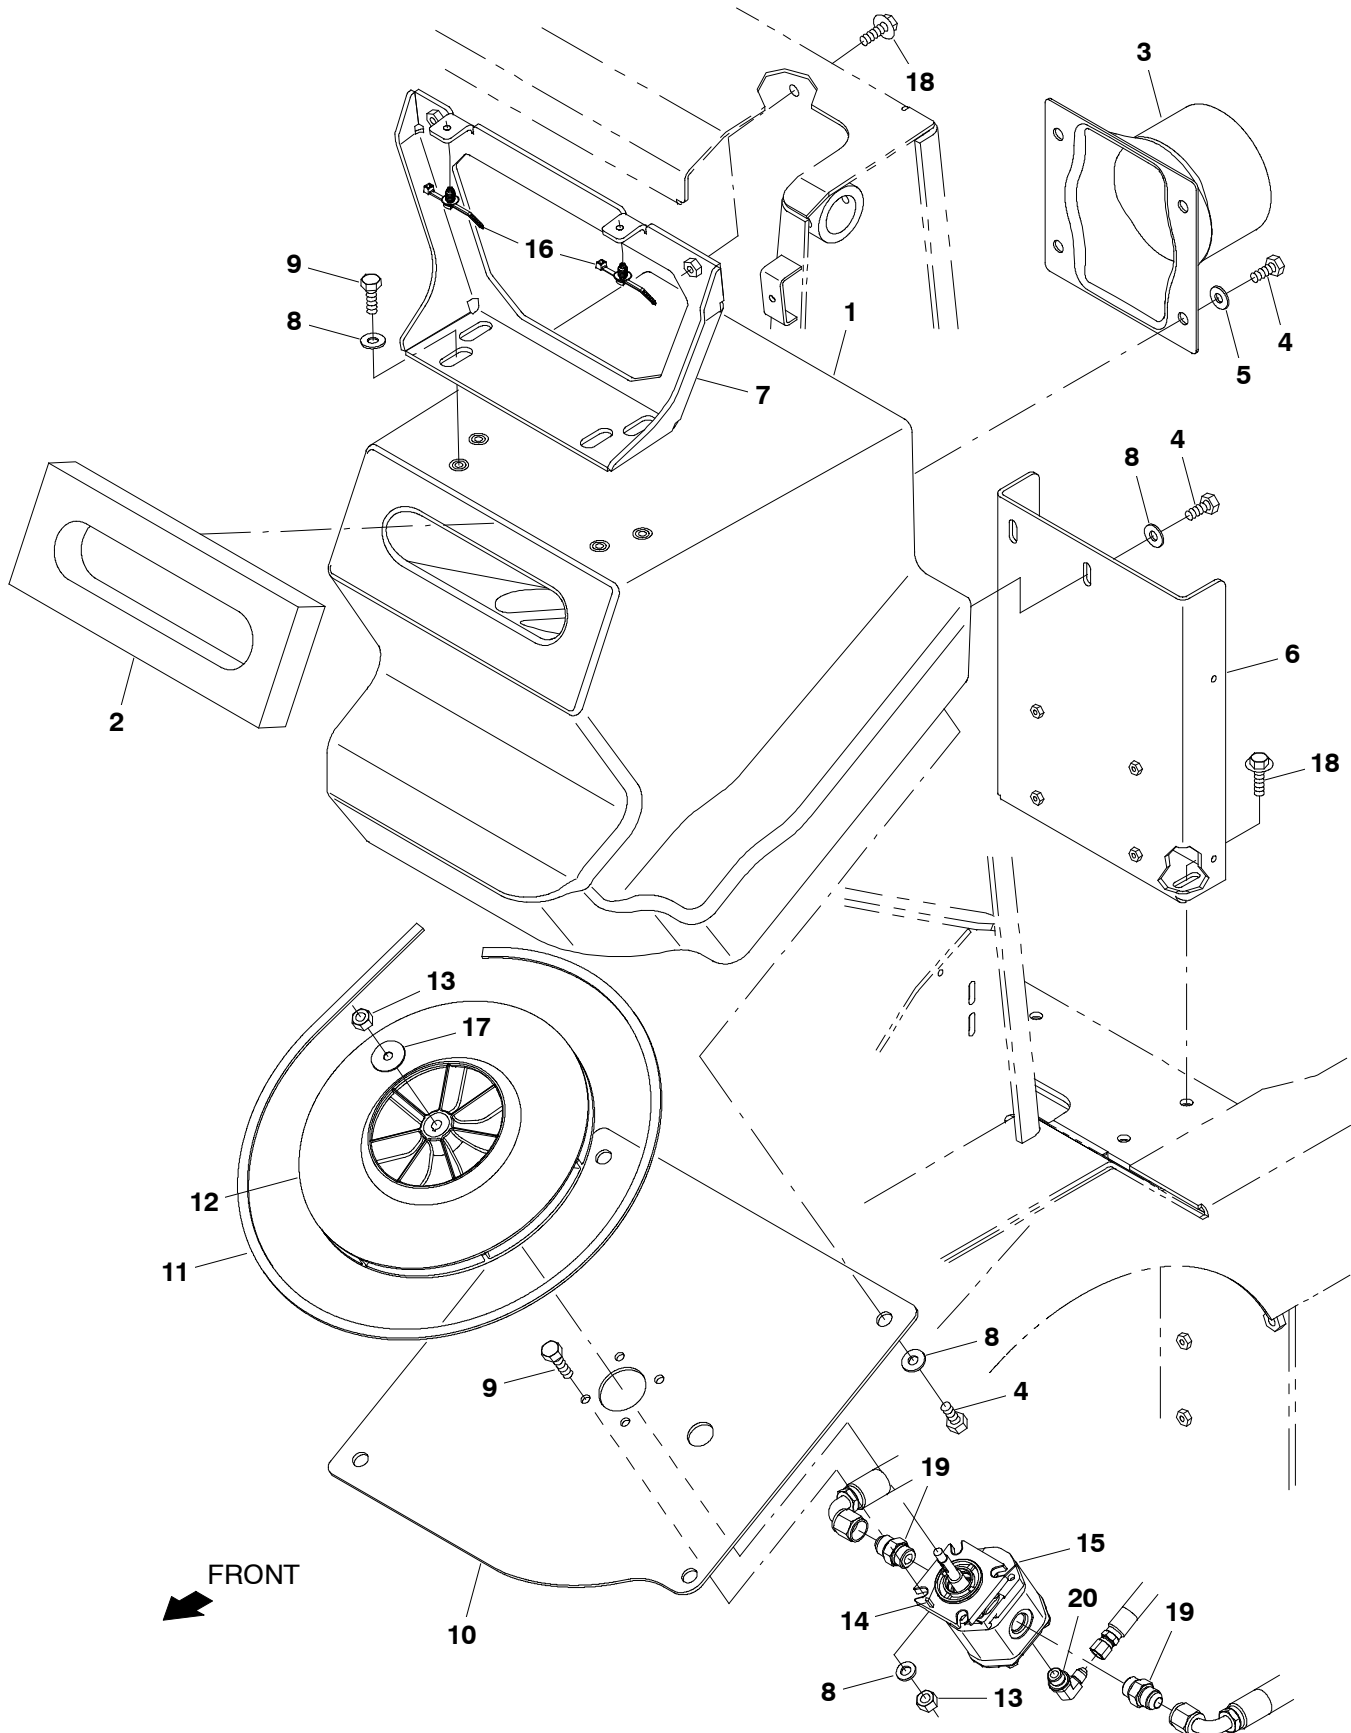


Fig. 41 - Hopper Vacuum Fan Group

Ref.	Part No.	Serial Number	Description	Qty.
1	1211570	(006501-	) Housing, Fan, Rm- Cphg	1
2	1212709	(006501-	) Gasket, Vacuum	1
3	1031122	(006501-	) Duct, Outlet, Vacuum	1
4	16931	(006501-	) Screw, Hex, M8 X 1.25 X 20, 8.8	8
5	1017218	(006501-	) Washer, Flat, 0.32b 1.00d .12, Ss	4
6	1215033	(006501-	) Bracket Wldt, Mtg, Fan	1
7	1212592	(006501-	) Bracket Wldt, Mtg, Fan	1
8	32491	(006501-	) Washer, Flat, 0.31, Std	12
9	39277	(006501-	) Screw, Hex, M8 X 1.25 X 25, 8.8	8
10	1211691	(006501-	) Plate, Fan, [Phoenix]	1
11	1046426	(006501-	) Seal, Afmkt, Rbr, Clsd, Adh, 08ft	1
12	1039127	(006501-	) Impeller Assy, Vacfan [Coyote]	1
13	08709	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI	5
14	00960	(006501-	) Key, Sq, 0.12 X 0.12, 0.50l	1
15	1039846	(006501-	) Motor, Hyd, Gear, Ext 0.28 Rh 3000	1
16	1210807	(006501-	) Wire, Tie [W/.25" Fir Tree Clip]	2
17	30013	(006501-	) Washer, Flat, 0.31, Fendr	1
18	1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	4
19	762445	(006501-	) Fitting, Hyd, Str, Fm08/Om08	2
20	762425	(006501-	) Fitting, Hyd, E90, Fm04/Om06	1

Fig. 42 - Hopper Filter Shaker Group

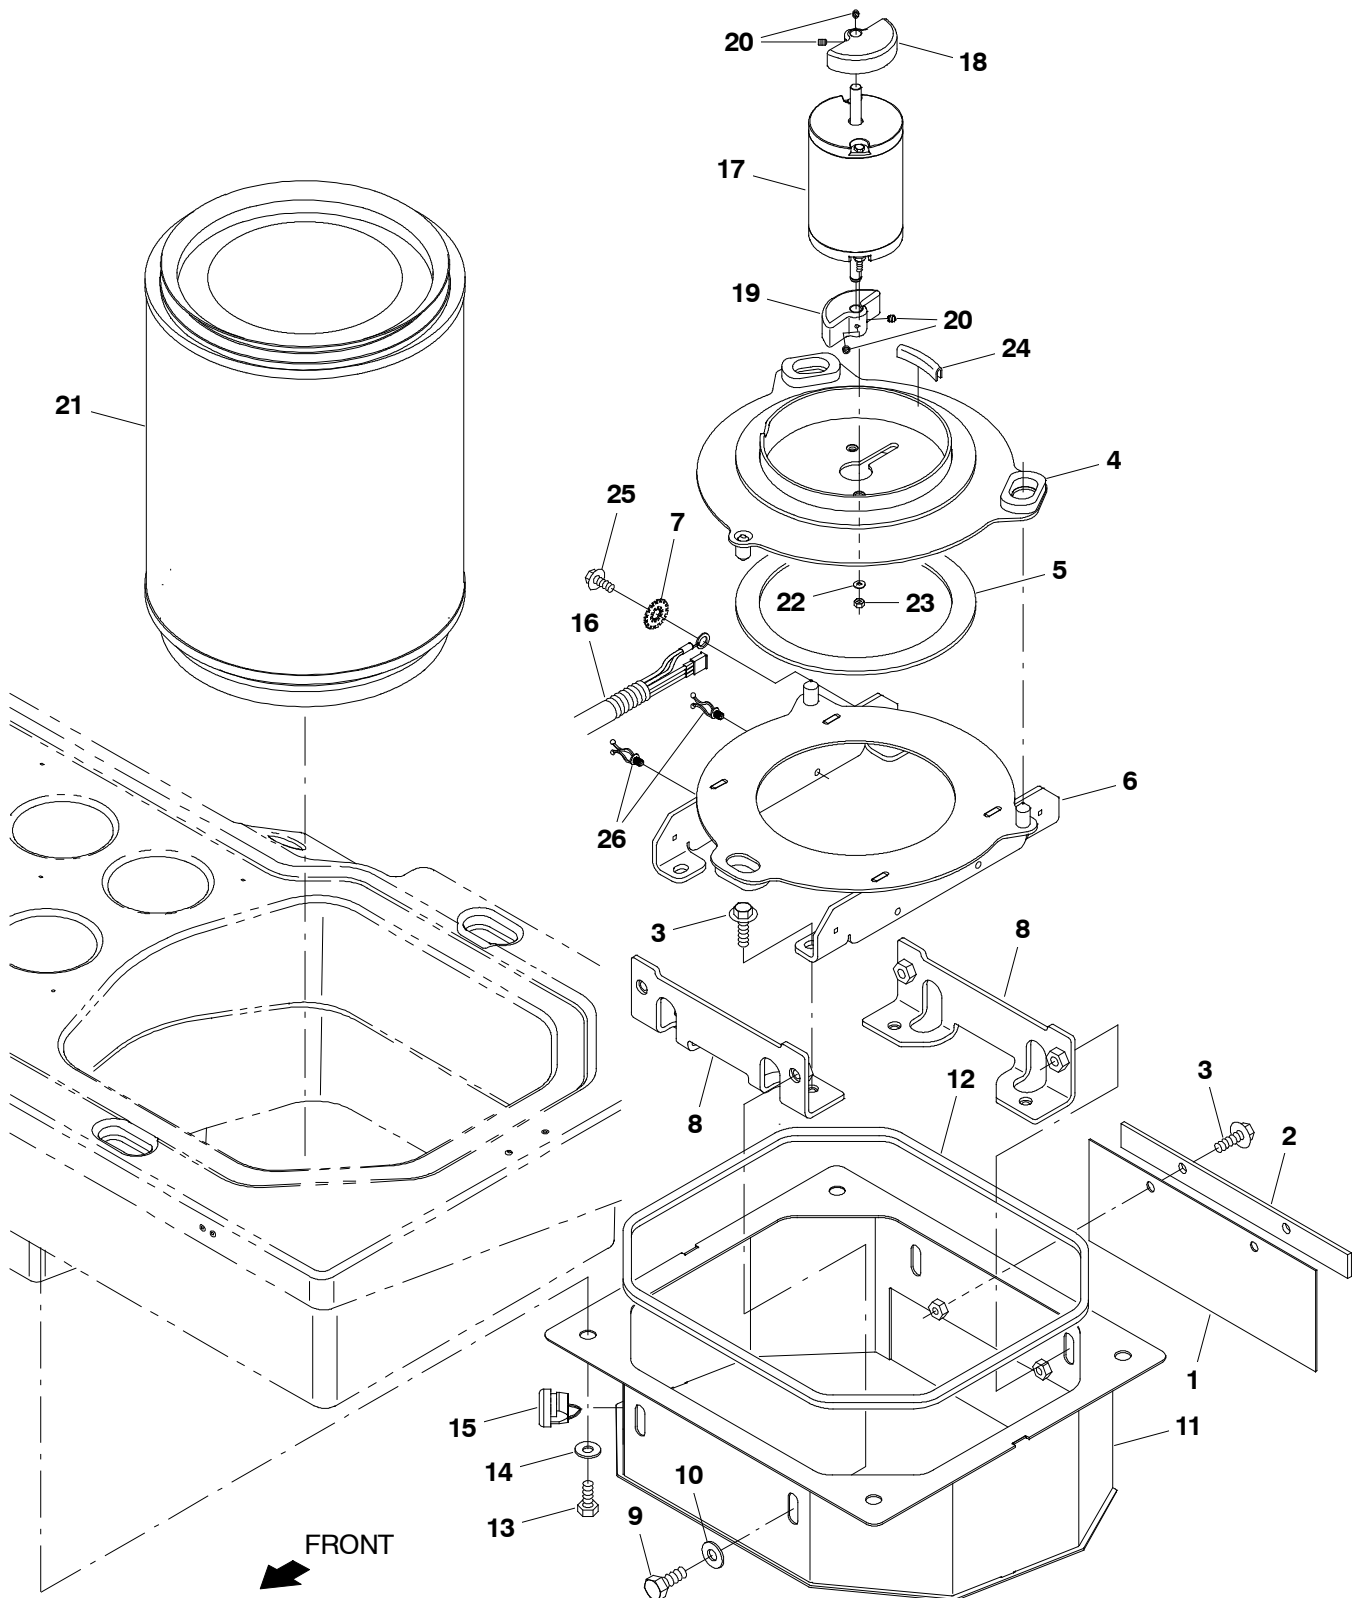


Fig. 42 - Hopper Filter Shaker Group

Ref.	Part No.	Serial Number	Description	Qty.
1	1211378	(006501-	) Seal Assy, Door, Shagr	1
2	1211409	(006501-	) Retainer, Seal, Door	1
3	1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	6
4	1044352	(006501-	) Bracket Wldt, Fltr	1
5	1044351	(006501-	) Spacer, Fltr	1
6	1211379	(006501-	) Bracket Wldt, Shagr, Filter	1
7	41140	(006501-	) Washer, Lock, Int- Ext, 0.25	1
8	1211382	(006501-	) Angle Wldt, Mtg, Shagr	2
9	06961	(006501-	) Screw, Hex, M10 X 1.5	4
10	32492	(006501-	) Washer, Flat, 0.38, Std	4
11	1211353	(006501-	) Tray Wldt, Debris, Filter	1
12	1211685	(006501-	) Seal, Tray, Debris, Shaker	1
13	15675	(006501-	) Screw, Hex, M8 X 1.25 X 16, Ss	4
14	01685	(006501-	) Washer, Flat, 0.38b 0.88d .08, Ss	4
15	1051199	(006501-	) Strainrelief	1
16	1047717	(006501-	) Harness, Shagr, Motor [S20]	1
17	1075327	(006501-	) Motor, Ele, 12vdc 2108rpm 0.09hp 07.0a	1
18	1053291	(006501-	) Weight, Eccentric, Pntd	1
19	1053321	(006501-	) Weight, Eccentric, Pntd	1
20	39322	(006501-	) Screw, Set, Soc, 10- 24 X 0.38, Al	4
21	1045900	(006501-	) Filter, Cyl, 11.09d, 13.31l, 6.724 ld	1
22	19066	(006501-	) Washer, Flat, 0.25b 0.56d .05, Pl, 10	2
23	86618	(006501-	) Nut, Hex, Lock, #10- 32, NI	2
24	50850	(006501-	) Molding, Trim, Pvc, .08- .11 03.2l	1
25	74455	(006501-	) Screw, Hex, M6 X 1.00 X 12, Fmg	1
26	30406	(006501-	) Clip, Keeper	2

Fig. 43 - Side Brush Lift Group, S30

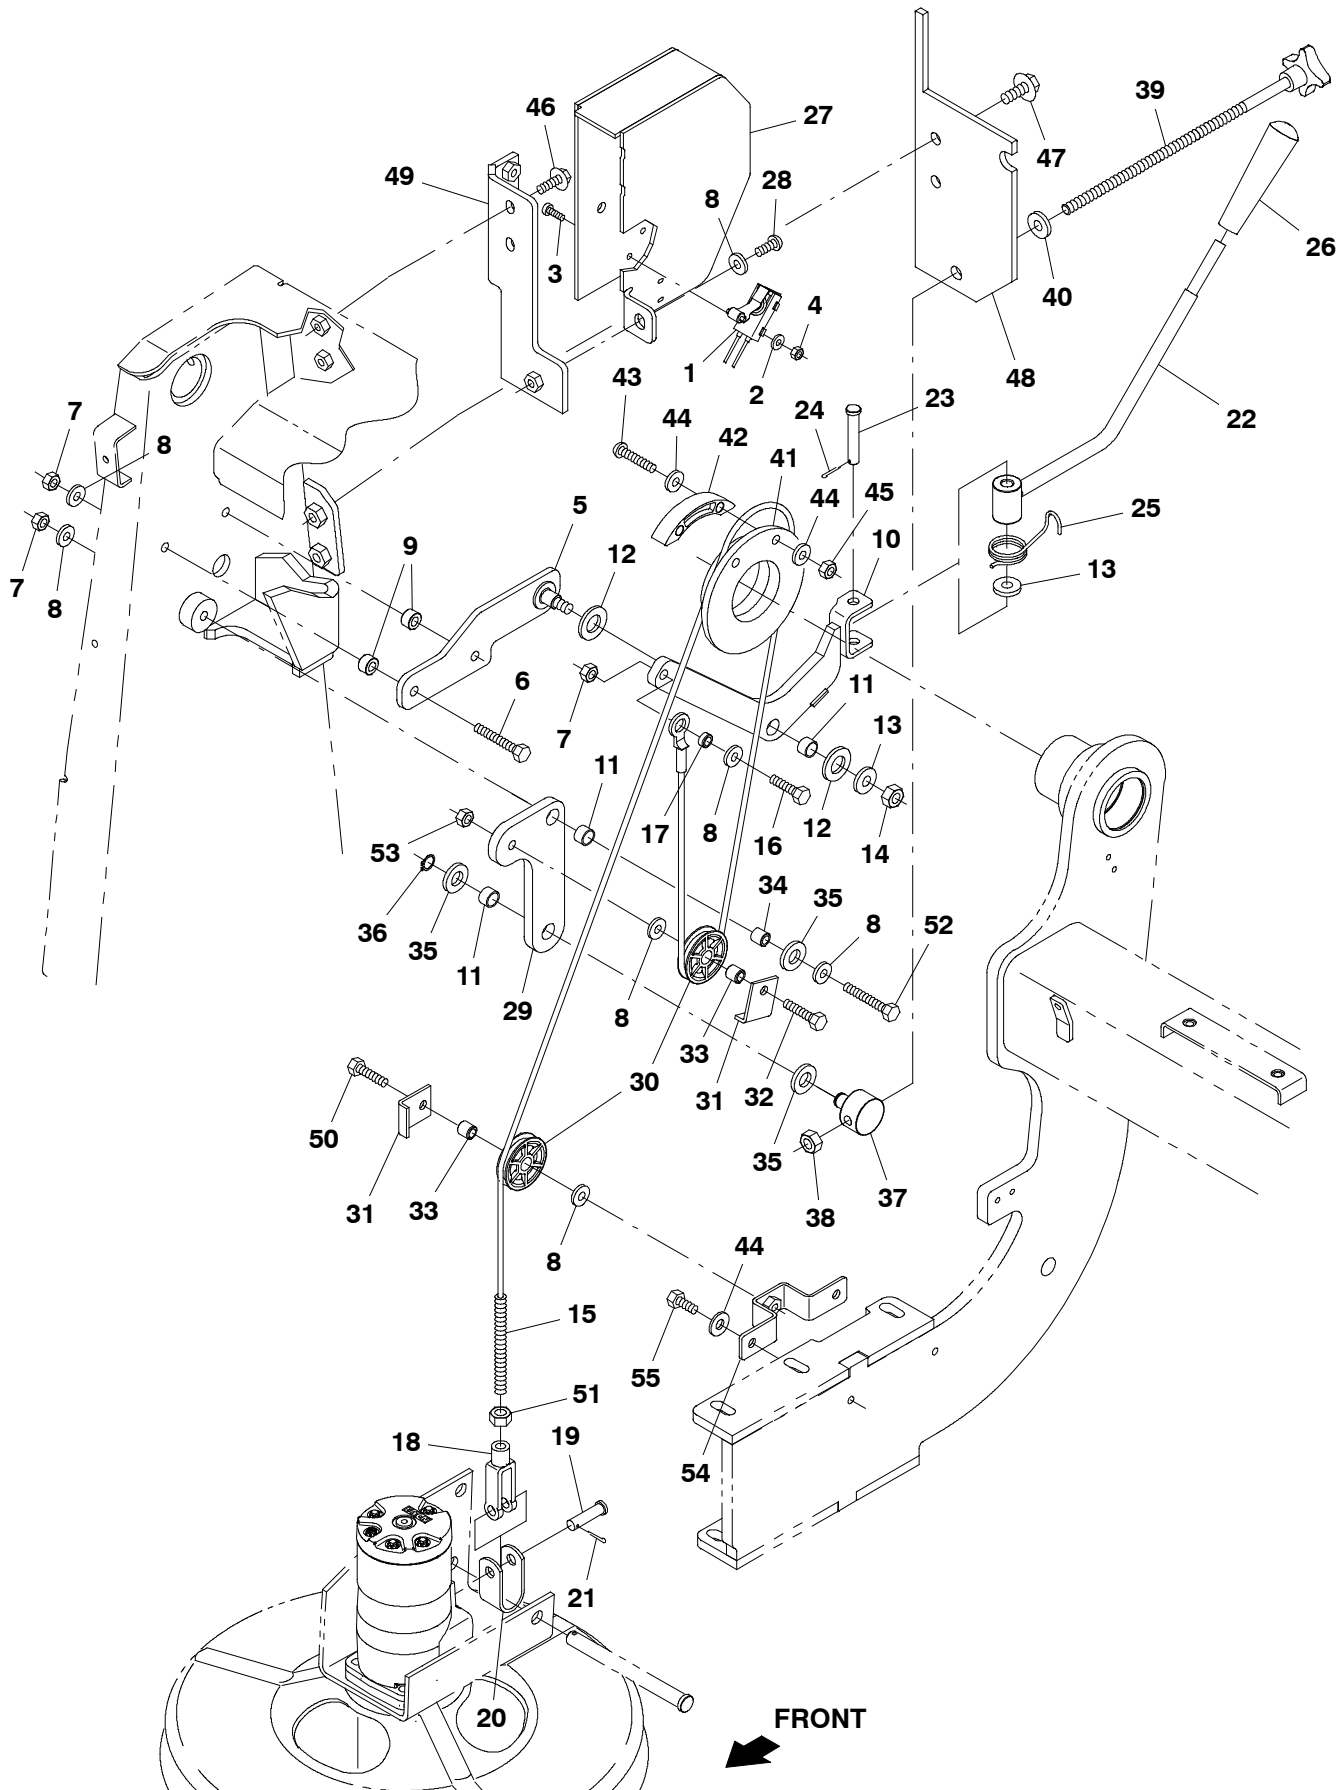


Fig. 43 - Side Brush Lift Group, S30

Ref.	Part No.	Serial Number	Description	Qty.
1	367403	(006501-	) Switch, Snap, 15a Nc, Rlr	1
2	19066	(006501-	) Washer, Flat, 10	2
3	1045487	(006501-	) Screw, Pan, Phl, M5 X 0.80 X 16, Blk	2
4	06549	(006501-	) Nut, Hex, Lock, M5 X 0.80, NI	2
5	1038329	(006501-	) Bracket Wldt, Brush, Side	1
6	41342	(006501-	) Screw, Hex, M8 X 1.25 X 40, 8.8	2
7	08709	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI	4
8	39349	(006501-	) Washer, Flat, 0.31, Sae	11
9	360460	(006501-	) Sleeve, P/M, 0.33b 0.63d 0.4l, Ss / Oil	2
10	1038372	(006501-	) Lever Wldt, Brush, Side	1
11	64173	(006501-	) Bushing, Sleeve, 0.50b 0.59d 0.38l, Stl	3
12	64425	(006501-	) Washer, Thrust, 0.61b 1.25d .06, Fgl	2
13	32485	(006501-	) Washer, Flat, 0.38, Sae	2
14	41430	(006501-	) Nut, Hex, Lock, M10 X 1.5, NI	1
15	1036702	(006501-	) Cable, Glv .13d 063.4l .50eye / M10	1
16	76570	(006501-	) Screw, Hex, M8 X 1.25 X 30, 8.8	1
17	360801	(006501-	) Sleeve, 0.31b 0.50d 0.3l, Ss	1
18	12267	(006501-	) Clevis, Adj, 0.38pin, M10x1.5	1
19	29558	(006501-	) Pin, Clevis, 0.37d X 1.50l	1
20	59899	(006501-	) Bracket, U, .12, 1.2w 2.3 1.0l, 2/0.6h	1
21	08179	(006501-	) Pin, Cotter, .094 X 1.00	1
22	1037265	(006501-	) Arm Wldt, Lever	1
23	51813	(006501-	) Pin, Clevis, 0.37d X 2.12l	1
24	08182	(006501-	) Pin, Cotter, .125 X 1.00	1
25	1037476	(006501-	) Spring, Tors, 1.09id .11wir 03.0coil	1
26	54995	(006501-	) Knob, 1.12d 3.86l M10 X 1.5, Plstc Tpr]	1
27	1038101	(006501-	) Bracket Wldt	1
28	1031665	(006501-	) Screw, Pan, M8 X 1.25 X 25, Blk	3
29	1038060	(006501-	) Plate, Adj, Brush	1
30	369781	(006501-	) Pulley, Cable, 1.5d Nyl	2
31	54400	(006501-	) Bracket, Angle, Keeper, Cable	2
32	59658	(006501-	) Screw, Hex, M8 X 1.25 X 35, NI, Ss	1
33	222460	(006501-	) Sleeve, P/M, 0.31b 0.50d 0.5l [430ss]	1
34	223609	(006501-	) Sleeve, P/M, 0.31b 0.50d 0.5l [430ss]	1
35	32486	(006501-	) Washer, Flat, 0.50, Sae	3
36	86953	(006501-	) Ring, Retaining, Ext, 0.50d, Ss	1
37	1039228	(006501-	) Pivot, Adj, Brush	1
38	41430	(006501-	) Nut, Hex, Lock, M10 X 1.5, NI	1
39	1039553	(006501-	) Knob Assy,Star,1.97d 4ear M10x1.5 10.75l	1
40	763042	(006501-	) Washer, Flat, Belleville, M10	1
41	1034760	(006501-	) Pulley, Cable, 3.1d 2.30b, .19d Cable	1
42	1034763	(006501-	) Retainer, Pulley	1
43	397826	(006501-	) Screw, Btn, M8 X 1.25 X 40, Ss	2
44	01685	(006501-	) Washer, Flat, 0.38b 0.88d .08, Ss	6
45	08713	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI, Ss	2
46	1037354	(006501-	) Screw, Hex, M8 X 1.25 X 30, 9.8, Sems	2
47	1037358	(006501-	) Screw, Hex, M10 X 1.50 X 35, 9.8, Sems	2
48	1060763	(006501-	) Plate, Lift, Brush	1
49	1038896	(006501-	) Plate, Lift, Brush	1
50	76570	(006501-	) Screw, Hex, M8 X 1.25 X 30, 8.8	1
51	32716	(006501-	) Nut, Hex, Jam, M10 X 1.5, Ss	1
52	39278	(006501-	) Screw, Hex, M8 X 1.25 X 50, 8.8	1
53	39311	(006501-	) Nut, Hex, Std, M8 X 1.25	1
54	1210805	(006501-	) Bracket Wldt, Arm	1
55	15675	(006501-	) Screw, Hex, M8 X 1.25 X 16, Ss	1

Fig. 44 - Side Brush Motor and Pivot Group, S30

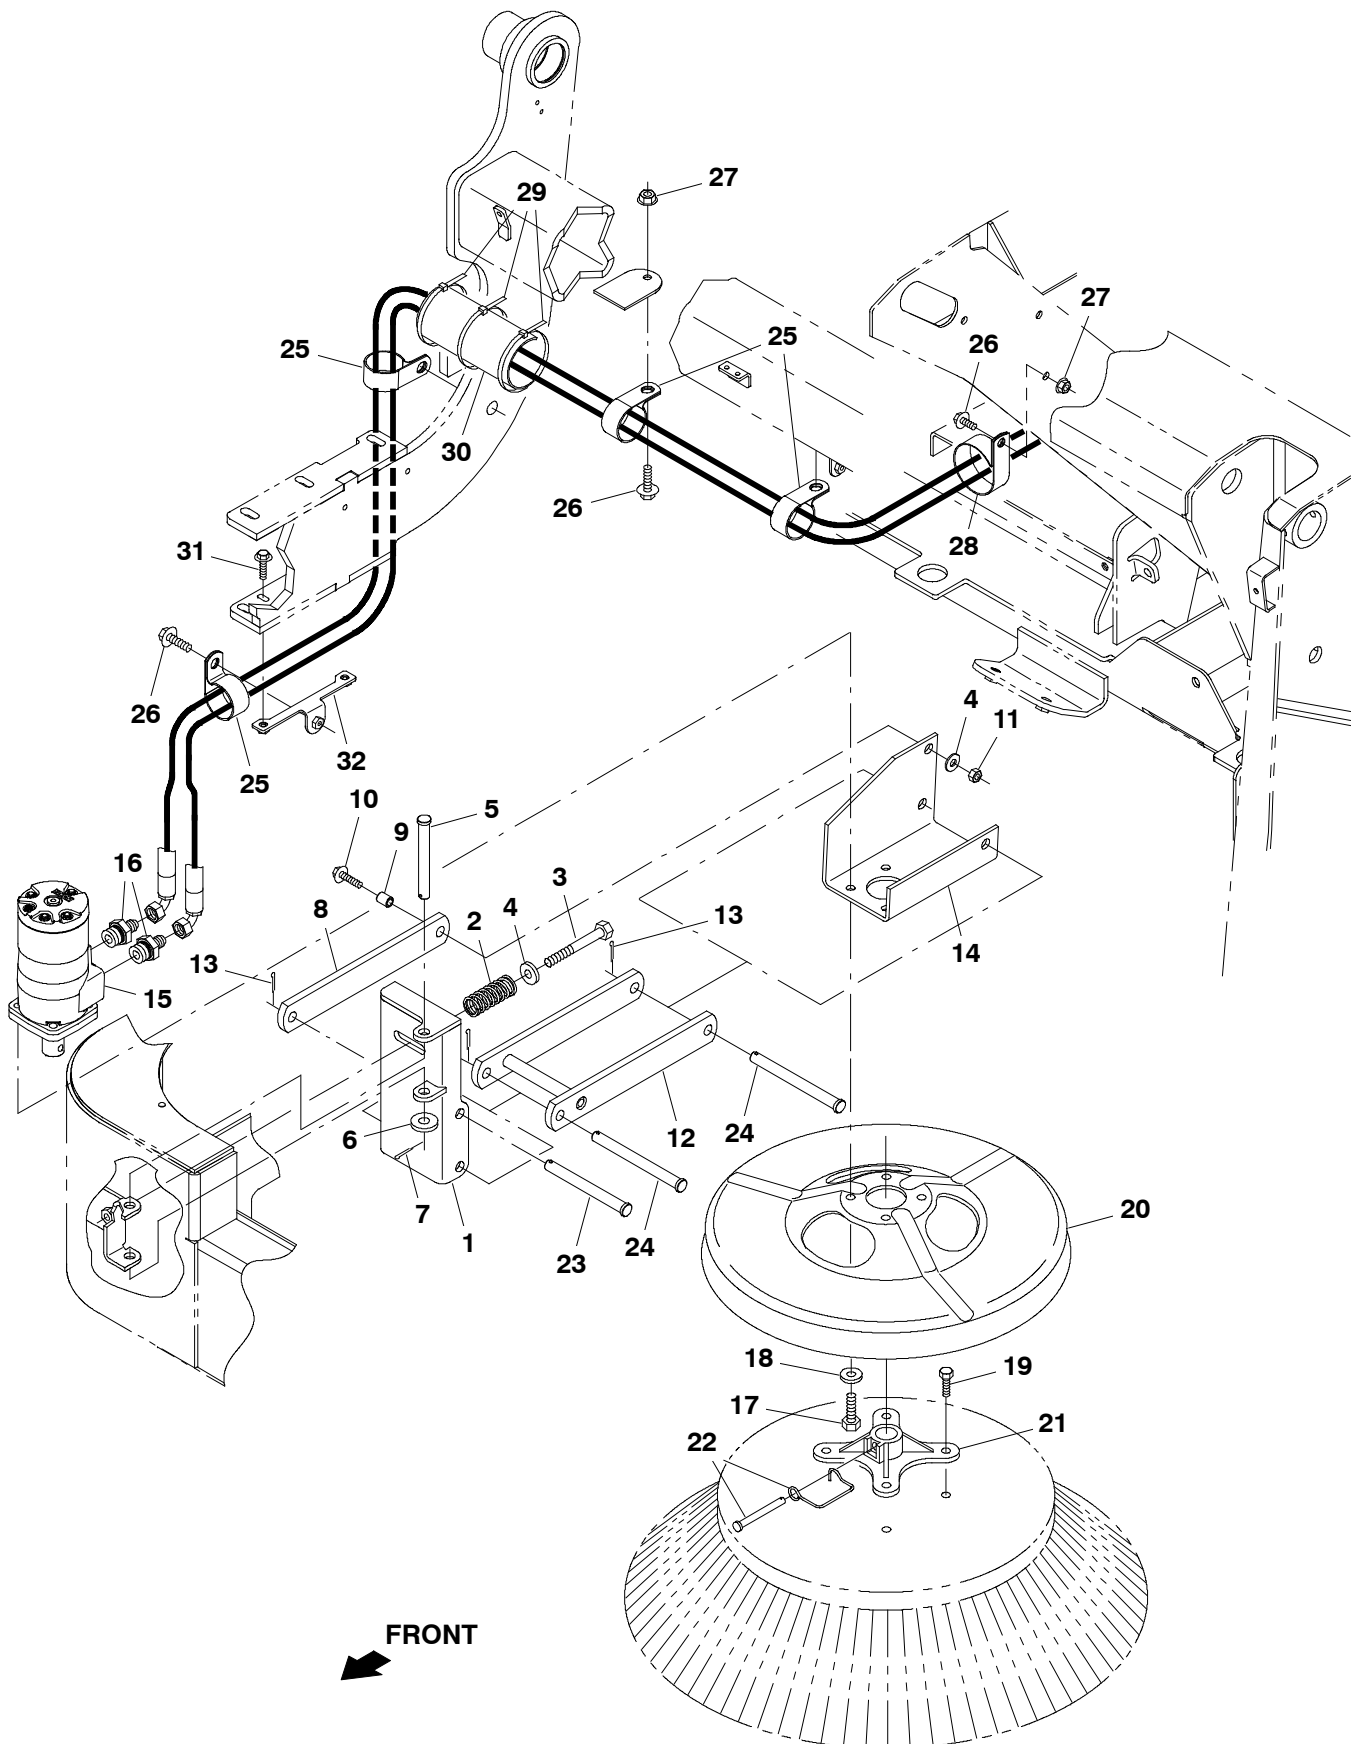


Fig. 44 - Side Brush Motor and Pivot Group, S30

Ref.	Part No.	Serial Number	Description	Qty.
1	1029704	(006501-	) Pivot Wldt, Brush, Side	1
2	45261	(006501-	) Spring, Cmpr, 0.97od .11wir 02.5l	1
3	06965	(006501-	) Screw, Hex, M10 X 1.50 X 80, 8.8	1
4	32485	(006501-	) Washer, Flat, 0.38, Sae	2
5	222196	(006501-	) Pin, Clevis, 0.50d X 4.25l	1
6	32486	(006501-	) Washer, Flat, 0.50, Sae	1
7	08175	(006501-	) Pin, Cotter, .125 X 1.25	1
8	1029709	(006501-	) Arm, Brush, Side	1
9	80395	(006501-	) Sleeve, P/M, 0.31b 0.50d 0.7l [430ss]	1
10	1037355	(006501-	) Screw, Hex, M8 X 1.25 X 35, 9.8, Sems	1
11	08709	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI	1
12	1029682	(006501-	) Arm Wldt, Brush, Side	1
13	08182	(006501-	) Pin, Cotter, .125 X 1.00	3
14	1029674	(006501-	) Bracket, Mtg, Motor, Side Brush	1
15	1057338	(006501-	) Motor, Hyd, Gear, Int 17.9 Bi- Dir 2500	1
16	762439	(006501-	) Fitting, Hyd, Str, Fm06/Om10	2
17	46559	(006501-	) Screw, Hex, .38- 16 X 1.25, NI	4
18	32492	(006501-	) Washer, Flat, 0.38, Std	4
19	39394	(006501-	) Screw, Hex, .31- 09 X 1.25, Wood	4
20	1054256	(006501-	) Guard, Brush	1
21	47501	(006501-	) Hub, Adapter, Brush, 1.00b	1
22	84581	(006501-	) Pin Assy, Side Brush W/ Clip	1
23	51538	(006501-	) Pin, Clevis, 0.50d X 5.00l	1
24	51225	(006501-	) Pin, Clevis, 0.50d X 5.50l	2
25	53468	(006501-	) Clamp, Cable, Stl, 1.75d X 1.00w, 1hole	4
26	1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	4
27	07791	(006501-	) Nut, Hex, Flng, M8 X 1.25	3
28	70157	(006501-	) Clamp, Cable, Ss, 2.50d X 1.00w, 1hole	2
29	44961	(006501-	) Tie, Cable, Nyl, 14.5l .30w 4.0 Max D	3
30	762179	(006501-	) Guard, Hose, Rbr, 5.0l	1
31	1037345	(006501-	) Screw, Hex, M6 X 1.00 X 30, 9.8, Sems	2
32	1213656	(006501-	) Bracket, Wldt,Mtg,Hyd	1

Fig. 45 - Side Brush Motor Group, S30 XP and X4

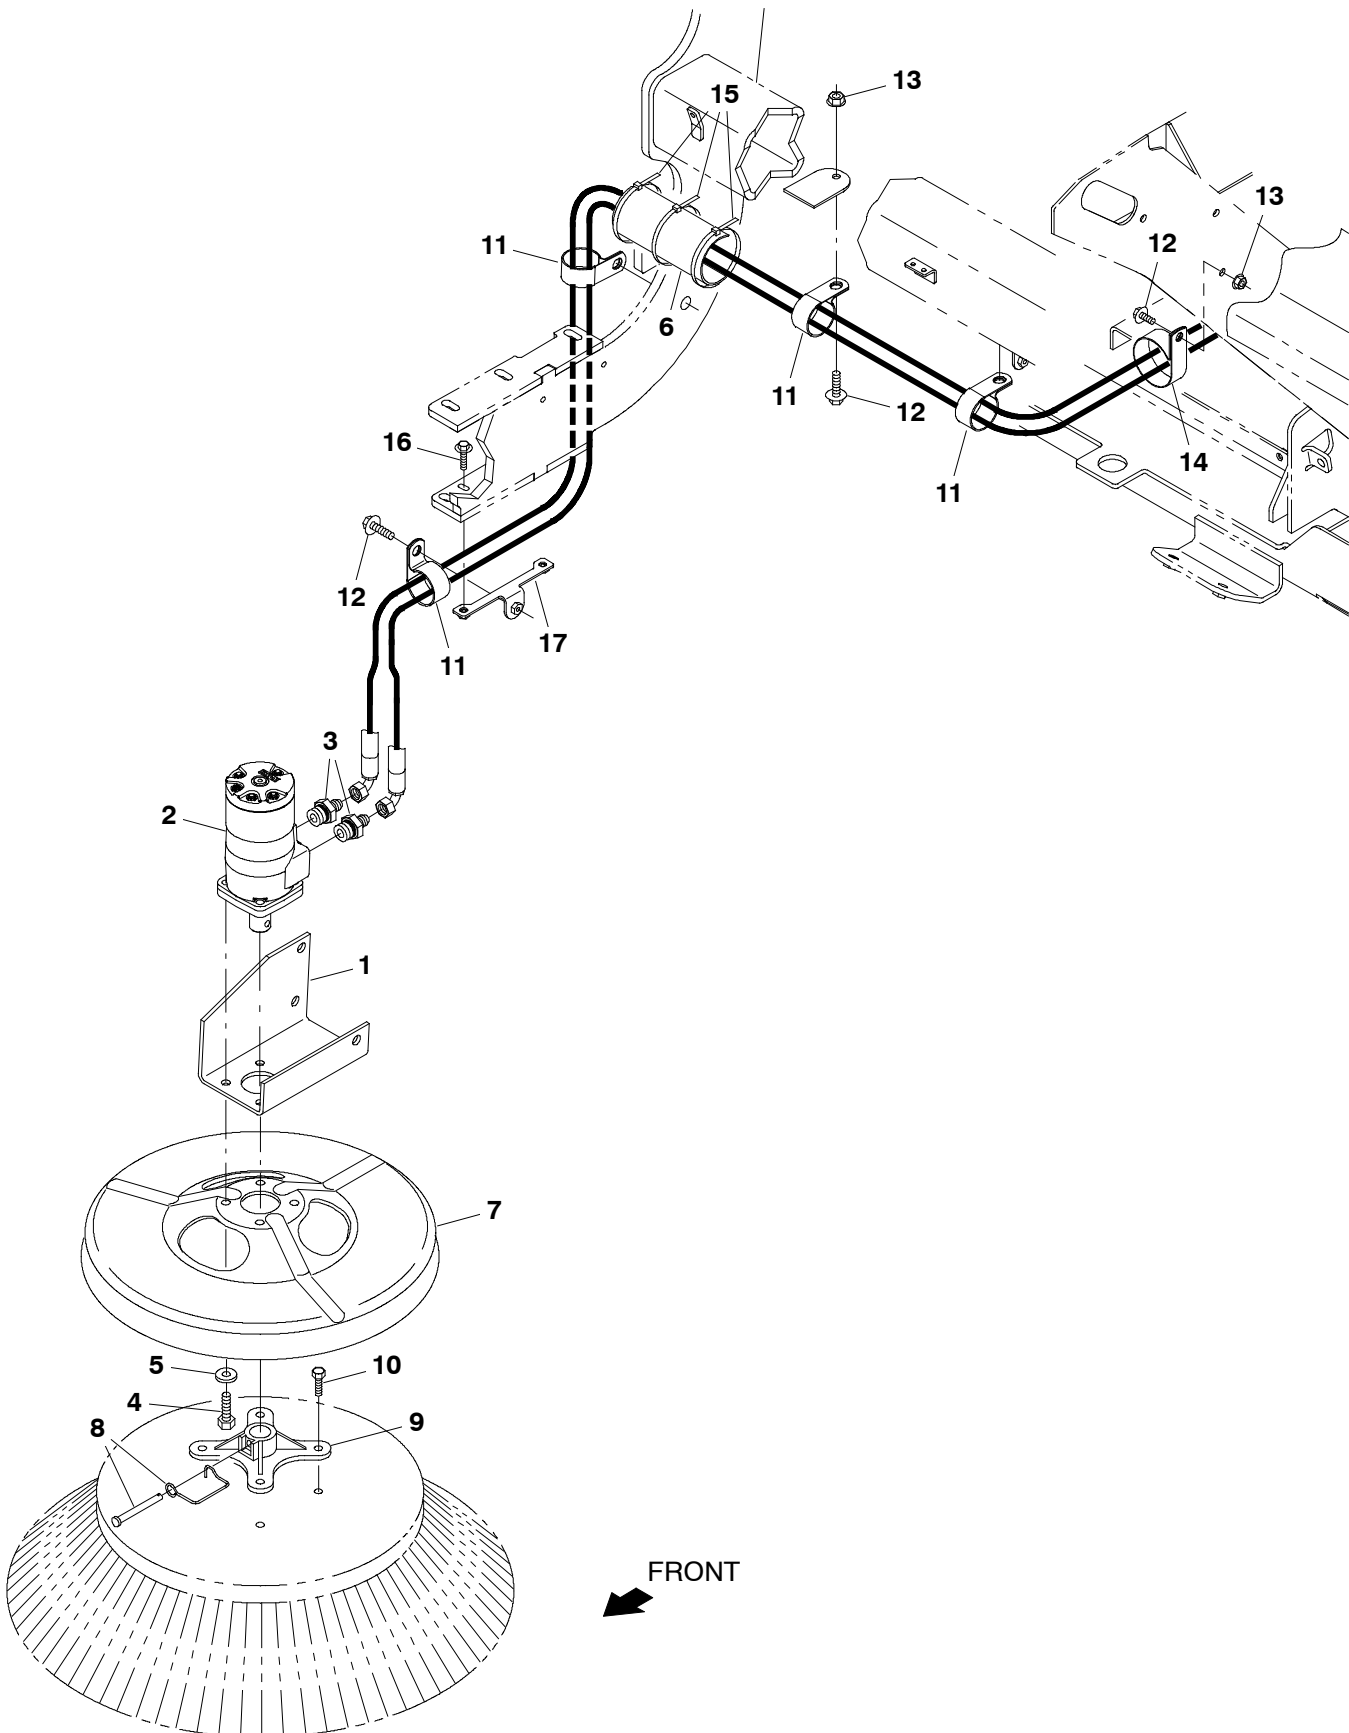


Fig. 45 - Side Brush Motor Group, S30 XP and X4

Ref.	Part No.	Serial Number	Description	Qty.
1	1029674	(006501-	) Bracket, Mtg, Motor, Side Brush	1
2	1057338	(006501-	) Motor, Hyd, Gear, Int 17.9 Bi- Dir 2500	1
3	762439	(006501-	) Fitting, Hyd, Str, Fm06/Om10	2
4	46559	(006501-	) Screw, Hex, .38- 16 X 1.25, NI	4
5	32492	(006501-	) Washer, Flat, 0.38, Std	4
6	762179	(006501-	) Guard, Hose, Rbr, 5.0l	1
7	1054256	(006501-	) Guard, Brush	1
8	84581	(006501-	) Pin Assy, Side Brush W/ Clip	1
9	47501	(006501-	) Hub, Adapter, Brush, 1.00b	1
10	39394	(006501-	) Screw, Hex, .31- 09 X 1.25, Wood	4
11	53468	(006501-	) Clamp, Cable, Stl, 1.75d X 1.00w, 1hole	4
12	1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	4
13	07791	(006501-	) Nut, Hex, Flng, M8 X 1.25	3
14	70157	(006501-	) Clamp, Cable, Ss, 2.50d X 1.00w, 1hole	2
15	44961	(006501-	) Tie, Cable, Nyl, 14.5l .30w 4.0 Max D	3
16	1037345	(006501-	) Screw, Hex, M6 X 1.00 X 30, 9.8, Sems	2
17	1213656	(006501-	) Bracket, Wldt,Mtg,Hyd	1

Fig. 46 - Side Brush Lift and Pivot Group, S30 XP and X4

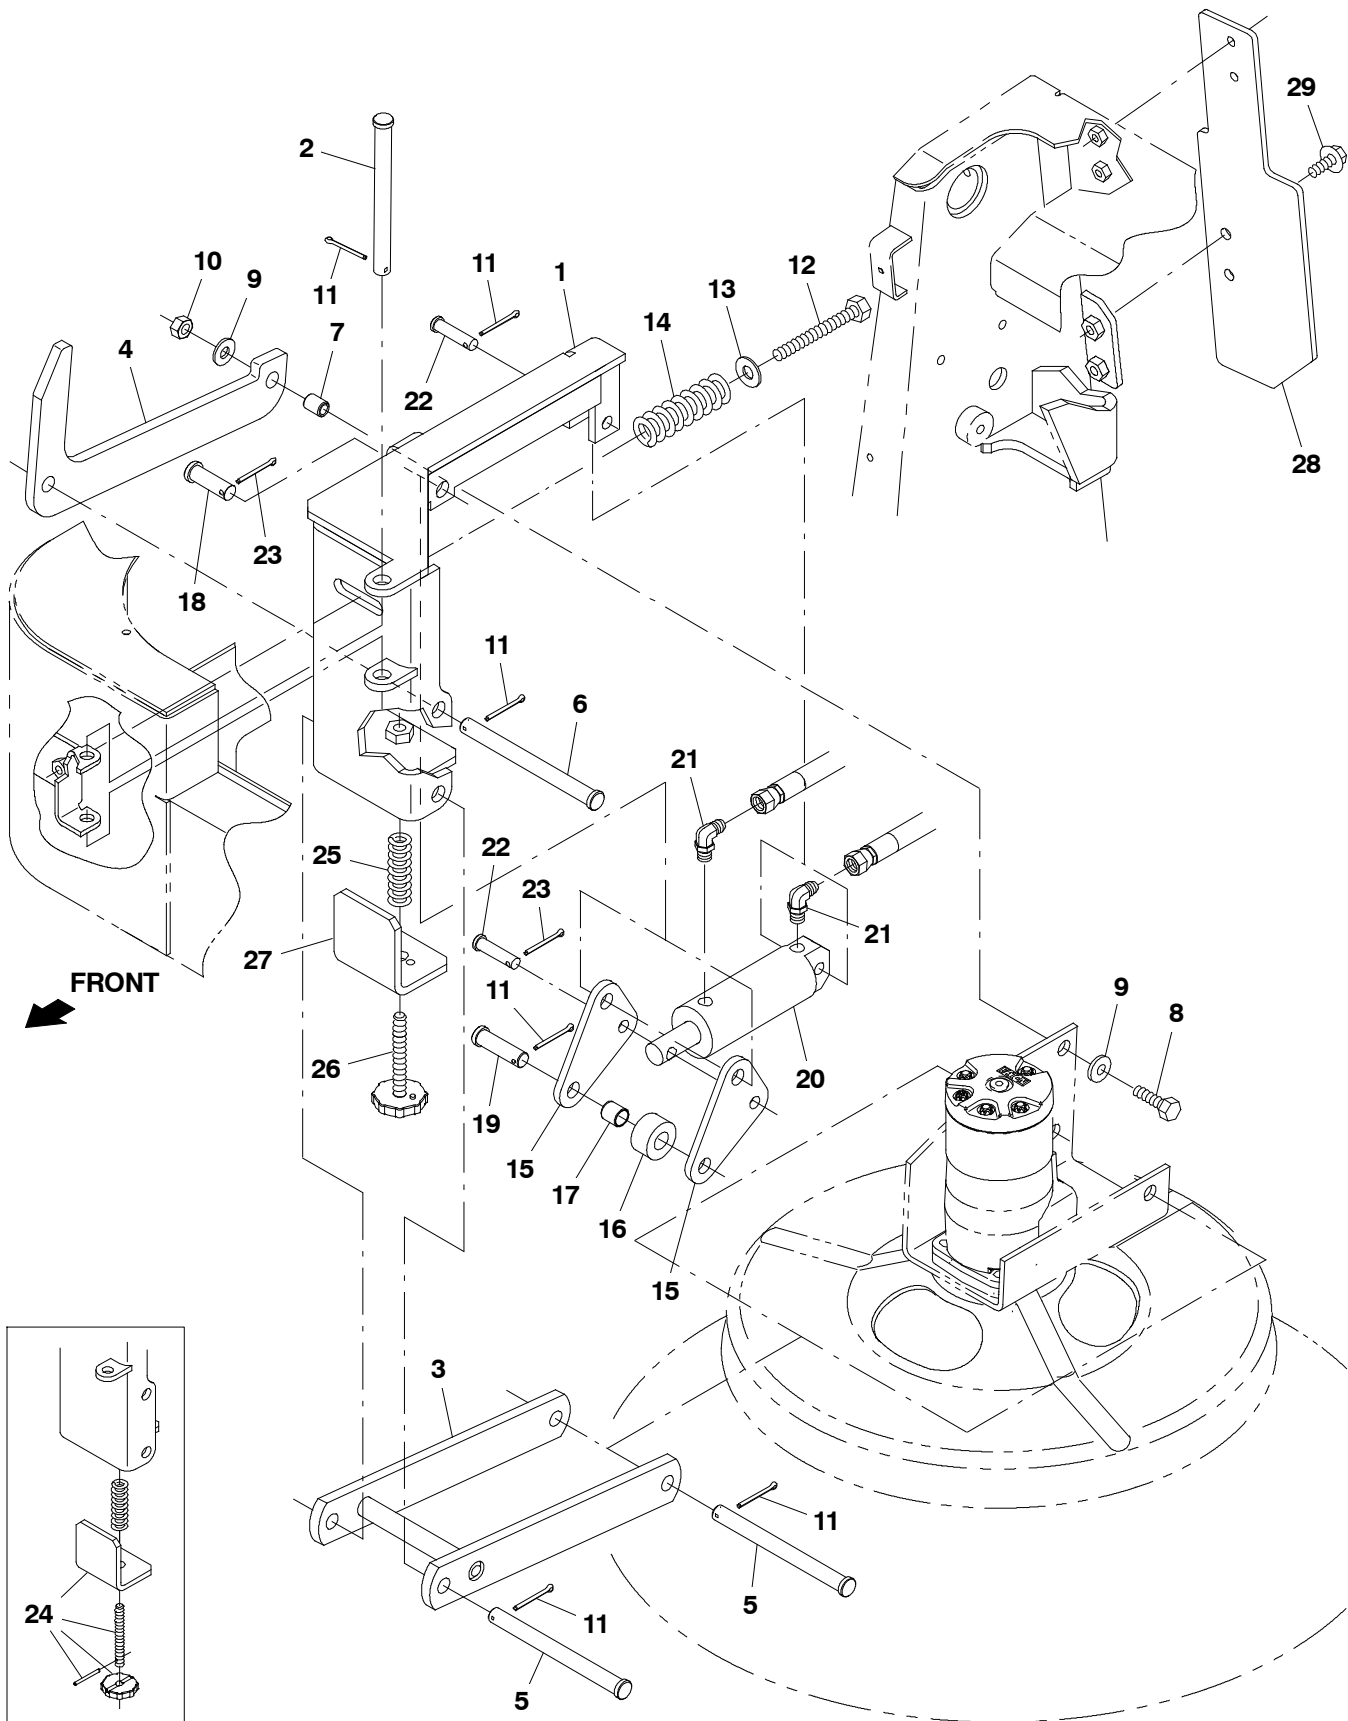


Fig. 46 - Side Brush Lift and Pivot Group, S30 XP and X4

Ref.	Part No.	Serial Number	Description	Qty.
1	1039628	(006501-	) Pivot Wldt, Brush, Side	1
2	222196	(006501-	) Pin, Clevis, 0.50d X 4.25l	1
3	1029682	(006501-	) Arm Wldt, Brush, Side	1
4	1026459	(006501-	) Arm, Linkage, Side Brush	1
5	51225	(006501-	) Pin, Clevis, 0.50d X 5.50l	2
6	51538	(006501-	) Pin, Clevis, 0.50d X 5.00l	1
7	80395	(006501-	) Sleeve, P/M, 0.31b 0.50d 0.7l [430ss]	1
8	76570	(006501-	) Screw, Hex, M8 X 1.25 X 30, 8.8	1
9	32491	(006501-	) Washer, Flat, 0.31, Std	2
10	08709	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI	1
11	08182	(006501-	) Pin, Cotter, .125 X 1.00	6
12	06963	(006501-	) Screw, Hex, M10 X 1.5 X 60, 8.8	1
13	32492	(006501-	) Washer, Flat, 0.38, Std	1
14	45261	(006501-	) Spring, Cmpr, 0.97od .11wir 02.5l	1
15	1026462	(006501-	) Lever, Lift, Brush	2
16	1026525	(006501-	) Tube, 0.59id 1.25od 00.6l, Stl	1
17	59634	(006501-	) Bushing, Sleeve, 0.50b 0.59d 0.62l, Fgl	1
18	51534	(006501-	) Pin, Clevis, 0.50d X 2.00l	1
19	43290	(006501-	) Pin, Clevis, 0.50d X 1.75l	1
20	1041034	(006501-	) Cylinder, Hyd, 1.5b 06.3l 01.50strk 2500	1
21	762427	(006501-	) Fitting, Hyd, E90, Fm04/Om04	2
22	29558	(006501-	) Pin, Clevis, 0.37d X 1.50l	2
23	39005	(006501-	) Pin, Cotter, .094 X 0.75	2
24	9015652	(006501- 008330	) Knob Kit, Repair Side Brush	1
25	22290	(006501-	) Spring, Cmpr, 0.72od .06wir 02.3l	1
26	1075444	(008331-	) Knob, Assy, Sb Xp	1
27	1075439	(008331-	) Angle	1
28	1060764	(006501-	) Plate,Lift,Premium	1
29	1037354	(006501-	) Screw, Hex, M8 X 1.25 X 30, 9.8, Sems	4

Fig. 47 - Main Brush Lift Group, S30

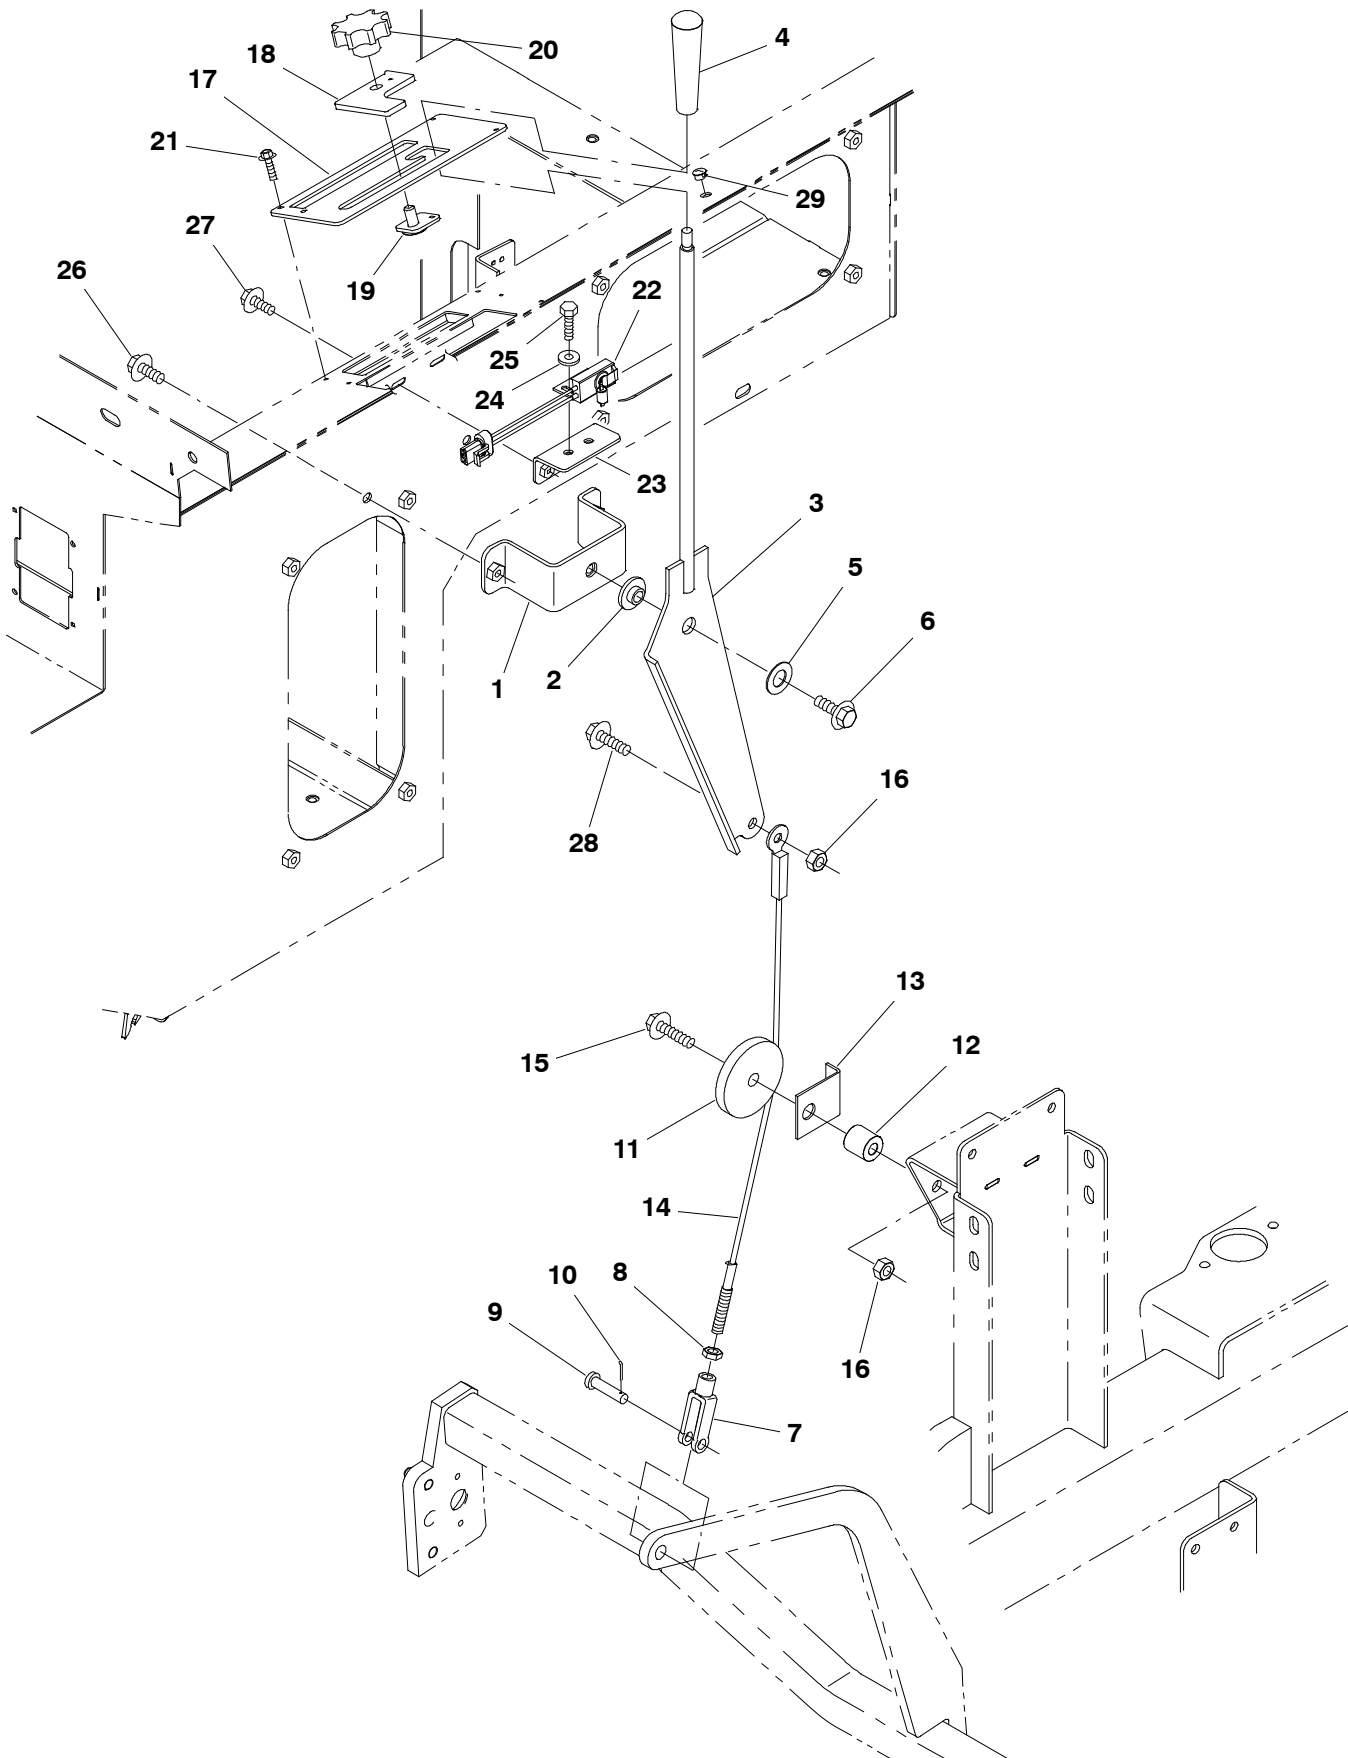


Fig. 47 - Main Brush Lift Group, S30

Ref.	Part No.	Serial Number	Description	Qty.
1	1042785	(006501-	) Bracket, Lift	1
2	363087	(006501-	) Bushing, Flng, 0.44b 1.25d 0.25l	1
3	1041539	(006501-	) Lever Wldt, Lift, Brush, Main	1
4	54995	(006501-	) Knob, 1.12d 3.86l M10 X 1.5, Plstc Tpr]	1
5	07450	(006501-	) Bearing, Thrust, 0.66b 1.25d 0.06w	1
6	1037358	(006501-	) Screw, Hex, M10 X 1.50 X 35, 9.8, Sems	1
7	12267	(006501-	) Clevis, Adj, 0.38pin, M10x1.5	1
8	32716	(006501-	) Nut, Hex, Jam, M10 X 1.5, Ss	1
9	86240	(006501-	) Pin, Clevis, 0.38d X 1.13l	1
10	08179	(006501-	) Pin, Cotter, .094 X 1.00	1
11	379684	(006501-	) Pulley Assy, Cable, 2.8d 0.50b	1
12	222460	(006501-	) Sleeve, P/M, 0.31b 0.50d 0.5l [430ss]	1
13	379686	(006501-	) Angle, Keeper, Cable	1
14	1041123	(006501-	) Cable, Glv .19 24.5l .3 Eye / M10	1
15	1037355	(006501-	) Screw, Hex, M8 X 1.25 X 35, 9.8, Sems	1
16	08709	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI	1
17	1046048	(006501-	) Panel Wldt, Handle, Lift	1
18	1042855	(006501-	) Plate Wldt, Brush, Adj	1
19	1046052	(006501-	) Plate Wldt, Stop [S30]	1
20	383205	(006501-	) Knob, Star, 2.20d 8ear 1.1l M10x1.5, Nyl	1
21	1045964	(006501-	) Screw, Hex, M4 X 0.70 X 10, Fmg, Blk	4
22	1040019	(006501-	) Switch, Limit, 15a, Nc	1
23	1040753	(006501-	) Bracket, Switch	1
24	19066	(006501-	) Washer, Flat, 10	2
25	09244	(006501-	) Screw, Hex, M5 X 0.80 X 16, 8.8	2
26	1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	2
27	1040467	(006501-	) Screw, Hex, M6 X 1.0 X 20, 9.8, Sems	2
28	1037354	(006501-	) Screw, Hex, M8 X 1.25 X 30, 9.8, Sems	1
29	33807	(006501-	) Plug, Hole, Rnd, 0.44h .03- .12, Blk Nyl	1

Fig. 48 - Main Brush Lift Group, S30 XP and X4

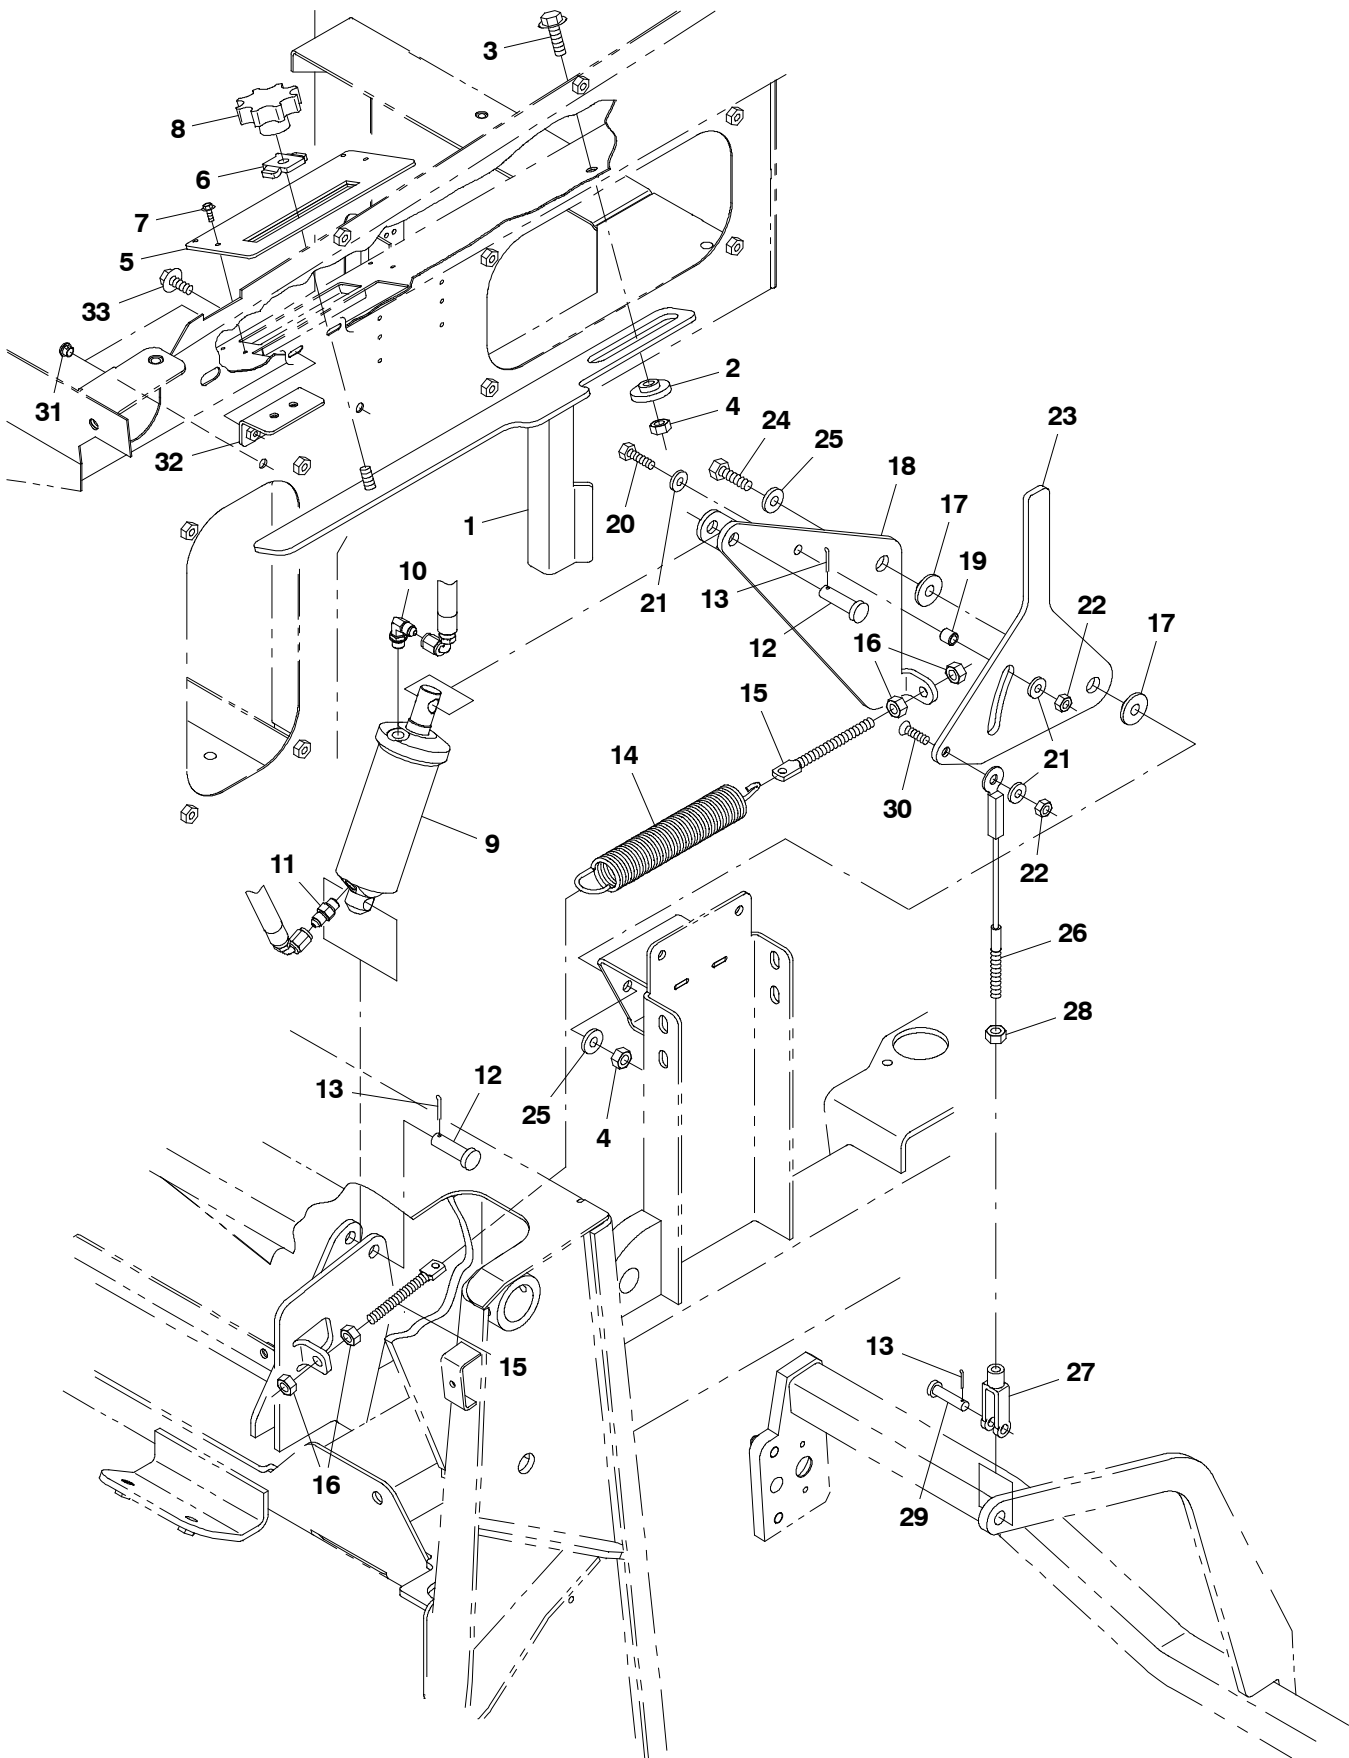


Fig. 48 - Main Brush Lift Group, S30 XP and X4

Ref.	Part No.	Serial Number	Description	Qty.
1	1032432	(006501-	) Plate Wldt, Brush, Adj	1
2	1032429	(006501-	) Retainer, Stop	1
3	1037358	(006501-	) Screw, Hex, M10 X 1.50 X 35, 9.8, Sems	1
4	41430	(006501-	) Nut, Hex, Lock, M10 X 1.5, NI	2
5	1032449	(006501-	) Panel Wldt, Lift	1
6	1005740	(006501-	) Plate, Brush, Adj	1
7	1045964	(006501-	) Screw, Hex, M4 X 0.70 X 10, Fmg, Blk	4
8	383205	(006501-	) Knob, Star, 2.20d 8ear 1.1l M10x1.5, Nyl	1
9	1038176	(006501-	) Cylinder, Hyd, 2.0b 08.0l 04.00strk 2500	1
10	762427	(006501-	) Fitting, Hyd, E90, Fm04/Om04	1
11	762428	(006501-	) Fitting, Hyd, Str, Fm04/Om04	1
12	43290	(006501-	) Pin, Clevis, 0.50d X 1.75l	2
13	08182	(006501-	) Pin, Cotter, .125 X 1.00	3
14	368197	(006501-	) Spring, Extn, 1.39od 0.15wir 09.0l	1
15	1007220	(006501-	) Bolt, Eye, M10 X 1.50 X 117mm, 08.00 Eye	2
16	39312	(006501-	) Nut, Hex, Std, M10 X 1.50	4
17	363087	(006501-	) Bushing, Flng, 0.44b 1.25d 0.25l	2
18	1035400	(006501-	) Bracket Wldt, Mtg, Cyl	1
19	222460	(006501-	) Sleeve, P/M, 0.31b 0.50d 0.5l [430ss]	1
20	06955	(006501-	) Screw, Hex, M8 X 1.25 X 35, 8.8	1
21	32491	(006501-	) Washer, Flat, 0.31, Std	3
22	08709	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI	2
23	1041446	(006501-	) Bracket, Brush, Stop Adj	1
24	06962	(006501-	) Screw, Hex, M10 X 1.50 X 45, 8.8	1
25	32492	(006501-	) Washer, Flat, 0.38, Std	2
26	383194	(006501-	) Cable, Glv .19d 009.88l .38eye / M10	1
27	12267	(006501-	) Clevis, Adj, 0.38pin, M10x1.5	1
28	32716	(006501-	) Nut, Hex, Jam, M10 X 1.5, Ss	1
29	86240	(006501-	) Pin, Clevis, 0.38d X 1.13l	1
30	07810	(006501-	) Screw, Flt, Soc, M8 X 1.25 X 25, 10.9	1
31	01314	(006501-	) Plug, Hole, Rnd, 0.38h .03- .12, Blk Nyl	2
32	1040753	(006501-	) Bracket, Switch	1
33	1040467	(006501-	) Screw, Hex, M6 X 1.00 X 20, 9.8, Sems	2

Fig. 49 - Main Brush Drive Group


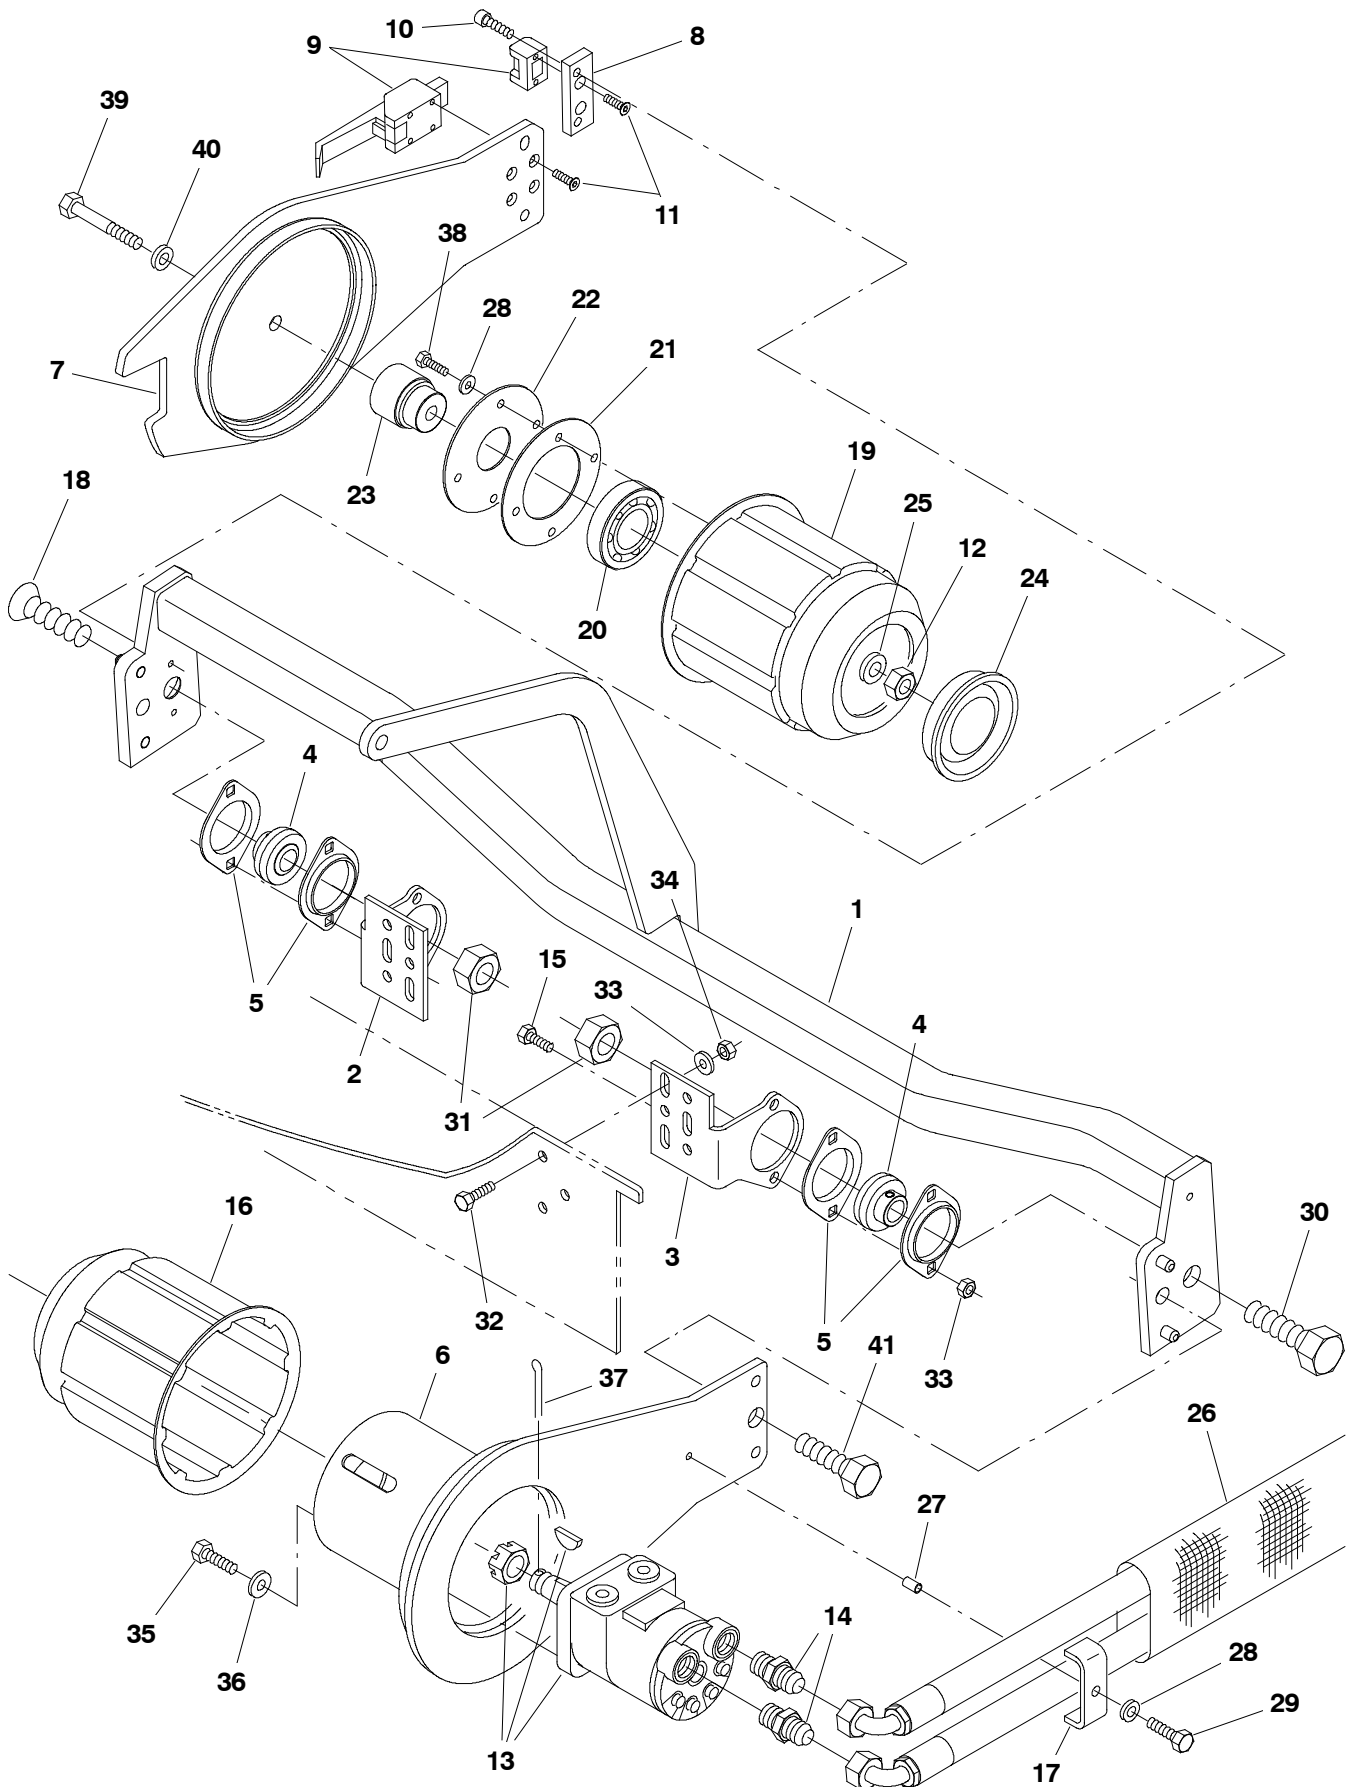


Fig. 49 - Main Brush Drive Group


Ref.	Part No.	Serial Number	Description	Qty.	
1	1039501	(006501-	) Tube Wldt	1	
2	383142	(006501-	) Bracket, Mtg, Rh	1	
3	383143	(006501-	) Bracket, Mtg, Lh	1	
4	25887	(006501-	) Bearing, W/ Collar, 0.75b 1.85d 1.06w	2	
5	35973	(006501-	) Flange, Brg, 1.9id 2h	4	
6	383139	(006501-	) Arm Wldt, Brush, Main, Drive, Lh	1	
▽	7	377249	(006501-	) Arm, Brush, Main, W/ Label	1
▲		383203	(006501-	) Label, Info, Brush Arm	1
8	54204	(006501-	) Plate, Mtg	1	
9	54878	(006501-	) Latch, Cmpr, M5 X 0.8 Blk	1	
10	57824	(006501-	) Screw, Soc, M6 X 1.00 X 20, 12.9, NI	2	
11	09120	(006501-	) Screw, Flt, Soc, M5 X 0.80 X 16, 10.9	6	
12	08711	(006501-	) Nut, Hex, Lock, M12 X 1.75, NI	1	
13	1057337	(006501-	) Motor, Hyd, Gear, Int 02.8 Bi- Dir 2500	1	
14	762445	(006501-	) Fitting, Hyd, Str, Fm08/Om08	2	
15	16931	(006501-	) Screw, Hex, M8 X 1.25 X 20, 8.8	4	
16	1057643	(006501-	) Plug Wldt, Drive, Brush	1	
17	51715	(006501-	) Bracket, U, .19, 2.8w 0.9 1.0l, 1/0.3h	1	
18	1007807	(006501-	) Screw, Flt, Soc, .75- 10 X 2.50, Al	1	
19	55779	(006501-	) Plug Wldt, Idler, Brush	1	
20	24899	(006501-	) Bearing, Ball, 1.38b 2.83d 0.67w	1	
21	30252	(006501-	) Disc, 0.08, 04.39d 02.56b, 4/.28h 3.8bc	1	
22	30253	(006501-	) Disc, 0.06, 04.39d 01.67b, 4/.30h 3.8bc	1	
23	30251	(006501-	) Shaft, Idler, Plug, Brush	1	
24	30255	(006501-	) Cap, Vinyl, 3.28d 0.45l	1	
25	51564	(006501-	) Washer, Flat, 0.53b 1.75d .12, Stl, Pl	1	
26	13773	(006501-	) Sleeve, Nyl, #27 20.0l	1	
27	56228	(006501-	) Tube, Plstc, 0.25id 0.31od 00.5l, Blk	1	
28	01684	(006501-	) Washer, Flat, 0.27b 0.69d .05, Ss	1	
29	07805	(006501-	) Screw, Hex, M6 X 1.00 X 35, Ss	1	
30	39395	(006501-	) Screw, Hex, .75- 10 X 2.50, Fl	1	
31	32987	(006501-	) Nut, Hex, Lock, .75- 10, NI	2	
32	09010	(006501-	) Screw, Hex, M8 X 1.25 X 25, Ss	6	
33	08709	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI	10	
34	41186	(006501-	) Washer, Flat, Belleville, .31	3	
35	01762	(006501-	) Screw, Hex, .38- 16 X 0.75, NI	4	
36	32485	(006501-	) Washer, Flat, 0.38, Sae	4	
37	08175	(006501-	) Pin, Cotter, .125 X 1.25	1	
38	12277	(006501-	) Screw, Hex, M6 X 1.00 X 20, NI, Ss	4	
39	06975	(006501-	) Screw, Hex, M12 X 1.75 X 90, 8.8	1	
40	36328	(006501-	) Washer, Flat, Belleville, .50	1	
41	06977	(006501-	) Screw, Hex, M16 X 2.00 X 20, 8.8	1	

Fig. 50 - Hydraulic Schematic, S30 and XP

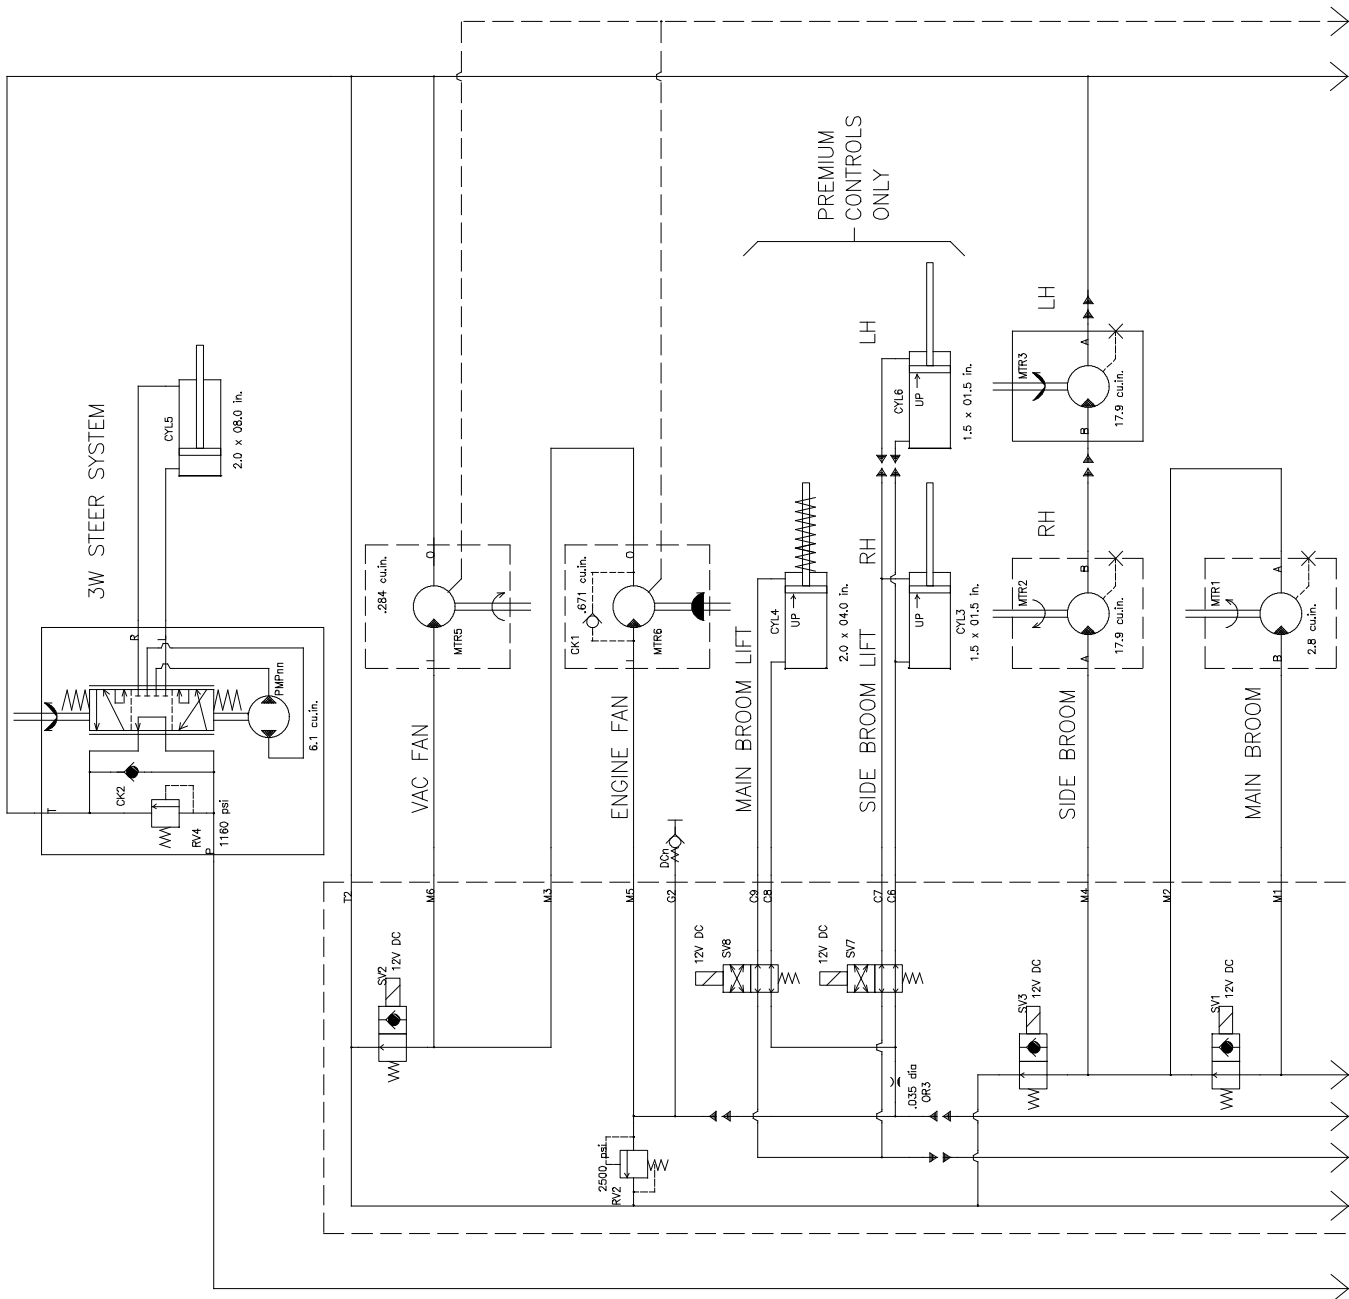


1027521- 354734

Fig. 50 - Hydraulic Schematic, S30 and XP

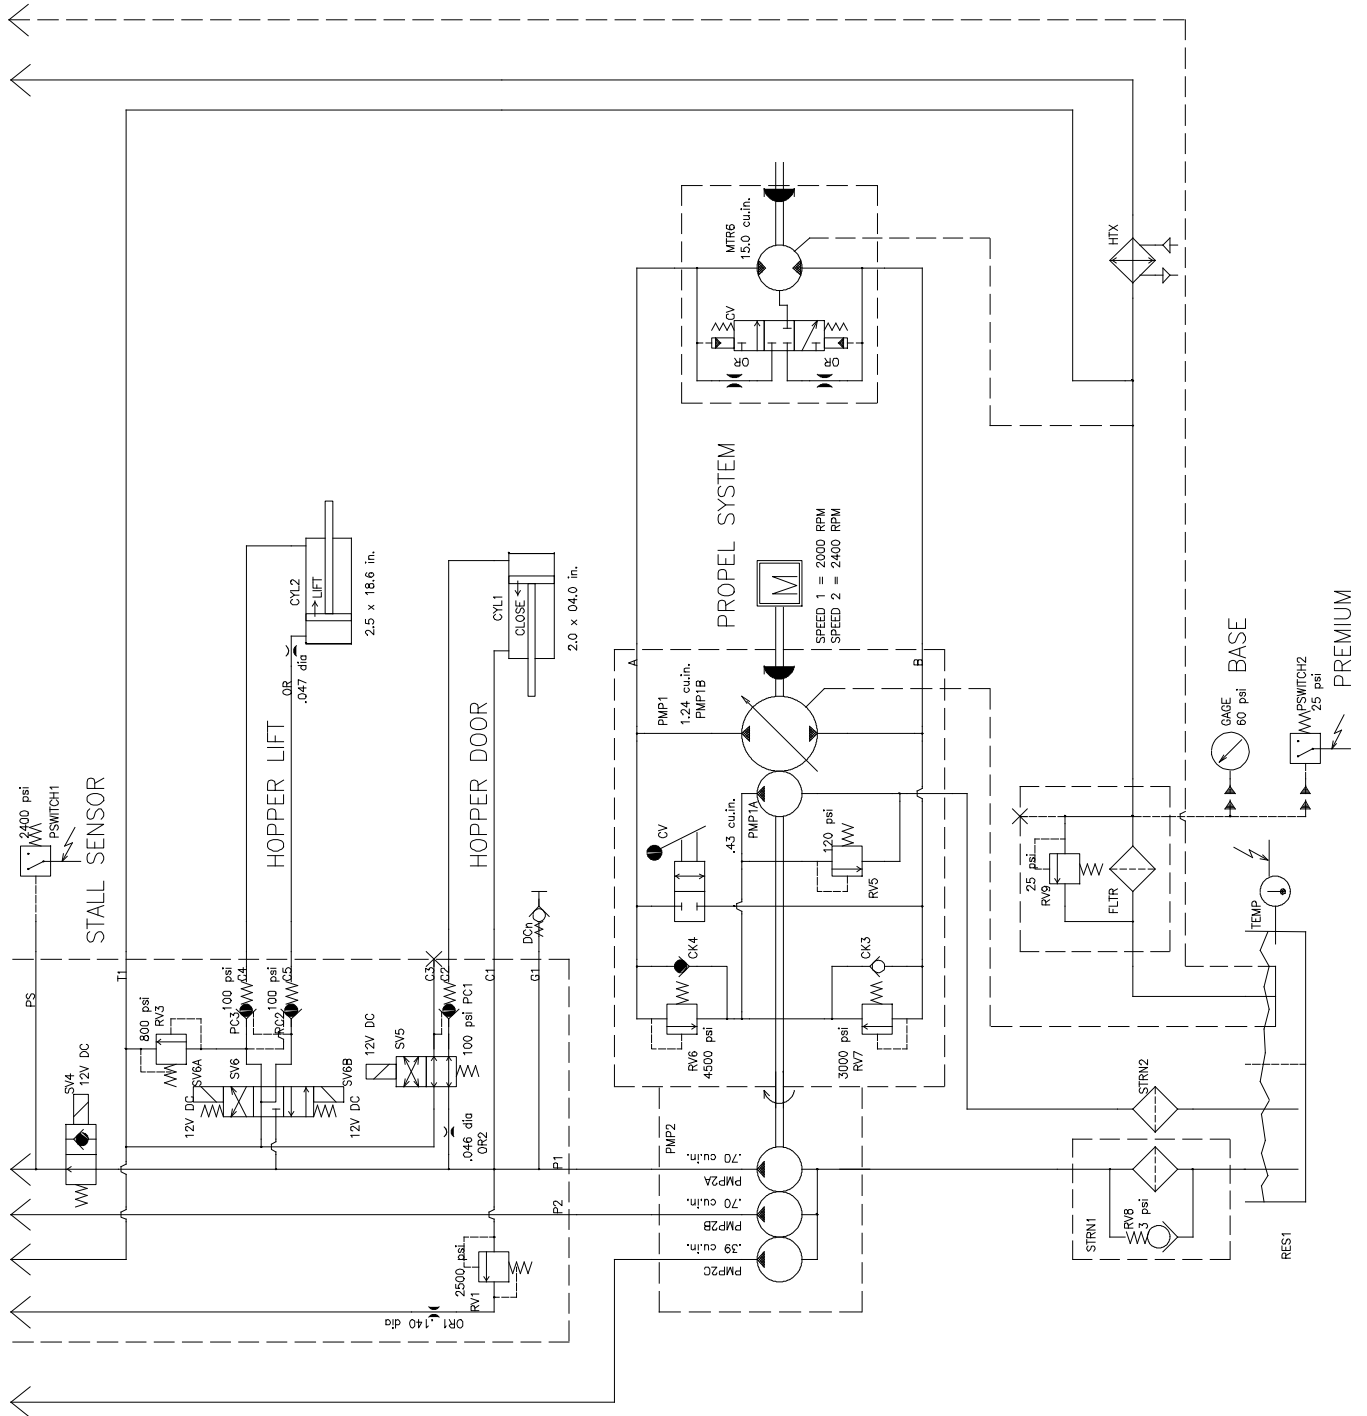


1027521- 354734

Fig. 51 - Hydraulic Schematic, S30 X4

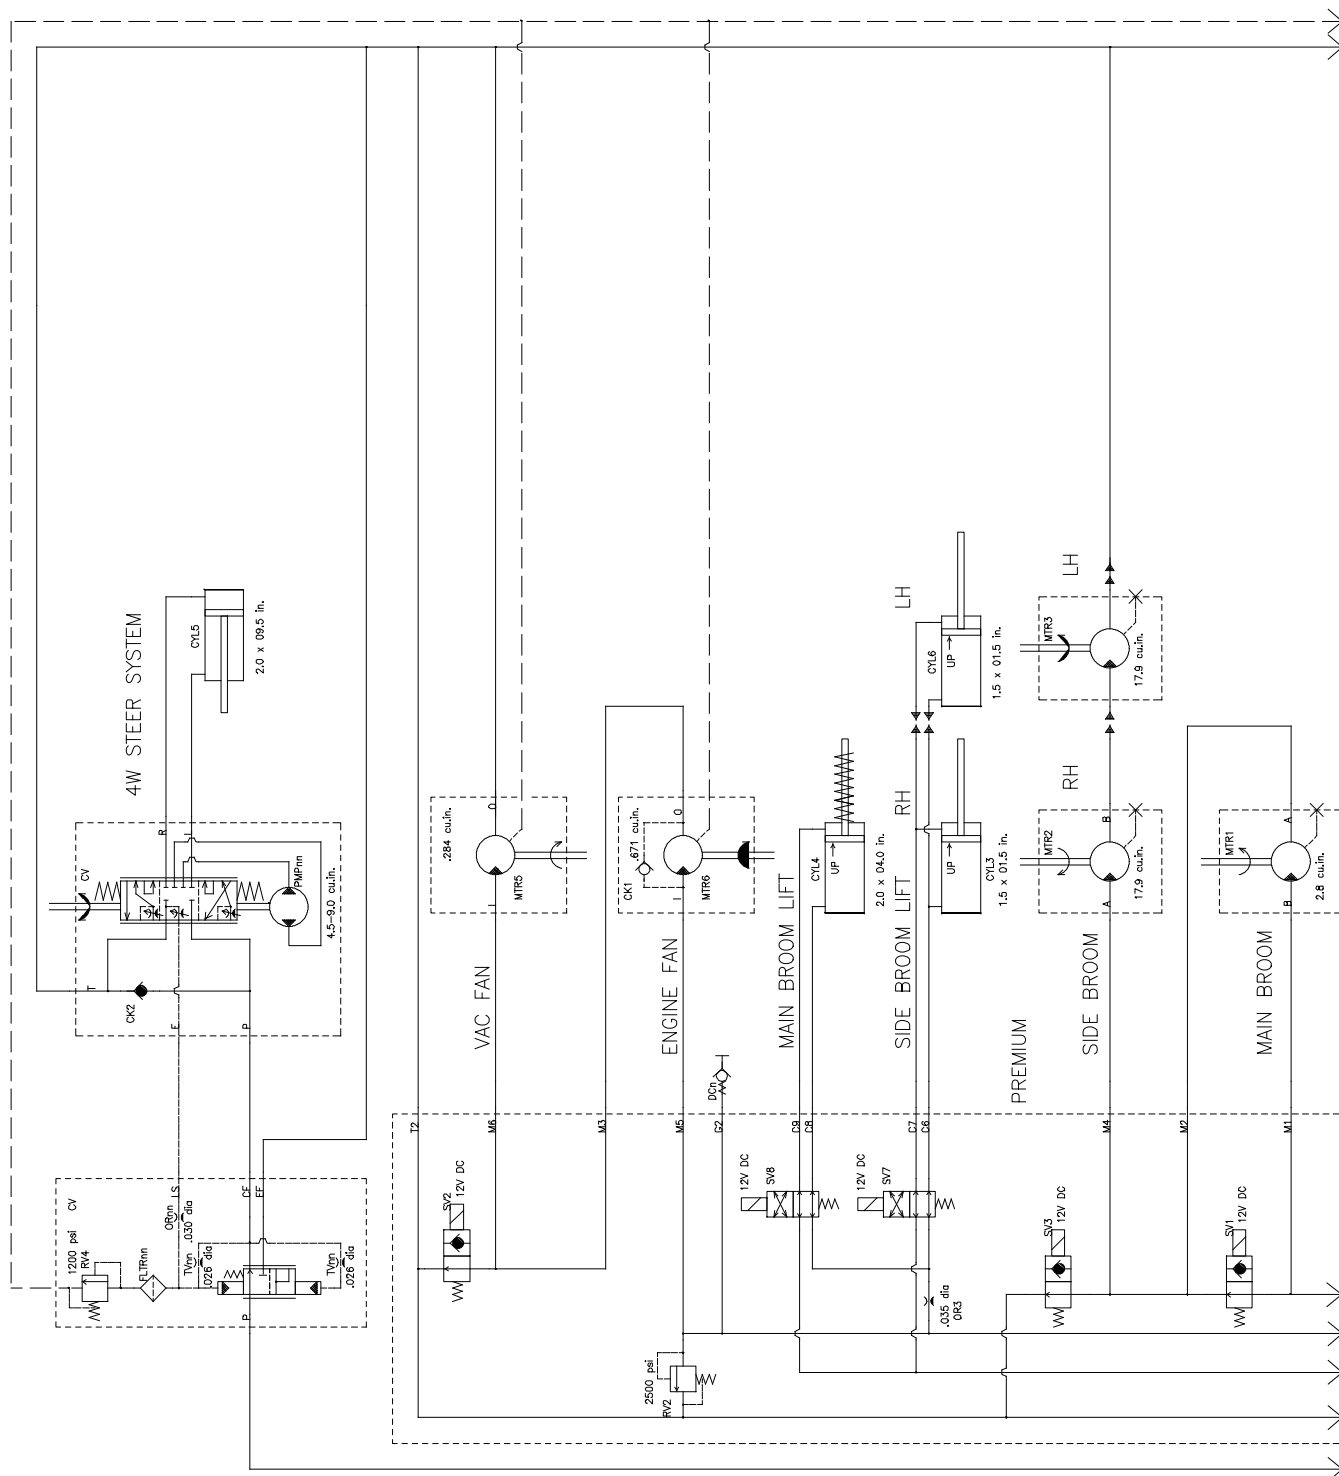

1027521- 354735

Fig. 51 - Hydraulic Schematic, S30 X4

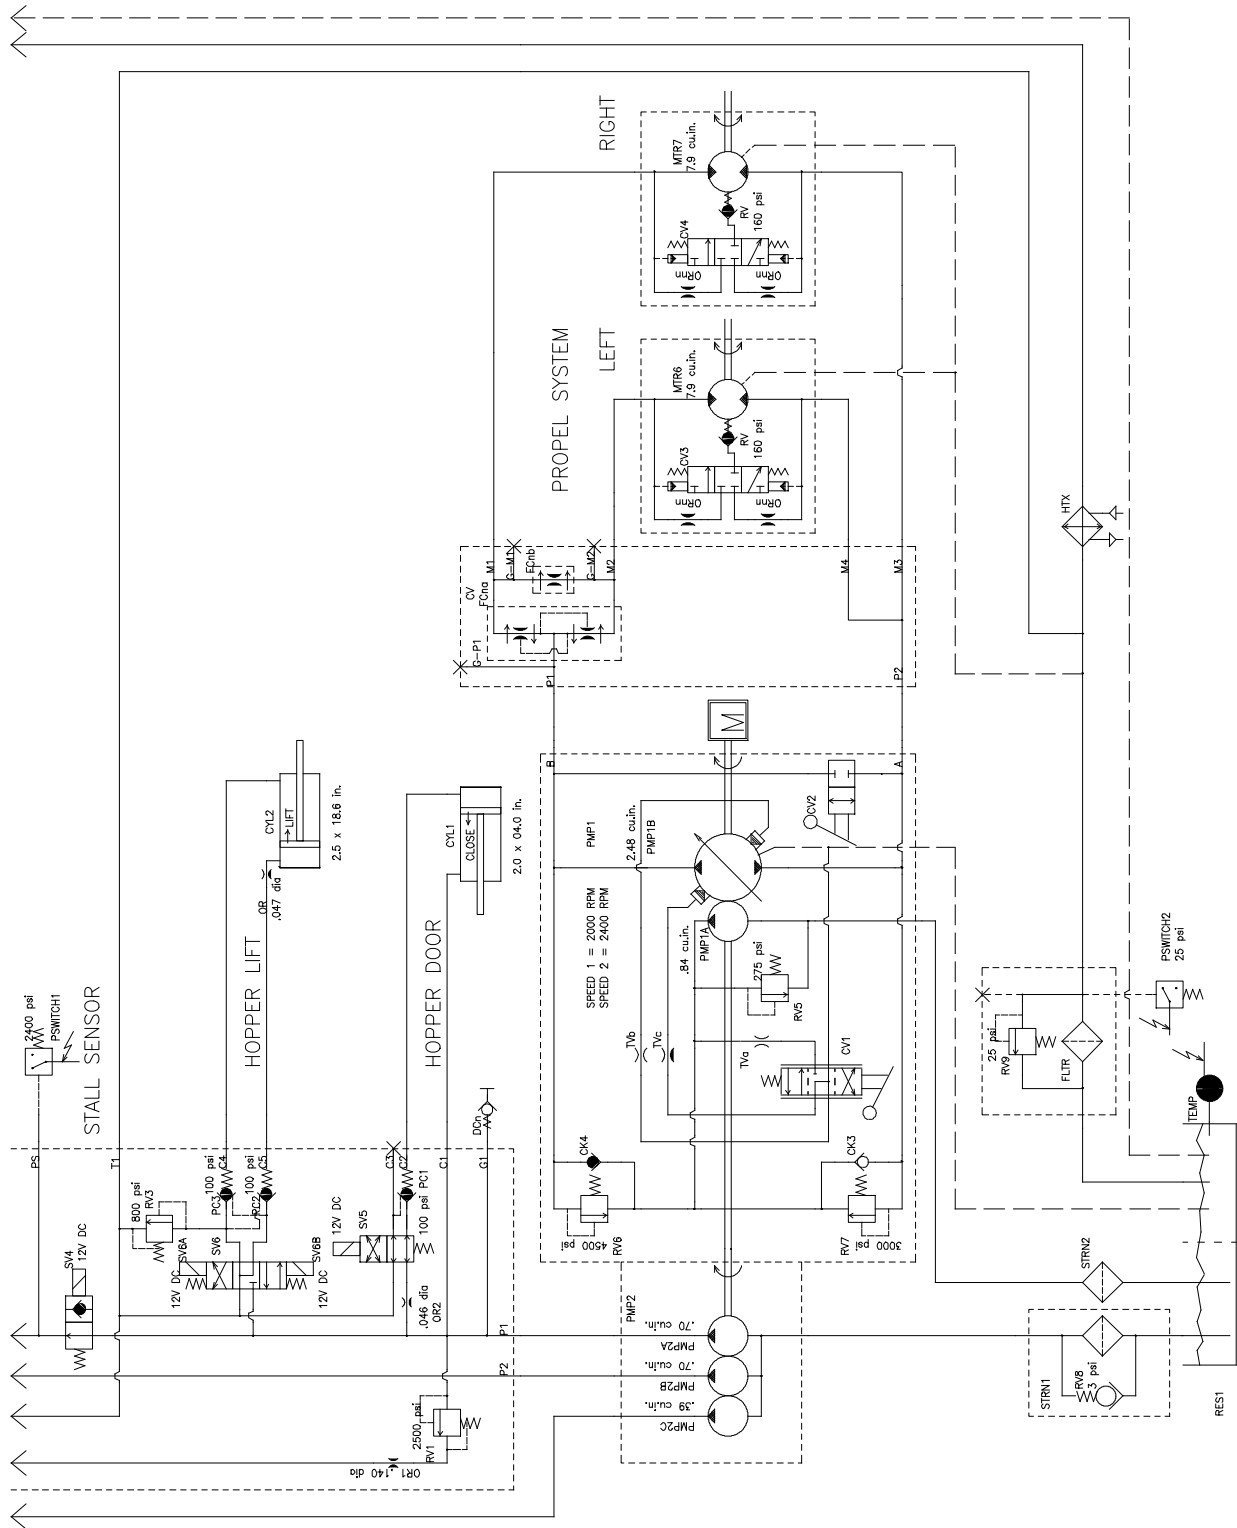

1027521- 354735

Fig. 52 - Hydraulic Hose Group, S30

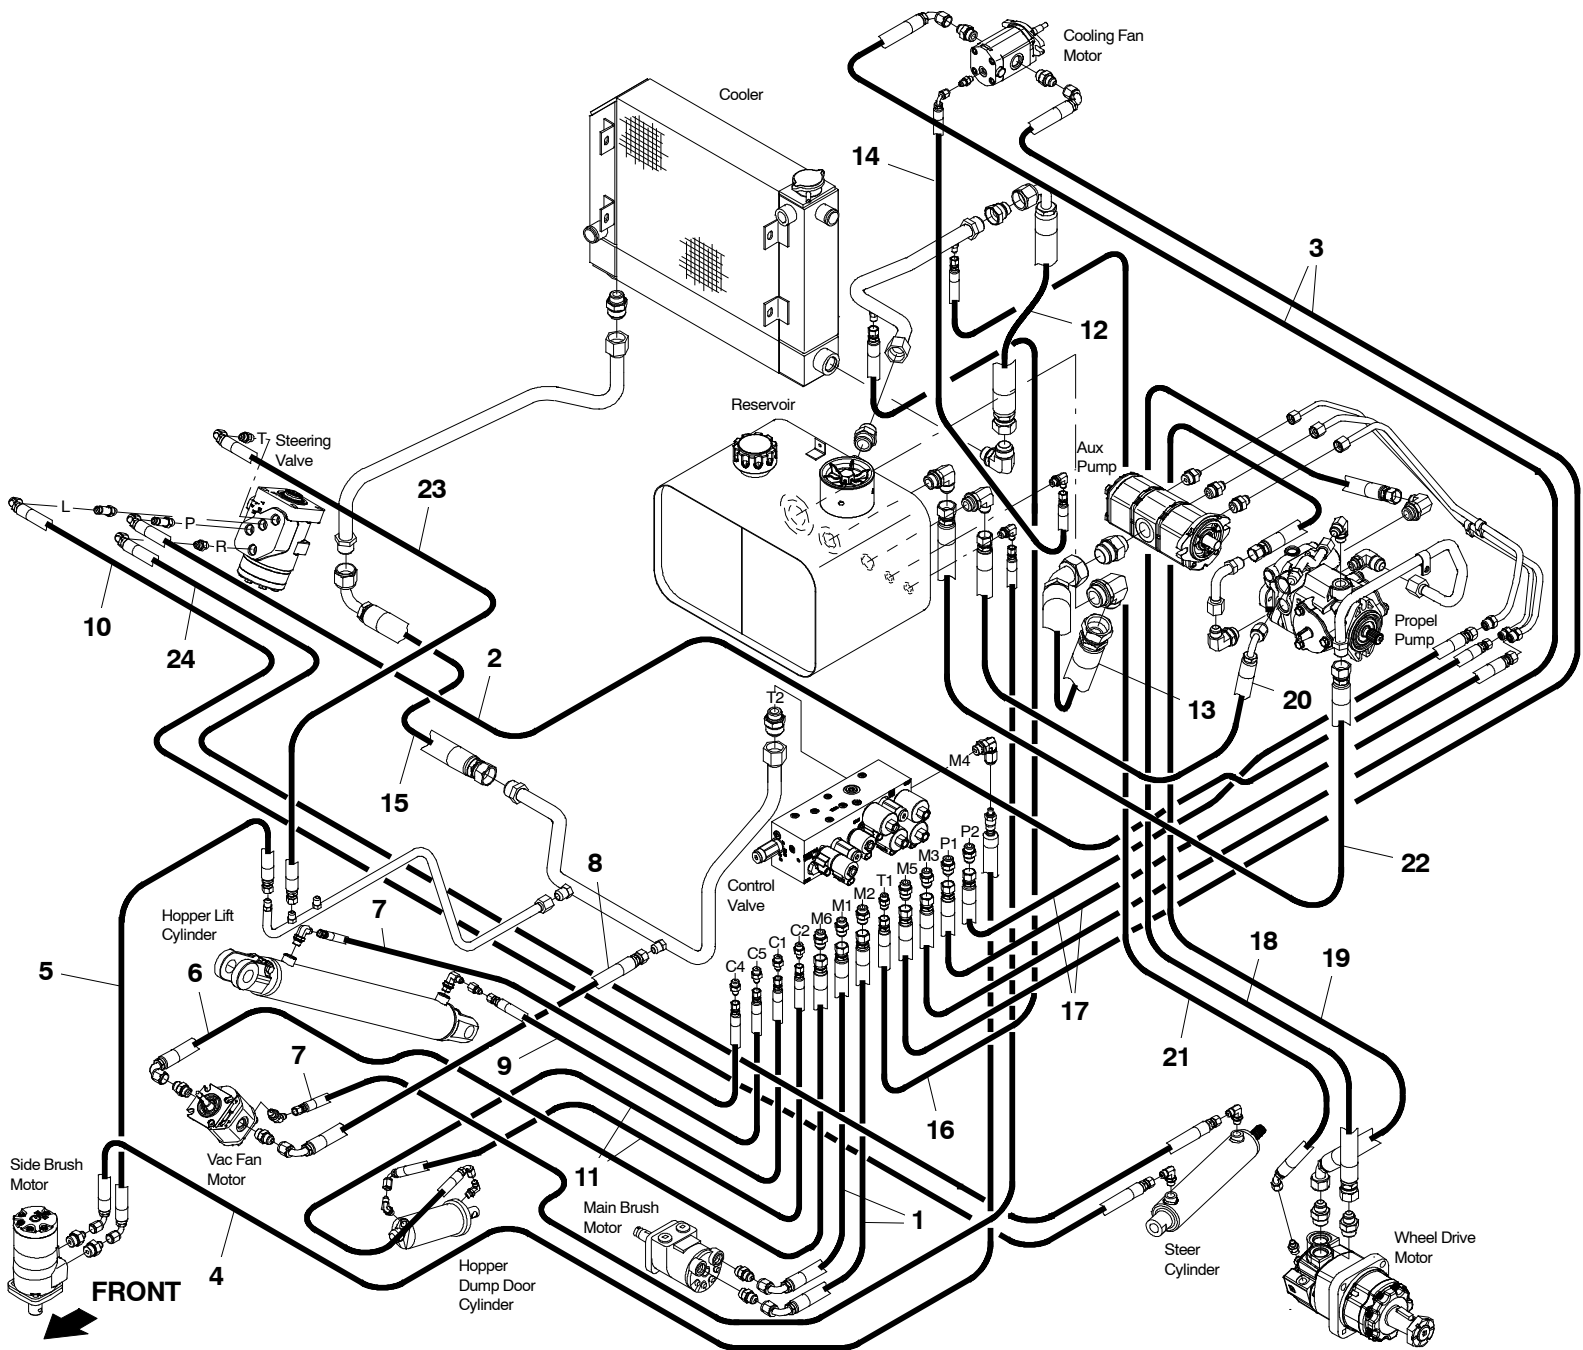


Fig. 52 - Hydraulic Hose Group, S30

Ref.	Part No.	Serial Number	Description	Qty.
1	1067109	(006501-	) Hose, Hyd, Tc08, Ff08e90/Ff08str, 042.0	2
2	1067102	(006501-	) Hose, Hyd, Tc06, Ff06e90/Ff06str, 080.0	1
3	1067110	(006501-	) Hose, Hyd, Tc08, Ff08e90/Ff08str, 052.0	2
4	1072649	(006501-	) Hose, Hyd, Tc06, Ff06e90/Qm06str, 134.0	1
5	1067661	(006501-	) Hose, Hyd, Tc06, Ff06e90/Ff06str, 102.0	1
6	767441	(006501-	) Hose, Hyd, Tc08, Ff08e90/Ff08str, 046.0	1
7	1067094	(006501-	) Hose, Hyd, Tc04, Ff04str/Ff04str, 052.0	2
8	767315	(006501-	) Hose, Hyd, Tc08, Ff08e90/Ff08str, 030.0	1
9	1067089	(006501-	) Hose, Hyd, Tc04, Ff04str/Ff04str, 018.0	1
10	1067099	(006501-	) Hose, Hyd, Tc06, Ff06e90/Ff06str, 054.0	1
11	1067087	(006501-	) Hose, Hyd, Tc04, Ff04e90/Ff04str, 092.0	2
12	1072633	(006501-	) Hose, Hyd, Tc12, Ff12e90/Ff12str, 014.0	1
13	1067300	(006501-	) Hose, Hyd, Suc20, Ff20e45/Ff20str, 022.5	1
14	1067086	(006501-	) Hose, Hyd, Tc04, Ff04e90/Ff04str, 042.0	1
15	1067115	(006501-	) Hose, Hyd, Tc16, Ff16e90/Ff16str, 016.0	1
16	1067106	(006501-	) Hose, Hyd, Tc06, Ff06str/Ff06str, 048.0	1
17	1072531	(006501-	) Hose, Hyd, Tc08, Ff08str/Ff08str, 041.0	2
18	1065452	(006501-	) Hose, Hyd, Spcl, Ff10str/Ff10str, 046.0	1
19	1065453	(006501-	) Hose, Hyd, Spcl, Ff10e45/Ff10str, 056.0	1
20	1067113	(006501-	) Hose, Hyd, Tc10, Ff10e90/Ff10str, 027.0	1
21	1067084	(006501-	) Hose, Hyd, Tc04, Ff04e45/Ff04str, 078.0	1
22	1067299	(006501-	) Hose, Hyd, Suc12, Ff12str/Ff12str, 025.0	1
23	1074041	(006501-	) Hose, Hyd, Tc06, Ff06e90/Ff06str, 032.0	1
24	1067101	(006501-	) Hose, Hyd, Tc06, Ff06e90/Ff06str, 062.0	1

Fig. 53 - Hydraulic Hose Group, S30 XP

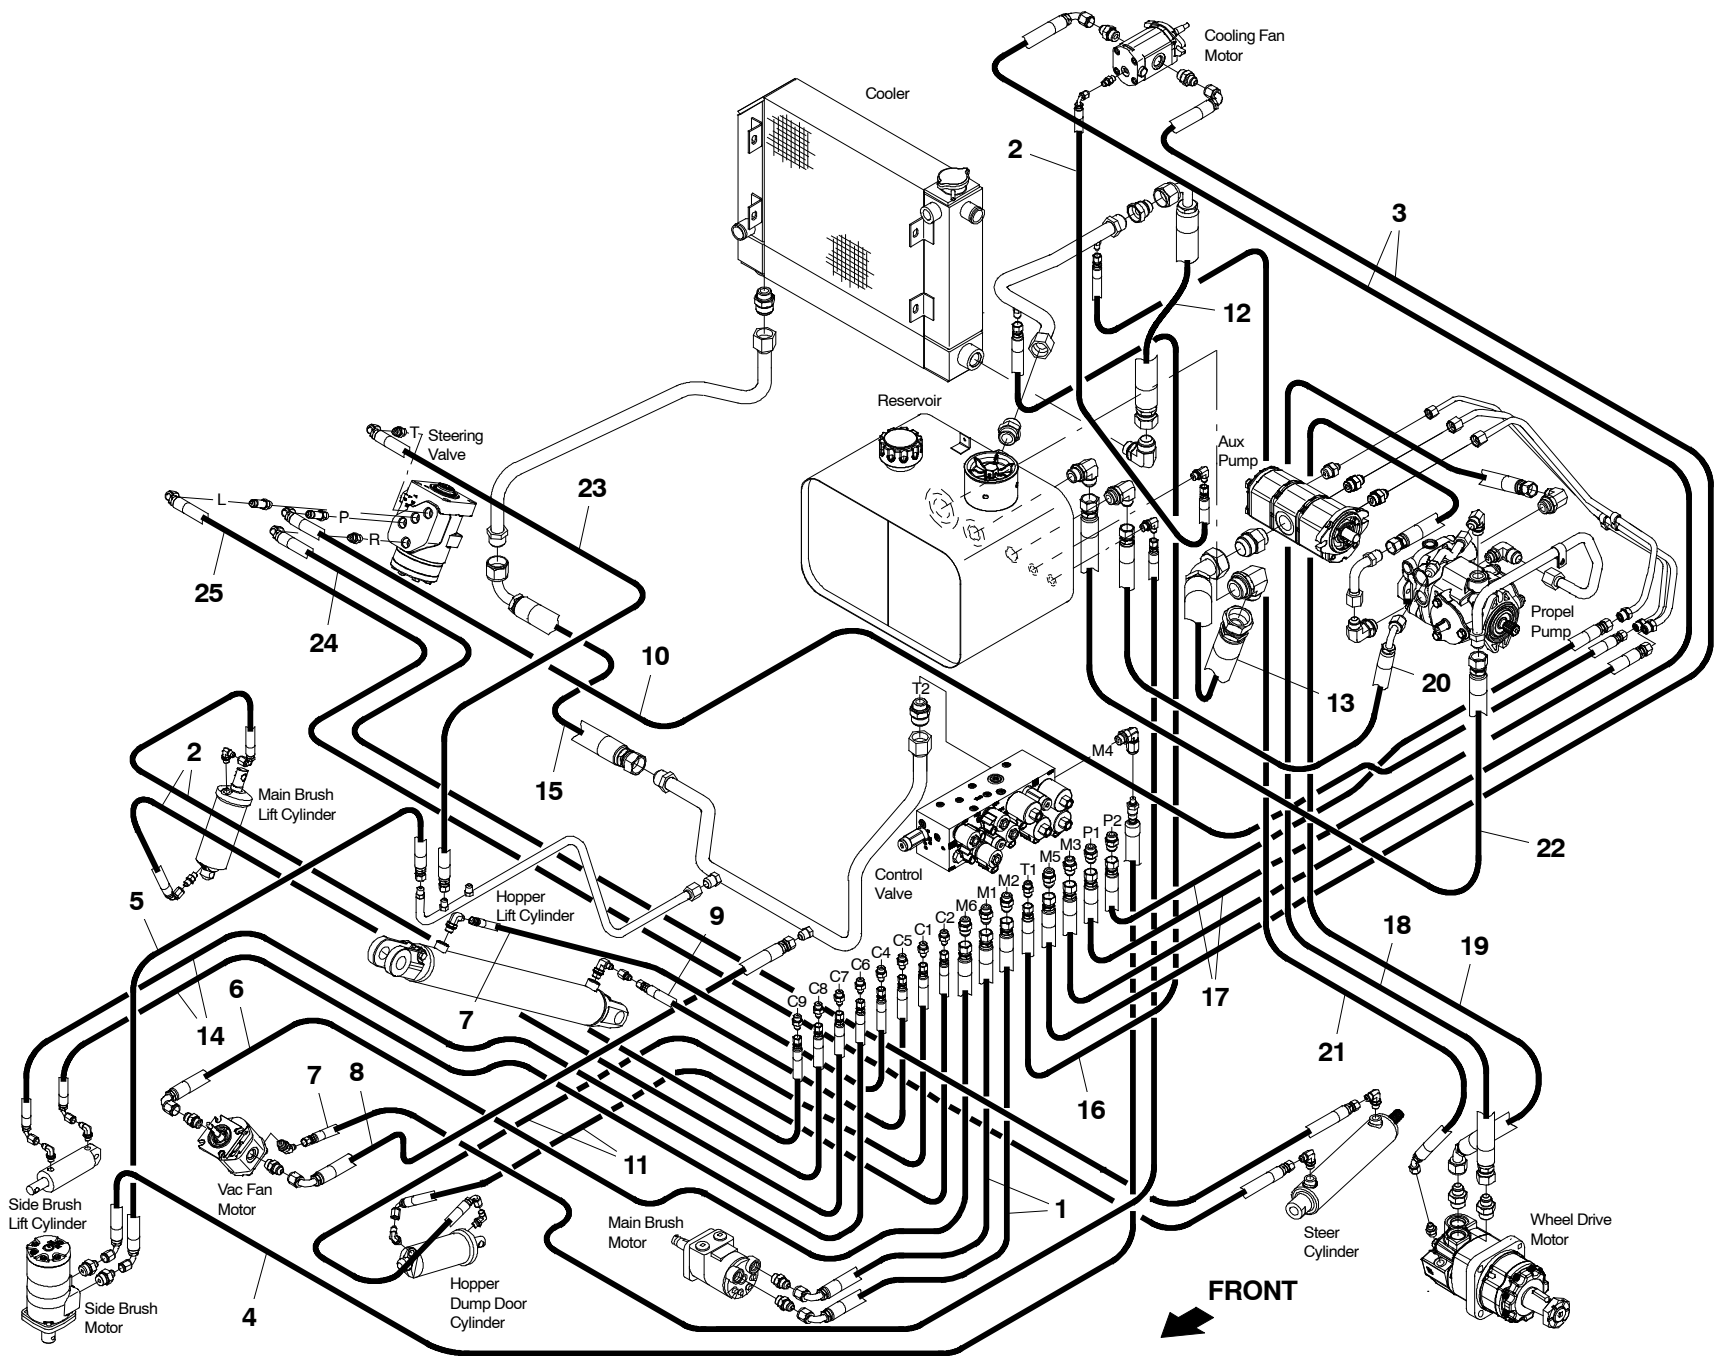


Fig. 53 - Hydraulic Hose Group, S30 XP

Ref.	Part No.	Serial Number	Description	Qty.
1	1067109	(006501-	) Hose, Hyd, Tc08, Ff08e90/Ff08str, 042.0	2
2	1067086	(006501-	) Hose, Hyd, Tc04, Ff04e90/Ff04str, 042.0	3
3	1067110	(006501-	) Hose, Hyd, Tc08, Ff08e90/Ff08str, 052.0	2
4	1072649	(006501-	) Hose, Hyd, Tc06, Ff06e90/Qm06str, 134.0	1
5	1067661	(006501-	) Hose, Hyd, Tc06, Ff06e90/Ff06str, 102.0	1
6	767441	(006501-	) Hose, Hyd, Tc08, Ff08e90/Ff08str, 046.0	1
7	1067094	(006501-	) Hose, Hyd, Tc04, Ff04str/Ff04str, 052.0	2
8	767315	(006501-	) Hose, Hyd, Tc08, Ff08e90/Ff08str, 030.0	1
9	1067089	(006501-	) Hose, Hyd, Tc04, Ff04str/Ff04str, 018.0	1
10	1067102	(006501-	) Hose, Hyd, Tc06, Ff06e90/Ff06str, 080.0	1
11	1067087	(006501-	) Hose, Hyd, Tc04, Ff04e90/Ff04str, 092.0	2
12	1072633	(006501-	) Hose, Hyd, Tc12, Ff12e90/Ff12str, 014.0	1
14	1067088	(006501-	) Hose, Hyd, Tc04, Ff04e90/Ff04str, 126.0	2
13	1067300	(006501-	) Hose, Hyd, Suc20, Ff20e45/Ff20str, 022.5	1
15	1067115	(006501-	) Hose, Hyd, Tc16, Ff16e90/Ff16str, 016.0	1
16	1067106	(006501-	) Hose, Hyd, Tc06, Ff06str/Ff06str, 048.0	1
17	1072531	(006501-	) Hose, Hyd, Tc08, Ff08str/Ff08str, 041.0	2
18	1065452	(006501-	) Hose, Hyd, Spcl, Ff10str/Ff10str, 046.0	1
19	1065453	(006501-	) Hose, Hyd, Spcl, Ff10e45/Ff10str, 056.0	1
20	1067113	(006501-	) Hose, Hyd, Tc10, Ff10e90/Ff10str, 027.0	1
21	1067084	(006501-	) Hose, Hyd, Tc04, Ff04e45/Ff04str, 078.0	1
22	1067299	(006501-	) Hose, Hyd, Suc12, Ff12str/Ff12str, 025.0	1
23	1074041	(006501-	) Hose, Hyd, Tc06, Ff06e90/Ff06str, 032.0	1
24	1067101	(006501-	) Hose, Hyd, Tc06, Ff06e90/Ff06str, 062.0	1
25	1067099	(006501-	) Hose, Hyd, Tc06, Ff06e90/Ff06str, 054.0	1



Fig. 54 - Hydraulic Hose Group, S30 X4

Ref.	Part No.	Serial Number	Description	Qty.
1	1067109	(006501-	) Hose, Hyd, Tc08, Ff08e90/Ff08str, 042.0	2
2	1042004	(006501-	) Sleeve, Hose, Hi- Temp, 1.12id, 25.0l	2
3	1067110	(006501-	) Hose, Hyd, Tc08, Ff08e90/Ff08str, 052.0	2
4	1072649	(006501-	) Hose, Hyd, Tc06, Ff06e90/Qm06str, 134.0	1
5	1067661	(006501-	) Hose, Hyd, Tc06, Ff06e90/Ff06str, 102.0	1
6	767441	(006501-	) Hose, Hyd, Tc08, Ff08e90/Ff08str, 046.0	1
7	1067094	(006501-	) Hose, Hyd, Tc04, Ff04str/Ff04str, 052.0	2
8	767315	(006501-	) Hose, Hyd, Tc08, Ff08e90/Ff08str, 030.0	1
9	1067089	(006501-	) Hose, Hyd, Tc04, Ff04str/Ff04str, 018.0	1
10	1074072	(006501-	) Hose, Hyd, Tc06, Ff06e90/Ff06str, 035.0	1
11	1067087	(006501-	) Hose, Hyd, Tc04, Ff04e90/Ff04str, 092.0	2
12	1072633	(006501-	) Hose, Hyd, Tc12, Ff12e90/Ff12str, 014.0	1
13	1067301	(006501-	) Hose, Hyd, Suc20, Ff20e45/Ff20str, 025.0	1
14	1067058	(006501-	) Fitting, Hyd, Tee, Fm04/Fm04/Fm04,Bh Br	1
15	1067115	(006501-	) Hose, Hyd, Tc16, Ff16e90/Ff16str, 016.0	1
16	1067106	(006501-	) Hose, Hyd, Tc06, Ff06str/Ff06str, 048.0	1
17	1072531	(006501-	) Hose, Hyd, Tc08, Ff08str/Ff08str, 041.0	2
18	1067154	(006501-	) Hose, Hyd, Spcl, Ff12e45/Ff12str, 028.0	1
19	1067153	(006501-	) Hose, Hyd, Spcl, Ff12e45/Ff12str, 025.0	1
20	1067298	(006501-	) Hose, Hyd, Suc12, Ff12e45/Ff12str, 32.0	1
21	1067092	(006501-	) Hose, Hyd, Med04, Ff04str/Ff04str, 042.0	1
22	1067114	(006501-	) Hose, Hyd, Med10, Ff10str/Ff10str, 024.0	1
23	1067100	(006501-	) Hose, Hyd, Tc06, Ff06e90/Ff06str, 58.0	1
24	1067103	(006501-	) Hose, Hyd, Tc06, Ff06e90/Ff06str, 84.0	2
25	1067096	(006501-	) Hose, Hyd, Tc06, Ff06e90/Ff06str, 026.0	1
26	1067093	(006501-	) Hose, Hyd, Med04, Ff04str/Ff04str, 051.0	1
27	1067088	(006501-	) Hose, Hyd, Tc04, Ff04e90/Ff04str, 126.0	2
28	1067086	(006501-	) Hose, Hyd, Tc04, Ff04e90/Ff04str, 042.0	3
29	1032950	(006501-	) Hose, Hyd, Spcl, Jf10e45/Jf10str, 029.0	4
30	1067092	(006501-	) Hose, Hyd, Med04, Ff04str/Ff04str, 42.0	1
31	1067095	(006501-	) Hose, Hyd, Tc06, Ff06e90/Ff06str, 20.0	1
32	1067094	(006501-	) Hose, Hyd, Med04, Ff04str/Ff04str, 052.0	1
33	1067085	(006501-	) Hose, Hyd, Tc04, Ff04e90/Ff04str, 21.0	1

Fig. 55 - Hydraulic Reservoir Group

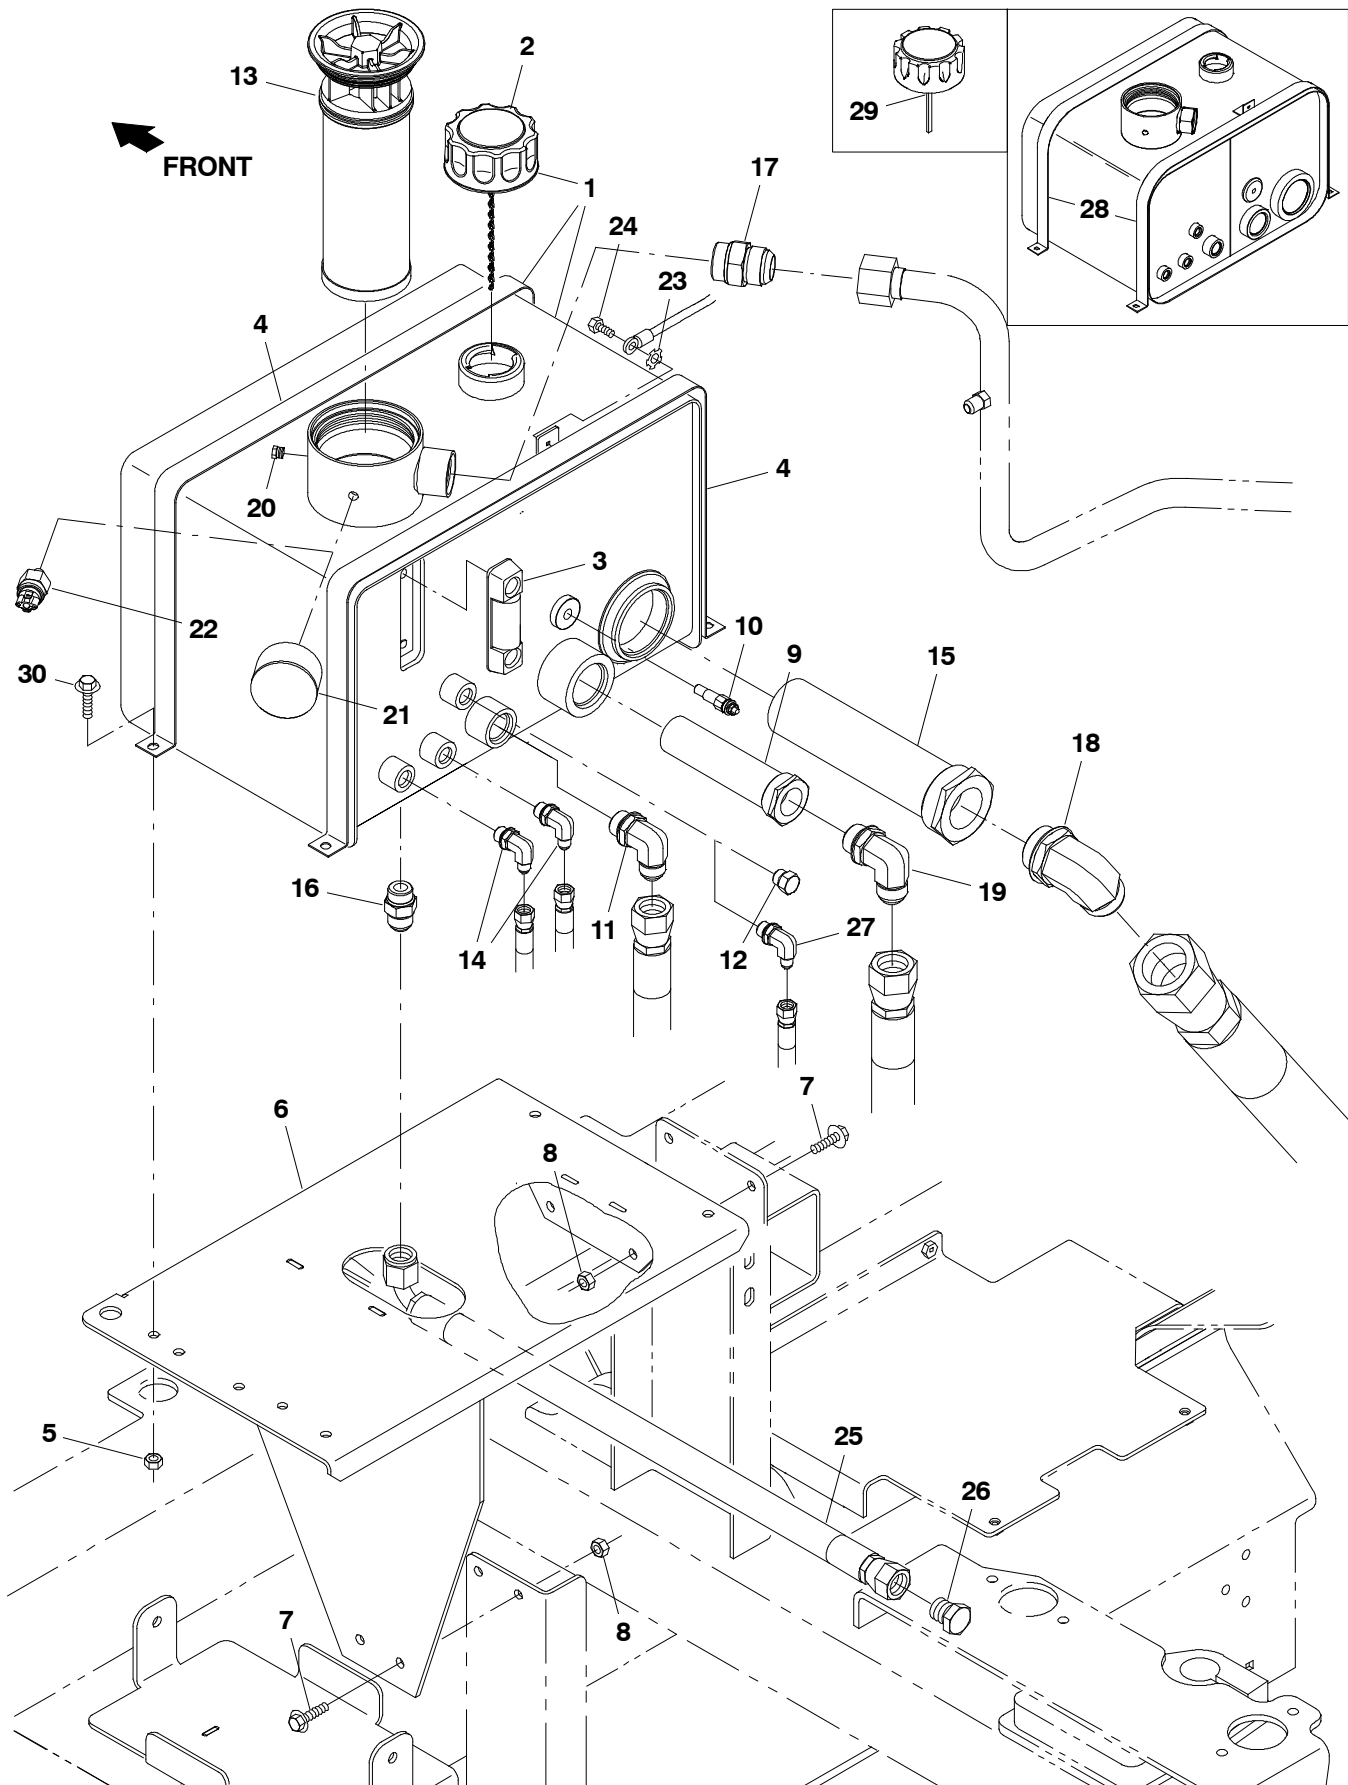


Fig. 55 - Hydraulic Reservoir Group

	Ref.	Part No.	Serial Number	Description	Qty.
▽	1	9004518	(006501-	) Reservoir, Hyd, W/ Label, Replmt	1
▲	2	1018289	(006501-	) Cap, Breather, Hyd, W Chain	1
▲	3	65215	(007685-	) Gauge, Sensing, Level	1
▲	4	1074668	(007685-	) Strap, Tank, Hyd	2
	5	08709	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI	4
	6	1045125	(006501-	) Bracket Wldt, Reservoir, Hyd	1
	7	1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	4
	8	07791	(006501-	) Nut, Hex, Flng, M8 X 1.25	4
	9	361023	(006501-	) Strainer, Hyd, 010gpm 100mesh	1
	10	58592	(006501-	) Send- Unit, Water, Temp,04npt[113oh/195d]	1
	11	762469	(006501-	) Fitting, Hyd, E90, Fm10/Om12	1
	12	46482	(006501-	) Fitting, Hyd, Plug, Om06 (S30 and XP Only)	1
	13	1021579	(006501-	) Filter Assy, Hyd, 10mic	1
	14	762425	(006501-	) Fitting, Hyd, E90, Fm04/Om06	2
	15	31613	(006501-	) Strainer, Hyd, 025gpm 100mesh 03psi	1
	16	762463	(006501-	) Fitting, Hyd, Str, Fm10/Om10	1
	17	762481	(006501-	) Fitting, Hyd, Str, Fm16/Om16	1
	18	762484	(006501-	) Fitting, Hyd, E90, Fm20/Om20	1
	19	762492	(006501-	) Fitting, Hyd, E90, Fm12/Om12	1
	20	63511	(006501-	) Fitting, Hyd, Plug, Pm02	1
	21	1025132	(006501-	) Indicator, Press, 60psi (S30 Only)	1
	22	1025133	(006501-	) Switch, Press, Hyd, 18- 24psi, Spst, No (S30 XP and X4 Only)	1
	23	32982	(006501-	) Washer, Lock, Int, 0.25	1
	24	222158	(006501-	) Screw, Hex, M6 X 1.00 X 10, Fmg	1
	25	1067773	(006501-	) Hose, Hyd, Tc10, Ff10e90/Ff10str, 42.0	1
	26	762156	(006501-	) Fitting, Hyd, Plug, Fm10	1
	27	762425	(006501-	) Fitting, Hyd, E90, Fm04/Om06 (S30 X4 Only)	1
	28	1032915	(006501- 007684	) Strap, Tank, Hyd	2
	29	25122	(006501- 007684	) Cap, Breather, Hyd, 2.4 Ds Dipstick	1
	30	1037354	(006501-	) Screw, Hex, M8 X 1.25 X 30, 9.8, Sems	2

Fig. 56 - Hydraulic Cooler and Tubes Group

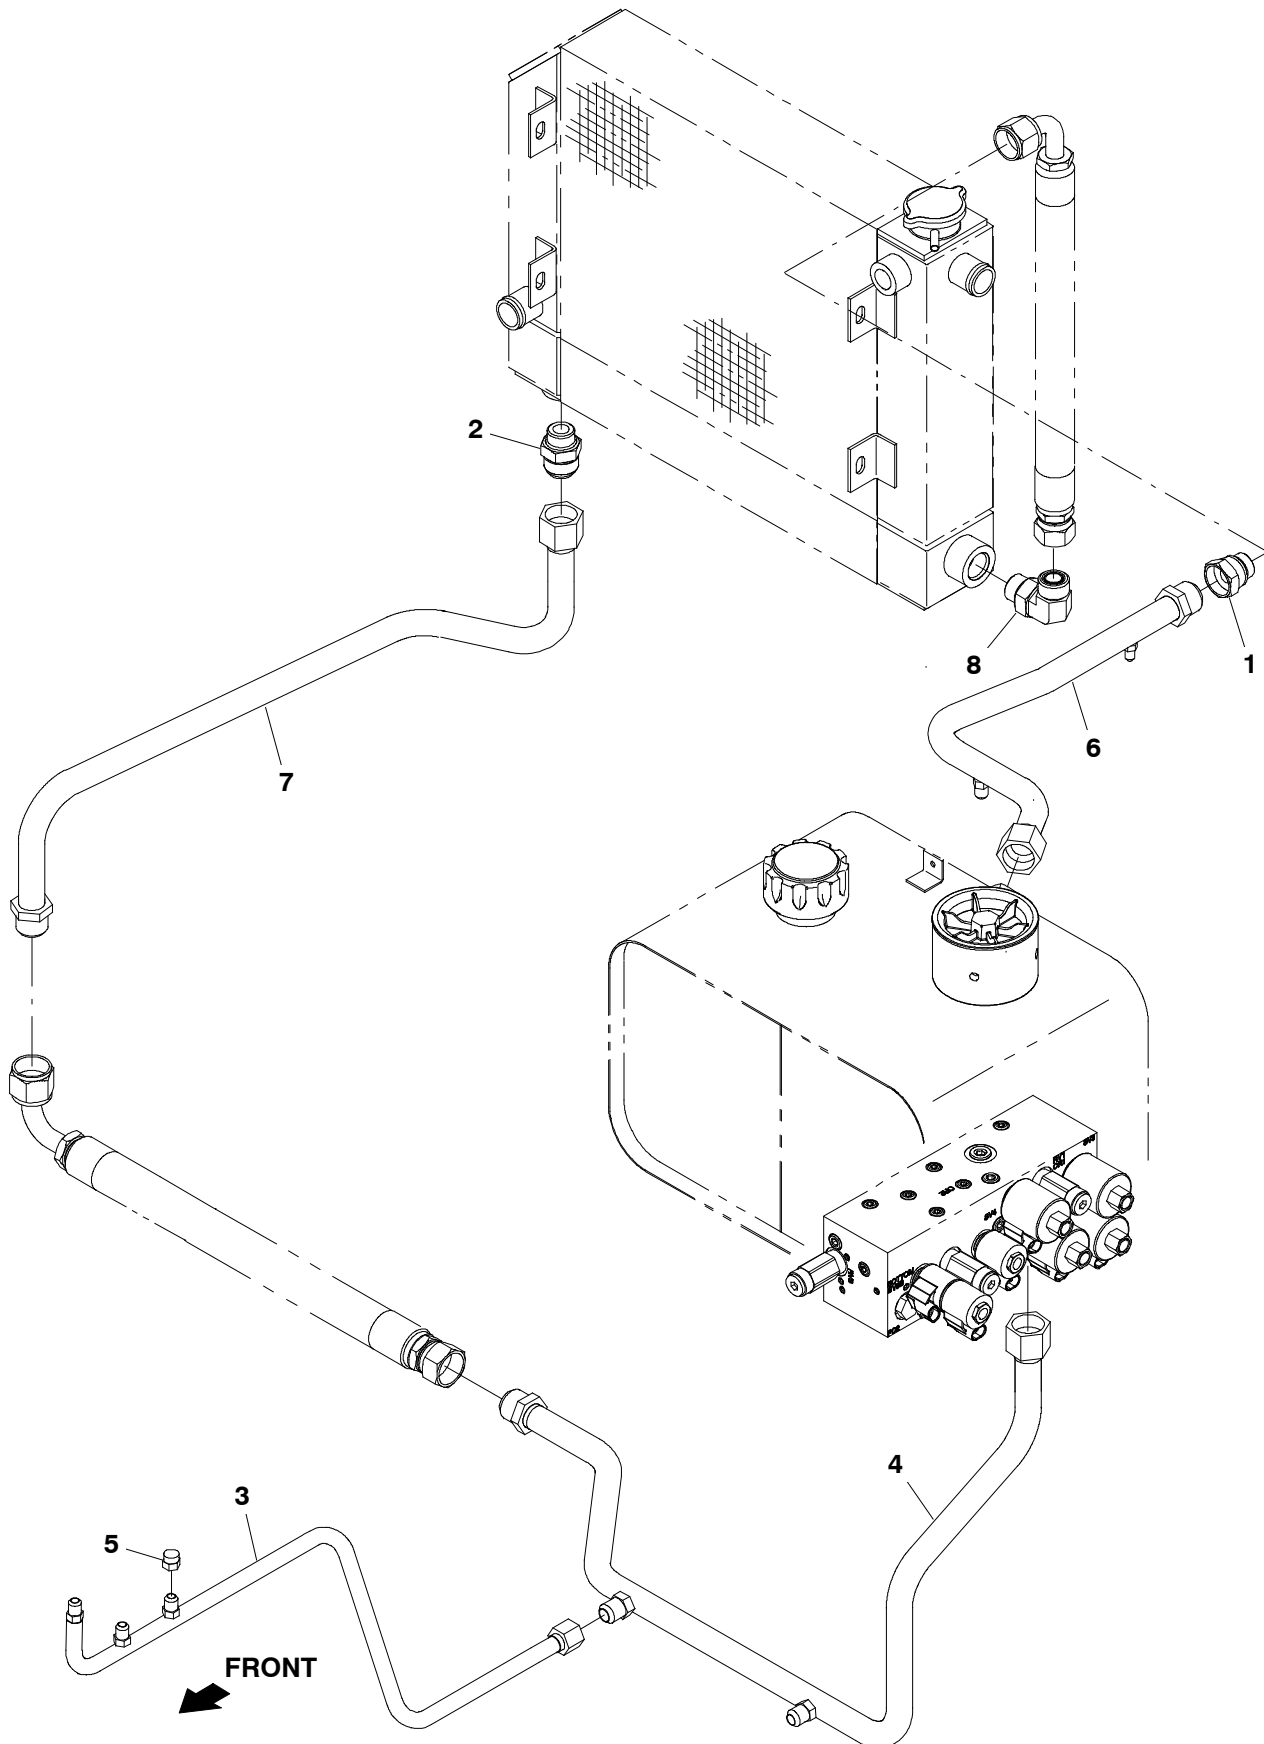


Fig. 56 - Hydraulic Cooler and Tubes Group

Ref.	Part No.	Serial Number	Description	Qty.
1	1072632	(006501-	) Fitting, Hyd, Str, Ff16/Fm12	1
2	1068299	(006501-	) Fitting, Hyd, Str, Fm16/Om12	1
3	1067177	(006501-	) Tube, Hyd, Steering Drain	1
4	1067187	(006501-	) Tube Assy, Hyd, Valve Tank [Coyote]	1
5	40625	(006501-	) Fitting, Hyd, Cap, Jf06	1
6	1067185	(006501-	) Tube Assy, Hyd, Fltr	1
7	1067186	(006501-	) Tube Assy, Hyd, Cooler [Coyote]	1
8	762492	(006501-	) Fitting, Hyd, E90, Fm12/Om12	1

Fig. 57 - Hydraulic Pumps Group, S30 and XP

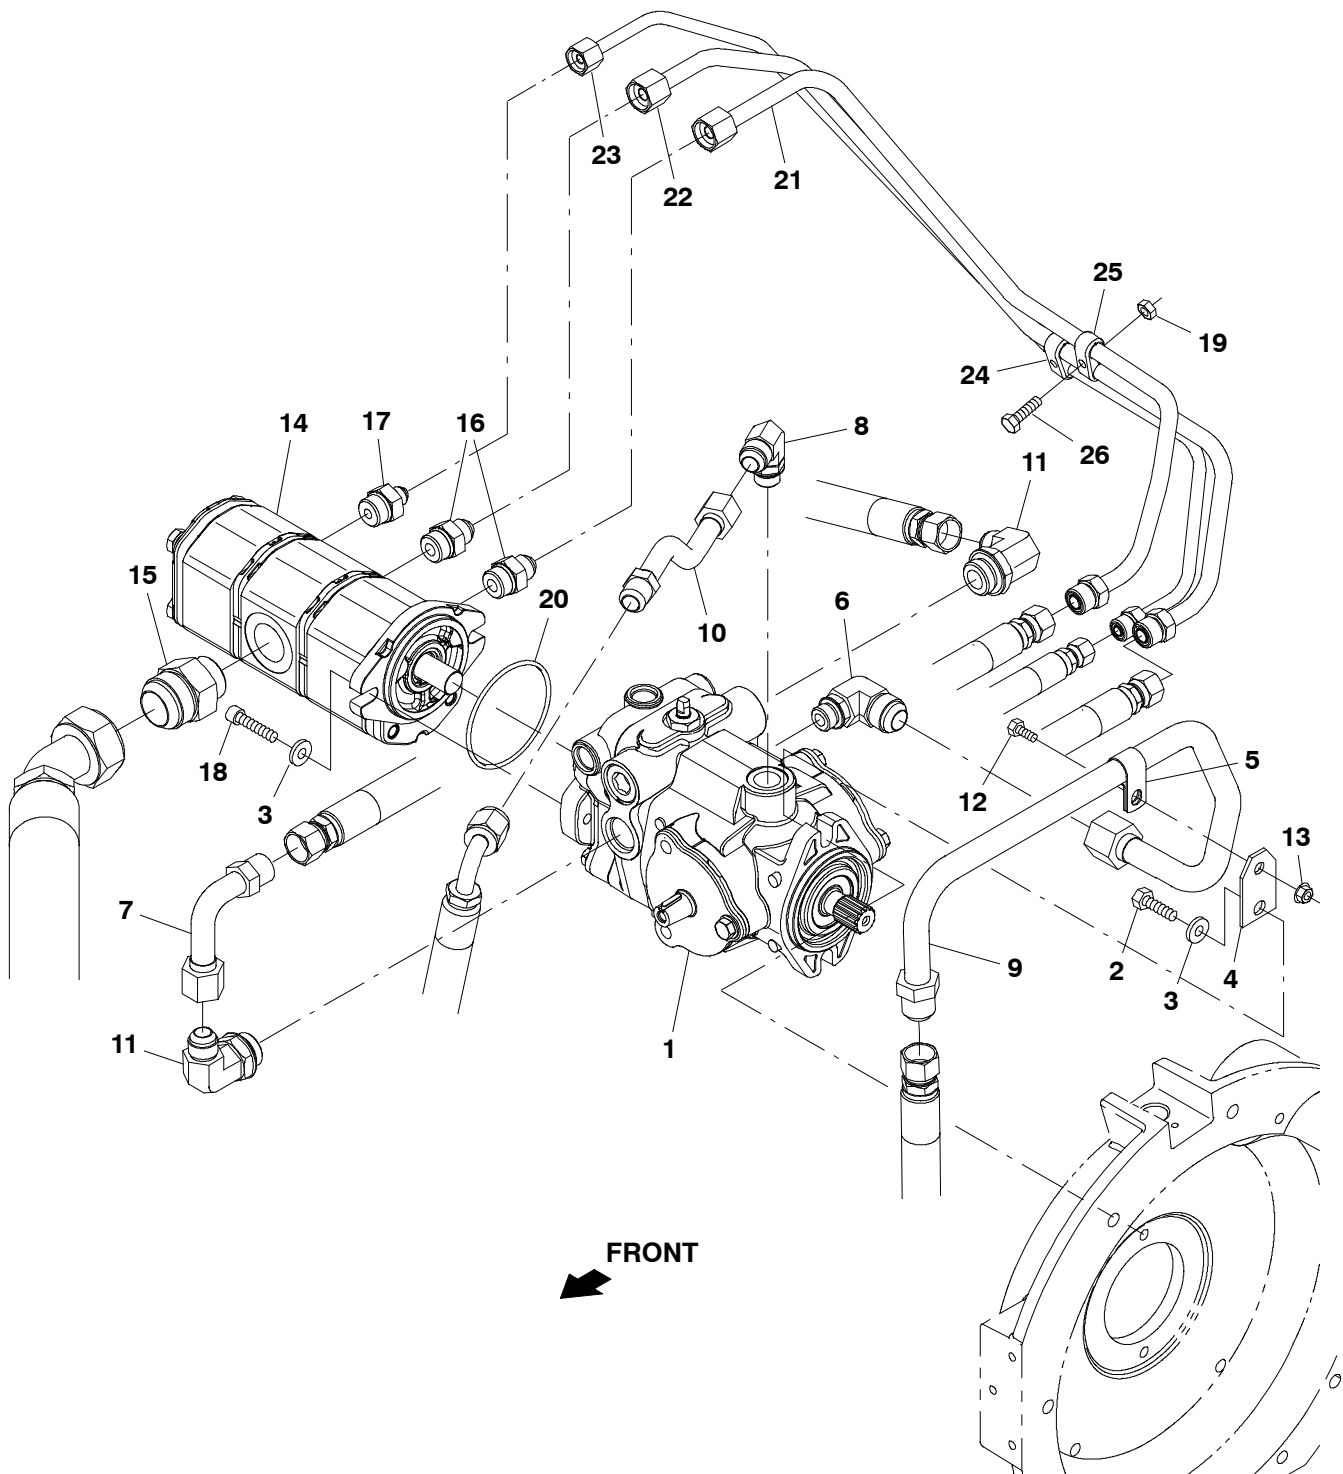


Fig. 57 - Hydraulic Pumps Group, S30 and XP

Ref.	Part No.	Serial Number	Description	Qty.
1	1054905	(006501-	) Pump, Hyd, Piston, Var, 1.24 4500, Cw (See Breakdowns)	1
2	21198	(006501-	) Screw, Hex, .38- 16 X 1.25, G5	2
3	32485	(006501-	) Washer, Flat, 0.38, Sae	4
4	1039309	(006501-	) Bracket, Sppt, Hyd Tube	1
5	07471	(006501-	) Clamp, Cable, Stl, 0.75d X 0.75w, 1hole	1
6	1067053	(006501-	) Fitting, Hyd, E90, Fm12/Om08	1
7	1065781	(006501-	) Tube, Hyd, Pump, Rear Drive, Ff10/Fm10	1
8	762466	(006501-	) Fitting, Hyd, E90, Fm10/Om08	1
9	1067181	(006501-	) Tube, Hyd [Pump Charge]	1
10	1067182	(006501-	) Tube, Hyd, Pump, Drain	1
11	762469	(006501-	) Fitting, Hyd, E90, Fm10/Om12	2
12	16735	(006501-	) Screw, Hex, M8 X 1.25 X 16, 8.8	1
13	07791	(006501-	) Nut, Hex, Flng, M8 X 1.25	1
▽	14	1030374	(006501-) Pump, Hyd, Gear, Ext, 3, 00.70 2500, Cw	1
▲		373708	(006501-) Pump, Info, Repair	1
▲		373707	(006501-) Seal Kit	1
15	1007953	(006501-	) Fitting, Hyd, Str, Fm20/Om16	1
16	762456	(006501-	) Fitting, Hyd, Str, Fm08/Om10	2
17	762439	(006501-	) Fitting, Hyd, Str, Fm06/Om10	1
18	10832	(006501-	) Screw, Soc, .38- 16 X 1.50, Al	2
19	08708	(006501-	) Nut, Hex, Lock, M6 X 1.00, NI	2
20	65145- 1	(006501-	) Seal, Org, .069 X 03.06id	1
21	1067180	(006501-	) Tube, Hyd, Gear Pump Rear [Coyote]	1
22	1071716	(006501-	) Tube, Hyd, Gear Pump Middle[S30 Mit2013]	1
23	1071717	(006501-	) Tube, Hyd, Gear Pump Front[S30 Mit2013]	1
24	1043755	(006501-	) Clamp, Tube, 0.37d 0.50d, 2 Hole	1
25	1043754	(006501-	) Clamp, Tube, 0.50d 0.50d, 2 Hole	1
26	06944	(006501-	) Screw, Hex, M6 X 1.00 X 25, 8.8	2

Fig. 58 - Hydraulic Pumps Group, S30 X4

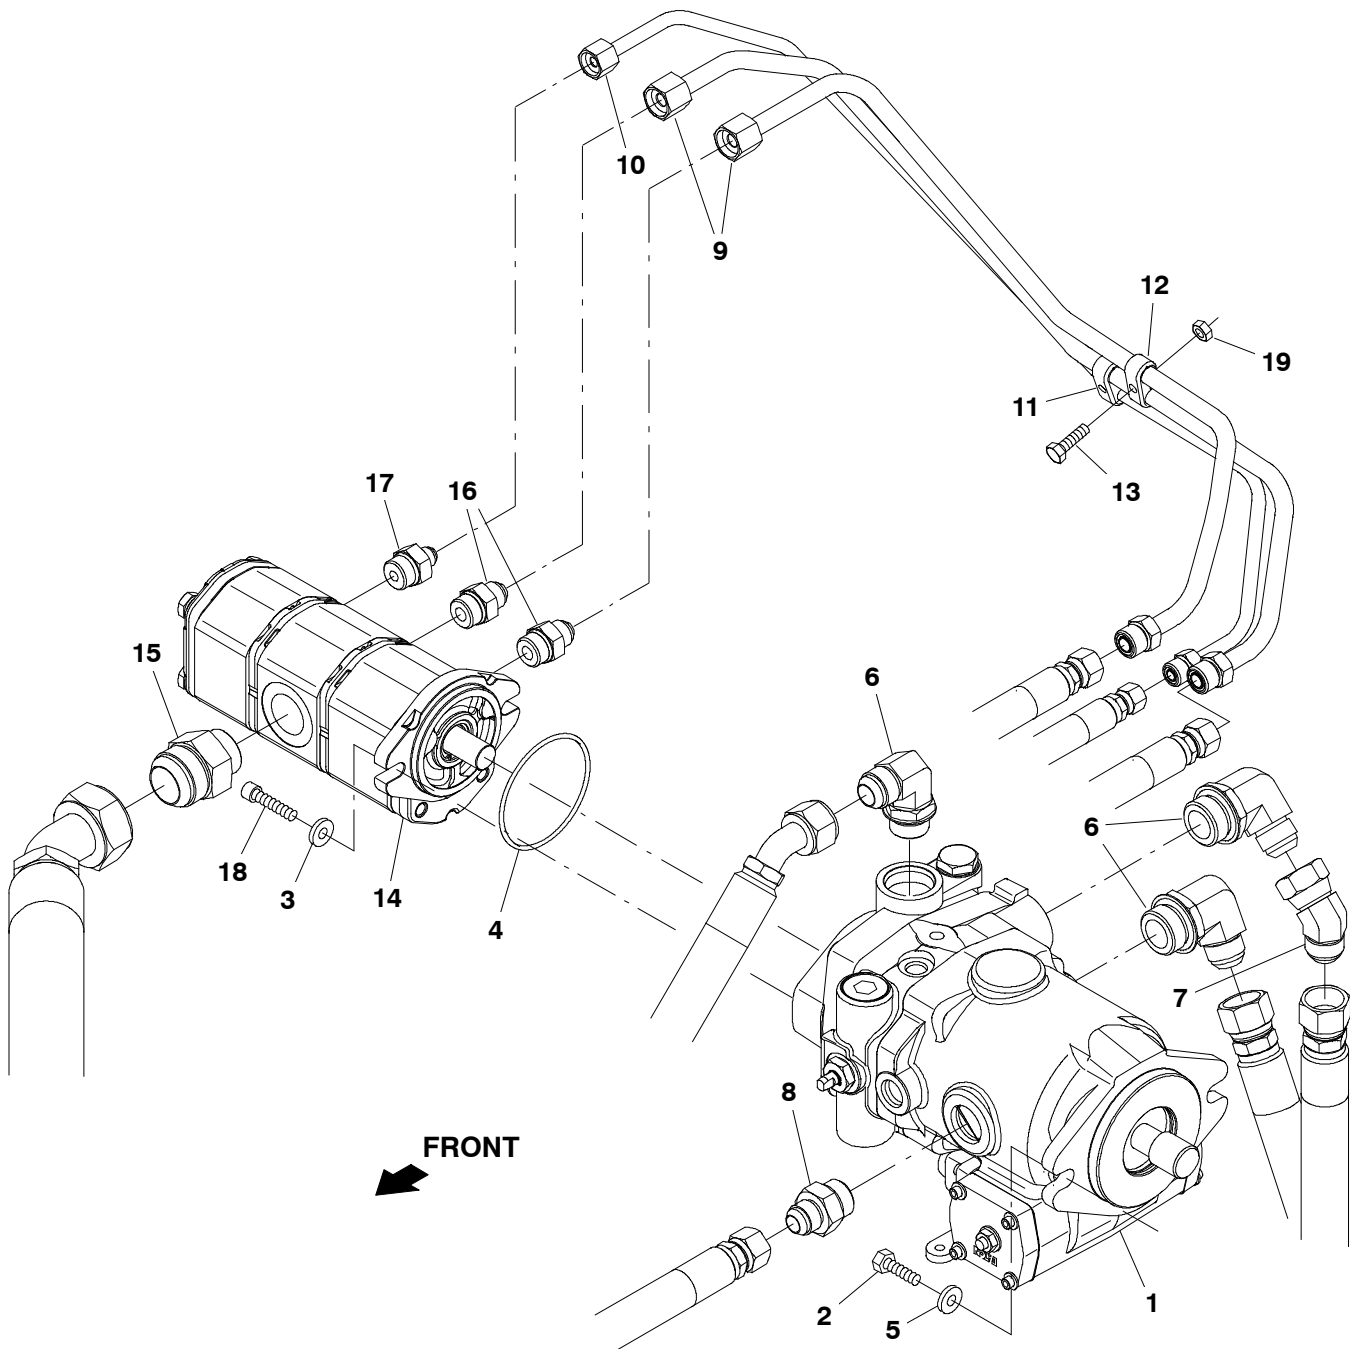


Fig. 57 - Hydraulic Pumps Group, S30 X4

Ref.	Part No.	Serial Number	Description	Qty.
1	1029255	(006501-	) Pump, Hyd, Piston, Var, 2.48 4500, Cw (See Breakdowns)	1
2	06969	(006501-	) Screw, Hex, M12 X 1.75 X 40, 8.8	2
3	32485	(006501-	) Washer, Flat, 0.38, Sae	2
4	65145- 1	(006501-	) Seal, Org, .069 X 03.06id	1
5	36328	(006501-	) Washer, Flat, Belleville, .50	2
6	767407	(006501-	) Fitting, Hyd, E90, Fm12/Om16	3
7	1067057	(006501-	) Fitting, Hyd, E45, Ff12/Jm12	1
8	762468	(006501-	) Fitting, Hyd, Str, Fm10/Om12	1
9	1071716	(006501-	) Tube, Hyd, Gear Pump Middle[S30 Mit2013]	2
10	1071717	(006501-	) Tube, Hyd, Gear Pump Front[S30 Mit2013]	1
11	1043755	(006501-	) Clamp, Tube, 0.37d 0.50d, 2 Hole	1
12	1043754	(006501-	) Clamp, Tube, 0.50d 0.50d, 2 Hole	1
13	06944	(006501-	) Screw, Hex, M6 X 1.00 X 25, 8.8	2
▽	14	1030374	(006501-) Pump, Hyd, Gear, Ext, 3, 00.70 2500, Cw	1
▲		373708	(006501-) Pump, Info, Repair	1
▲		373707	(006501-) Seal Kit	1
15	1007953	(006501-	) Fitting, Hyd, Str, Fm20/Om16	1
16	762456	(006501-	) Fitting, Hyd, Str, Fm08/Om10	2
17	762439	(006501-	) Fitting, Hyd, Str, Fm06/Om10	1
18	10832	(006501-	) Screw, Soc, .38- 16 X 1.50, Al	2
19	08708	(006501-	) Nut, Hex, Lock, M6 X 1.00, NI	2

Fig. 59 - Hydraulic Valve Group, S30

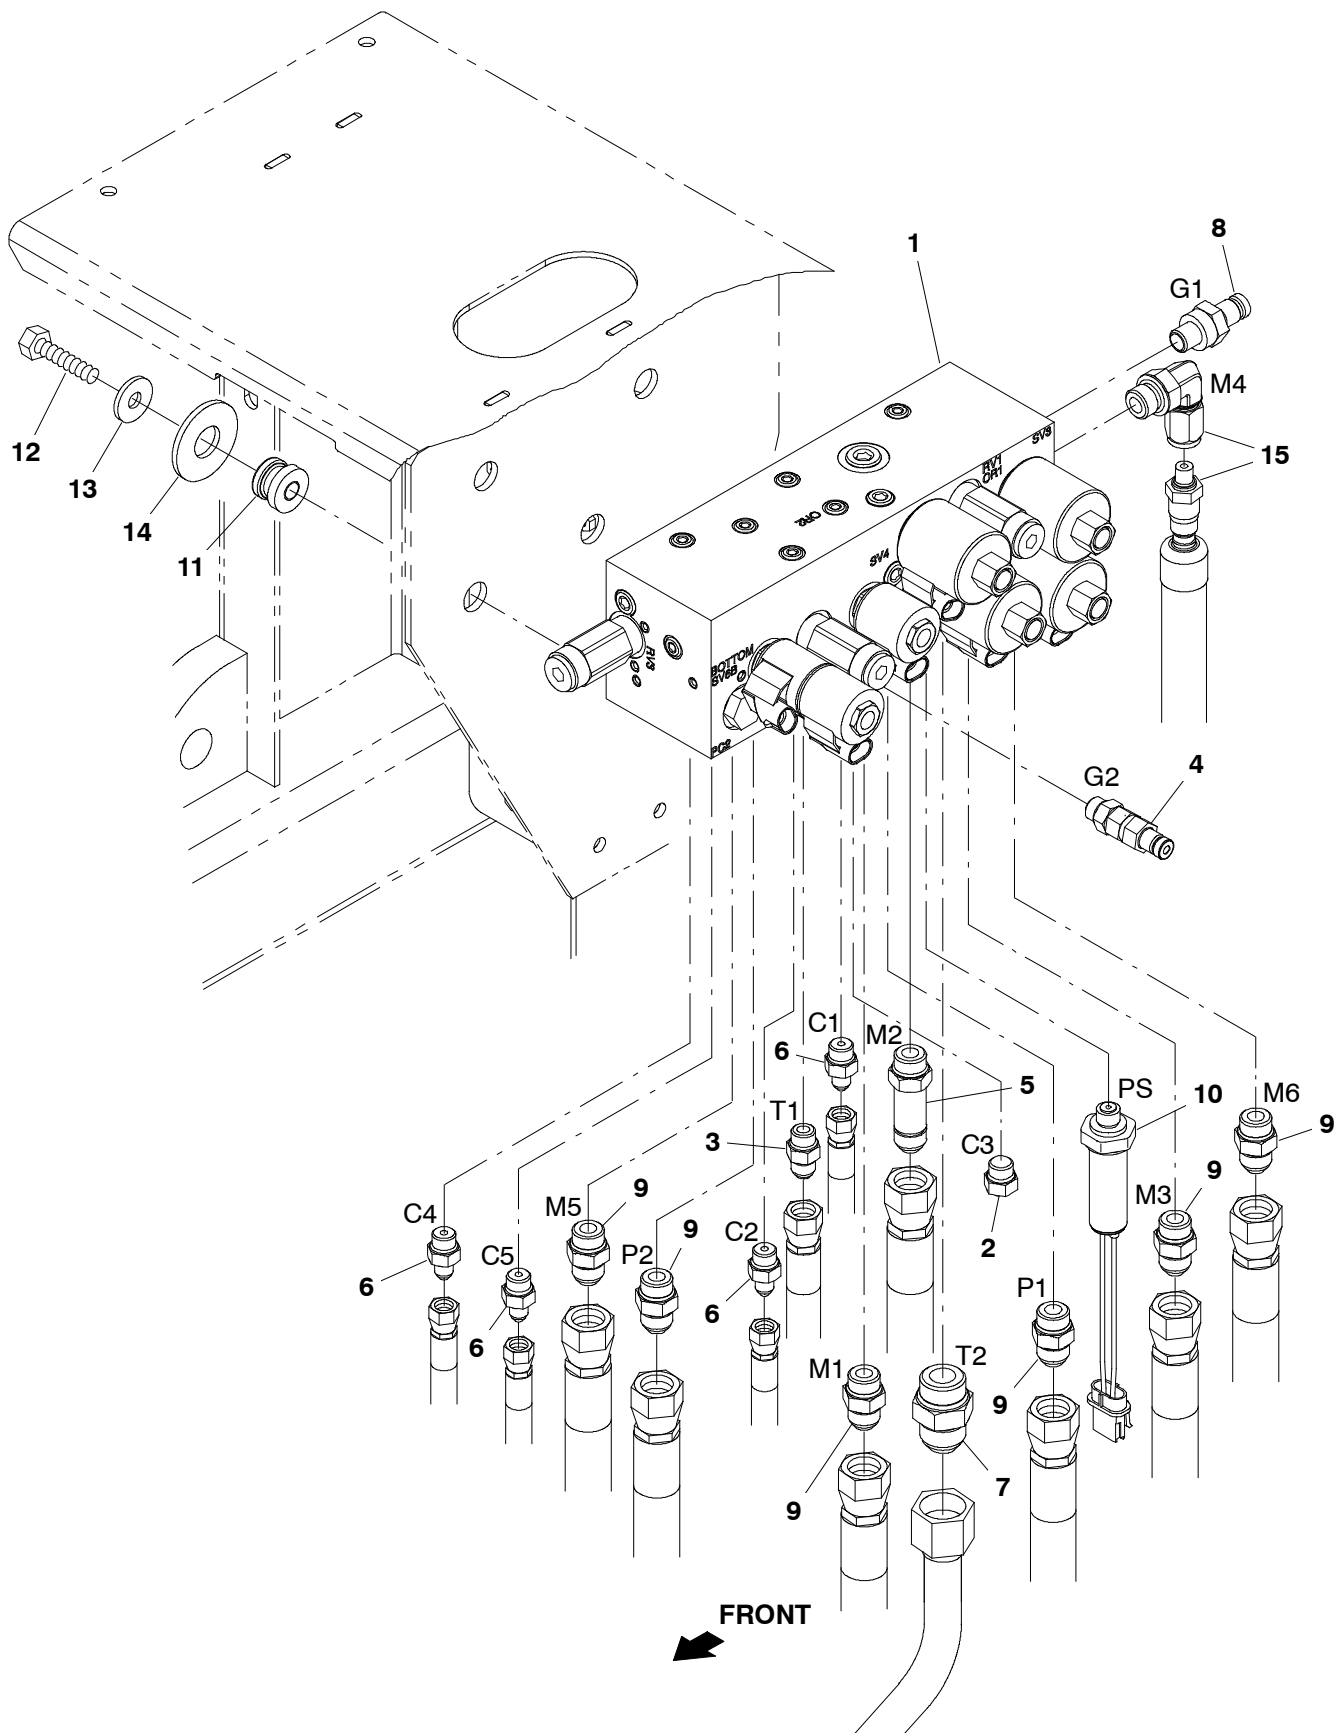


Fig. 59 - Hydraulic Valve Group, S30

Ref.	Part No.	Serial Number	Description	Qty.
1	1040091	(006501-	) Valve, Hyd, Solenoid, 12vdc [06s] (See Breakdowns)	1
2	46482	(006501-	) Fitting, Hyd, Plug, Om06	1
3	762433	(006501-	) Fitting, Hyd, Str, Fm06/Om06	1
4	1043652	(006501-	) Fitting, Hyd, Str, Om06/Qm04	1
5	767430	(006501-	) Fitting, Hyd, Str, Fm08/Om08, Long	1
6	762426	(006501-	) Fitting, Hyd, Str, Fm04/Om06	4
7	1068299	(006501-	) Fitting, Hyd, Str, Fm16/Om12	1
8	395973	(006501-	) Fitting, Hyd, Str, Om04/Qm04	1
9	762445	(006501-	) Fitting, Hyd, Str, Fm08/Om08	6
10	769077	(006501-	) Switch Assy, Press, No 02400psi	1
11	54274	(006501-	) Isolator, Vib, Bshg, 1.1d 0.6l .4b 0.78h	4
12	39285	(006501-	) Screw, Hex, M10 X 1.50 X 40, 8.8	4
13	39350	(006501-	) Washer, Flat, 0.75, Sae	4
14	13248	(006501-	) Washer, Flat, 0.40b 1.12d .12, Stl, Pl	4
15	9011154	(006501-	) Hose Kit, Hyd, Replmt [S30]	1

Fig. 60 - Hydraulic Valve Group, S30 XP and X4

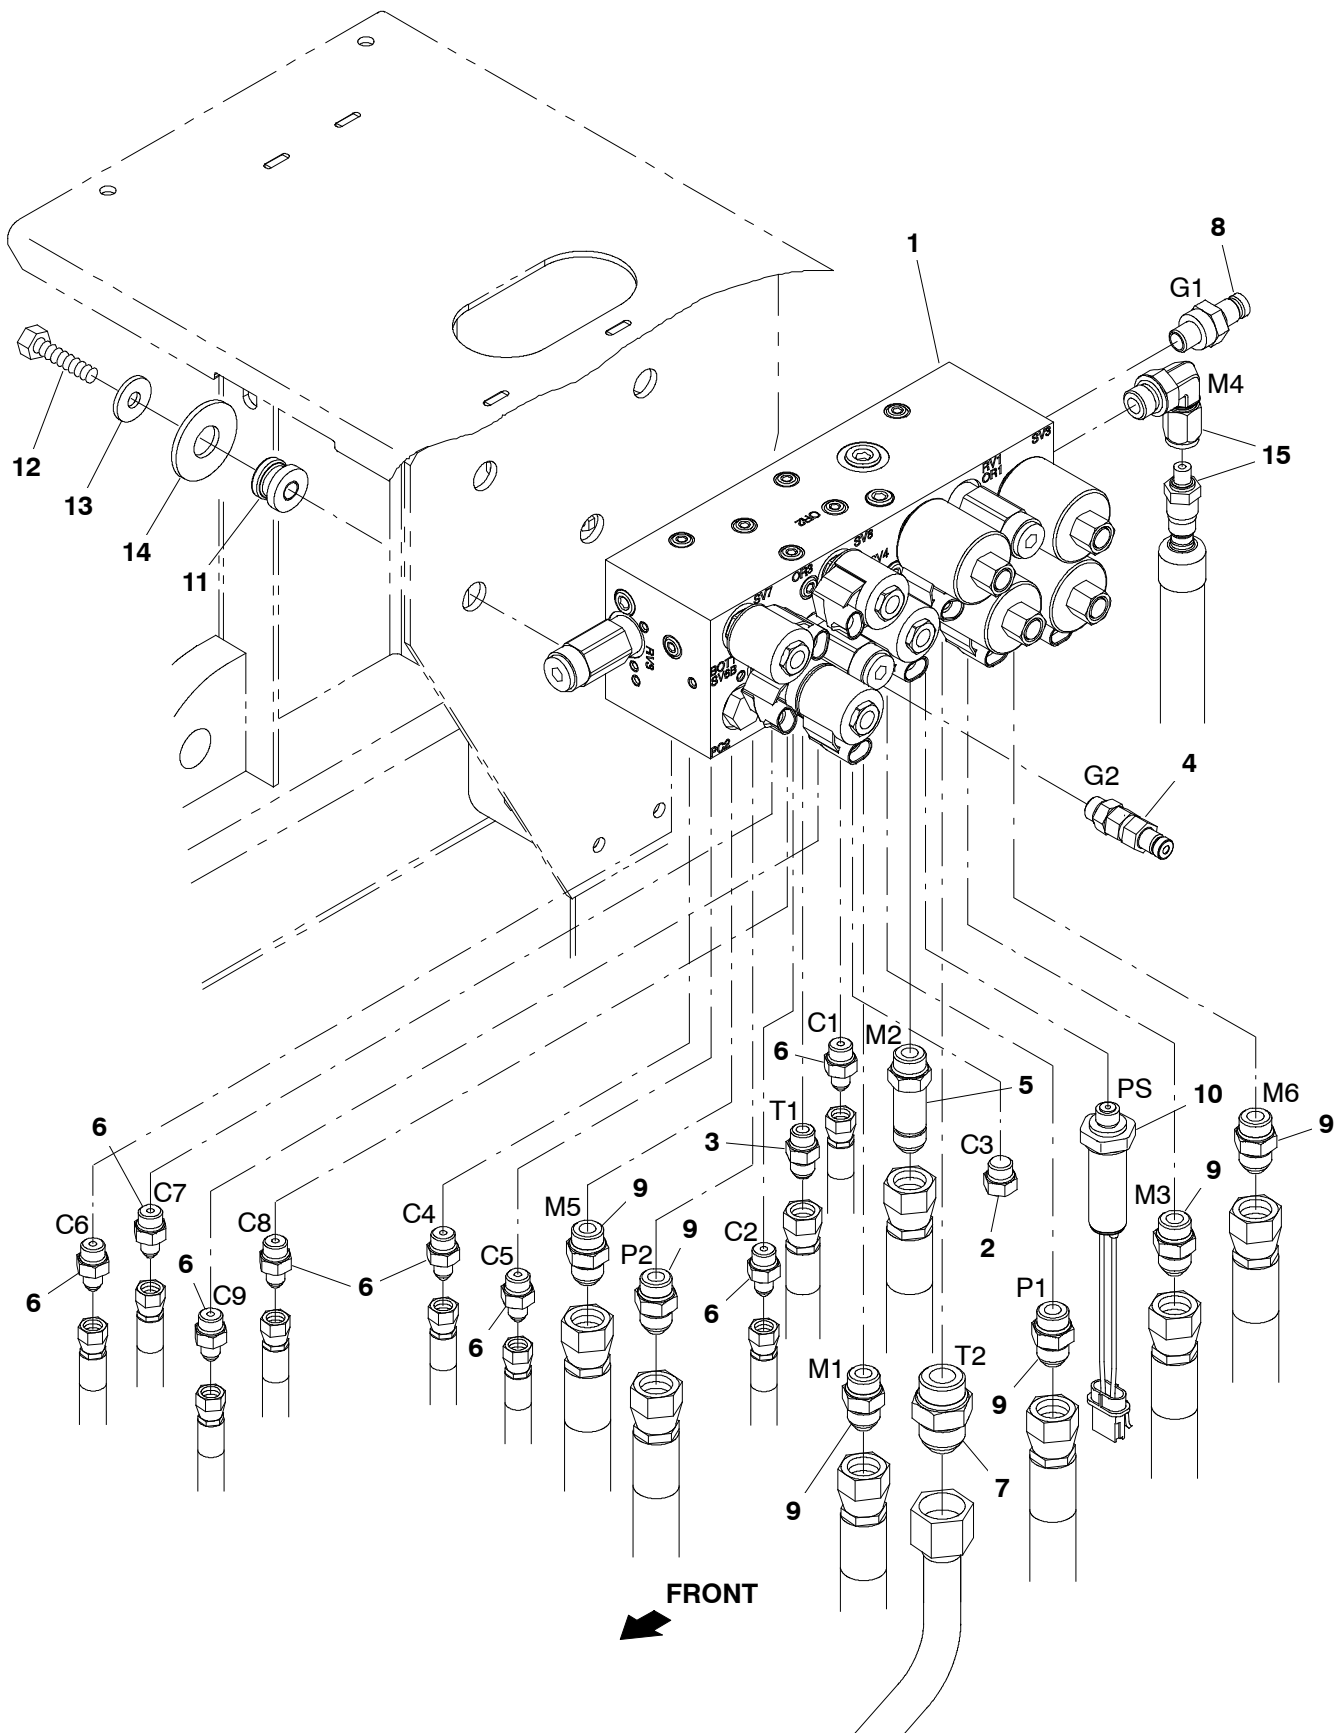


Fig. 60 - Hydraulic Valve Group, S30 XP and X4

Ref.	Part No.	Serial Number	Description	Qty.
1	1034671	(006501-	) Valve, Hyd, Solenoid, 12vdc [08s] (See Breakdowns)	1
2	46482	(006501-	) Fitting, Hyd, Plug, Om06	1
3	762433	(006501-	) Fitting, Hyd, Str, Fm06/Om06	1
4	1043652	(006501-	) Fitting, Hyd, Str, Om06/Qm04	1
5	767430	(006501-	) Fitting, Hyd, Str, Fm08/Om08, Long	1
6	762426	(006501-	) Fitting, Hyd, Str, Fm04/Om06	8
7	1068299	(006501-	) Fitting, Hyd, Str, Fm16/Om12	1
8	395973	(006501-	) Fitting, Hyd, Str, Om04/Qm04	1
9	762445	(006501-	) Fitting, Hyd, Str, Fm08/Om08	6
10	769077	(006501-	) Switch Assy, Press, No 02400psi	1
11	54274	(006501-	) Isolator, Vib, Bshg, 1.1d 0.6l .4b 0.78h	4
12	39285	(006501-	) Screw, Hex, M10 X 1.50 X 40, 8.8	4
13	39350	(006501-	) Washer, Flat, 0.75, Sae	4
14	13248	(006501-	) Washer, Flat, 0.40b 1.12d .12, Stl, Pl	4
15	9011154	(006501-	) Hose Kit, Hyd, Replmt [S30]	1

Fig. 61 - Hydraulic Priority and Flow Divider Valve Group, S30 X4


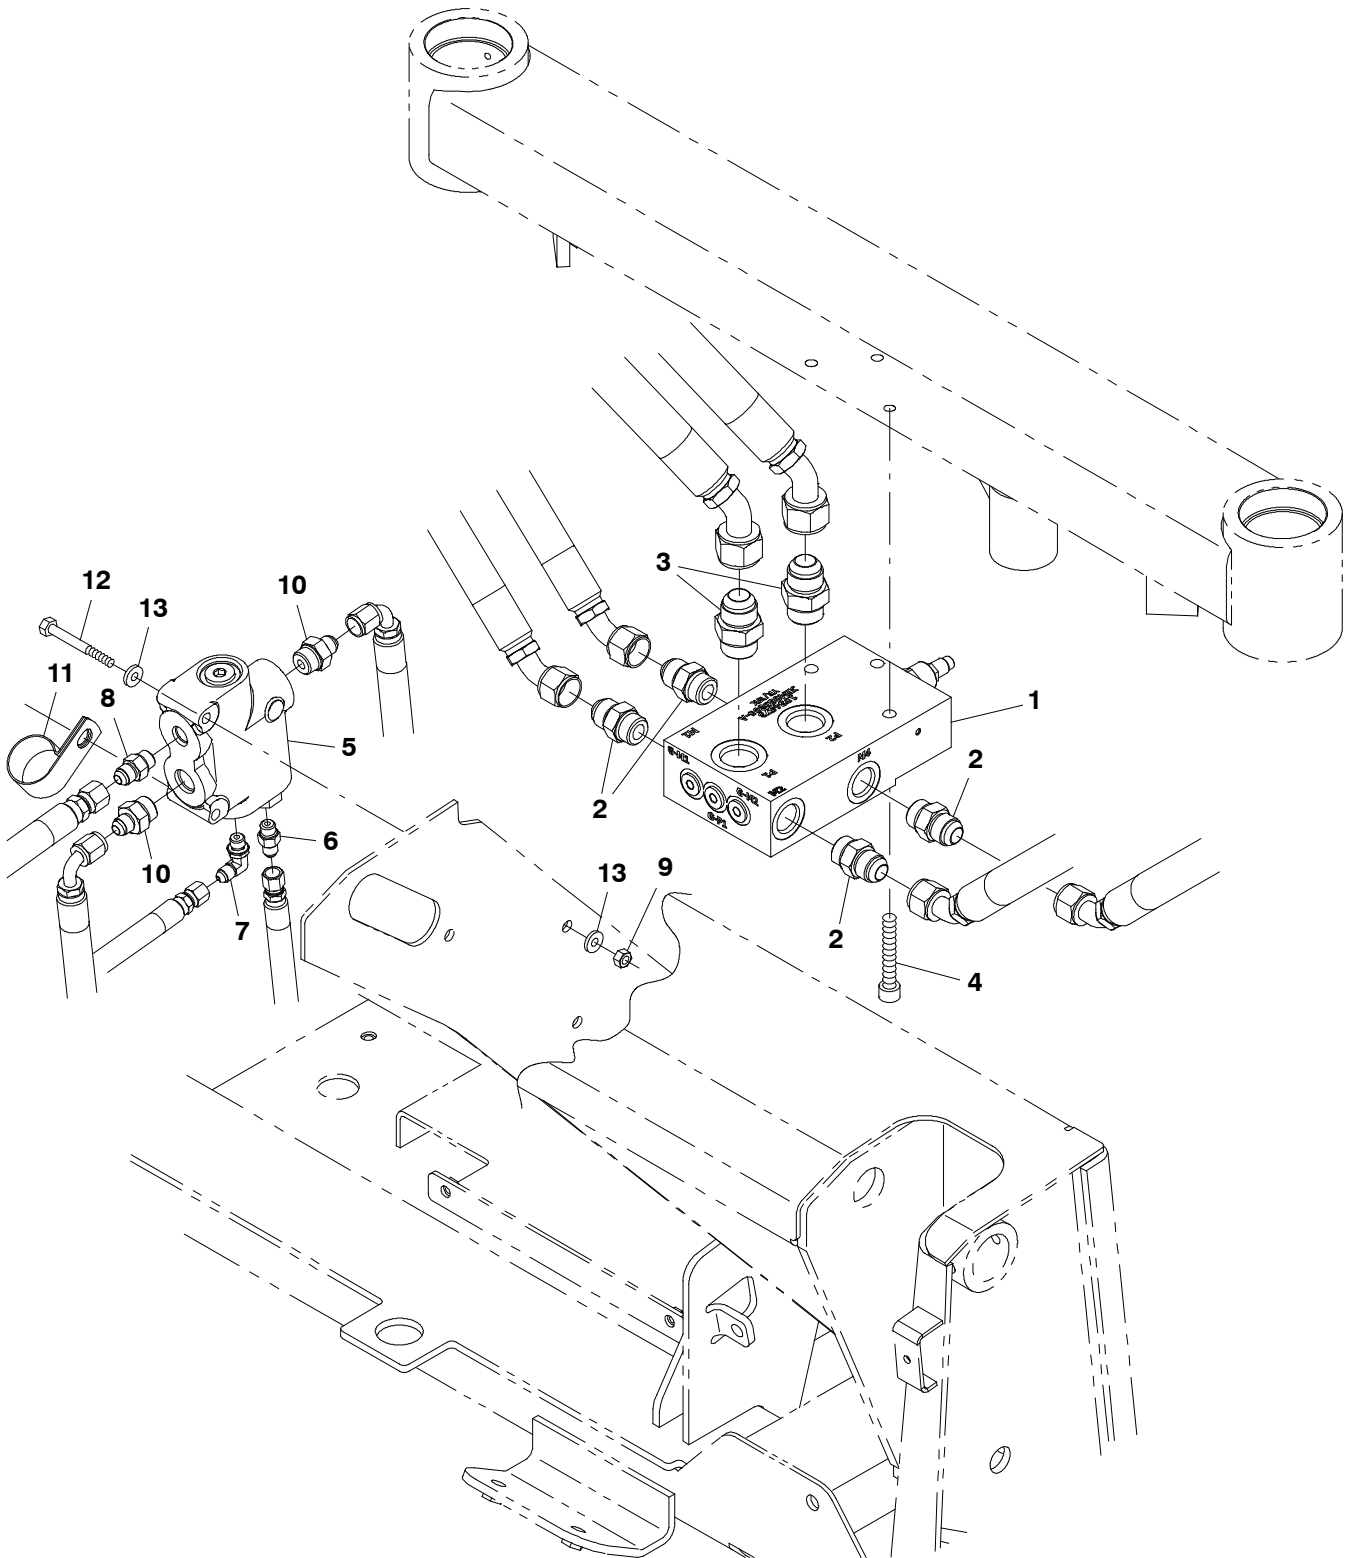


Fig. 61 - Hydraulic Priority and Flow Divider Valve Group, S30 X4

Ref.	Part No.	Serial Number	Description	Qty.
1	1033685	(006501-	) Valve, Hyd, Flow Divider, Propel [4w] (See Breakdowns)	1
2	46480	(006501-	) Fitting, Hyd, Str, Jm10/Om10	4
3	79868	(006501-	) Fitting, Hyd, Str, Fm12/Om12	2
4	396810	(006501-	) Screw, Soc, M10 X 1.50 X 50, 12.9	2
5	1035144	(006501-	) Valve, Hyd [Priority Ds05g1200]	1
6	762428	(006501-	) Fitting, Hyd, Str, Fm04/Om04	1
7	762427	(006501-	) Fitting, Hyd, E90, Fm04/Om04	1
8	762433	(006501-	) Fitting, Hyd, Str, Fm06/Om06	1
9	08709	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI	2
10	762438	(006501-	) Fitting, Hyd, Str, Fm06/Om08	2
11	70157	(006501-	) Clamp, Cable, Ss, 2.50d X 1.00w, 1hole	1
12	39279	(006501-	) Screw, Hex, M8 X 1.25 X 70, 8.8	2
13	32491	(006501-	) Washer, Flat, 0.31, Std	4

Fig. 62 - Electrical Schematic, S30

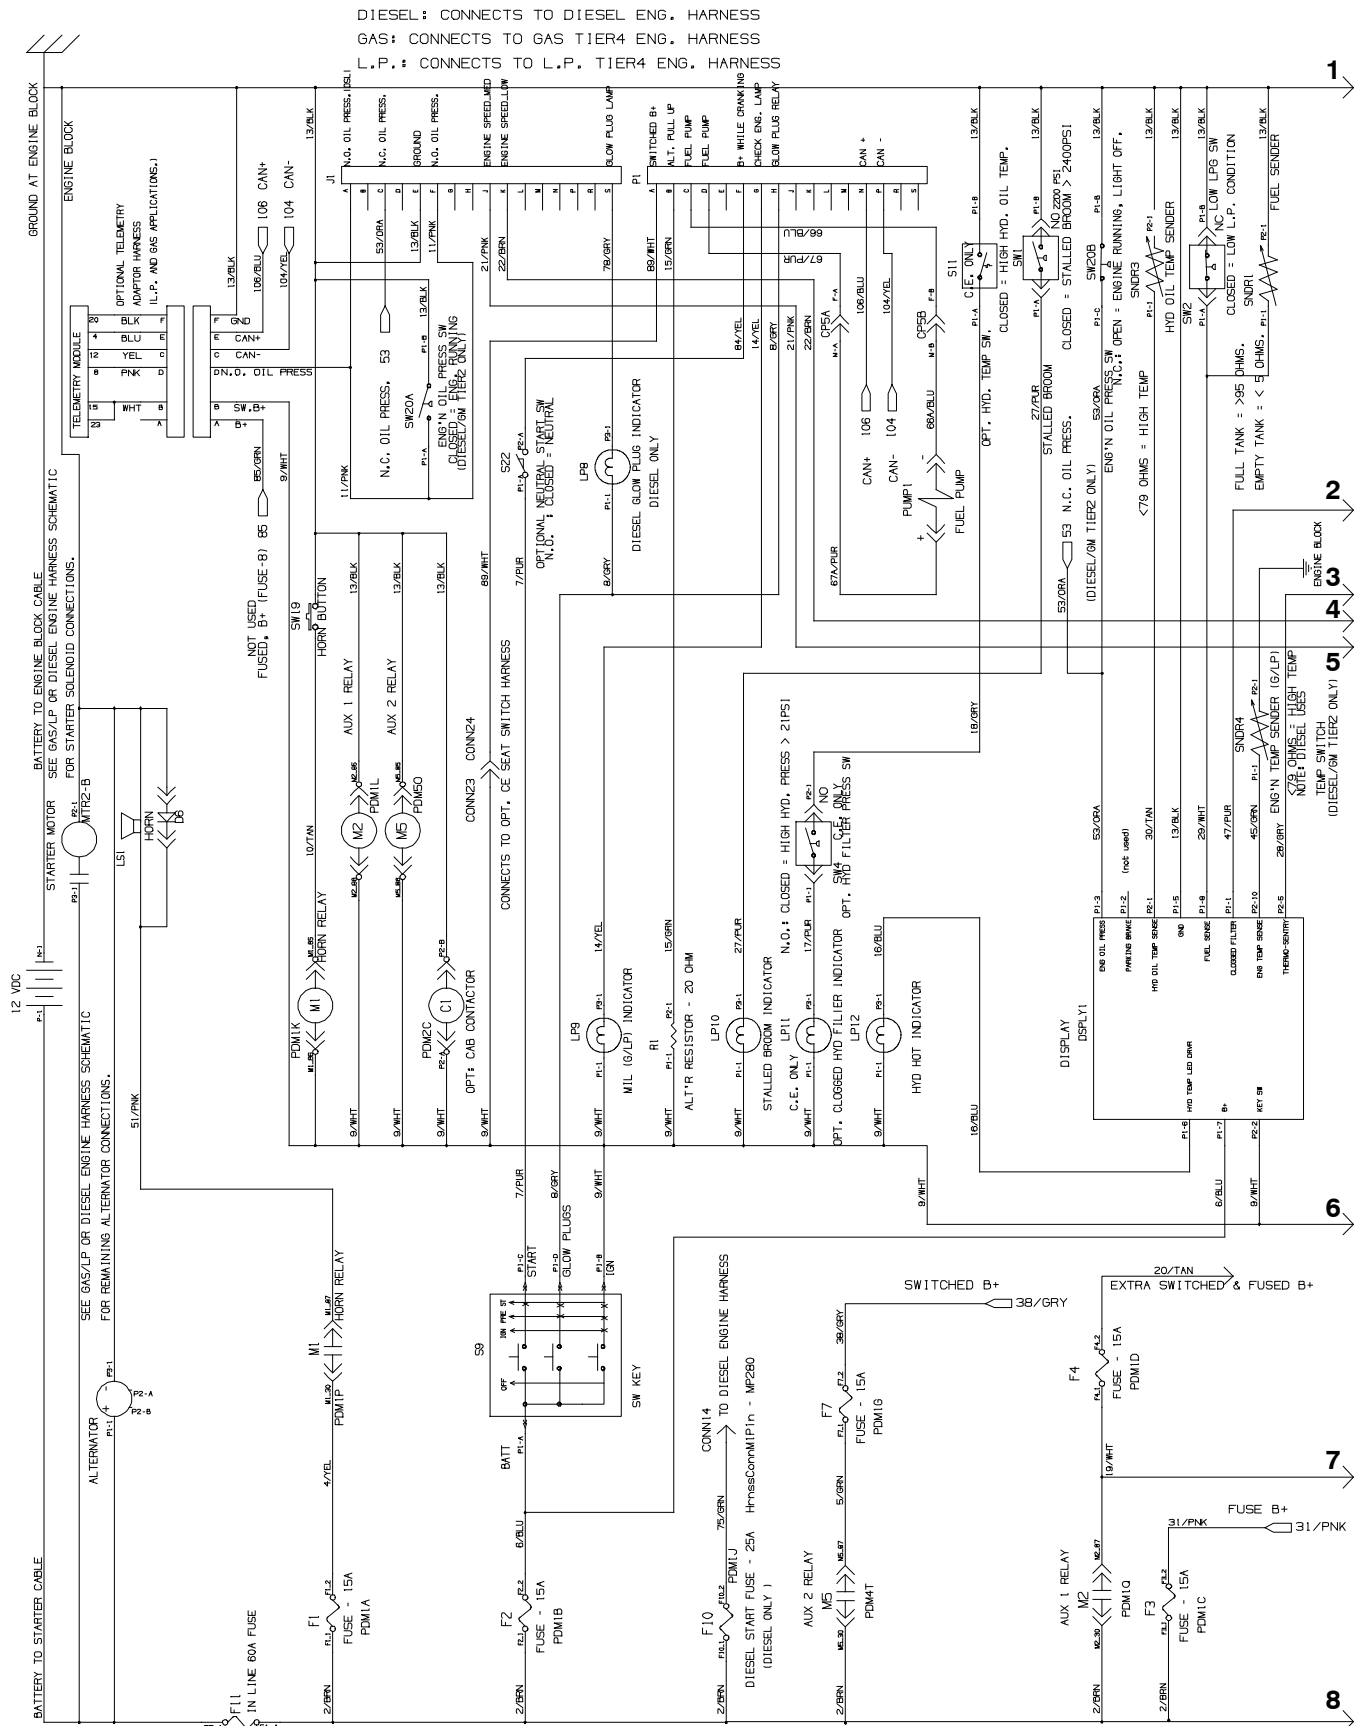

[illegible]

Fig. 62 - Electrical Schematic, S30


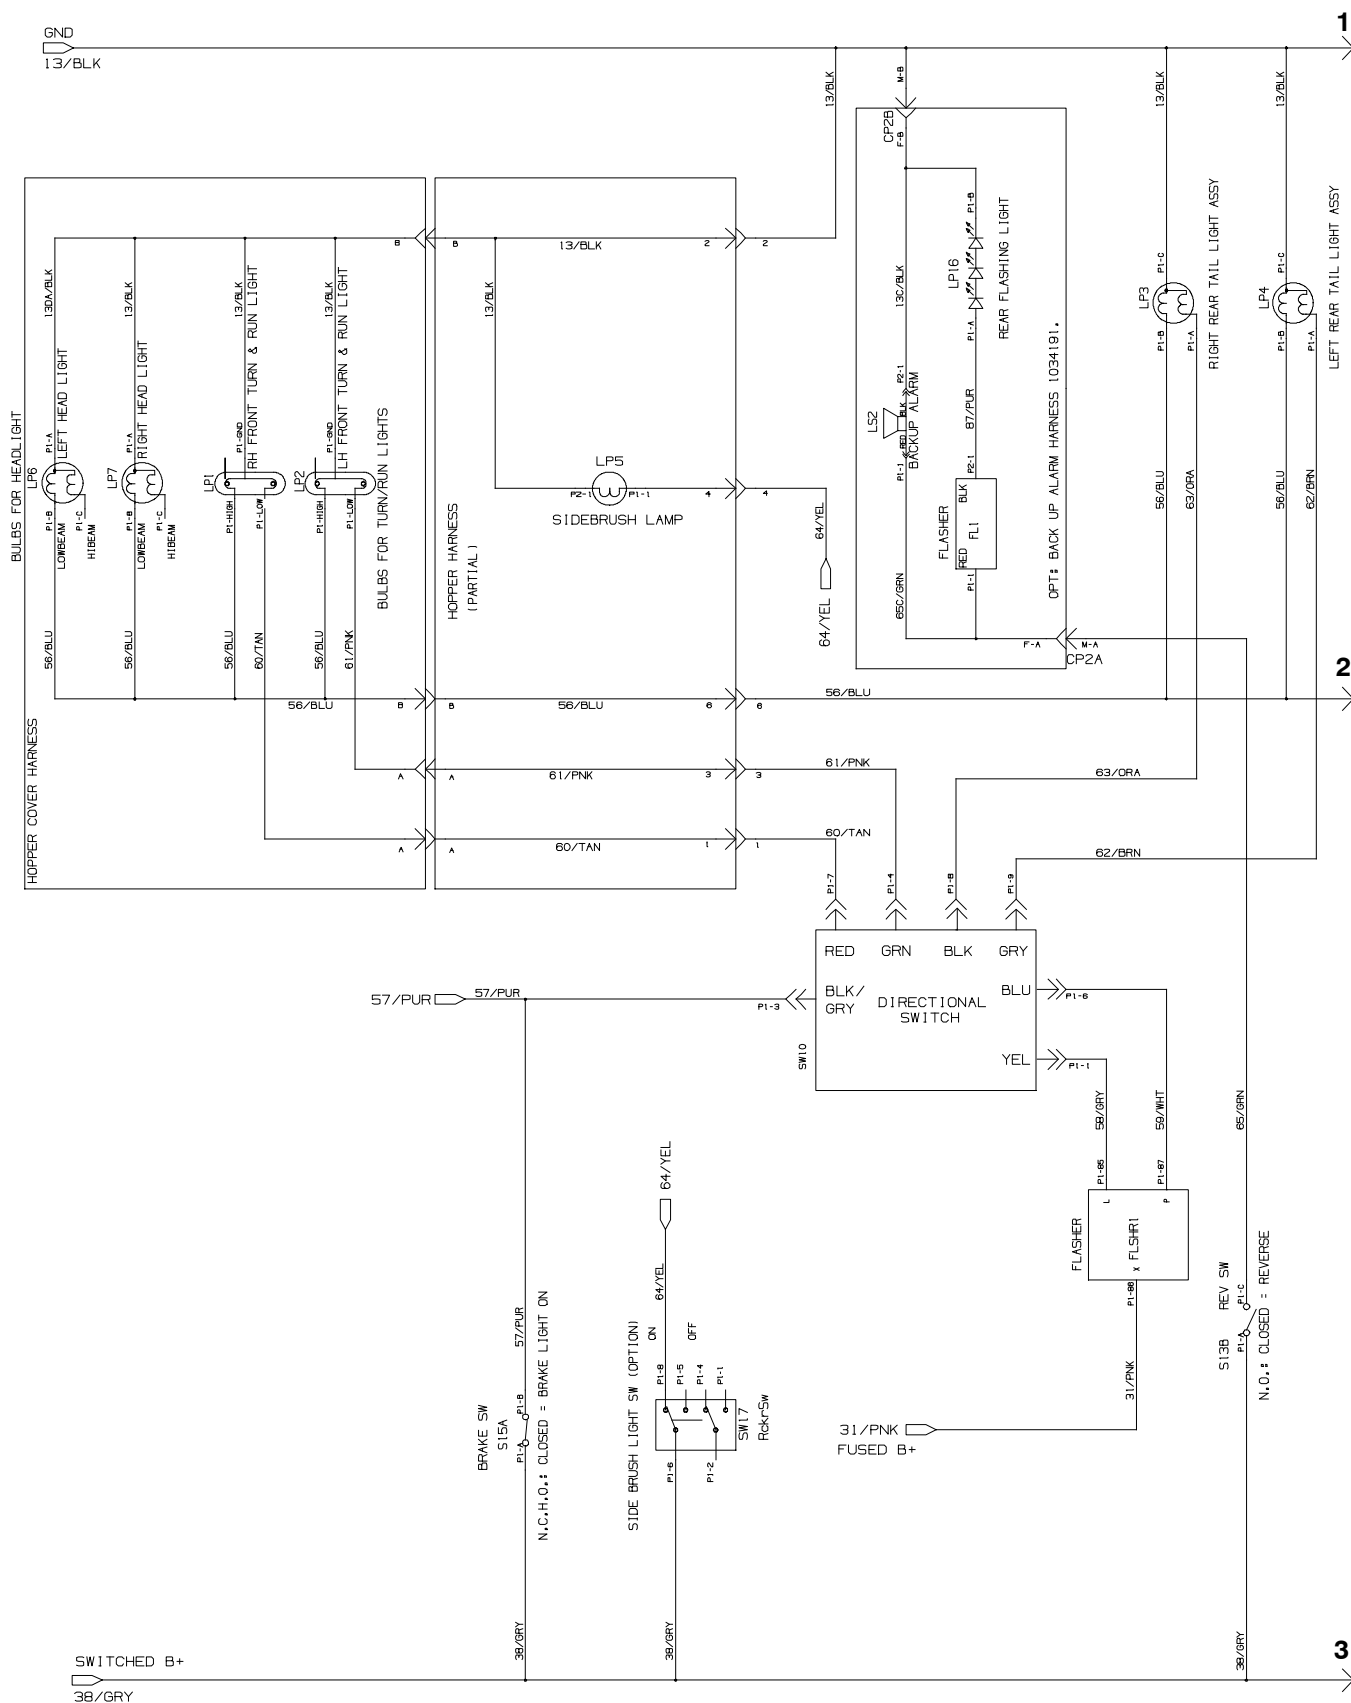


Fig. 62 - Electrical Schematic, S30

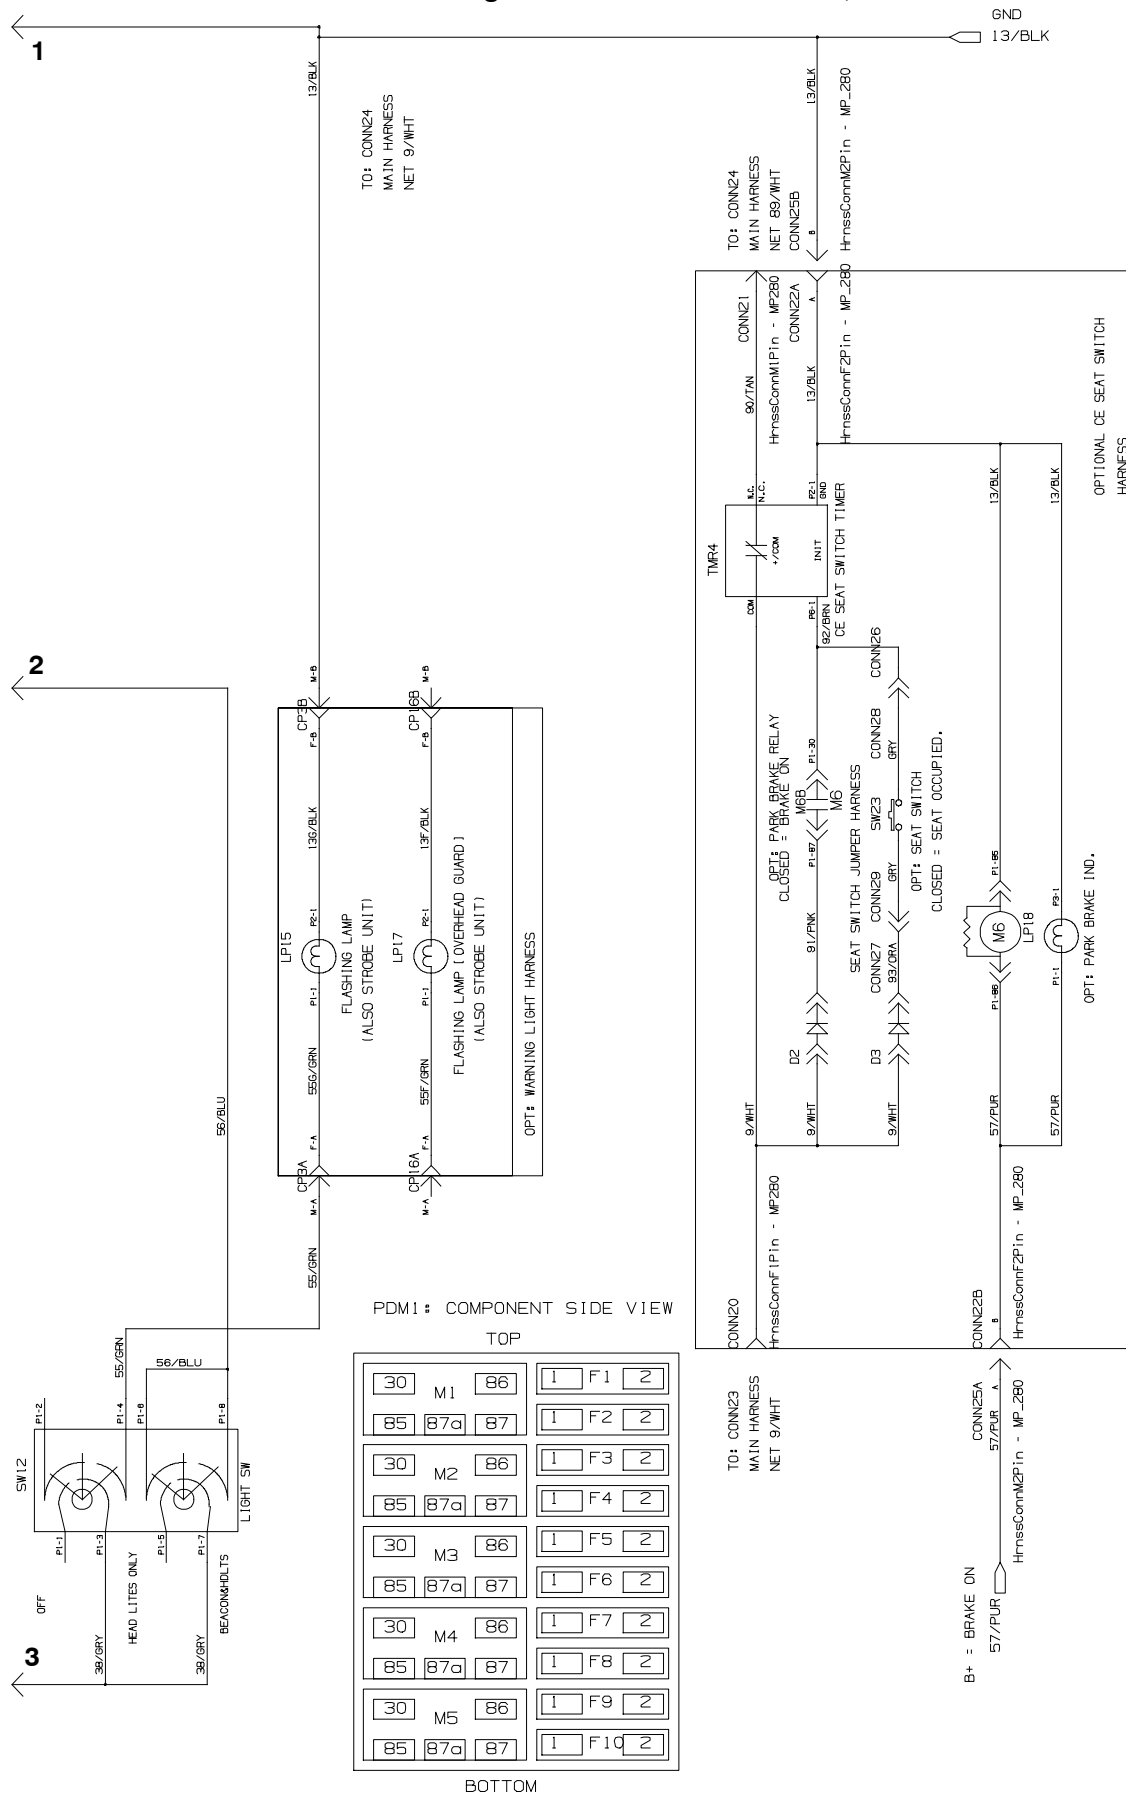

S30 Diesel 9013315 (4- 2015)




Fig. 63 - Electrical Schematic, S30 XP

DIESEL: CONNECTS TO DIESEL ENG. HARNESS
GAS: CONNECTS TO GAS TIER4 ENG. HARNESS
L.P.: CONNECTS TO L.P. TIER4 ENG. HARNESS


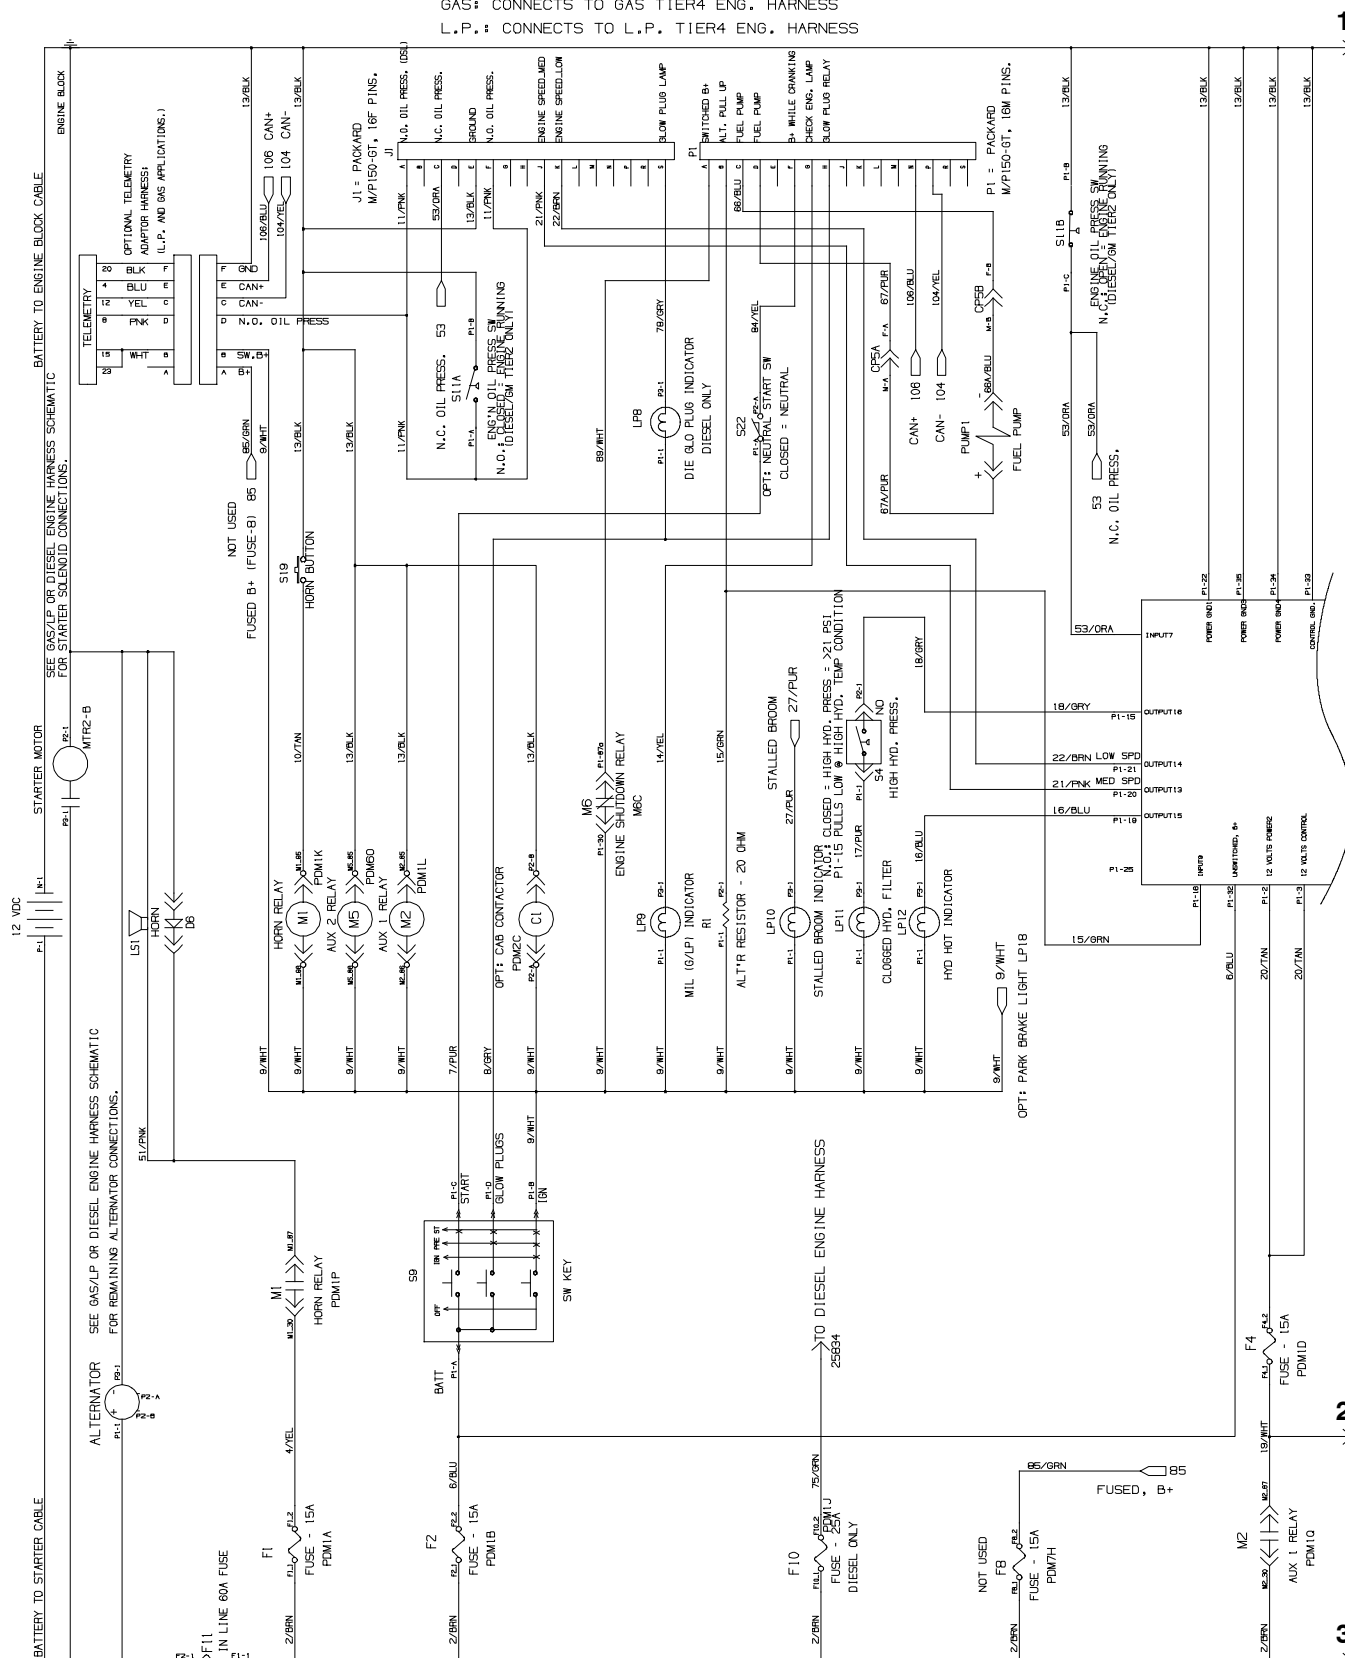


Fig. 63 - Electrical Schematic, S30 XP

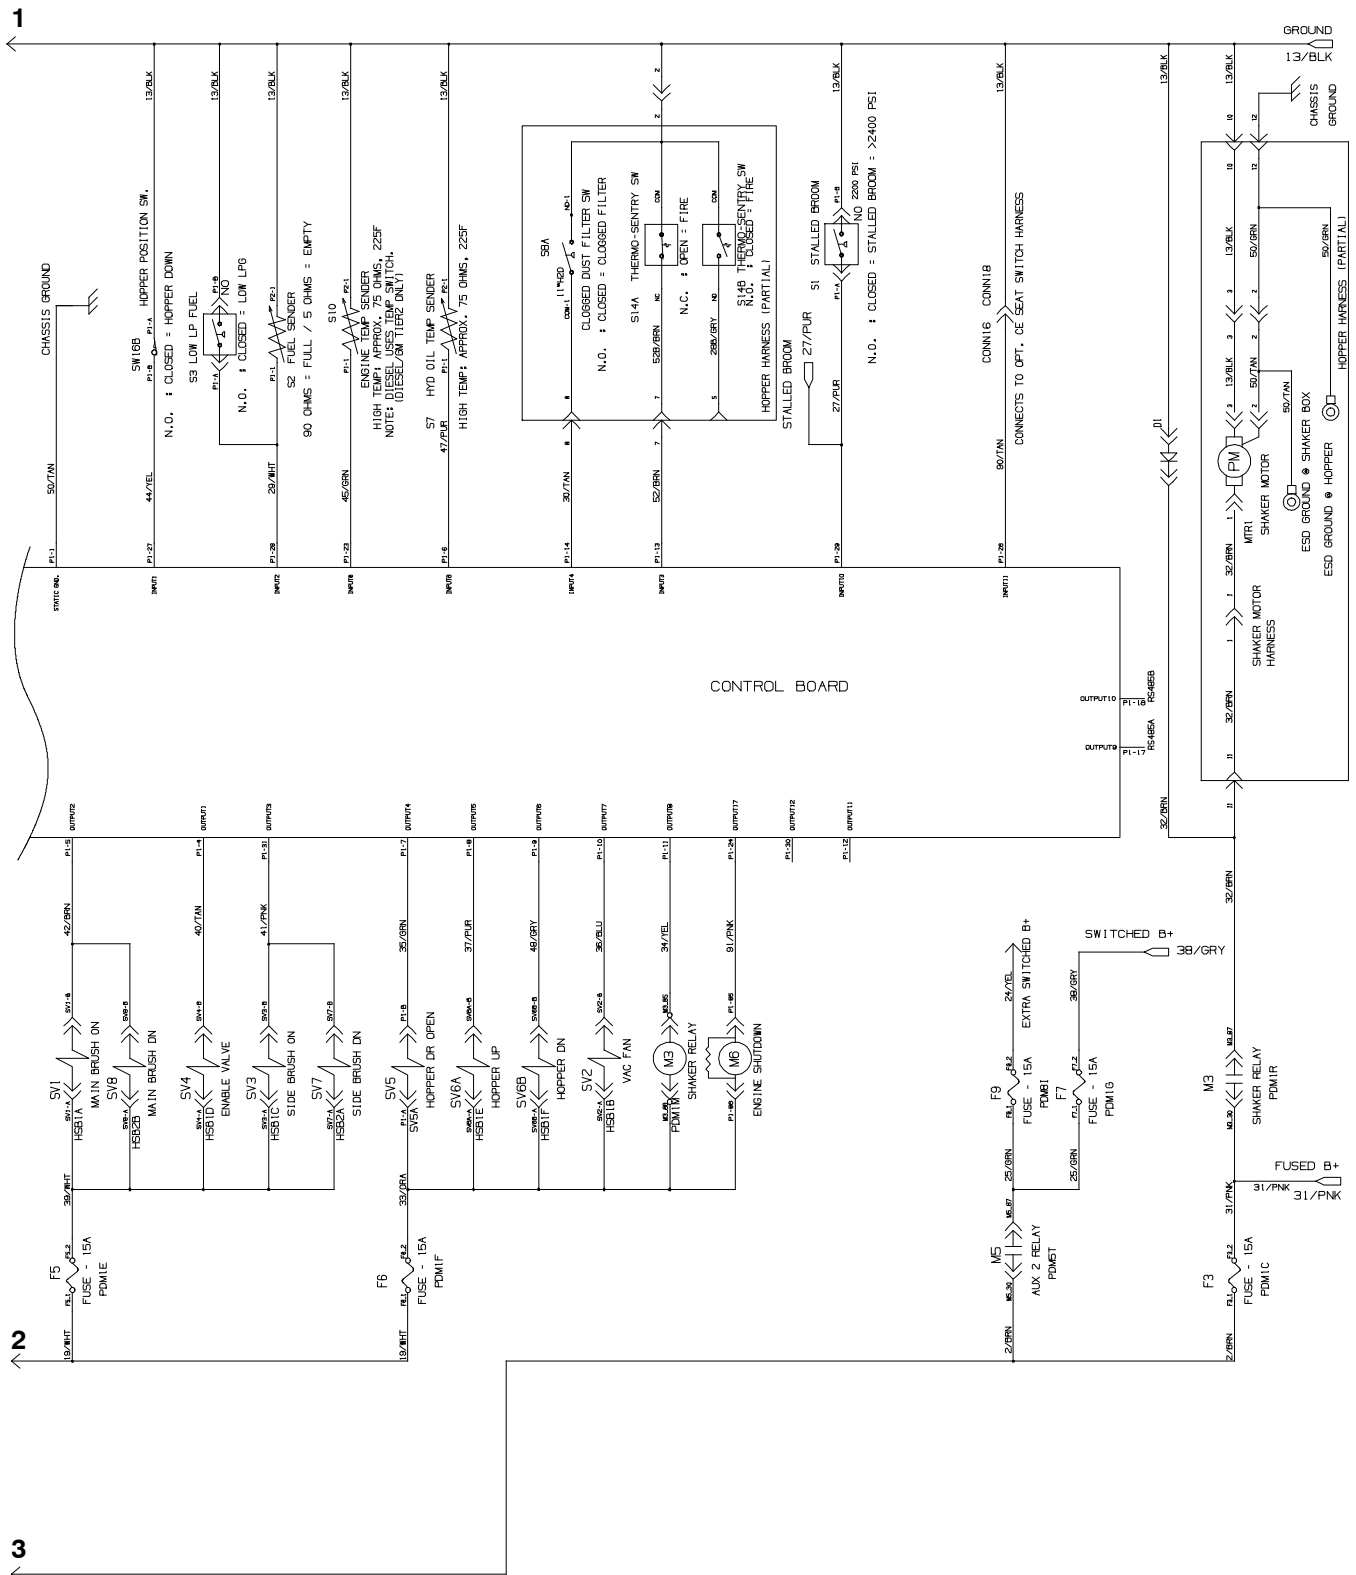

S30 Diesel 9013315 (4- 2015)





Fig. 63 - Electrical Schematic, S30 XP

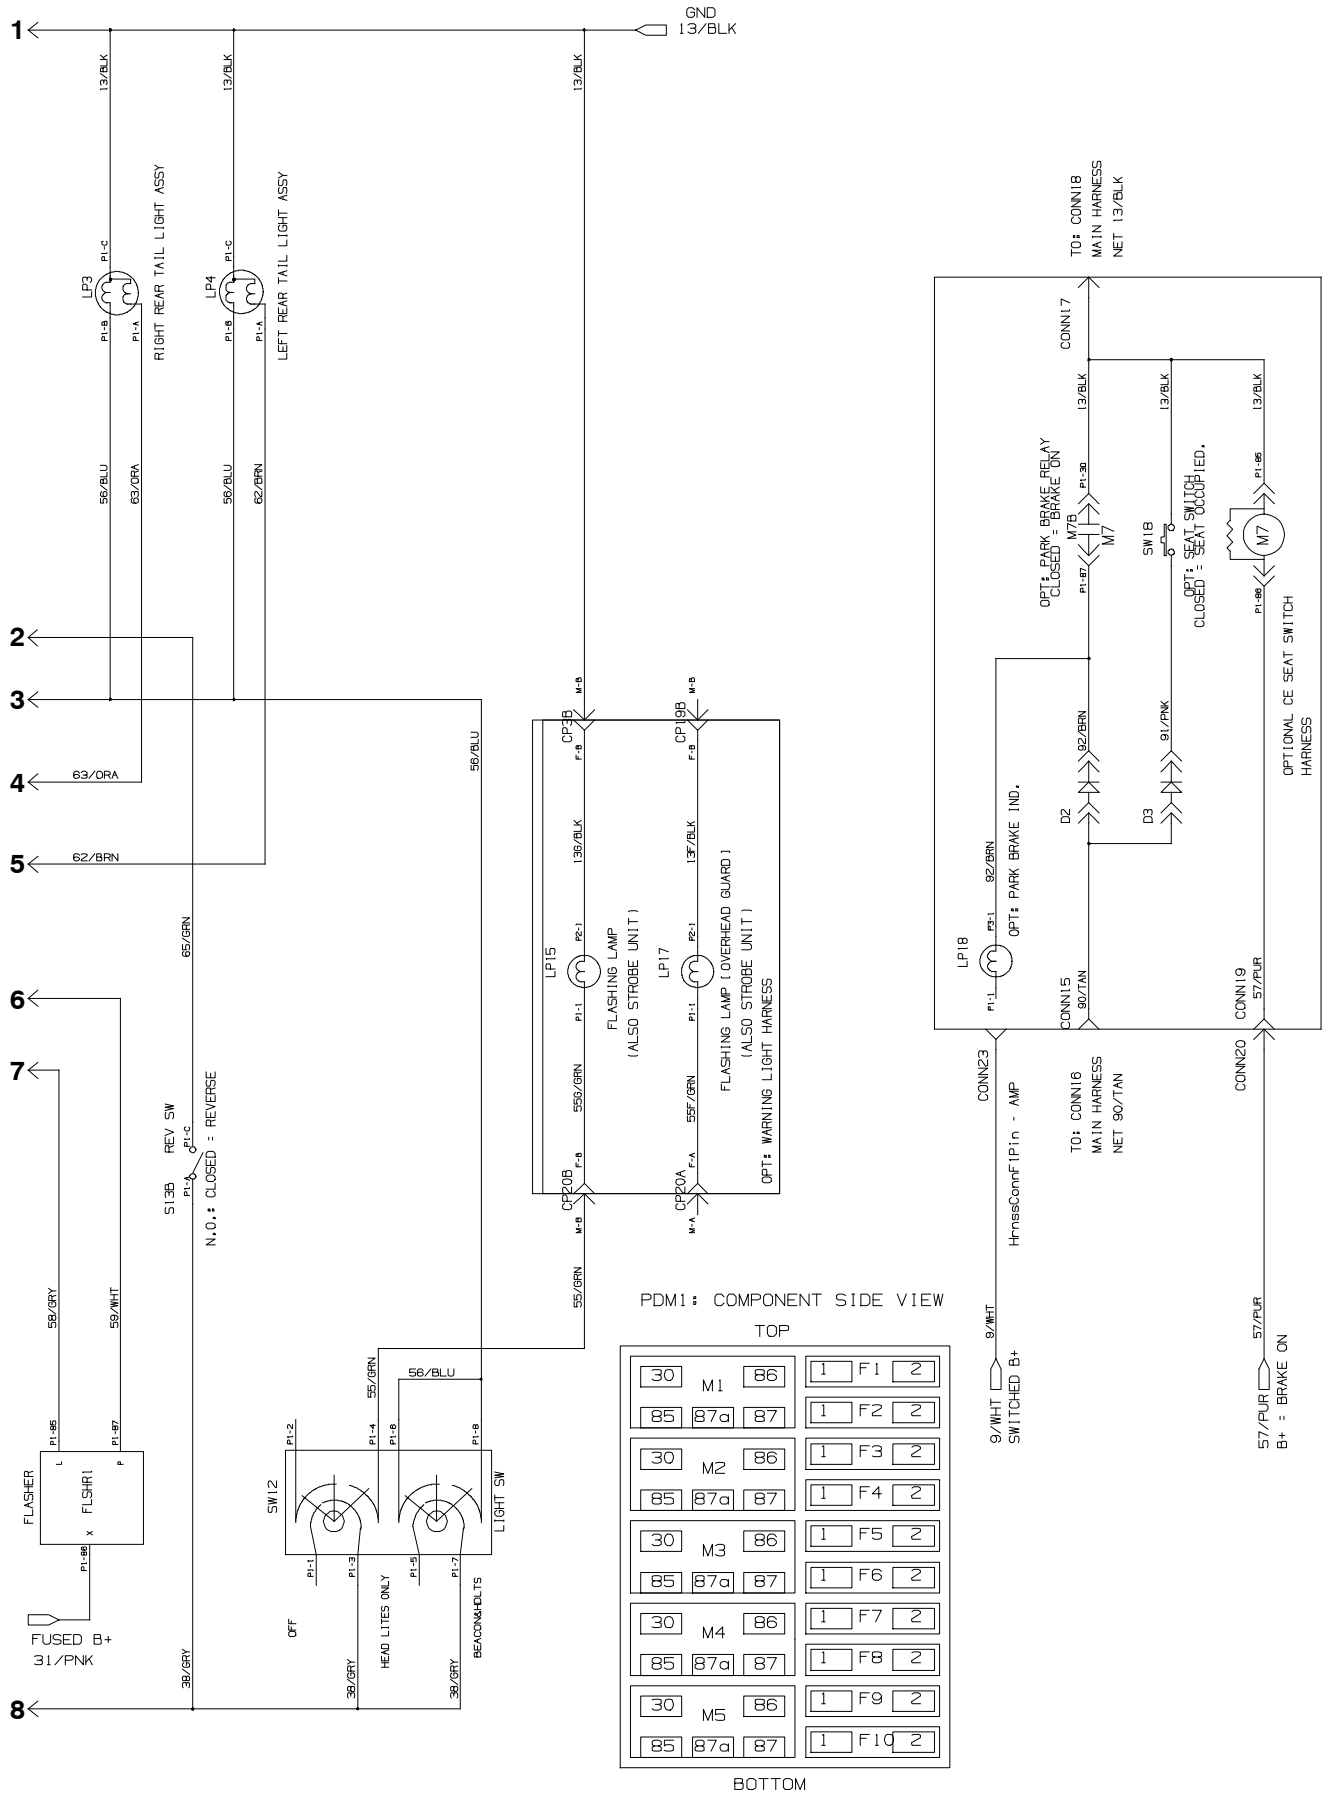

S30 Diesel 9013315 (4- 2015)





Fig. 64 - Electrical Wire Harnesses Group

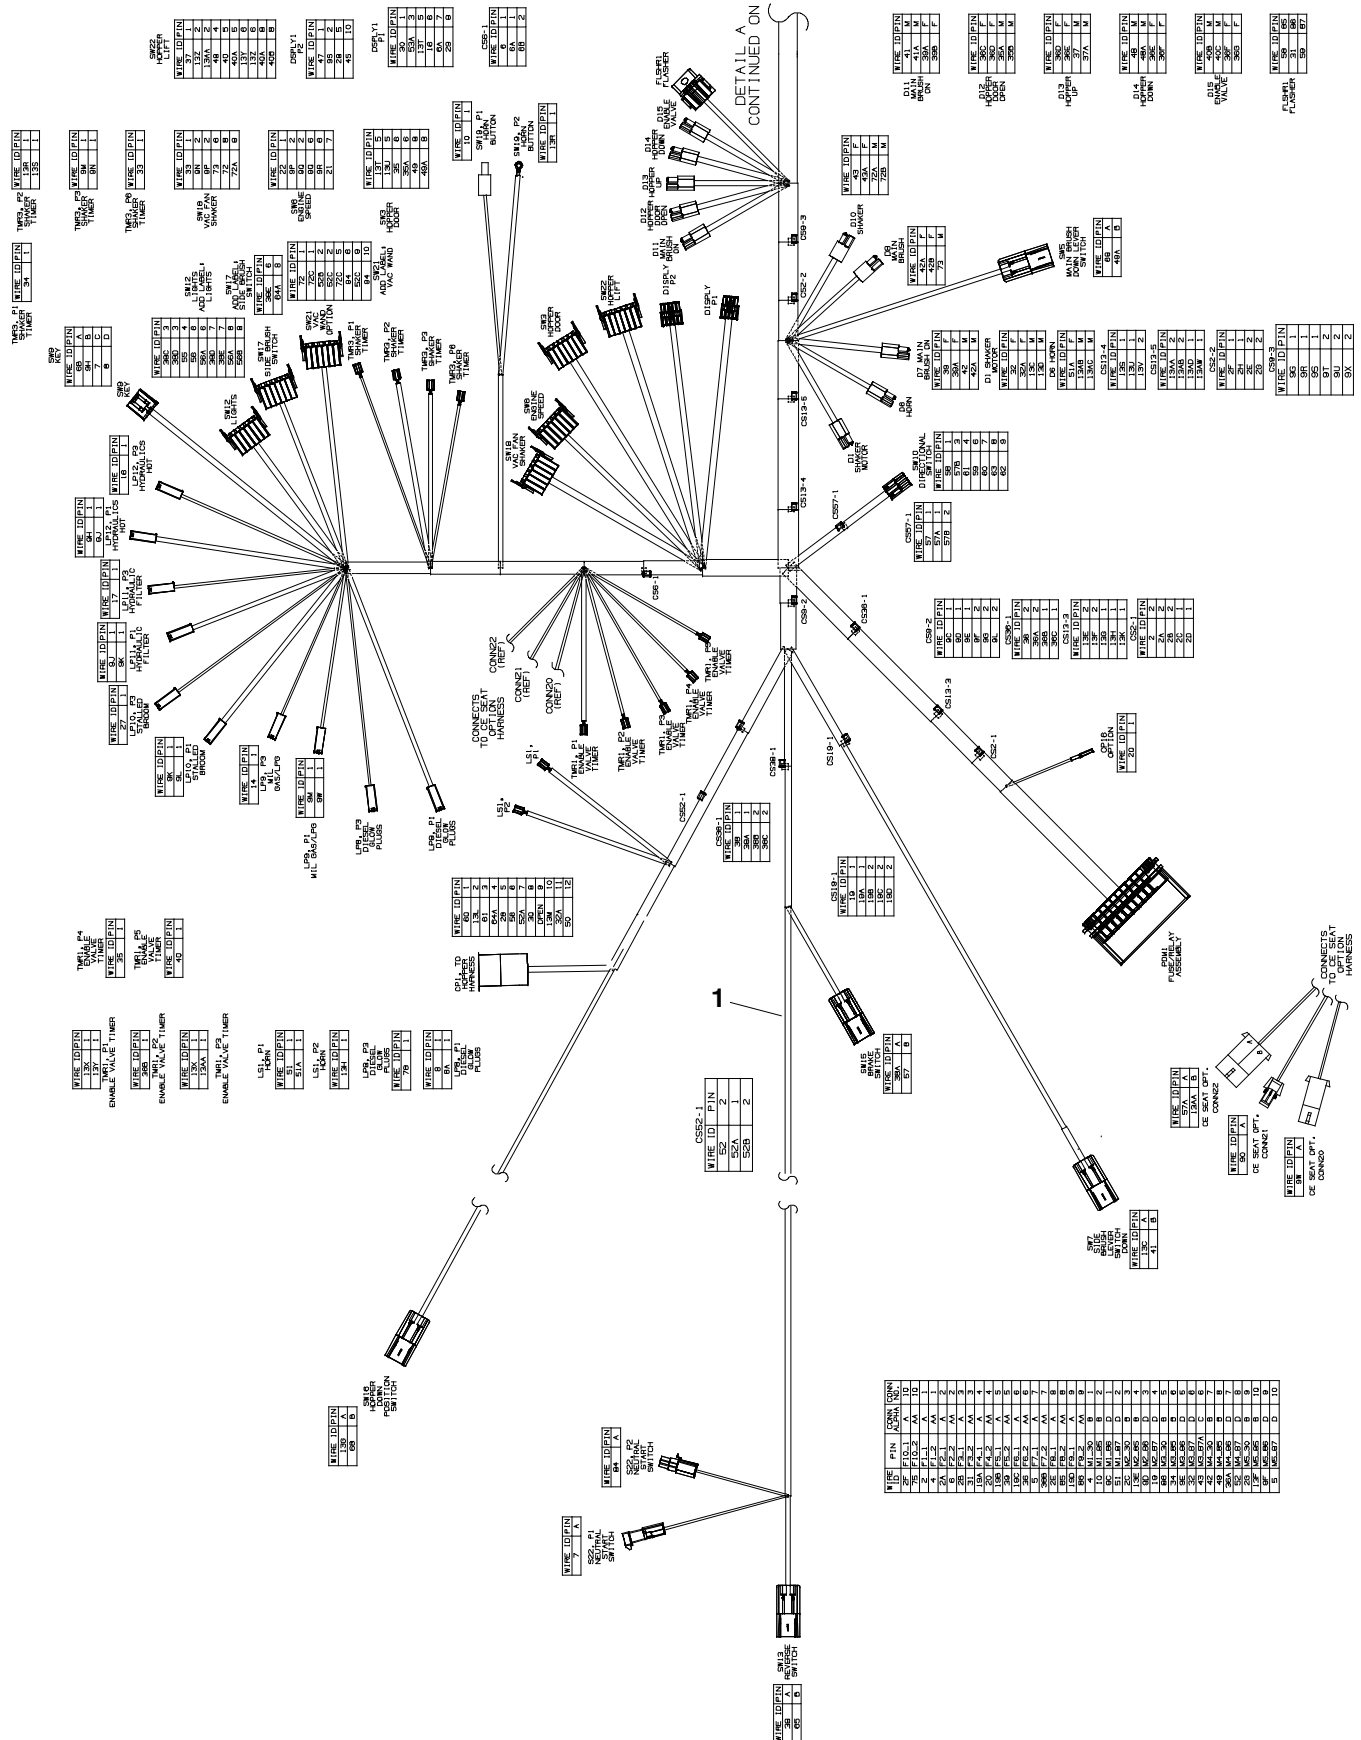

S30 Diesel 9013315 (4- 2015)

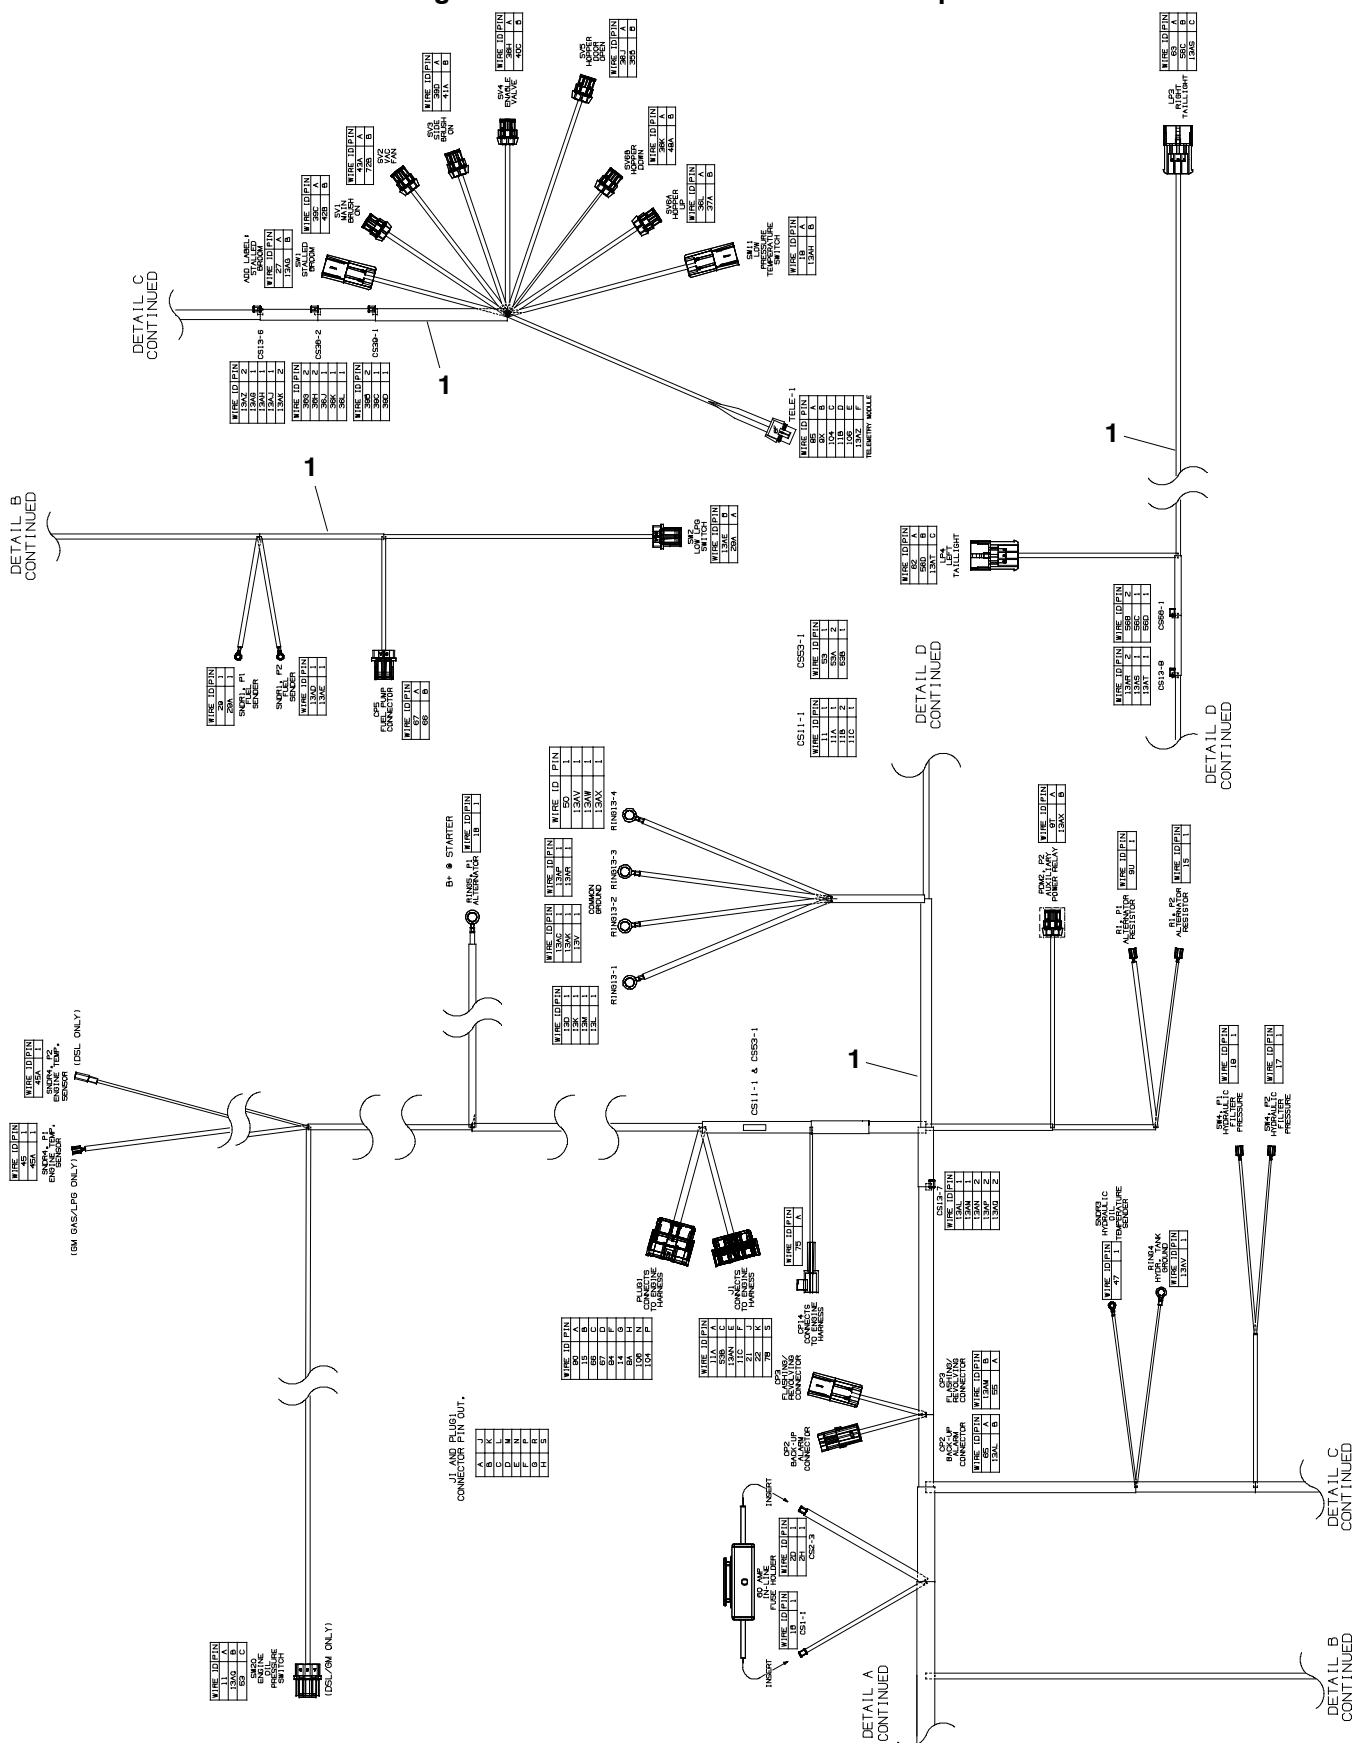


Fig. 64 - Electrical Wire Harnesses Group

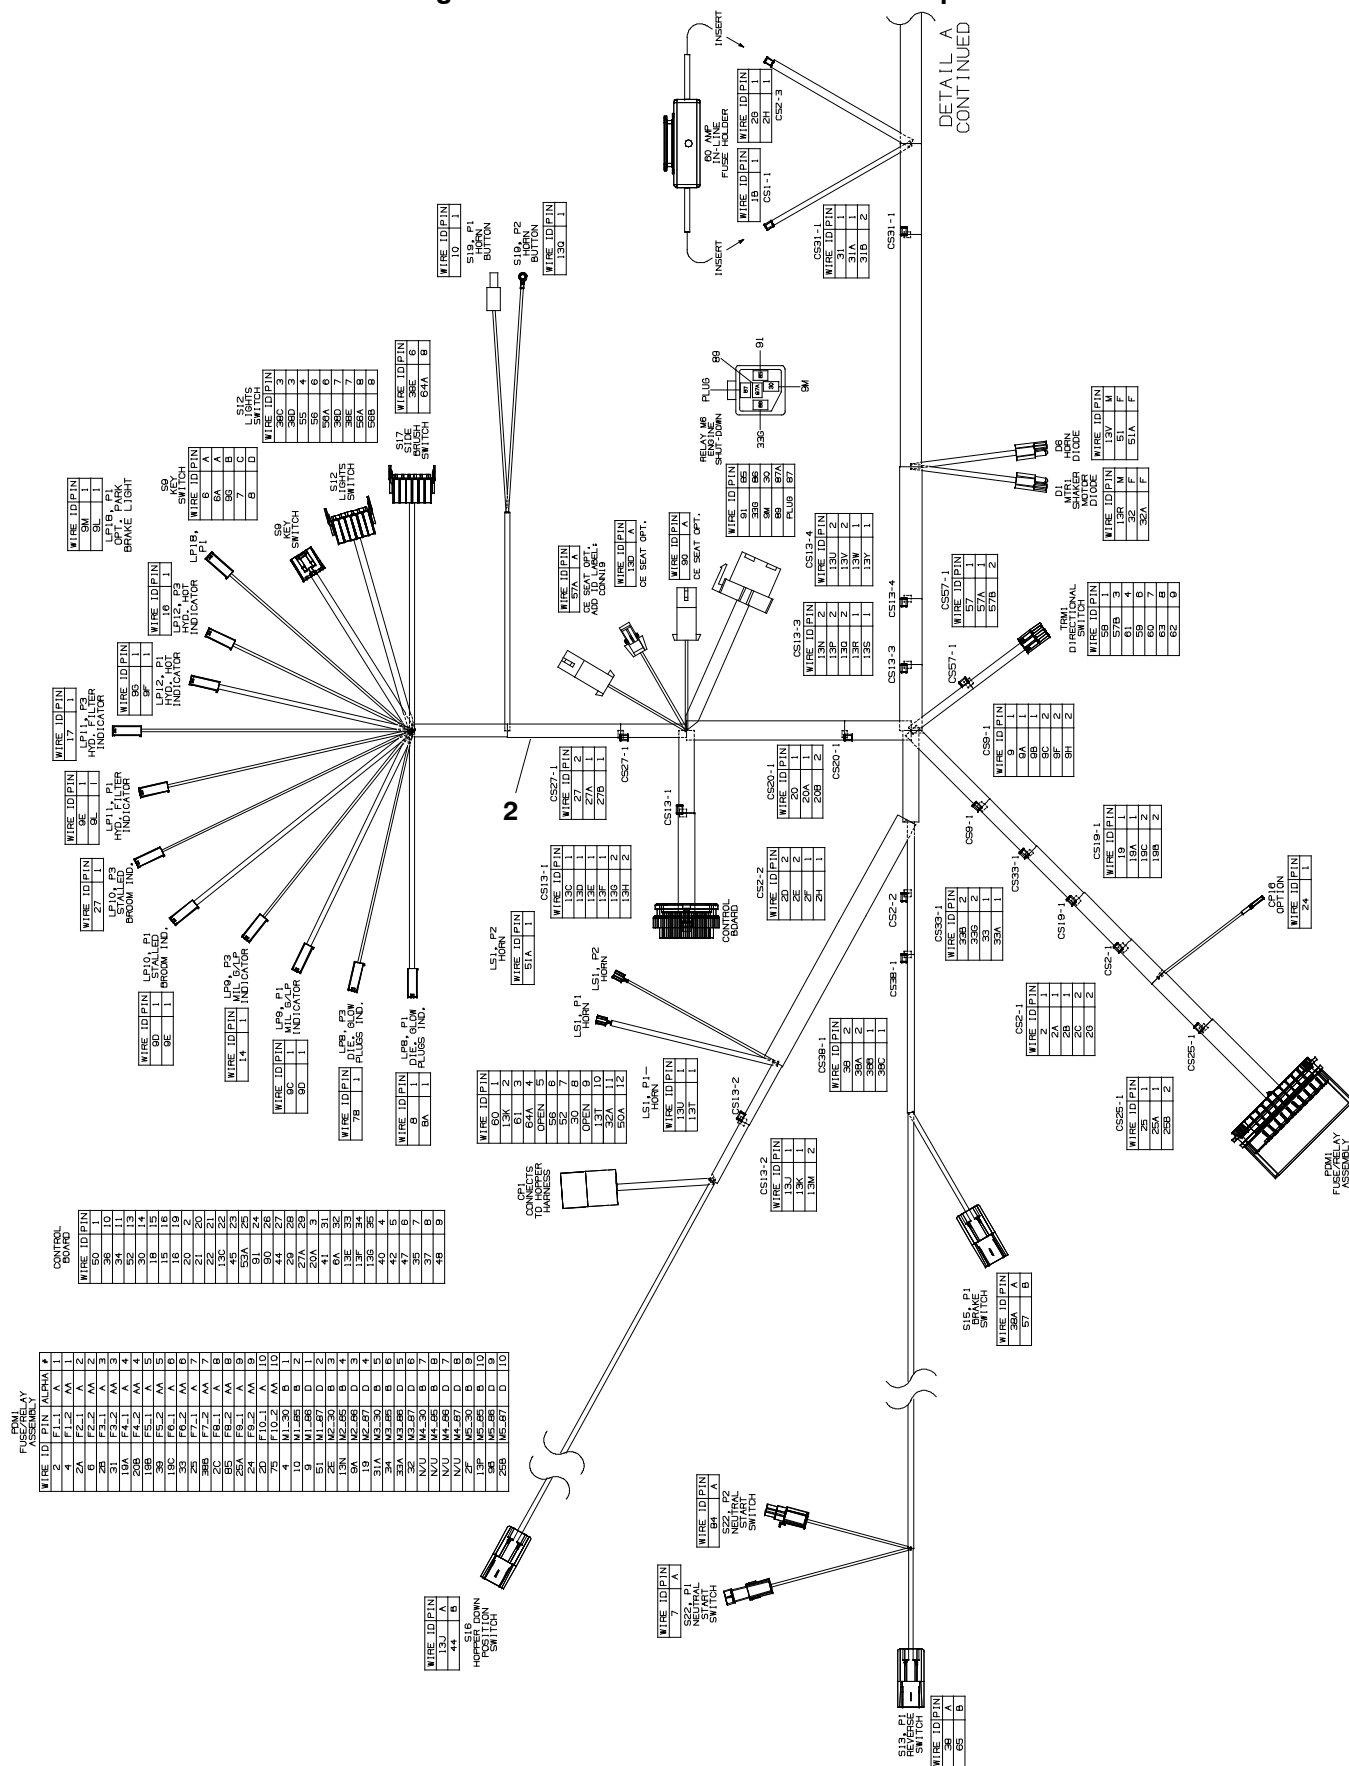


Fig. 64 - Electrical Wire Harnesses Group

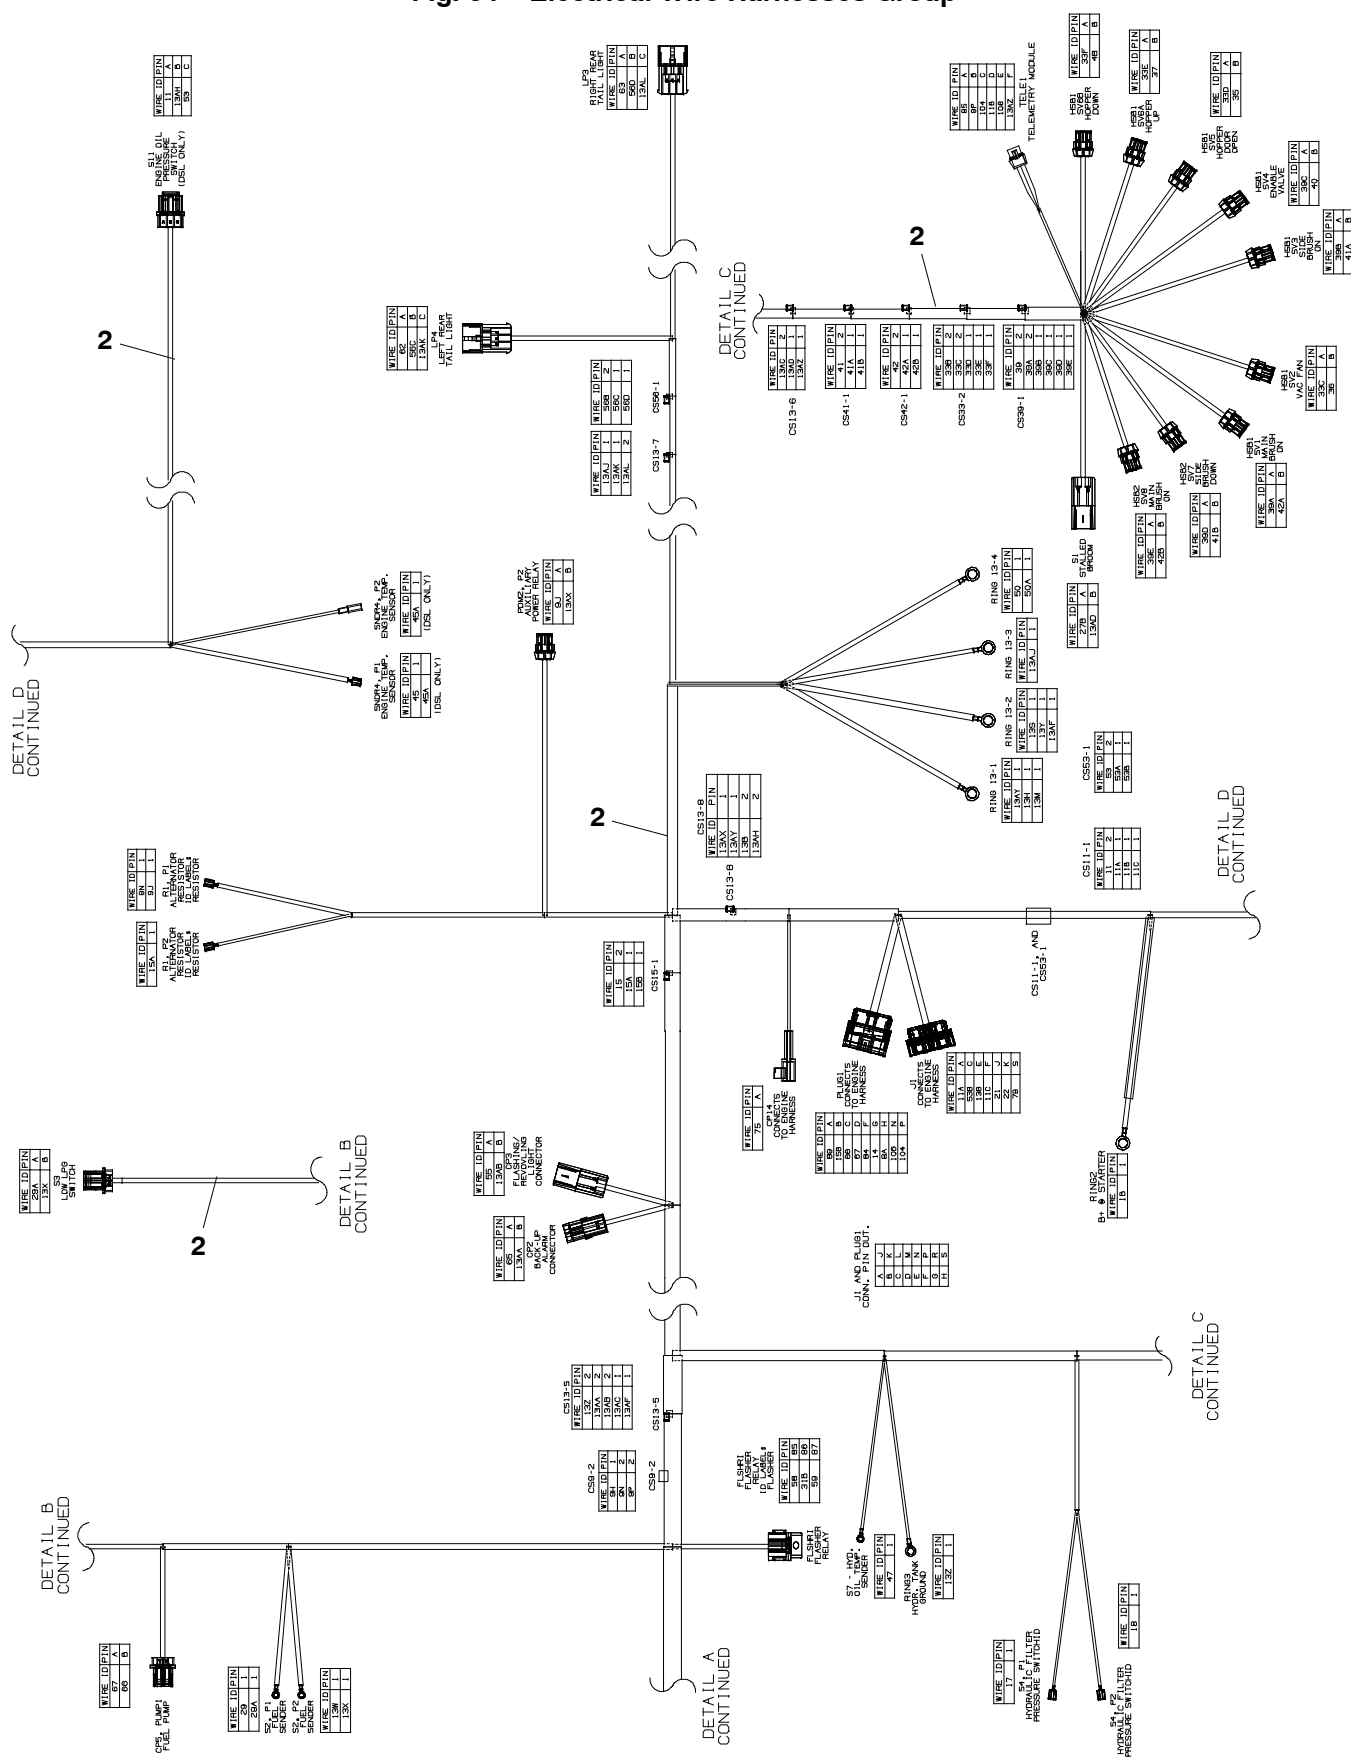


Fig. 64 - Electrical Wire Harnesses Group


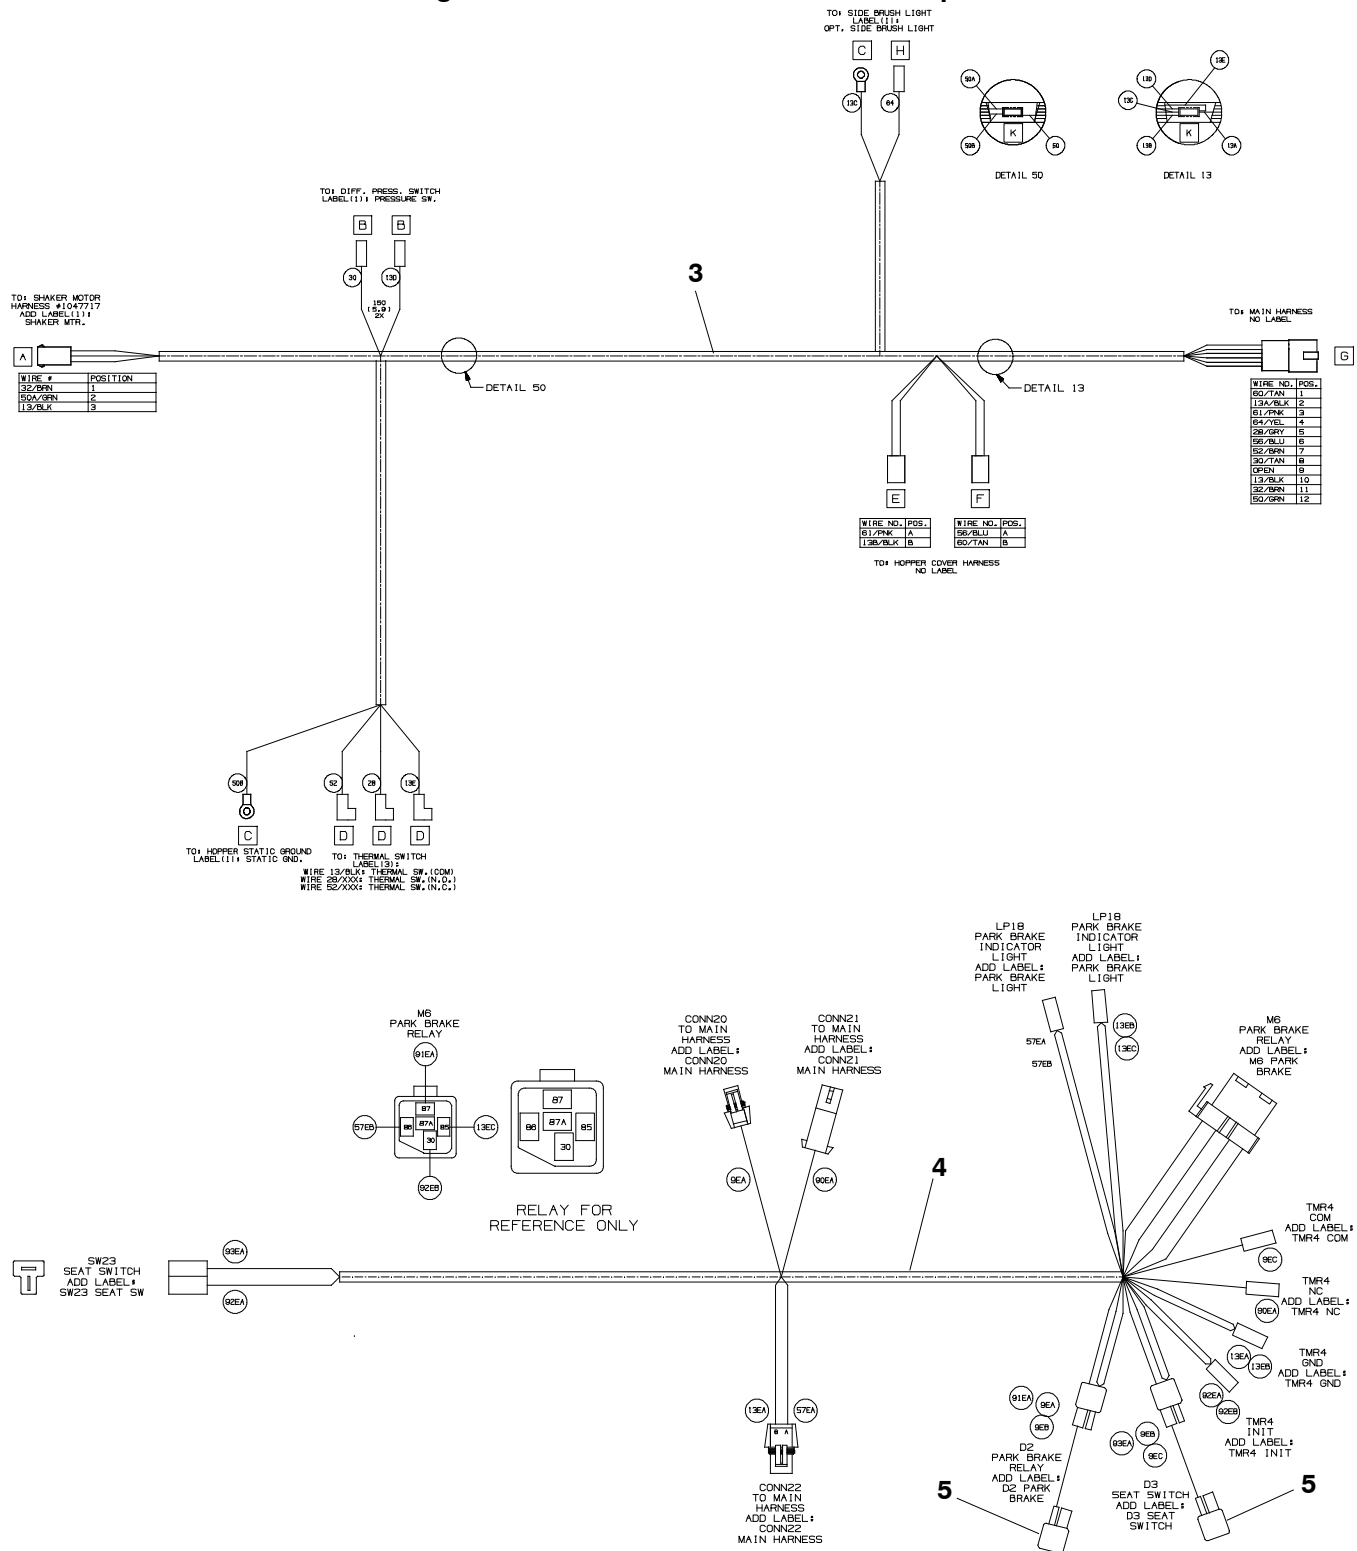


Fig. 64 - Electrical Wire Harnesses Group

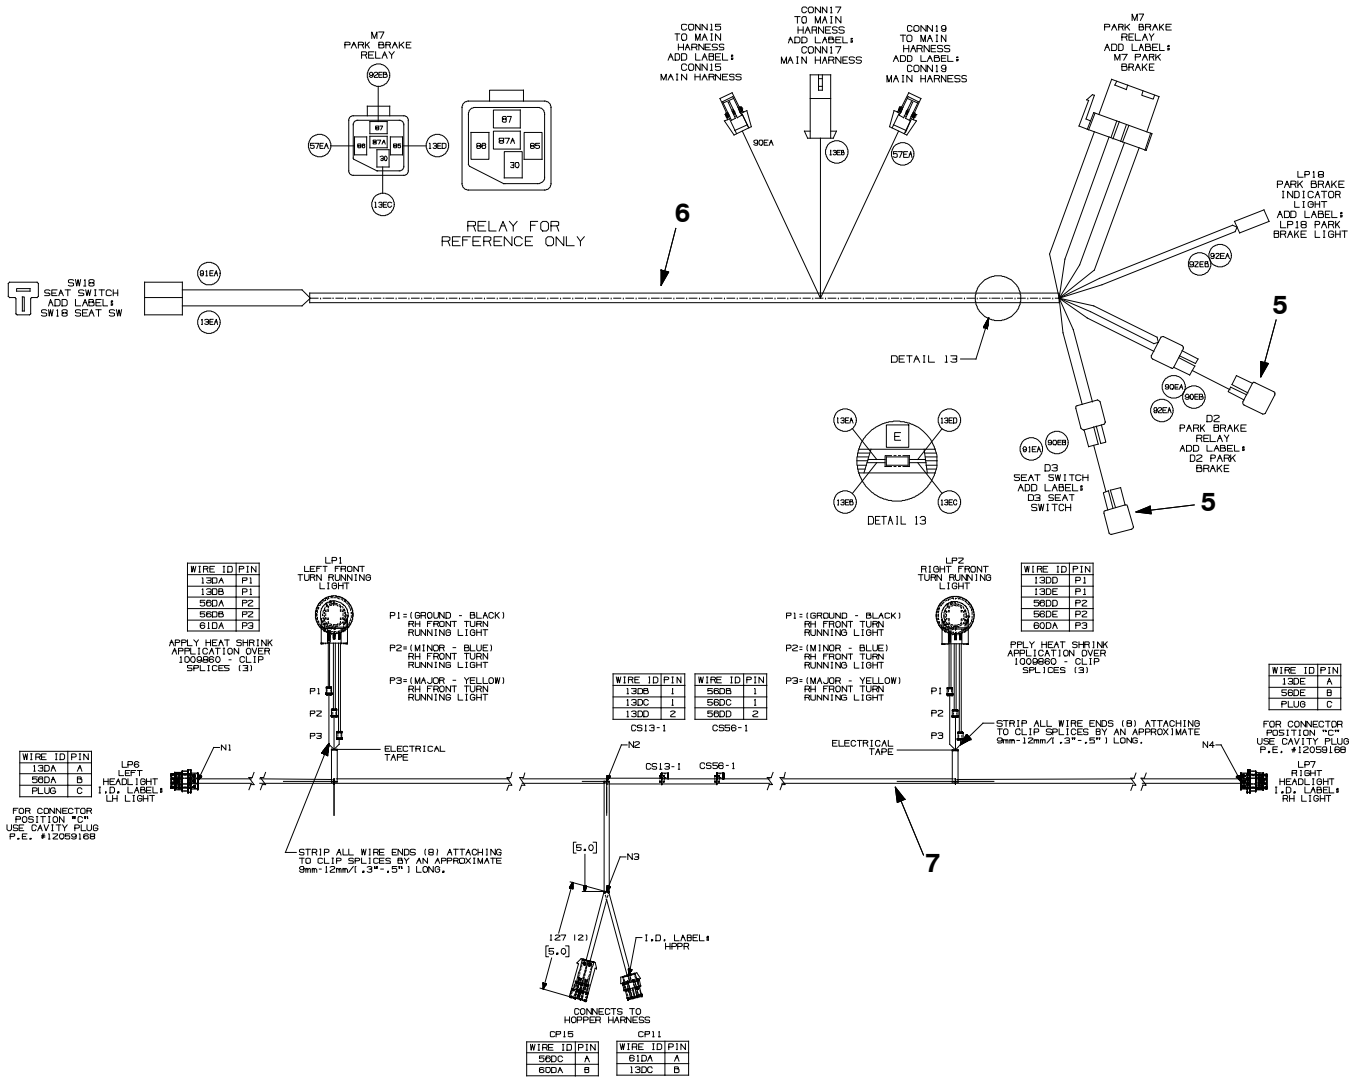

Ref.	Part No.	Serial Number	Description	Qty.
	1	1073794	(006501-) Harness, Main,[S30 Phoenix] (S30 Only)	1
	2	1073795	(006501-) Harness, Main, [S30 Xp] (S30 XP Only)	1
	3	1038387	(006501-) Harness, Hppr [S30]	1
	4	1047618	(006501-) Harness, Switch, Seat, Ce [S30] (Europe Only)	1
	5	222290	(006501-) Diode, Ele, Plug (Europe Only)	2
	6	1047619	(006501-) Harness, Switch, Seat, Ce [S30 Xp] (Europe Only) (S30XP Only)	2
	7	1033520	(006501-) Harness, Cover, Hppr [S30]	1
▽	8	1030972	(006501-) Harness, Eng, Dsl [S30]	1
▲	9	1035889	(006501-) Fuse, Blade, 40A [Maxi]	1
▲		762516	(006501-) Fuse, Blade, 030A, 32Vdc	1

Fig. 65 - Label Group



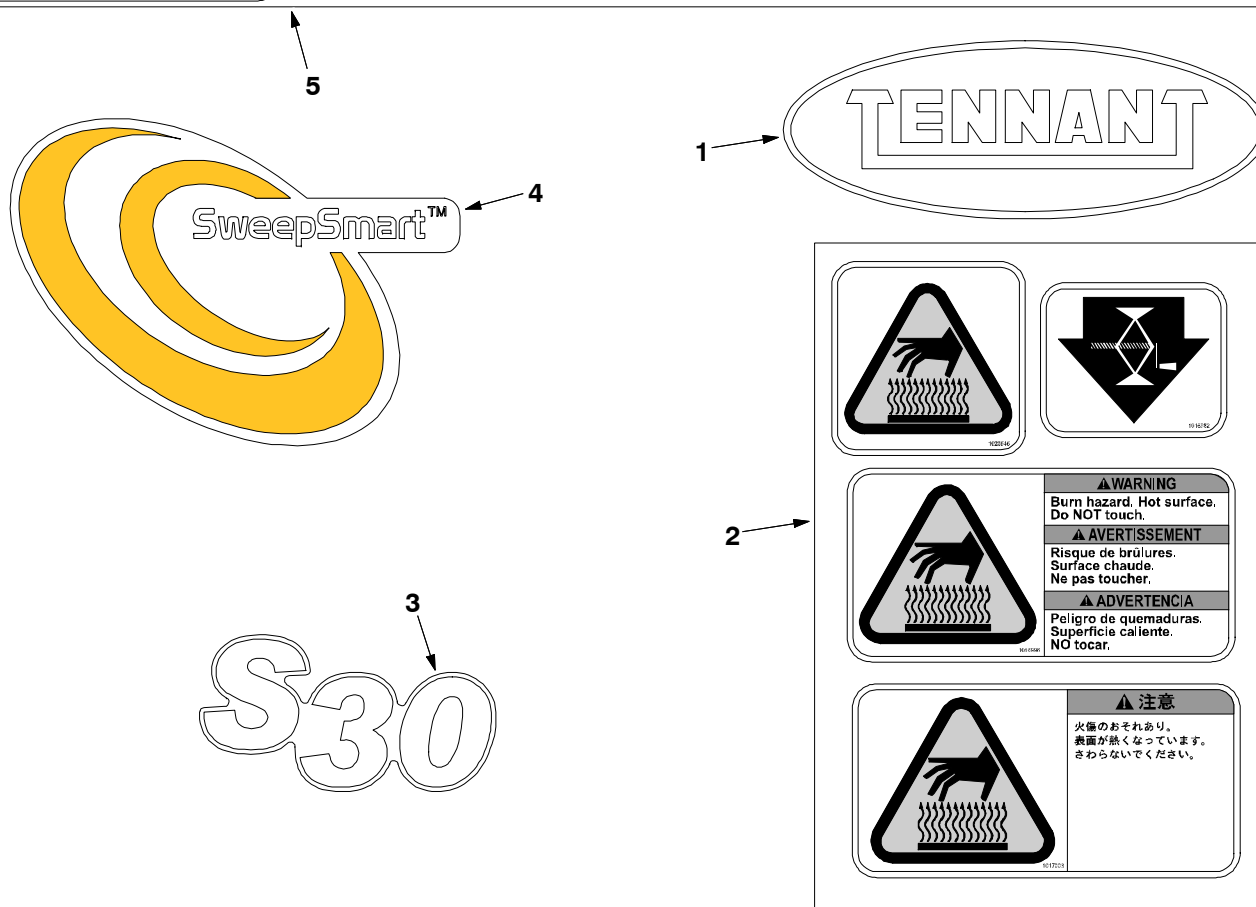


Fig. 65 - Label Group

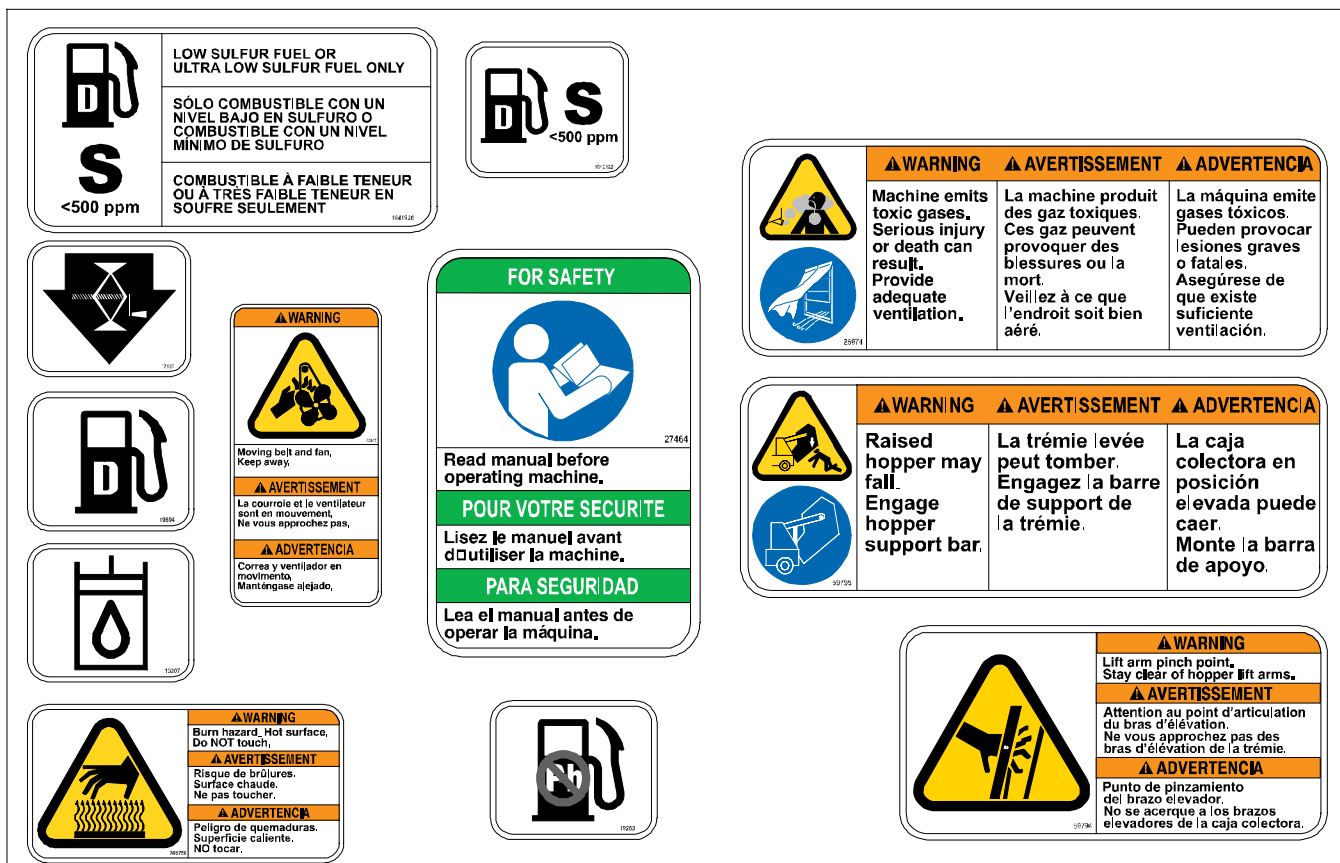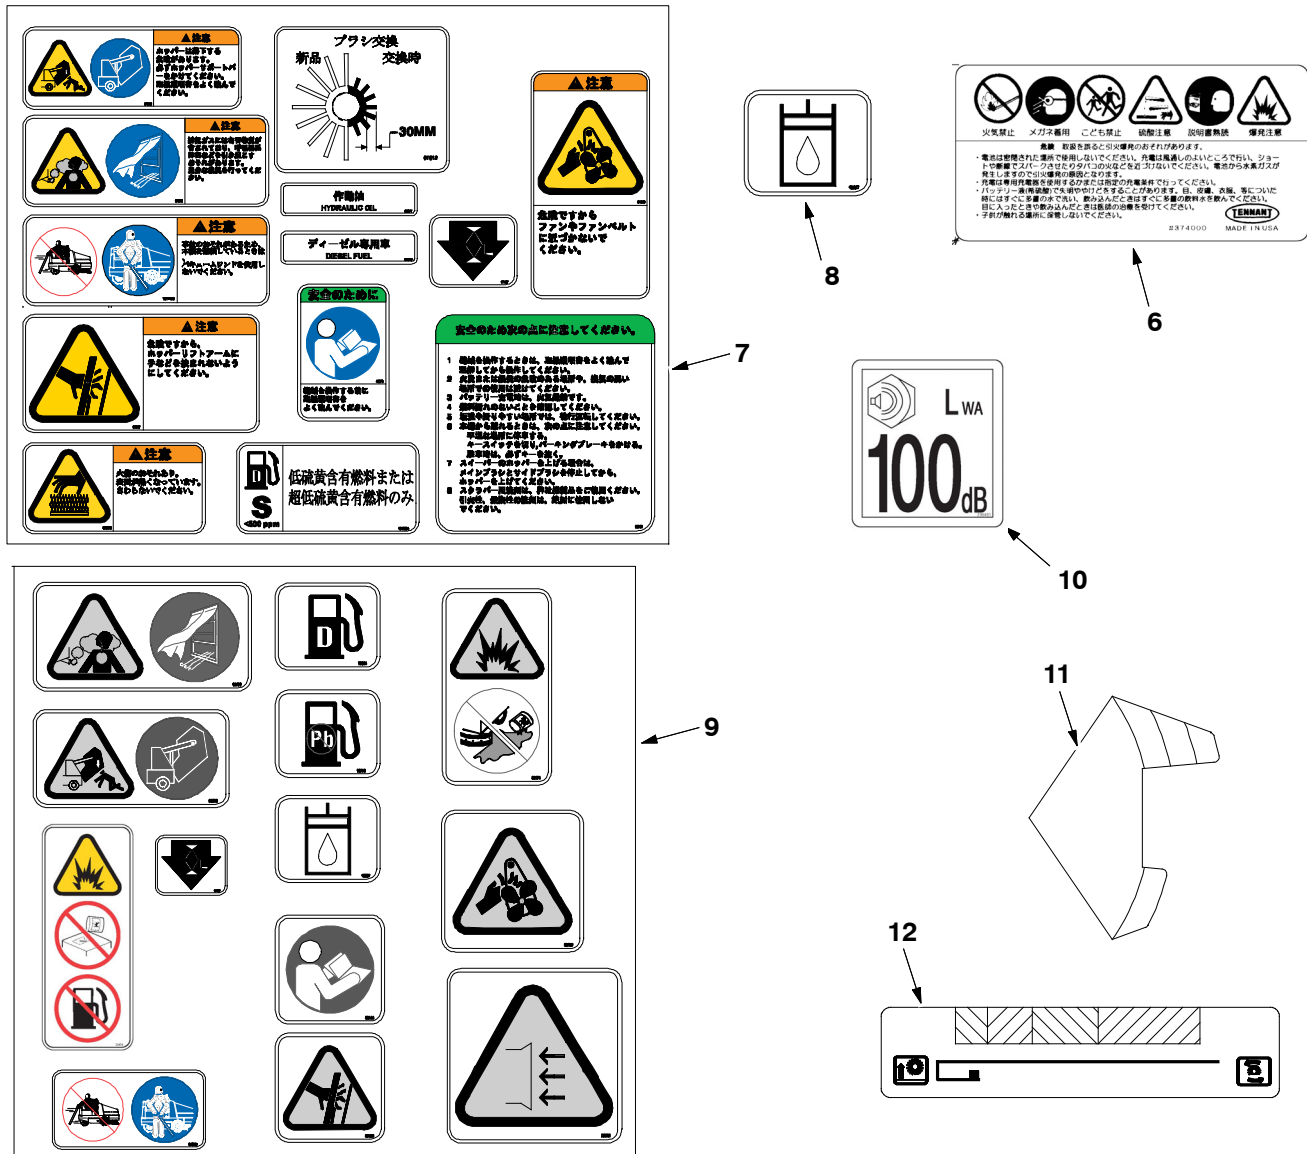

Ref.	Part No.	Serial Number	Description	Qty.
1	1047741	(006501-	) Label, Logo, 10.4l, White [Tennant]	1
2	1017141	(006501-	) Label Set, Hi Temp	1
3	1061047	(006501-	) Label, White [S30]	3
4	1061048	(006501-	) Label, Cyclone [S30]	3
5	59767	(006501-	) Label Set, Info/Hzrd [Multi- Mach]	1
6	374000	(006501-	) Label, Caution, Battery, Tj (Japan Only)	1
7	72381	(006501-	) Label Set, Info/Hzrd, Misc, Tj (Japan Only)	1
8	19207	(006501-	) Label, Info, Hyd Fluid, Na / Ce (Japan Only)	1
9	66188	(006501-	) Label Set, Info/Hzrd, Misc, Ce (Europe Only)	1
10	398481	(006501-	) Label, Level, Sound [100 Db] (Europe Only)	1
11	383203	(006501-	) Label, Info, Arm, Brush	1
12	383202	(006501-	) Label, Handle, Lift	1
	374224	(0000-	) Tape, Warning, Rh, Blk / Yel [33 Mtr] (Europe Only)	1
	C460919	(0000-	) Tape, Warning, Left Blk/Yel [33 Mtr] (Europe Only)	1

SECTION 3

Contents	Page
Fig. 1 - Indoor Light Kit	3- 2
Fig. 2 - Outdoor Light Kit	3- 4
Fig. 3 - Left Hand Side Brush Kit, S30 XP and X4	3- 6
Fig. 4 - Vacuum Wand Kit	3- 8
Fig. 5 - Overhead Guard Kit	3- 10
Fig. 6 - Cab Group	3- 12
Fig. 7 - Cab Cover Group	3- 14
Fig. 8 - Cab Door Group	3- 16
Fig. 9 - Cab Heater Group	3- 18
Fig. 10 - Cab Air Conditioner Group	3- 20
Fig. 11 - Cab Fuel Cover Group	3- 22
Fig. 12 - Cab Wire Harness Group	3- 24
Fig. 13 - Cab Wire Harness Electrical Schematic	3- 25
Fig. 14 - Corner Bumper Kit	3- 26
Fig. 15 - Telemetry Group	3- 27
Fig. 16 - Side and Rear Skirt Kit	3- 28
Fig. 17 - Wet Side Brush Dust Control Water Tank Group (No. Amer. Only)	3- 30
Fig. 18 - Wet Right Hand Side Brush Dust Control Spray Nozzle Group (No. Amer. Only)	3- 32
Fig. 19 - Wet Dual Side Brush Dust Control Spray Nozzle Group (No. Amer. Only)	3- 34
Fig. 20 - Wet Side Brush Dust Control Electrical Group (No. Amer. Only)	3- 36
Fig. 21 - Wet Side Brush Dust Control Wire Harness Group (No. Amer. Only)	3- 38
Fig. 22 - Wet Side Brush Dust Control Rework Group (S/N 006501- 008140) (No. Amer. Only)	3- 40
Fig. 23 - Wet Side Brush Dust Control Electrical Schematic, S30 (No. Amer. Only)	3- 42
Fig. 24 - Wet Side Brush Dust Control Electrical Schematic, S30 XP (No. Amer. Only)	3- 43
Fig. 25 - Right Hand Side Brush Dust Control Skirt Kit	3- 44
Fig. 26 - Dual Side Brush Dust Control Skirt Kit	3- 46
Fig. 27 - HEPA Filter Vacuum Hose Group (No. Amer. Only)	3- 48
Fig. 28 - HEPA Filter Box Group (No. Amer. Only)	3- 50
Fig. 29 - HEPA Filter Exhaust Cover Group (No. Amer. Only)	3- 52
Fig. 30 - HEPA Filter Electrical Group (No. Amer. Only)	3- 54
Fig. 31 - Fire Extinguisher Kit	3- 55
Fig. 32 - Documentation Group	3- 56

Fig. 1 - Indoor Light Kit

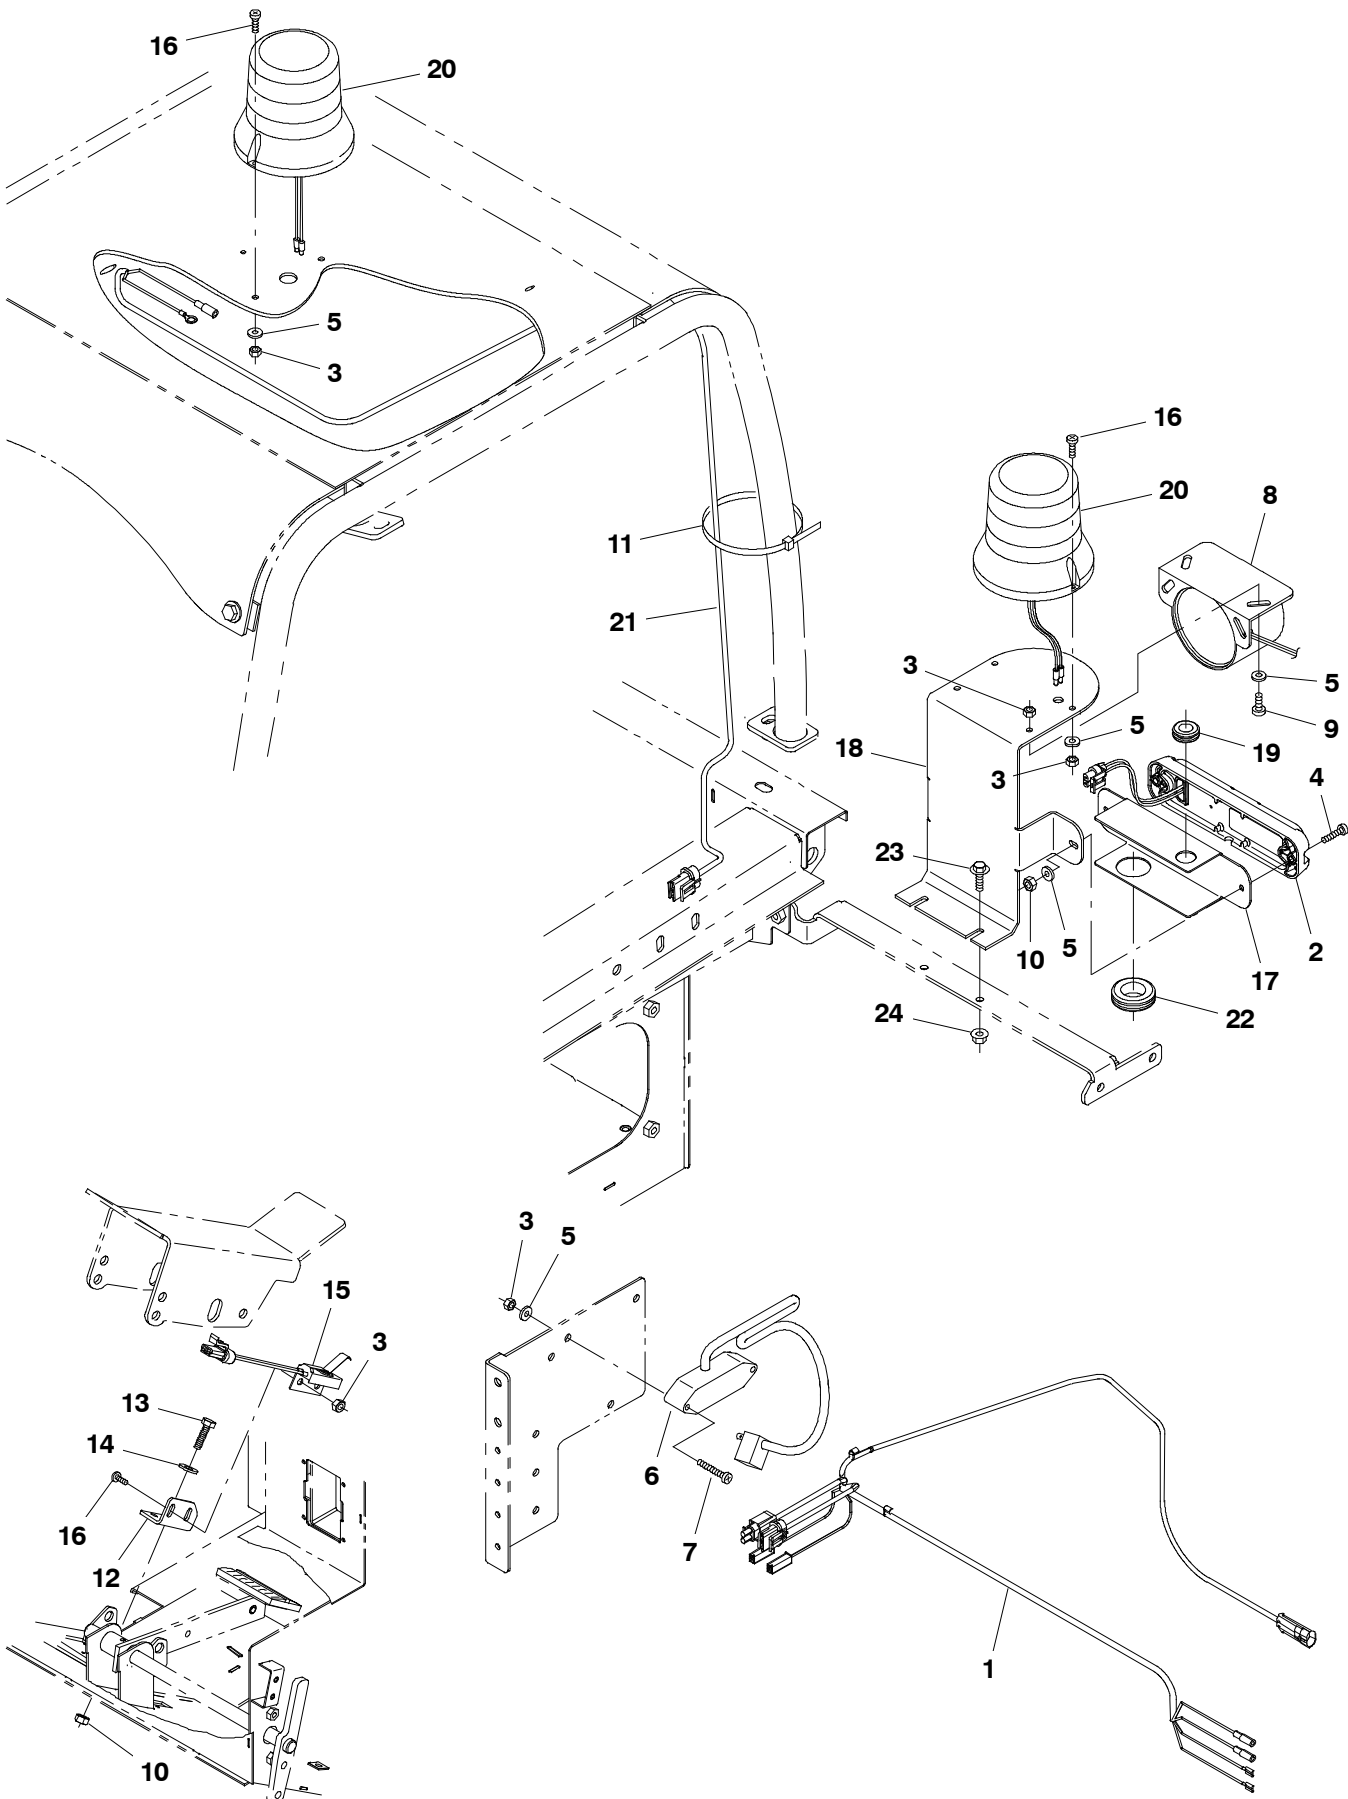


Fig. 1 - Indoor Light Kit

	Ref.	Part No.	Serial Number	Description	Qty.
▽		9008199	(006501-	) Light Kit, Inside, Ci [S30]	1
▲	1	1034191	(006501-	) Harness, Backup, Rev [S30]	1
▲	2	1036173	(006501-	) Light, Led, White, 12- 24vdc	1
▲	3	06549	(006501-	) Nut, Hex, Lock, M5 X 0.80, NI	6
▲	4	06935	(006501-	) Screw, Pan, Phl, M5 X 0.80 X 25, 4.8	2
▲	5	19066	(006501-	) Washer, Flat, 10	8
▲	6	1036985	(006501-	) Flasher, 12- 80vdc, 2a	1
▲	7	06938	(006501-	) Screw, Pan, Phl, M5 X 0.80 X 40, 4.8	2
▲	8	9007131	(006501-	) Alarm Assy, Backup, 12- 24vdc 82- 107dba	1
▲	9	09145	(006501-	) Screw, Pan, Phl, M6 X 1.00 X 16, 4.8	2
▲	10	07785	(006501-	) Nut, Hex, Std, M6 X 1.00, Ss	4
▲	11	49266	(006501-	) Tie, Cable, Nyl, 07.3l .19w 1.8 Max D	4
▲	12	1036995	(006501-	) Bracket, Switch, Reverse	1
▲	13	08716	(006501-	) Screw, Hex, M6 X 1.00 X 20, Ss	2
▲	14	32483	(006501-	) Washer, Flat, 0.25, Sae	2
▲	15	1039735	(006501-	) Switch, Snap, 15a No	1
▲	16	06933	(006501-	) Screw, Pan, Phl, M5 X 0.80 X 16, 4.8	4
▲	17	1061203	(006501-	) Bracket, Light	1
▲	18	1061140	(006501-	) Bracket, Alarm, Backup	1
▲	19	10632- 9	(006501-	) Grommet, Rbr, 0.63id, F/0.8h, .12 Matl	1
▲	20	1075297	(006501-	) Light, Flsh, 12vdc, Amb, Rwk	1
▲	21	1030973	(006501-	) Harness, Ohg [S30]	1
▲	22	10632- 14	(006501-	) Grommet, Rbr, 1.00id, F/1.4h, .12 Matl	1
▲	23	1036892	(006501-	) Screw, Hex, M6 X 1.00 X 25, 9.8, Sems	2
▲	24	07790	(006501-	) Nut, Hex, Flng, M6 X 1.00	2

Fig. 2 - Outdoor Light Kit

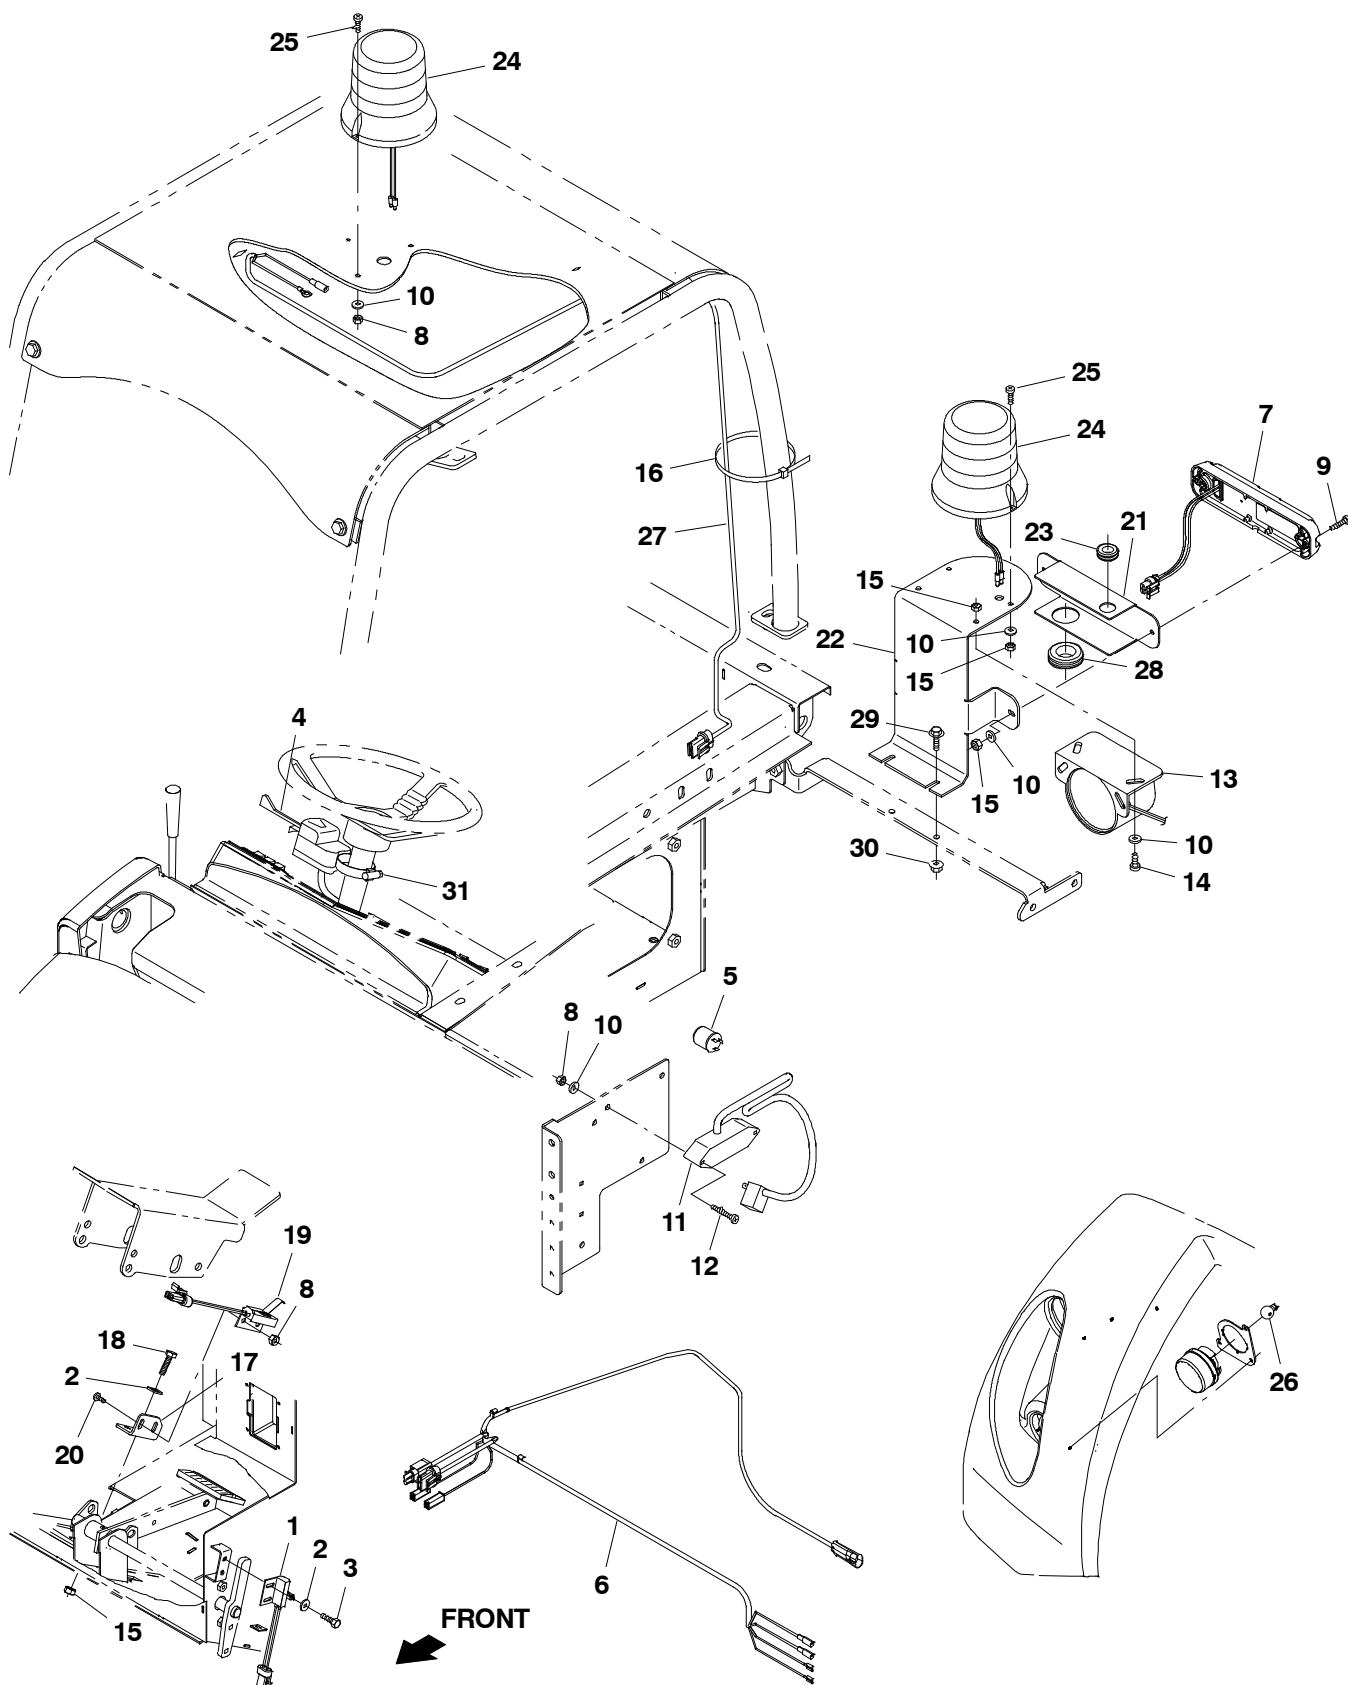


Fig. 2 - Outdoor Light Kit

	Ref.	Part No.	Serial Number	Description	Qty.
▽		9008198	(006501-	) Light Kit, outdoor, Ci [S30]	1
▲	1	1040019	(006501-	) Switch, Limit, 15a, Nc	1
▲	2	32483	(006501-	) Washer, Flat, 0.25, Sae	4
▲	3	09244	(006501-	) Screw, Hex, M5 X 0.80 X 16, 8.8	2
▲	4	60751	(006501-	) Switch, Turn Signal	1
▲	5	31922	(006501-	) Flasher, Hd, 12vdc 25a [10- 57300]	1
▲	6	1034191	(006501-	) Harness, Backup, Rev [S30]	1
▲	7	1036173	(006501-	) Light, Led, White, 12- 24vdc	1
▲	8	06549	(006501-	) Nut, Hex, Lock, M5 X 0.80, NI	8
▲	9	06935	(006501-	) Screw, Pan, Phl, M5 X 0.80 X 25, 4.8	2
▲	10	19066	(006501-	) Washer, Flat, 10	8
▲	11	1036985	(006501-	) Flasher, 12- 80vdc, 2a	1
▲	12	06938	(006501-	) Screw, Pan, Phl, M5 X 0.80 X 40, 4.8	2
▲	13	9007131	(006501-	) Alarm Assy, Backup, 12- 24vdc 82- 107dba	1
▲	14	09145	(006501-	) Screw, Pan, Phl, M6 X 1.00 X 16, 4.8	2
▲	15	07785	(006501-	) Nut, Hex, Std, M6 X 1.00, Ss	4
▲	16	49266	(006501-	) Tie, Cable, Nyl, 07.3l .19w 1.8 Max D	4
▲	17	1036995	(006501-	) Bracket, Switch, Reverse	1
▲	18	08716	(006501-	) Screw, Hex, M6 X 1.00 X 20, Ss	2
▲	19	1039735	(006501-	) Switch, Snap, 15a No	1
▲	20	06933	(006501-	) Screw, Pan, Phl, M5 X 0.80 X 16, 4.8	2
▲	21	1061203	(006501-	) Bracket, Light	1
▲	22	1061140	(006501-	) Bracket, Alarm, Backup	1
▲	23	10632- 9	(006501-	) Grommet, Rbr, 0.63id, F/0.8h, .12 Matl	1
▲	24	1075296	(006501-	) Light, Flsh, 12vdc, Amb, Rwk	1
▲	25	06933	(006501-	) Screw, Pan, Phl, M5 X 0.80 X 16, 4.8	2
▲	26	1036183	(006501-	) Lamp, Clr, 12vdc [#3157 Series]	2
▲	27	1030973	(006501-	) Harness, Ohg [S30]	1
▲	28	10632- 14	(006501-	) Grommet, Rbr, 1.00id, F/1.4h, .12 Matl	1
▲	29	1036892	(006501-	) Screw, Hex, M6 X 1.00 X 25, 9.8, Sems	2
▲	30	07790	(006501-	) Nut, Hex, Flng, M6 X 1.00	2
▲	31	11531	(006501-	) Clamp, Hose, Wormdrive, 1.06- 2.00d, .56w	1

Fig. 3 - Left Hand Side Brush Kit, S30 XP and X4

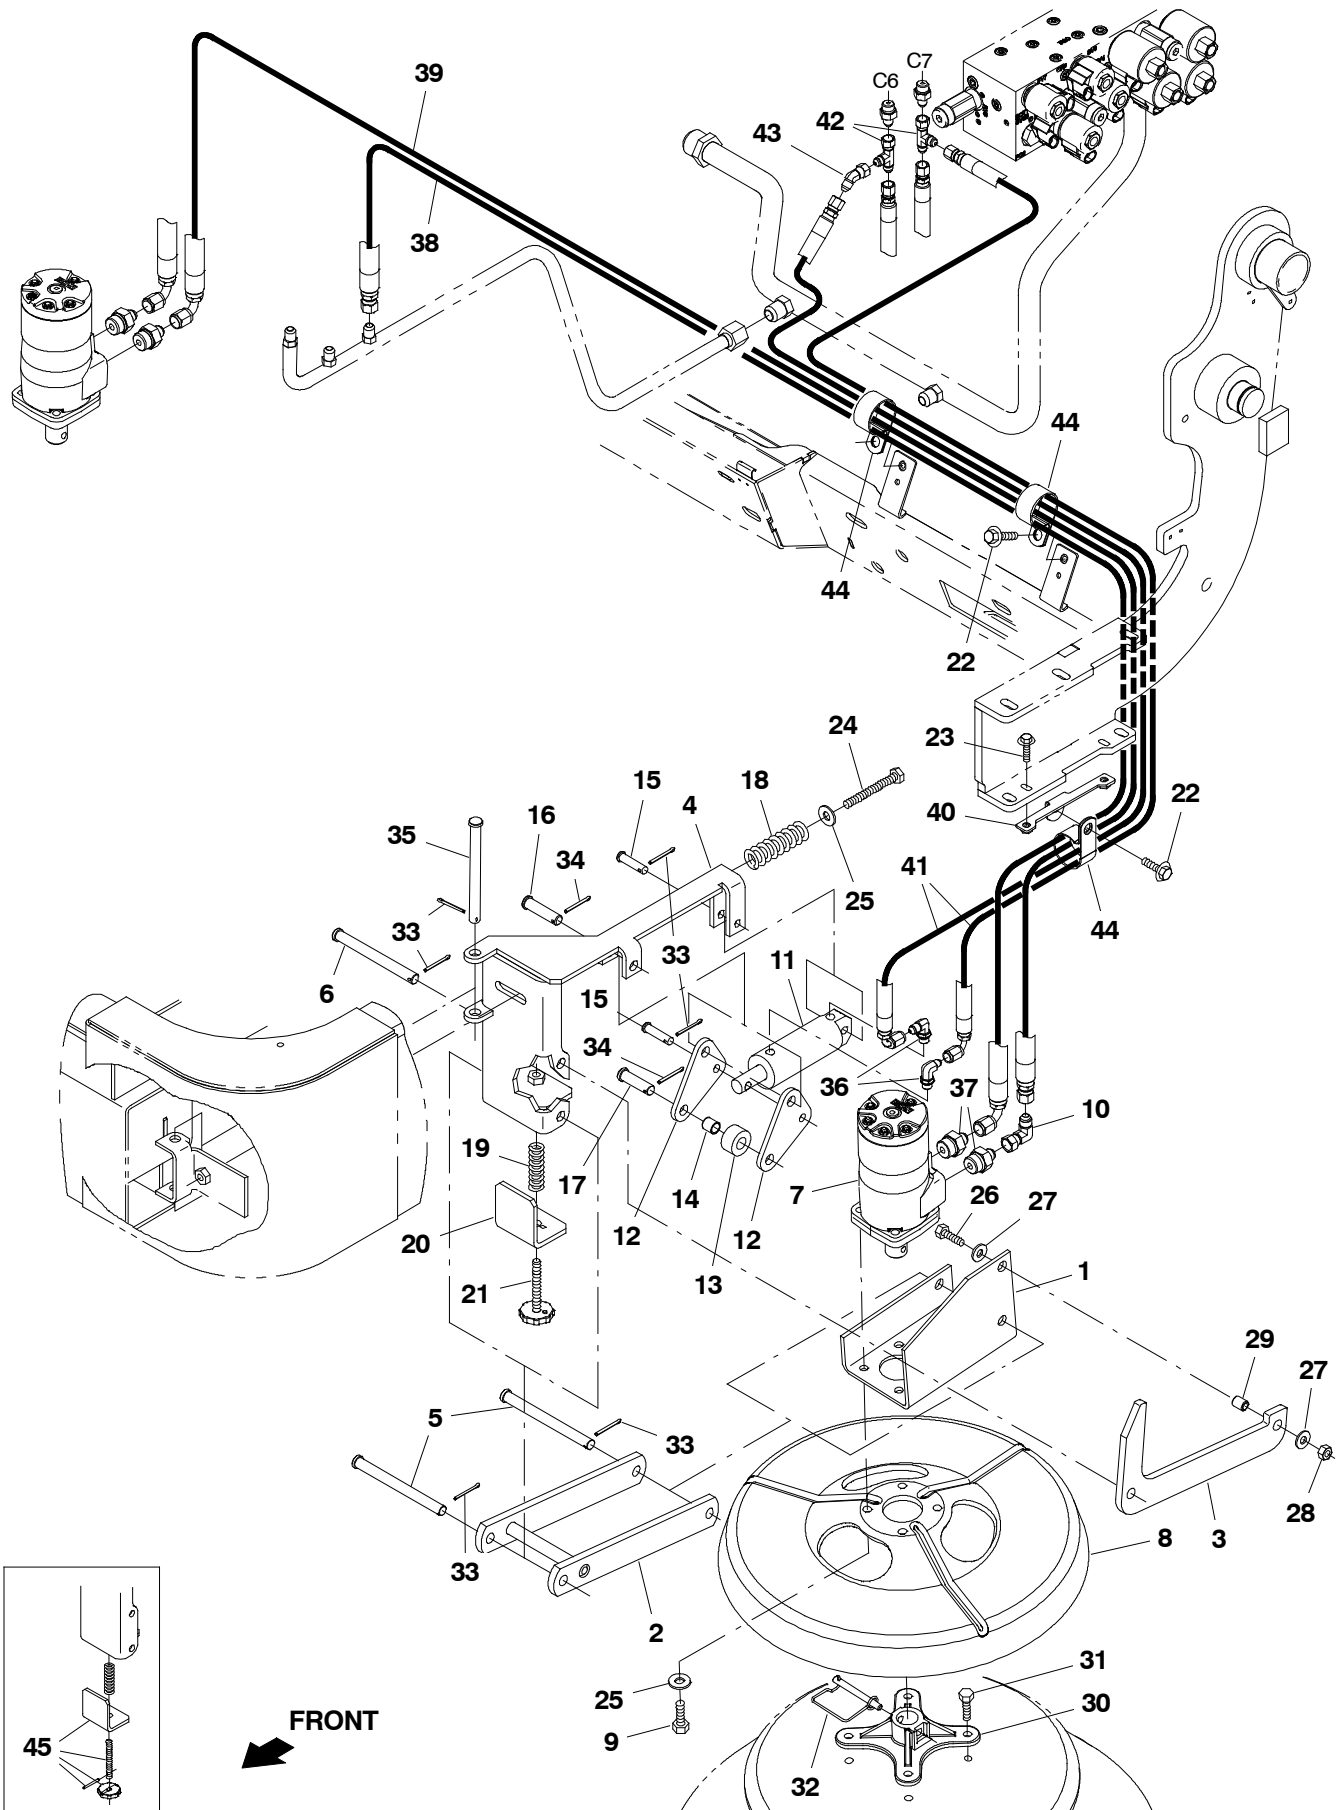


Fig. 3 - Left Hand Side Brush Kit, S30 XP and X4

Ref.	Part No.	Serial Number	Description	Qty.
▽	9013113	(006501-	) Brush Kit, Side, Lh, Ci [S30]	1
▲ 1	1031916	(006501-	) Bracket, Mtg, Motor, Side Brush	1
▲ 2	1029682	(006501-	) Arm Wldt, Brush, Side	1
▲ 3	1026459	(006501-	) Arm, Linkage, Side Brush	1
▲ 4	1039649	(006501-	) Pivot Wldt, Brush, Side	1
▲ 5	51225	(006501-	) Pin, Clevis, 0.50d X 5.50l	2
▲ 6	51538	(006501-	) Pin, Clevis, 0.50d X 5.00l	1
▲ 7	1057338	(006501-	) Motor, Hyd, Gear, Int 17.9 Bi- Dir 2500	1
▲ 8	1054256	(006501-	) Guard, Brush	1
▲ 9	46559	(006501-	) Screw, Hex, .38- 16 X 1.25, NI	4
▲ 10	1072195	(006501-	) Fitting, Hyd, E90, Ff06/Fm06	1
▲ 11	1041034	(006501-	) Cylinder, Hyd, 1.5b 06.3l 01.50strk 2500	1
▲ 12	1026462	(006501-	) Lever, Lift, Brush	2
▲ 13	1026525	(006501-	) Tube, 0.59id 1.25od 00.6l, Stl	1
▲ 14	59634	(006501-	) Bushing, Sleeve, 0.50b 0.59d 0.62l, Fgl	1
▲ 15	29558	(006501-	) Pin, Clevis, 0.37d X 1.50l	2
▲ 16	51534	(006501-	) Pin, Clevis, 0.50d X 2.00l	1
▲ 17	43290	(006501-	) Pin, Clevis, 0.50d X 1.75l	1
▲ 18	45261	(006501-	) Spring, Cmpr, 0.97od .11wir 02.5l	1
▲ 19	22290	(006501-	) Spring, Cmpr, 0.72od .06wir 02.3l	1
▲ 20	1075439	(008331-	) Angle	1
▲ 21	1075444	(008331-	) Knob, Assy, Sb Xp	1
▲ 22	1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	3
▲ 23	1037345	(006501-	) Screw, Hex, M6 X 1.00 X 30, 9.8, Sems	2
▲ 24	06965	(006501-	) Screw, Hex, M10 X 1.5 X 80, 8.8	1
▲ 25	32492	(006501-	) Washer, Flat, 0.38, Std	5
▲ 26	76570	(006501-	) Screw, Hex, M8 X 1.25 X 30, 8.8	1
▲ 27	32491	(006501-	) Washer, Flat, 0.31, Std	2
▲ 28	08709	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI	1
▲ 29	80395	(006501-	) Sleeve, P/M, 0.31b 0.50d 0.7l [430ss]	1
▲ 30	47501	(006501-	) Hub, Adapter, Brush, 1.00b	1
▲ 31	39394	(006501-	) Screw, Hex, .31- 09 X 1.25, Wood	4
▲ 32	84581	(006501-	) Pin Assy, Side Brush W/ Clip	1
▲ 33	08182	(006501-	) Pin, Cotter, .125 X 1.00	6
▲ 34	39005	(006501-	) Pin, Cotter, .094 X 0.75	2
▲ 35	222196	(006501-	) Pin, Clevis, 0.50d X 4.25l	1
▲ 36	762427	(006501-	) Fitting, Hyd, E90, Fm04/Om04	2
▲ 37	762439	(006501-	) Fitting, Hyd, Str, Fm06/Om10	2
▲ 38	1067661	(006501-	) Hose, Hyd, Tc06, Ff06e90/Ff06str, 102.0	1
▲ 39	1067105	(006501-	) Hose, Hyd, Tc08, Ff06e90/Ff06str, 134.0	1
▲ 40	1213656	(006501-	) Bracket, Wldt, Mtg, Hyd	2
▲ 41	1067088	(006501-	) Hose, Hyd, Tc04, Ff04e90/Ff04str, 126.0	2
▲ 42	767422	(006501-	) Fitting, Hyd, Tee, Ff04/Fm04/Fm04, Run	2
▲ 43	1011123	(006501-	) Fitting, Hyd, E45, Ff04/Fm04	1
▲ 44	53468	(006501-	) Clamp, Cable, Stl, 1.75d X 1.00w, 1hole	3
45	9015652	(006501- 008330)	Knob Kit, Repair Side Brush	1

Fig. 4 - Vacuum Wand Kit

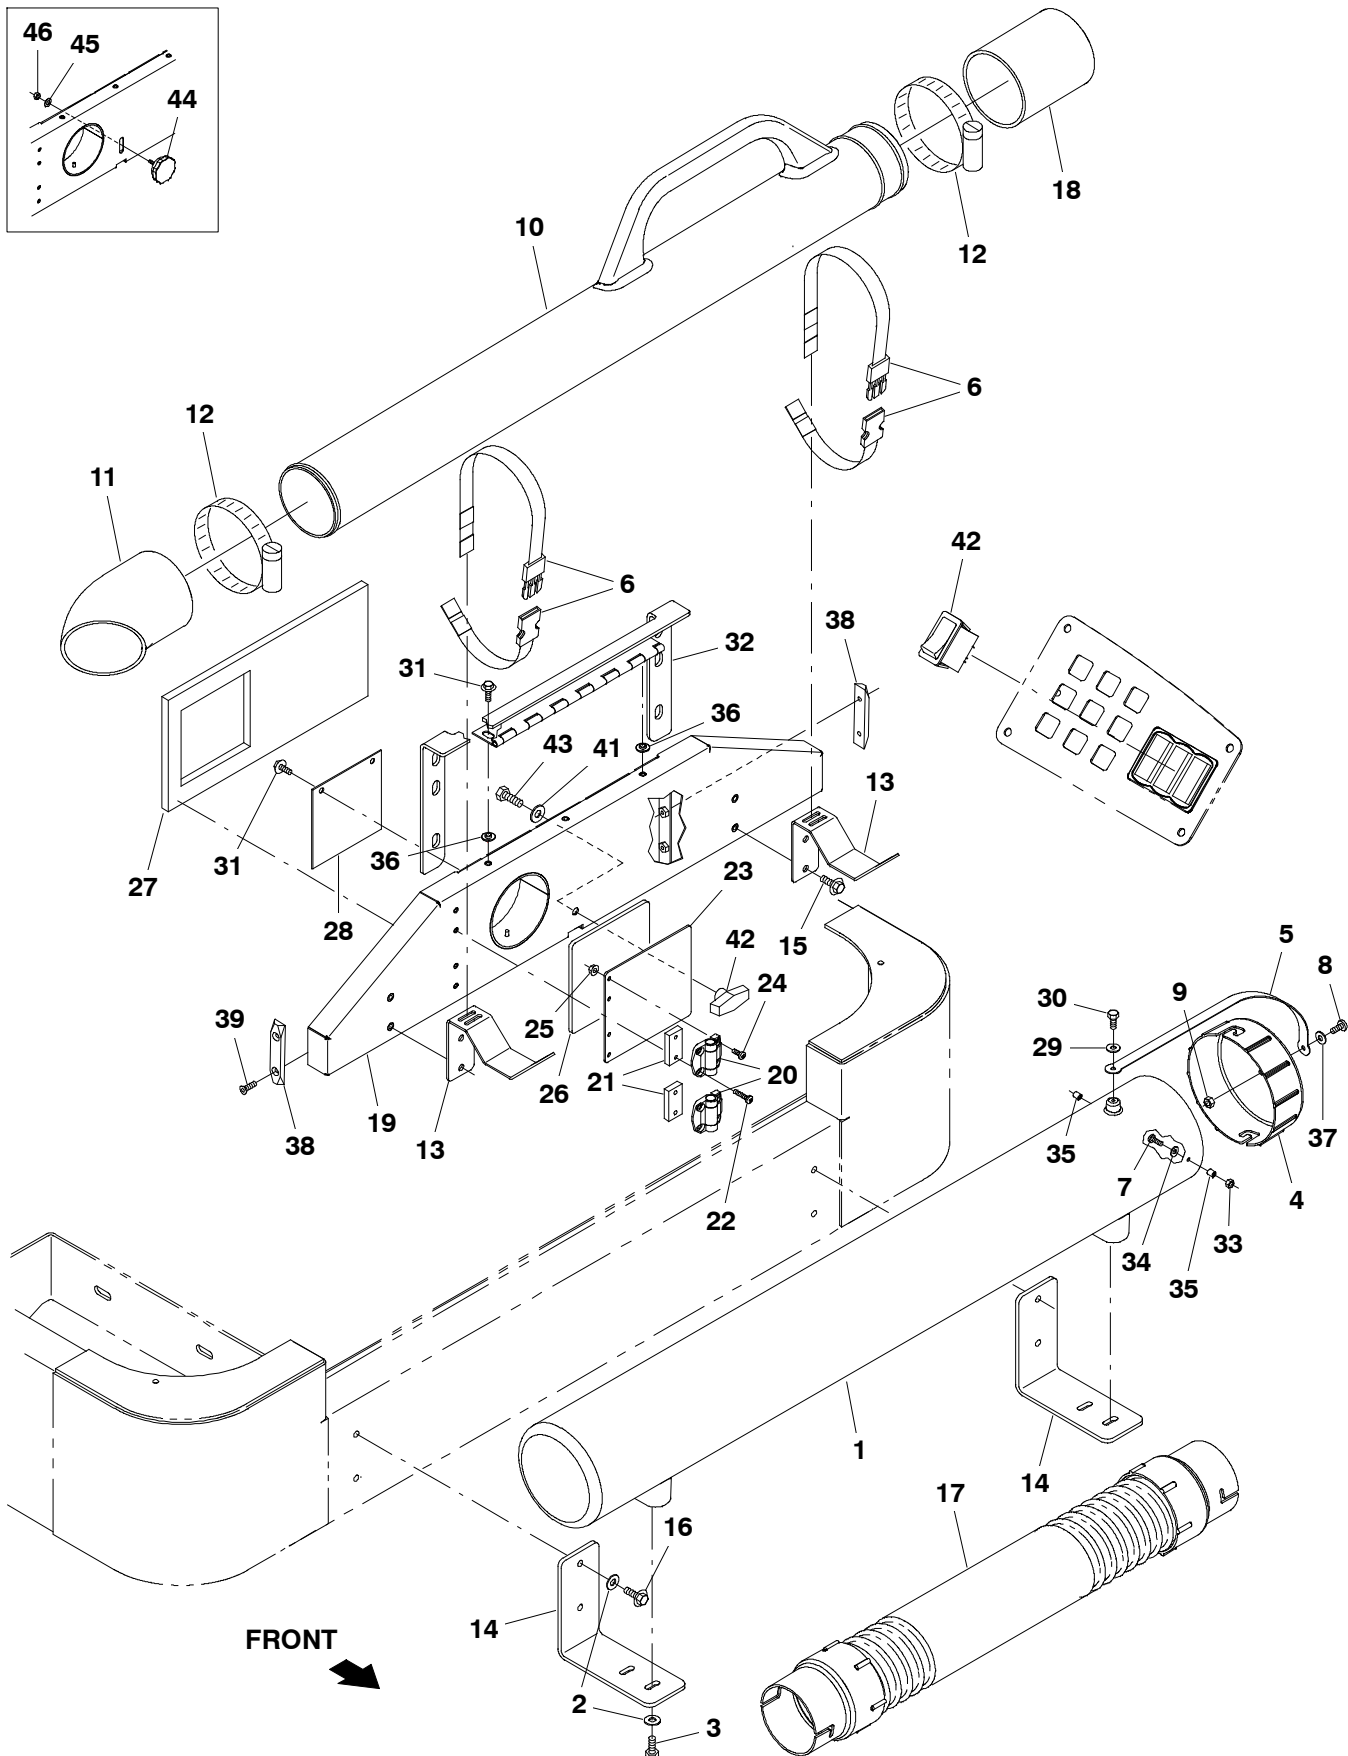


Fig. 4 - Vacuum Wand Kit

Ref.	Part No.	Serial Number	Description	Qty.
▽	9013873	(006501-	) Wand Kit, Vacuum, Ci [Roto. S30]	1
▲	1 1032752	(006501-	) Tube, Hose	1
▲	2 32491	(006501-	) Washer, Flat, 0.31, Std	8
▲	3 16931	(006501-	) Screw, Hex, M8 X 1.25 X 20, 8.8	4
▲	4 1041473	(006501-	) Cap, Enclosure, Hose	1
▲	5 1041754	(006501-	) Strap, Cap, Enclosure	1
▲	6 367974	(006501-	) Strap, Pyp, 0.07 1.0w 18.5l, W/ Buckle	2
▲	7 06934	(006501-	) Screw, Pan, Phl, M5 X 0.80 X 20, 4.8	2
▲	8 09145	(006501-	) Screw, Pan, Phl, M6 X 1.00 X 16, 4.8	1
▲	9 08708	(006501-	) Nut, Hex, Lock, M6 X 1.00, NI	1
▲	10 1032584	(006501-	) Wand, Vacuum	1
▲	11 1032707	(006501-	) Hose, Nozzle, Floor	1
▲	12 79380	(006501-	) Clamp, Hose, Wormdrive, 3.75- 4.62d, .62w	2
▲	13 1214153	(006501-	) Bracket, Mtg, Wand	2
▲	14 1046993	(006501-	) Bracket, Mtg, Tube	2
▲	15 1020341	(006501-	) Screw, Hex, M8 X 1.25 X 20, Ss, Sems	4
▲	16 763045	(006501-	) Screw, Hex, M8 X 1.25 X 20, Fmg	4
▲	17 1042718	(006501-	) Hose Assy, W/2cuff, 4.0d 156l 4.0/4.0	1
▲	18 1041882	(006501-	) Hose, Rbr	1
▲	19 9013446	(006501-	) Door Wldt, Hppr, Vac- Wand, Replmt, Na	1
▲	19 9013447	(006501-	) Door Wldt, Hppr, Vac- Wand, Replmt, Ce	1
▲	19 9013448	(006501-	) Door Wldt, Hppr, Vac- Wand, Replmt, Jp	1
▲	20 367950	(006501-	) Hinge, .40pin 2.2w 02.0l, 4/0.21h	2
▲	21 1214152	(006501-	) Block, Spacer, Hinge	2
▲	22 06935	(006501-	) Screw, Pan, Phl, M5 X 0.80 X 25, 4.8	4
▲	23 1214258	(006501-	) Door , Vacuum	1
▲	24 06932	(006501-	) Screw, Pan, Phl, M5 X 0.80 X 10, 4.8	4
▲	25 07789	(006501-	) Nut, Hex, Flng, M5 X 0.80	4
▲	26 1039007	(006501-	) Seal, Ure, .25, 06.0w 06.0l, Adh	1
▲	27 1035660	(006501-	) Gasket, Ure, .50, 07.47w, 15.47l, Adh	1
▲	28 1039038	(006501-	) Flap, Wand, Vacuum	1
▲	29 01683	(006501-	) Washer, Flat, 10, Ss	1
▲	30 383000	(006501-	) Screw, Hex, 12- 16 X 0.75	1
▲	31 1040467	(006501-	) Screw, Hex, M6 X 1.00 X 20, 9.8, Sems	4
▲	32 1214034	(006501-	) Bracket Wldt, Door, Front	1
▲	33 06549	(006501-	) Nut, Hex, Lock, M5 X 0.80, NI	2
▲	34 19066	(006501-	) Washer, Flat, 0.25b 0.56d .05, Pl, 10	2
▲	35 610943	(006501-	) Sleeve, P/M, 0.22b 0.32d 0.4l, Pl	2
▲	36 1213565	(006501-	) Sleeve, Flange	2
▲	37 01684	(006501-	) Washer, Flat, 0.27b 0.69d .05, Ss	1
▲	38 1213971	(006501-	) Block, Nylon	2
▲	39 09062	(006501-	) Screw, Flt, Soc, M6 X 1.00 X 16, 10.9	4
▲	40 04706	(006784-	) Knob, Tee, 0.38- 16, 2.5 X 1.0 1.1l, Plstc	1
▲	41 32485	(006784-	) Washer, Flat, 0.38, Sae	1
▲	42 397889	(006501-	) Switch, Rocker, Dpst, On / None / On (S30 ONLY)	1
▲	43 21195	(006784-	) Screw, Hex, .38- 16 X 0.75, G5	1
	44 1047543	(006501- 006783)	Knob, Rnd, 2.38d 0.88l M6 X 1.0, Plstc	1
	45 32490	(006501- 006783)	Washer, Flat, 0.25, Std	1
	46 08708	(006501- 006783)	Nut, Hex, Lock, M6 X 1.00, NI	1

Fig. 5 - Overhead Guard Kit

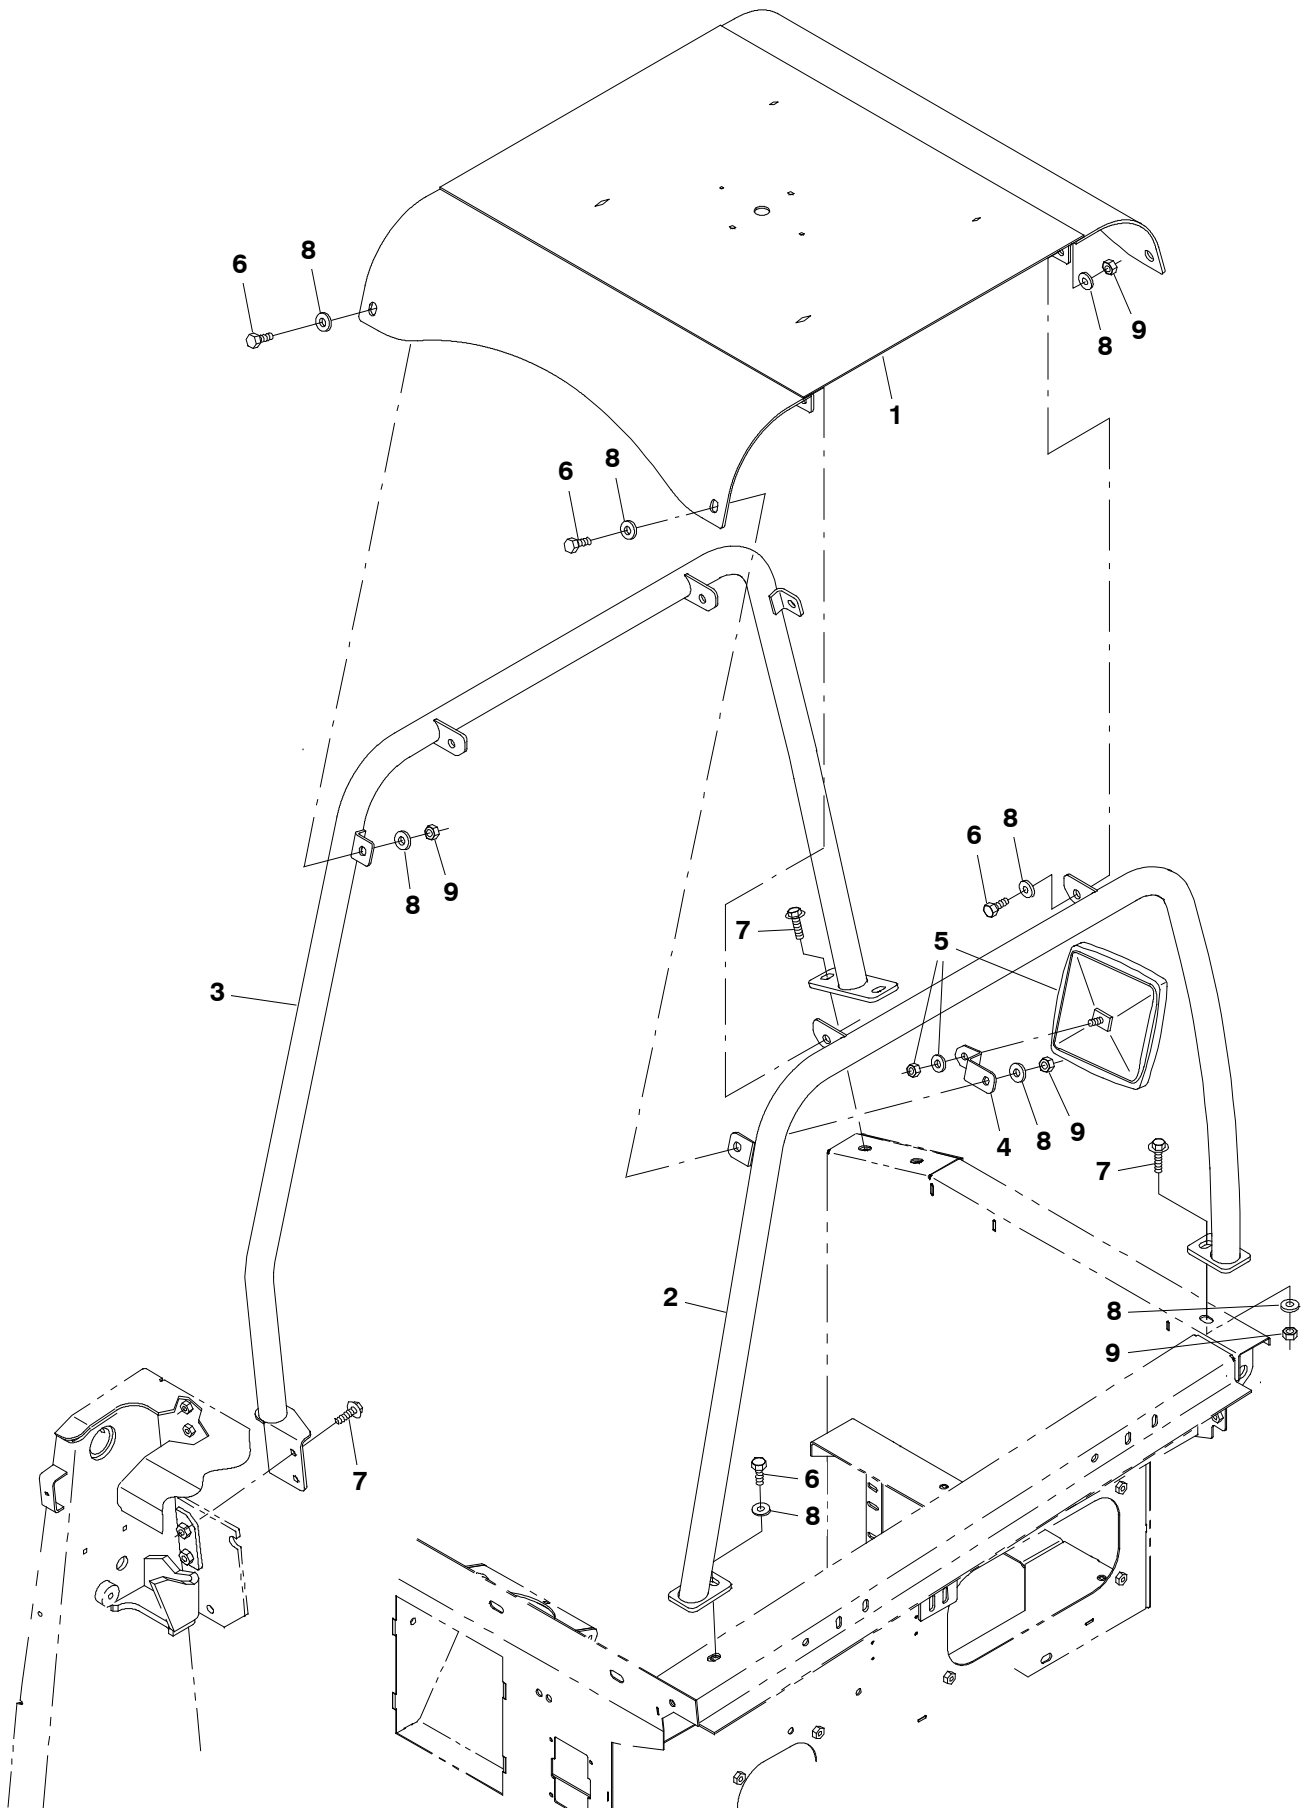


Fig. 5 - Overhead Guard Kit

	Ref.	Part No.	Serial Number	Description	Qty.
▽		9008200	(006501-	) Ohg Kit, Ci [S30]	1
▲	1	1032262	(006501-	) Guard Wldt, Ohg, Top	1
▲	2	1032067	(006501-	) Leg Wldt, Guard, Lh	1
▲	3	1061016	(006501-	) Leg Wldt, Guard, Rh	1
▲	4	1032722	(006501-	) Bracket, Mtg, Mirror	1
▲	5	49034	(006501-	) Mirror, Convex, 06.7 X 06.2	1
▲	6	39283	(006501-	) Screw, Hex, M10 X 1.5 X 25, 8.8	8
▲	7	1037358	(006501-	) Screw, Hex, M10 X 1.50 X 35, 9.8, Sems	5
▲	8	32492	(006501-	) Washer, Flat, 0.38, Std	17
▲	9	41430	(006501-	) Nut, Hex, Lock, M10 X 1.5, NI	9

Fig. 6 - Cab Group

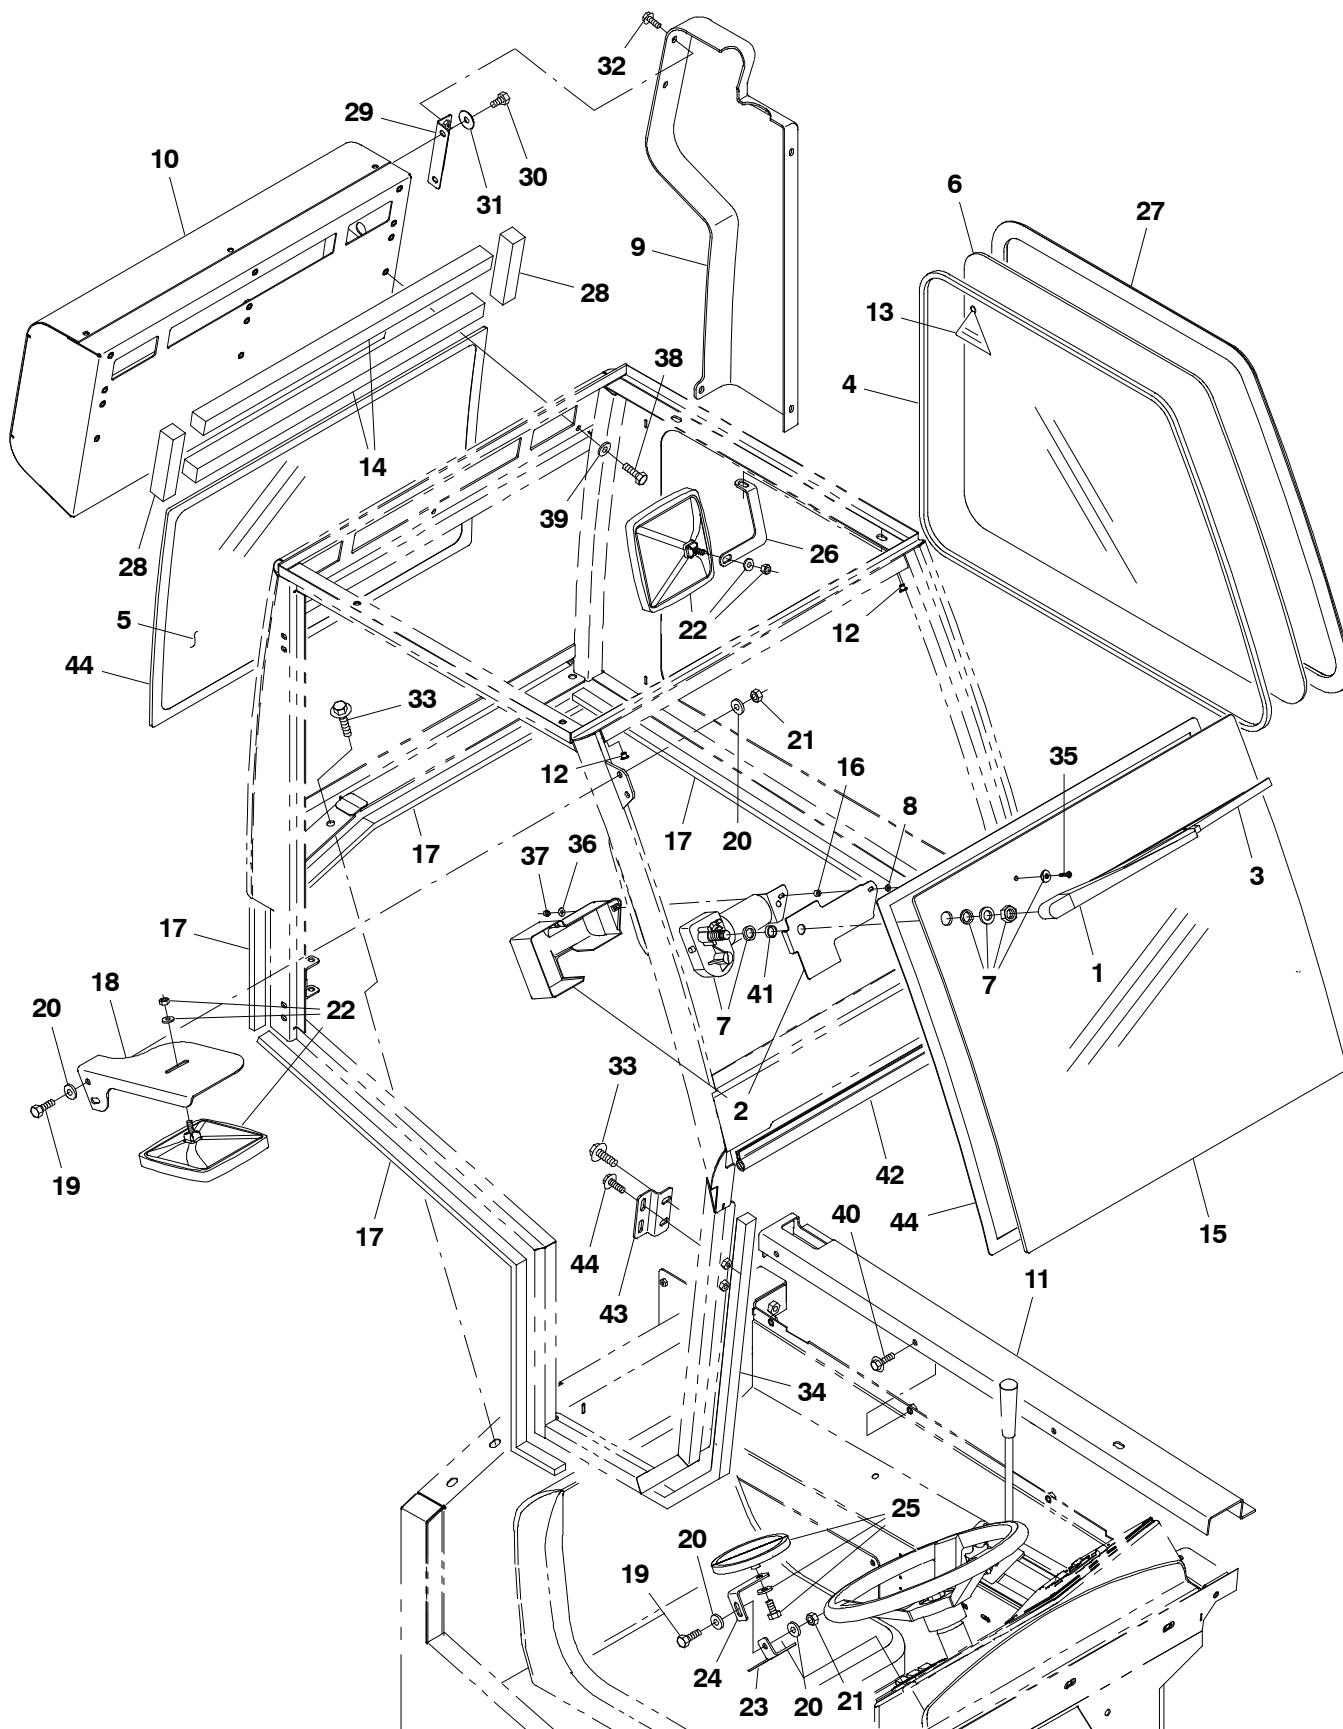


Fig. 6 - Cab Group

Ref.	Part No.	Serial Number	Description	Qty.
1	1062083	(006501-	) Arm, Wiper, Windshield	1
2	1067891	(006501-	) Plate, Motor, Wiper, Cab	1
3	1062084	(006501-	) Blade, Wiper, Windshield	1
4	9009219	(006501-	) Seal, Afmkt, Rbr, Wndw, 10ft [Zipper]	1
5	1067875	(006501-	) Pane, Glass, Wndw, Rear	1
6	1067874	(006501-	) Pane, Glass, Wndw, Lh Side, Cab	1
7	1067872	(006501-	) Motor, Wiper, Cab	1
8	76426	(006501-	) Washer, Sealing, 0.28b 0.75d Ss, Neo	1
9	1067869	(006501-	) Cover, Hose, Plstc, Cab	1
10	1067918	(006501-	) Heater Unit, W/ A/C & Fan (See Breakdowns)	1
11	1060586	(006501-	) Lip Wldt, Oprtr Station / Cab	1
12	80061	(006501-	) Plug, Hole, Rnd, 0.30h 0.3l	2
13	1067911	(006501-	) Label, Info [Exit]	1
14	1069688	(006501-	) Seal, Afmkt, Foam, 1.18 X 1.18, 03ft	2
15	1067878	(006501-	) Pane, Glass, Wndw, Front	1
16	1069211	(006501-	) Spacer, Plstc, 0.18b 0.27d 0.27l	1
17	1069681	(006501-	) Seal, Foam, .50, 1.00w 72.00l, Adh	1
18	1049061	(006501-	) Bracket, Mtg, Mirror	1
19	09740	(006501-	) Screw, Hex, M8 X 1.25 X 20, Ss	3
20	39349	(006501-	) Washer, Flat, 0.31, Sae	6
21	08713	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI, Ss	3
22	49034	(006501-	) Mirror, Convex, 06.7 X 06.2	2
23	1048740	(006501-	) Bracket, Mtg, Mirror, Lower	1
24	1049017	(006501-	) Bracket, Mtg, Mirror, Upper	1
25	1050295	(006501-	) Mirror, Convex, 0.50d	1
26	1048743	(006501-	) Bracket, Mtg, Mirror	1
27	9009218	(006501-	) Seal, Afmkt, Rbr, Wndw, 10ft	1
28	1069687	(006501-	) Seal, Afmkt, Foam, 1.18 X 1.18, 01ft	2
29	1066952	(006501-	) Bracket, Mtg, Cover	1
30	16735	(006501-	) Screw, Hex, M8 X 1.25 X 16, 8.8	2
31	1069326	(006501-	) Washer, Flat, 0.31, Sae, Blk	2
32	1040467	(006501-	) Screw, Hex, M6 X 1.00 X 20, 9.8, Sems	5
33	1037358	(006501-	) Screw, Hex, M10 X 1.50 X 35, 9.8, Sems	6
34	1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	2
35	1069316	(006501-	) Screw, Pan, Phl, M4 X 0.70 X 20, Blk	1
36	1059252	(006501-	) Washer, Flat, 0.19b 0.50d .03, Stl, Blk	2
37	02850	(006501-	) Nut, Hex, Lock, M4 X 0.70, NI	1
38	39277	(006501-	) Screw, Hex, M8 X 1.25 X 25, 8.8	6
39	32491	(006501-	) Washer, Flat, 0.31, Std	6
40	1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	3
41	1069210	(006501-	) Spacer, Plstc, 0.62b 0.75d 0.27l	1
42	1031616	(006501-	) Seal, Afmkt, Bulb, Str, .75d F/07ga 03ft	1
43	1069232	(006501-	) Bracket, Mtg, Cab	1
44	1227836	(006501-	) Molding, Afmkt, Trim, Wndw, Glass, 12ft	1

Fig. 7 - Cab Cover Group

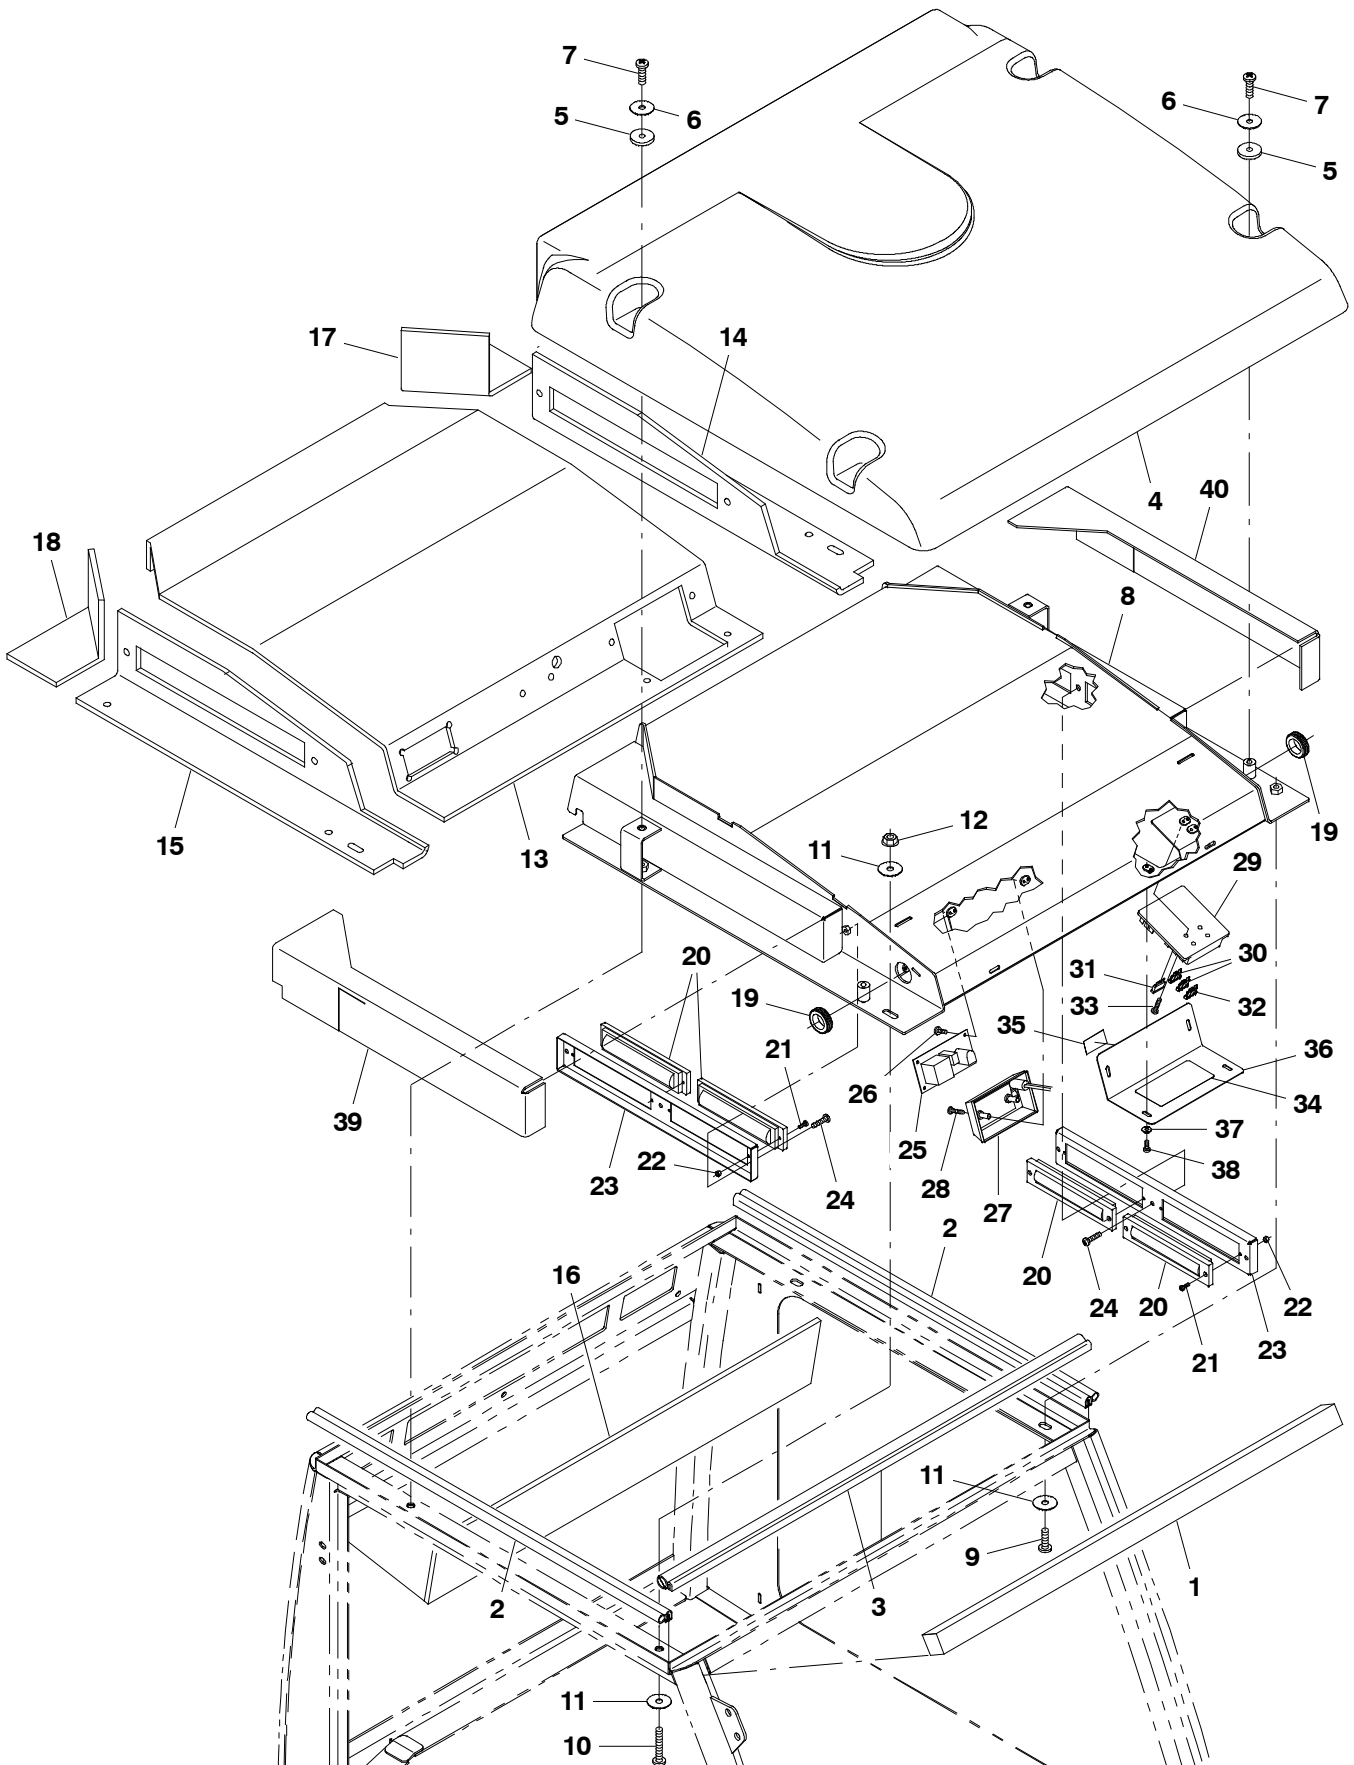


Fig. 7 - Cab Cover Group

Ref.	Part No.	Serial Number	Description	Qty.
1	1069688	(006501-	) Seal, Afmkt, Foam, 1.18 X 1.18, 03ft	1
2	1031207	(006501-	) Seal, Afmkt, Bulb, 90, 0.50d, 03ft	2
3	1030592	(006501-	) Seal, Afmkt, Bulb, 90, 0.75d F/11ga 03ft	1
4	1067873	(006501-	) Panel, Roof, Plstc, Cab	1
5	1067887	(006501-	) Washer, Cab, Shld, Glass	4
6	1069326	(006501-	) Washer, Flat, 0.31, Sae, Blk	4
7	1031665	(006501-	) Screw, Pan, Phl, M8 X 1.25 X 25, Blk	4
8	1067217	(006501-	) Panel Wldt, Top, Cab	1
9	1069310	(006501-	) Screw, Pan, Phl, M8 X 1.25 X 25, Blk	2
10	1069201	(006501-	) Screw, Pan, Phl, M8 X 1.25 X 50, Blk	2
11	1060648	(006501-	) Washer, Flat, 0.31b 0.67d .07, Stl, Blk	5
12	07791	(006501-	) Nut, Hex, Flng, M8 X 1.25	1
13	1068687	(006501-	) Insulation, Sound, Liner, Top	1
14	1068690	(006501-	) Insulation, Sound, Liner, Lh	1
15	1068689	(006501-	) Insulation, Sound, Liner, Rh	1
16	1068688	(006501-	) Insulation, Sound, Liner	1
17	1069229	(006501-	) Insulation, Sound, Liner, Side, Lh	1
18	1069231	(006501-	) Insulation, Sound, Liner, Side, Rh	1
19	10632	(006501-	) Grommet, Rbr, 0.89id, F/1.2h, .14 Matl	2
20	1074108	(006501-	) Louver, Nozzle, Spindle, Blk	4
21	1069314	(006501-	) Screw, Pan, Phl, M3 X 0.50 X 12, Blk	8
22	01754	(006501-	) Nut, Hex, Std, M3 X 0	8
23	1066933	(006501-	) Plate, Vent	2
24	1069318	(006501-	) Screw, Pan, Phl, M5 X 0.80 X 25, Blk	6
25	1068751	(006501-	) Controls, Ac/Heater [S30]	1
26	1069315	(006501-	) Screw, Pan, Phl, M4 X 0.70 X 10, Blk	4
27	1067886	(006501-	) Light, Dome, Cab	1
28	1069317	(006501-	) Screw, Pan, Phl, M4 X 0.70 X 25, Blk	1
29	1067870	(006501-	) Fuseholder, Cab	1
30	1016029	(006501-	) Fuse, Blade, 005a, 32vdc	2
31	611140	(006501-	) Fuse, Blade, 020a, 32vdc	1
32	1067917	(006501-	) Fuse, Blade, 002a, 32vdc	1
33	1069317	(006501-	) Screw, Pan, Phl, M4 X 0.70 X 25, Blk	4
34	1067910	(006501-	) Label [Fuse Block]	1
35	1069330	(006501-	) Label, Circuitbreaker [Fuse Box]	1
36	1066972	(006501-	) Cover, Fuse	1
37	1059252	(006501-	) Washer, Flat, 0.19b 0.50d .03, Stl, Blk	4
38	1069315	(006501-	) Screw, Pan, Phl, M4 X 0.70 X 10, Blk	4
39	1072046	(006501-	) Insulation, Heat, Liner, Rh	1
40	1072047	(006501-	) Insulation, Heat, Liner, Lh	1

Fig. 8 - Cab Door Group

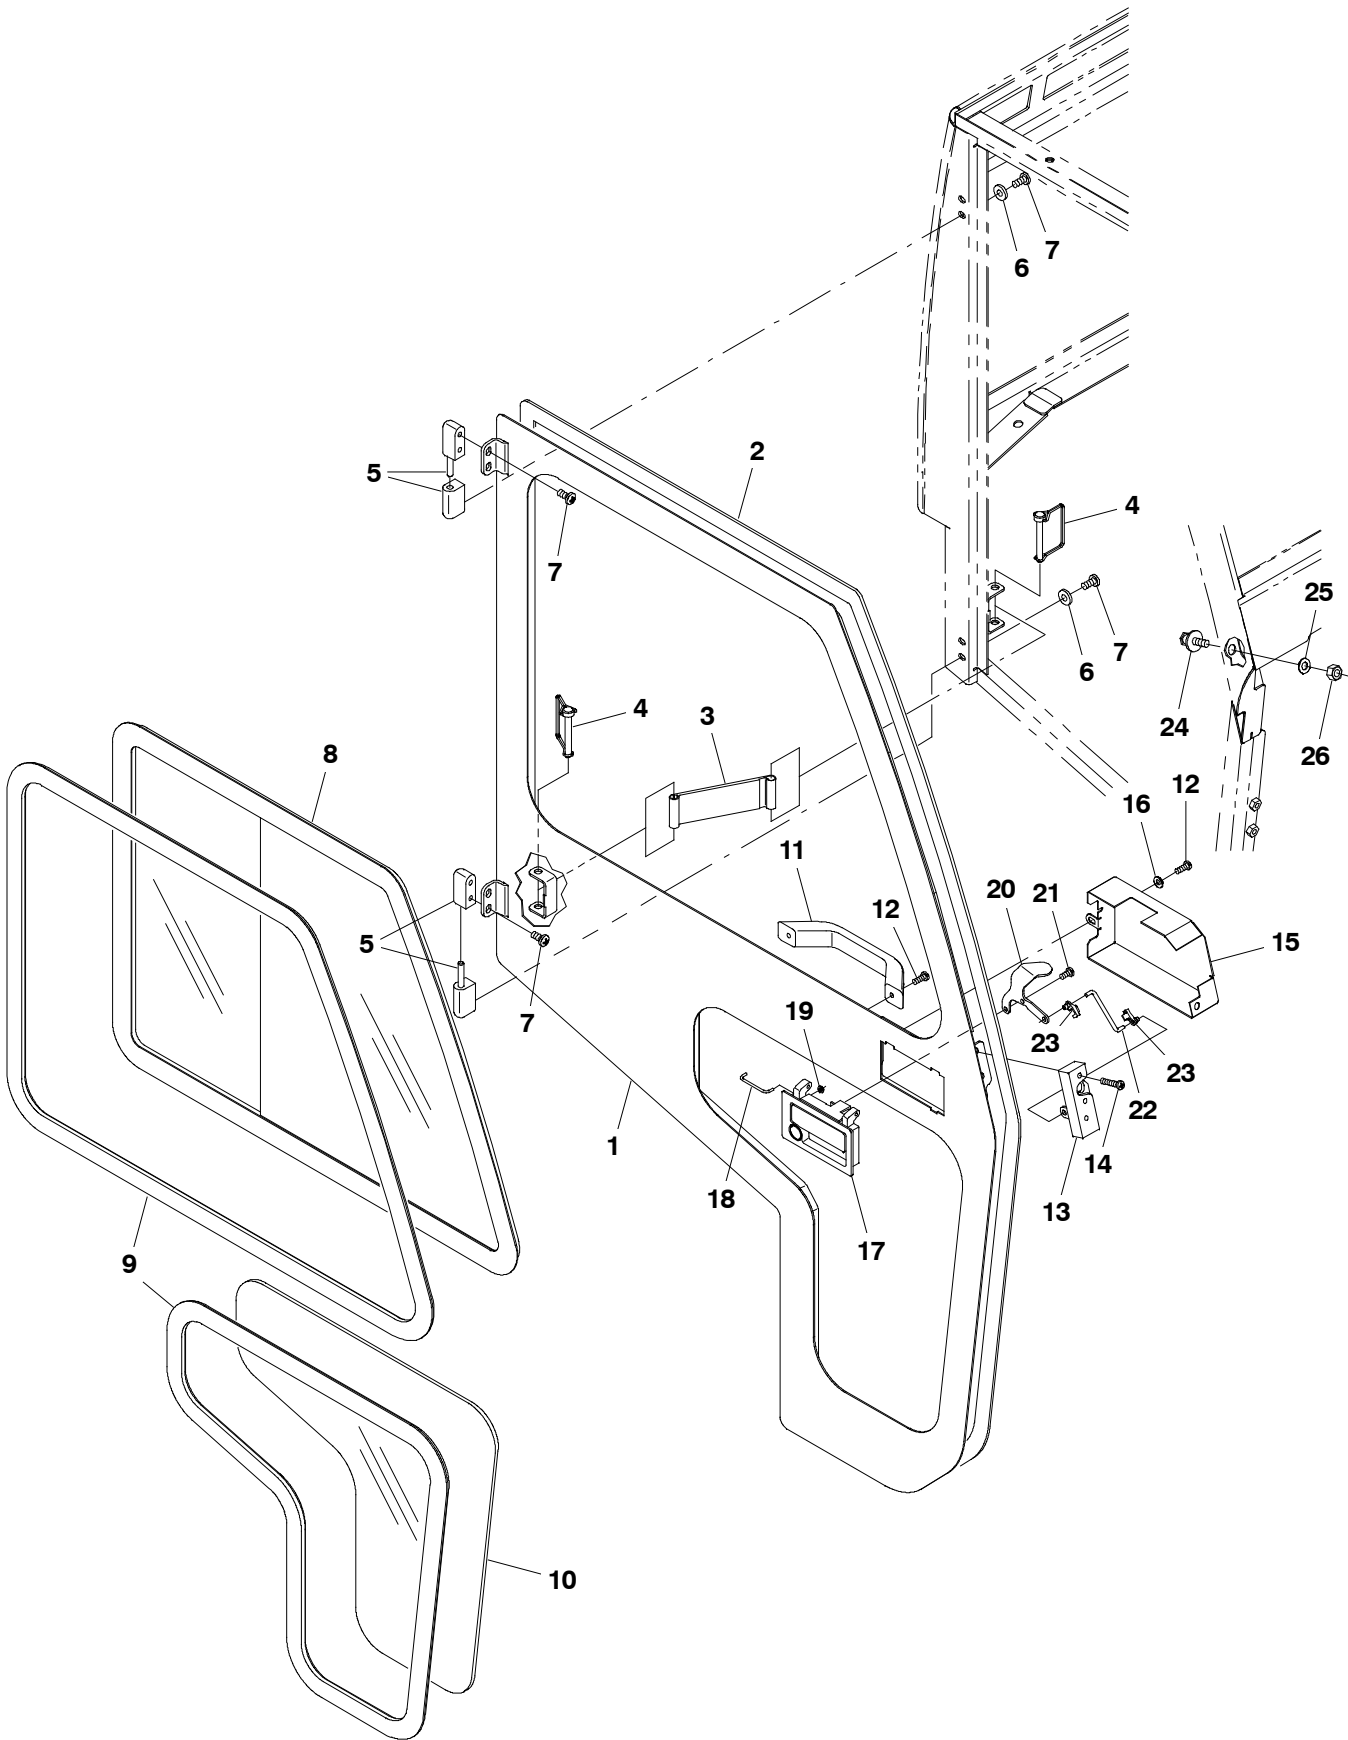


Fig. 8 - Cab Door Group

	Ref.	Part No.	Serial Number	Description	Qty.
▽		9014656	(006501-	) Door Assy, Cab [S30]	1
▲	1	1067216	(006501-	) Door Wldt, Rh	1
▲	2	1030601	(006501-	) Seal, Afrmkt, Bulb, 90, 0.75d F/11ga 20ft	1
▲	3	1067895	(006501-	) Strap, Door, Cab	1
▲	4	1067881	(006501-	) Pin, Lock, Cab	2
▲	5	1067879	(006501-	) Hinge, Bracket, Door, Cab	2
▲	6	1069326	(006501-	) Washer, Flat, 0.31, Sae, Blk	4
▲	7	1069311	(006501-	) Screw, Pan, Phl, M8 X 1.25 X 16, Blk	8
▲	8	1067877	(006501-	) Pane, Wndw, Slide, Rh, Cab	1
▲	9	9009220	(006501-	) Seal, Afrmkt, Rbr, Wndw, 08ft	2
▲	10	1067876	(006501-	) Pane, Wndw, Lower, Cab	1
▲	11	1067889	(006501-	) Handle, Door, Cab	1
▲	12	1069312	(006501-	) Screw, Pan, Phl, M6 X 1.0 X 16, Blk	4
▲	13	1067885	(006501-	) Latch, Cab	1
▲	14	1069313	(006501-	) Screw, Pan, Phl, M6 X 1.0 X 35, Blk	3
▲	15	1066980	(006501-	) Cover, Latch	1
▲	16	1069322	(006501-	) Washer, Flat, 0.25, Sae, Blk	2
▲▽	17	1067890	(006501-	) Handle, Locking, Cab	1
▲▲		1067919	(006501-	) Key, Latch, Door Assy	1
▲	18	1062944	(006501-	) Rod, Handle, Cab	1
▲	19	1067907	(006501-	) Retainer, Shaft, 0.12id .38od X .052	1
▲	20	1066957	(006501-	) Bracket, Handle, Latch	1
▲	21	74027	(006501-	) Screw, Pan, Phl, M6 X 1.00 X 12, NI, PI	2
▲	22	1062952	(006501-	) Rod, Latch, Cab	1
▲	23	1067880	(006501-	) Clip, Rod, Cab	2
▲	24	1067884	(006501-	) Stud, Strike, Cab	1
▲	25	32492	(006501-	) Washer, Flat, 0.38, Std	1
▲	26	25014	(006501-	) Nut, Hex, Std, .38- 16	1

Fig. 9 - Cab Heater Group

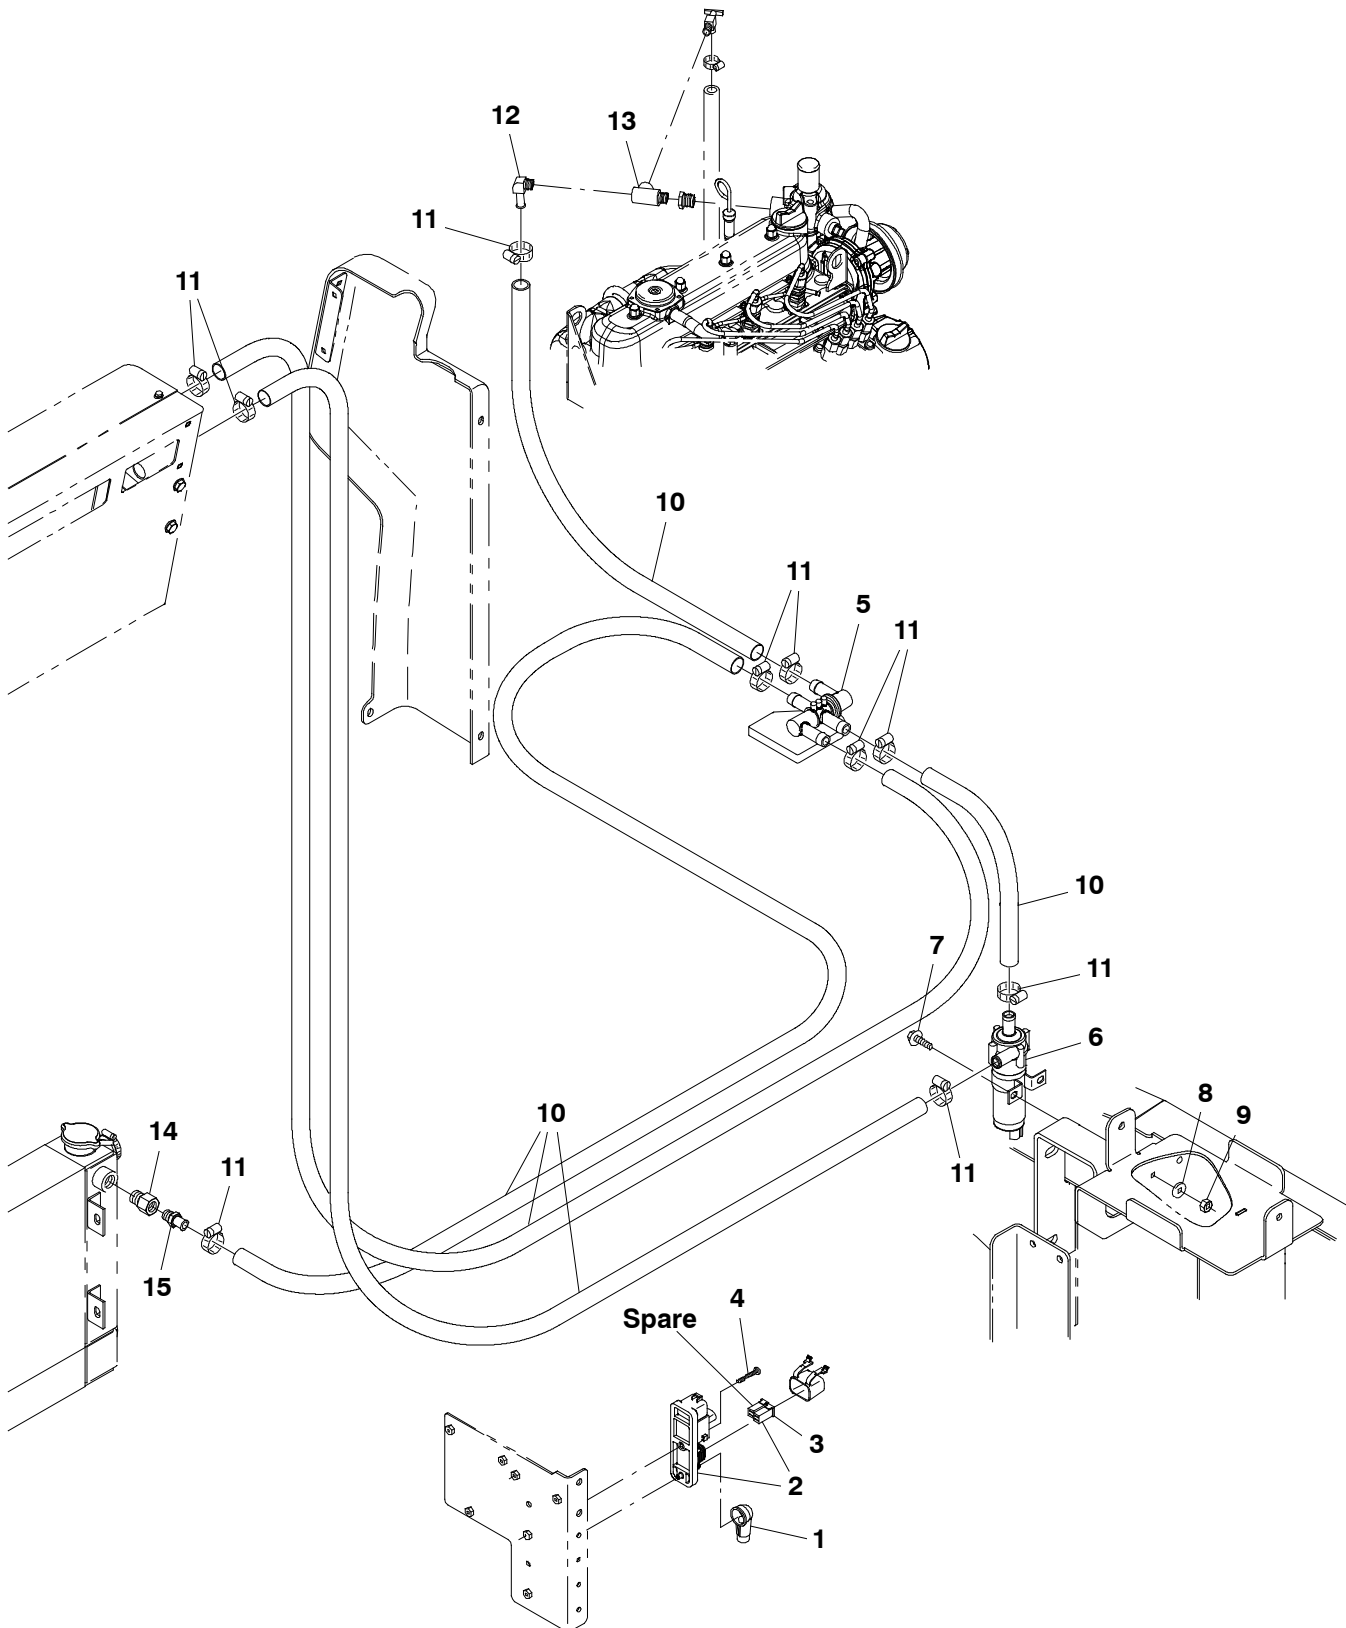


Fig. 9 - Cab Heater Group

Ref.	Part No.	Serial Number	Description	Qty.
1	1016314	(006501-	) Boot, 90deg .50id 1.00id 2.50l, Red	1
▽ 2	1029105	(006501-	) Relay Assy, 12vdc [2f/1r]	1
▲ 3	1036230	(006501-	) Fuse, 60a, 32vdc [Fem Maxi]	1
4	06940	(006501-	) Screw, Pan, Phl, M5 X 0.80 X 50, 4.8	1
5	1045063	(006501-	) Valve, Heater	1
6	1044279	(006501-	) Pump Assy, Water, 12vdc	1
7	222159	(006501-	) Screw, Hex, M6 X 1.00 X 25, Fmg	2
8	32490	(006501-	) Washer, Flat, 0.25, Std	2
9	08708	(006501-	) Nut, Hex, Lock, M6 X 1.00, NI	2
10	1016563	(006501-	) Hose, Afmkt, Rbr, Heater, 0.62id, 20ft	1
11	63810	(006501-	) Clamp, Hose, Wormdrive, 0.56- 1.06d, .56w	10
12	1045888	(006501-	) Fitting, Brs, E90, Bm10/Pm04	1
13	150709	(006501-	) Fitting, Brs, Tee, Pf04/Pf04/Pm04, Run	1
14	47167	(006501-	) Fitting, Brs, Str, Pf06/Pm08	1
15	27767	(006501-	) Fitting, Brs, Str, Em10/Pm06	1

Fig. 10 - Cab Air Conditioner Group

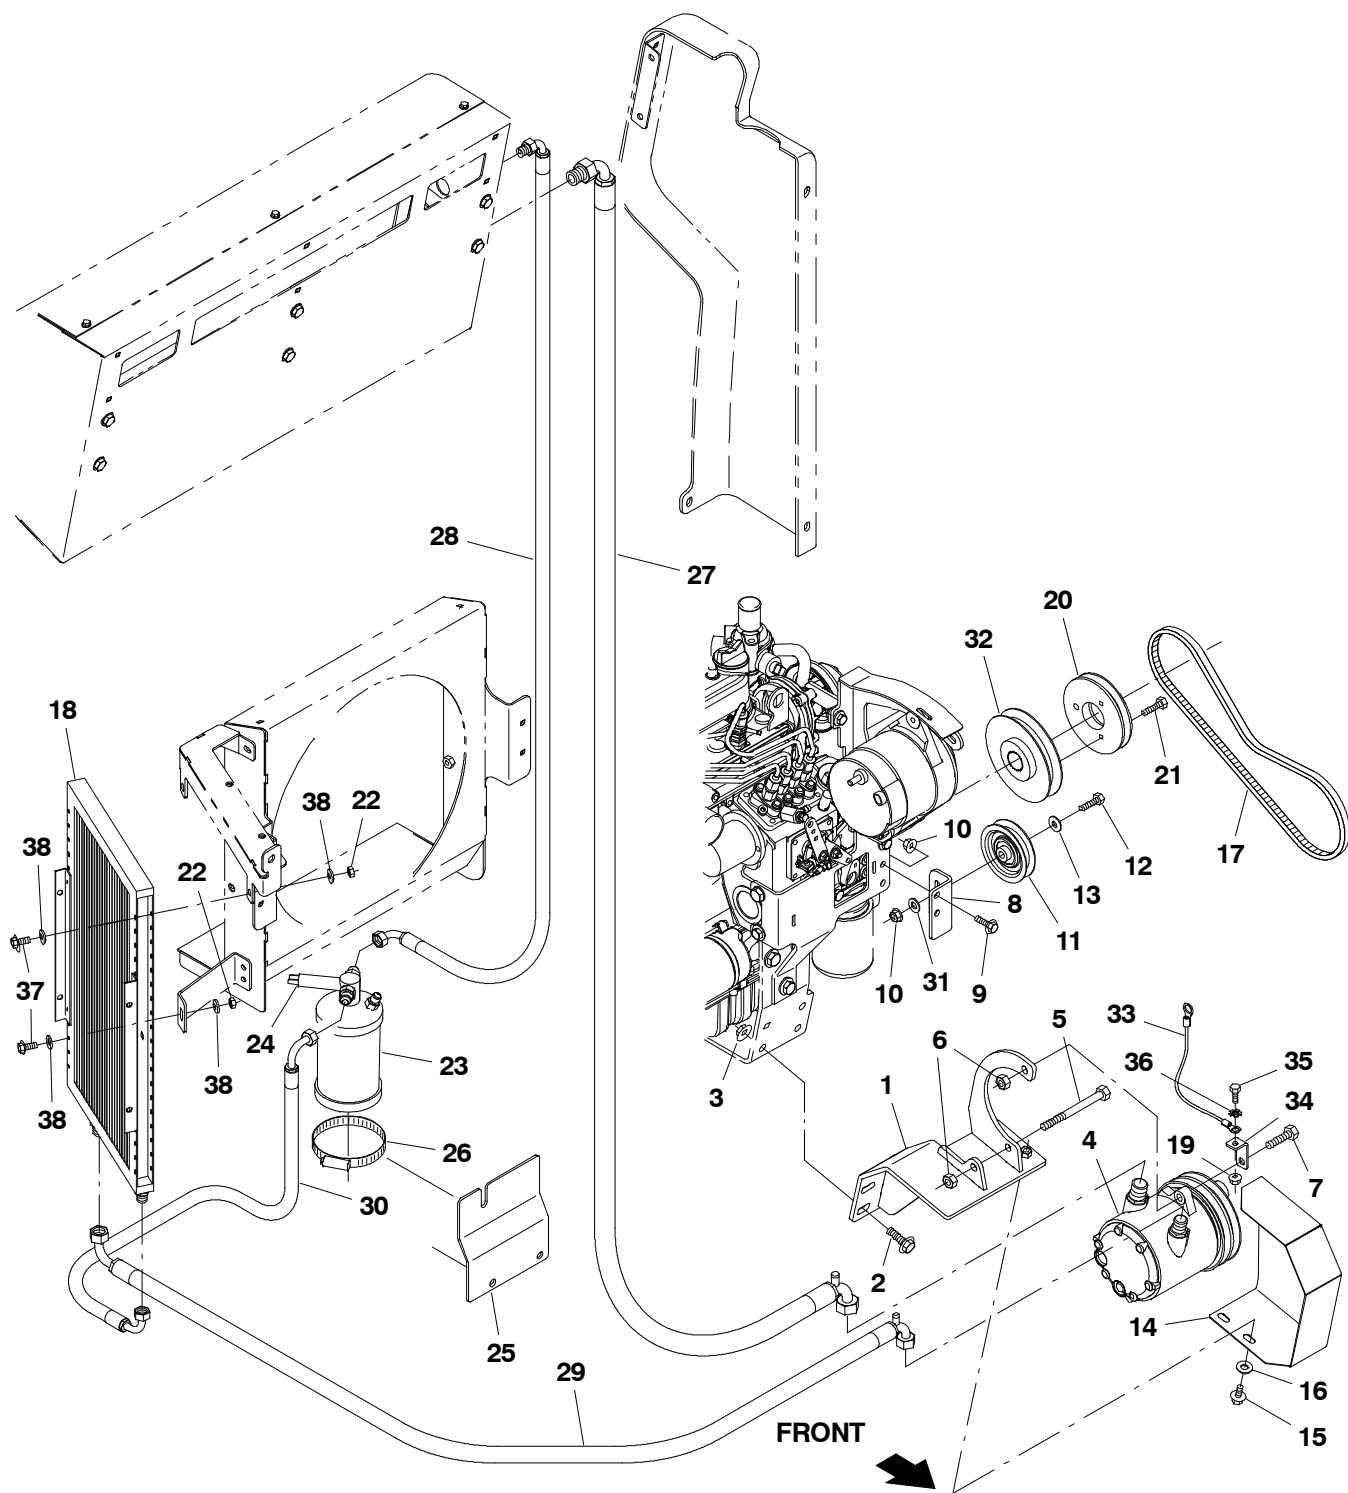


Fig. 10 - Cab Air Conditioner Group

Ref.	Part No.	Serial Number	Description	Qty.
1	1036564	(006501-	) Bracket Wldt, Mtg, Compressor	1
2	1037358	(006501-	) Screw, Hex, M10 X 1.50 X 35, 9.8, Sems	4
3	07792	(006501-	) Nut, Hex, Fling, M10 X 1.50	4
4	393359	(006501-	) Compressor, A/C [134, Tm- 08hd]	1
5	06966	(006501-	) Screw, Hex, M10 X 1.50 X 110, 8.8	1
6	41430	(006501-	) Nut, Hex, Lock, M10 X 1.5, NI	2
7	39285	(006501-	) Screw, Hex, M10 X 1.50 X 40, 8.8	1
8	1046946	(006501-	) Plate, Idler	1
9	1037354	(006501-	) Screw, Hex, M8 X 1.25 X 30, 9.8, Sems	2
10	07791	(006501-	) Nut, Hex, Fling, M8 X 1.25	3
11	81710	(006501-	) Sheave, Flat, 2.6d 0.62w 0.38b	1
12	06955	(006501-	) Screw, Hex, M8 X 1.25 X 35, 8.8	1
13	32491	(006501-	) Washer, Flat, 0.31, Std	1
14	1040126	(006501-	) Guard, Belt, Compressor	1
15	16931	(006501-	) Screw, Hex, M8 X 1.25 X 20, 8.8	2
16	32491	(006501-	) Washer, Flat, 0.31, Std	2
17	1058133	(006501-	) Belt, V, 37.3l [Ax]	1
18	1041870	(006501-	) Condenser, Ac	1
19	07790	(006501-	) Nut, Hex, Fling, M6 X 1.00	1
20	393370	(006501-	) Sheave, 01grv, 04.1pd 1.6b [XI]	1
21	76957	(006501-	) Screw, Hex, .31- 18 X 1.50, G5	3
22	08708	(006501-	) Nut, Hex, Lock, M6 X 1.00, NI	4
23	1045033	(006501-	) Dryer, A/C	1
24	1045203	(006501-	) Switch, A/C [Binary]	1
25	1045681	(006501-	) Bracket, Sppt	1
26	43555	(006501-	) Clamp, Hose, Wormdrive, 2.50- 3.50d, .50w	1
27	1045151	(006501-	) Hose, A/C, 10, E90/E90, 060.0l [R134]	1
28	1045153	(006501-	) Hose, A/C, 06, E90/E90, 052.0l [R134]	1
29	1045155	(006501-	) Hose, A/C, 08, E90/E90, 052.0l [R134]	1
30	1045156	(006501-	) Hose, A/C, 06, E90/E90, 021.0l [R134]	1
31	41186	(006501-	) Washer, Flat, Belleville, .31	1
32	393371	(006501-	) Sheave, 01grv, Rwk 393400 [3v]	1
33	31525	(006501-	) Wire, 10ga 16.0l Blk .25ring /.38ring	1
34	1047225	(006501-	) Angle, Mtg, Ground	1
35	06943	(006501-	) Screw, Hex, M6 X 1.00 X 20, 8.8	1
36	41140	(006501-	) Washer, Lock, Int- ext, 0.25	1
37	55845	(006501-	) Screw, Hex, M5 X 0.80 X 16, Fmg	4
38	19066	(006501-	) Washer, Flat, 10	8

Fig. 11 - Cab Fuel Cover Group


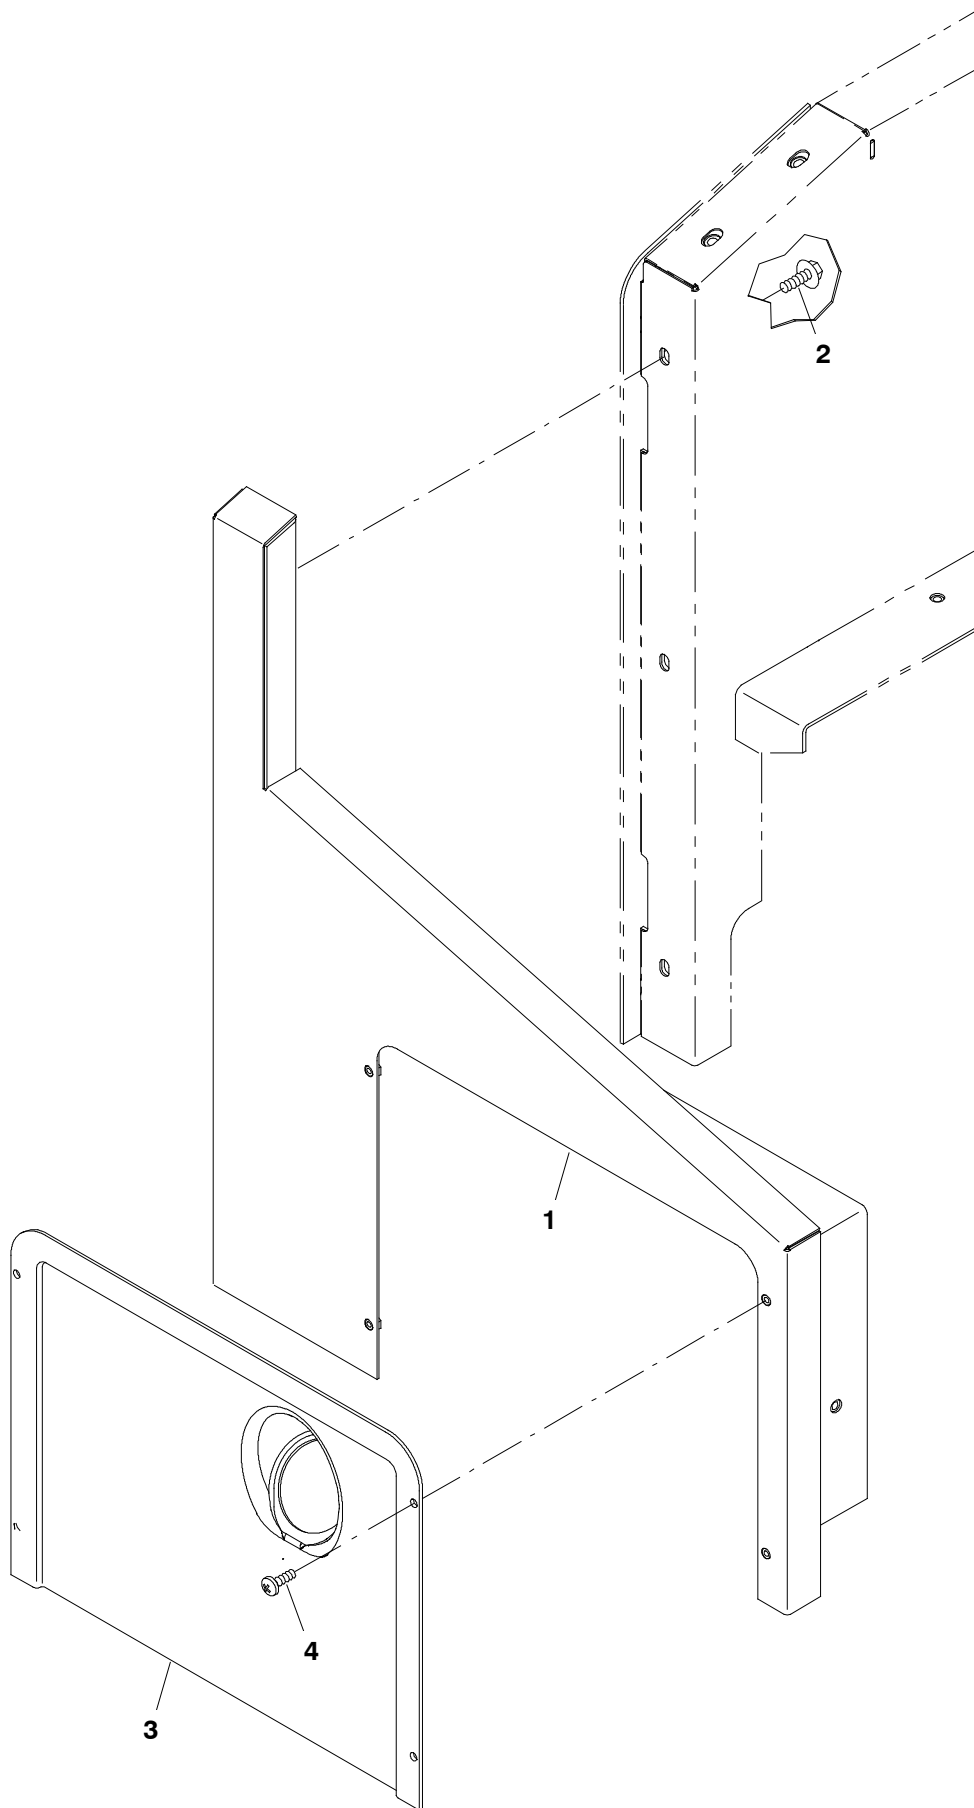


Fig. 11 - Cab Fuel Cover Group

Ref.	Part No.	Serial Number	Description	Qty.
1	1036608	(006501-	) Panel Wldt, Side	1
2	1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	3
3	9004526	(006501-	) Cover, Dsl, W/ Label, Replmt	1
4	1045525	(006501-	) Screw, Pan, Phl, M6 X 1.00 X 12, Blk	4

Fig. 12 - Cab Wire Harness Group

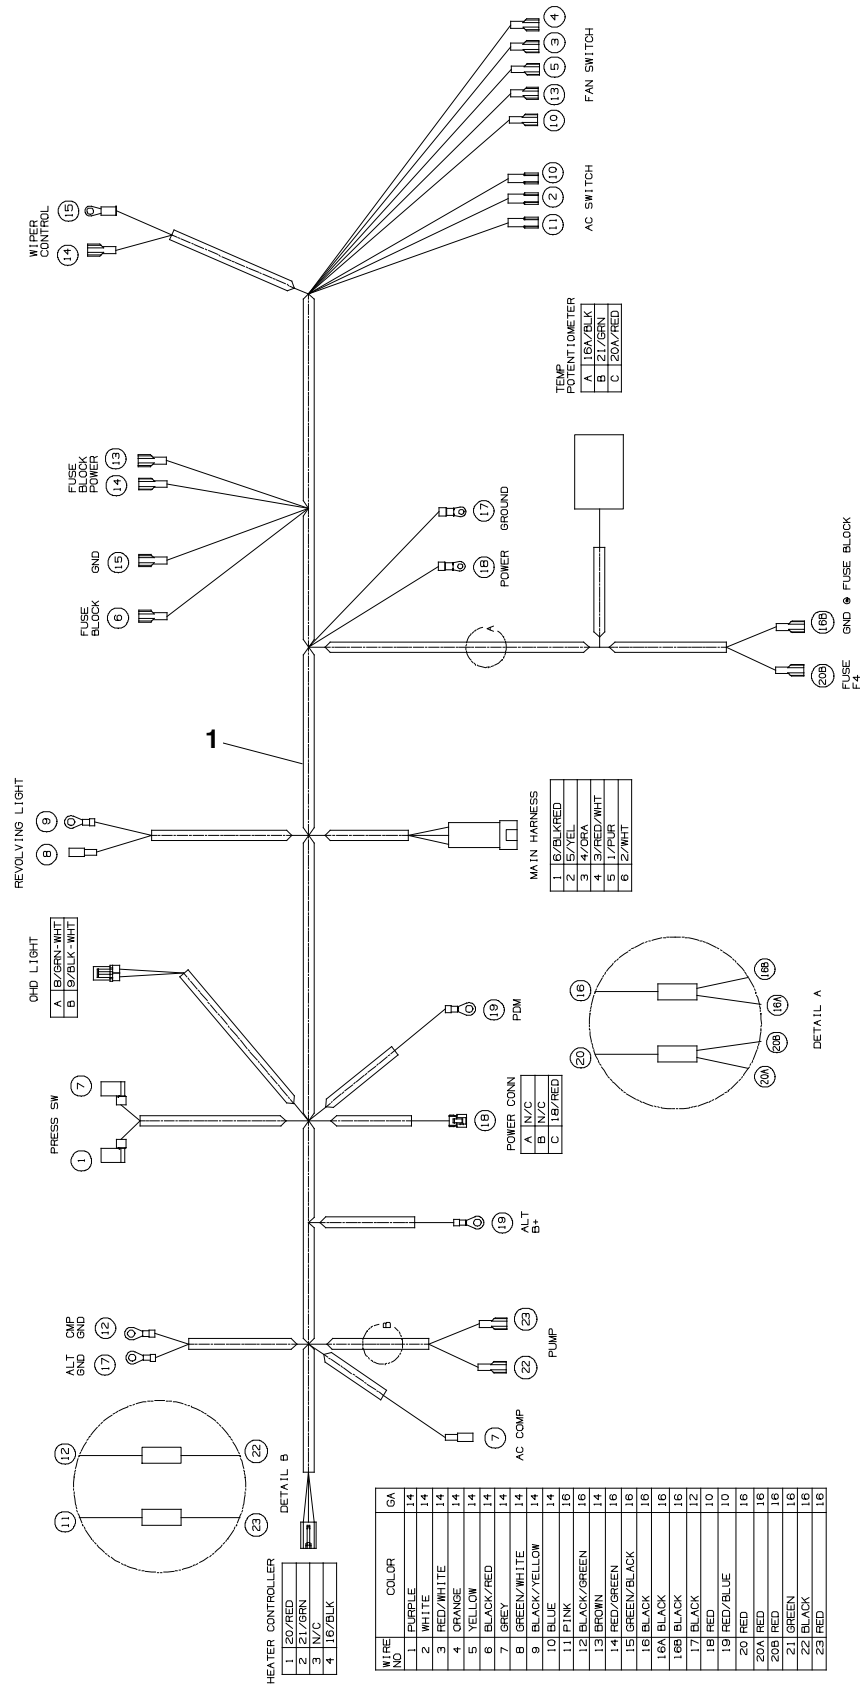

354761

Ref.	Part No.	Serial Number	Description	Qty.
1	1067912	(006501-)	Harness, Wire, Cab	1

Fig. 13 - Cab Wire Harness Electrical Schematic


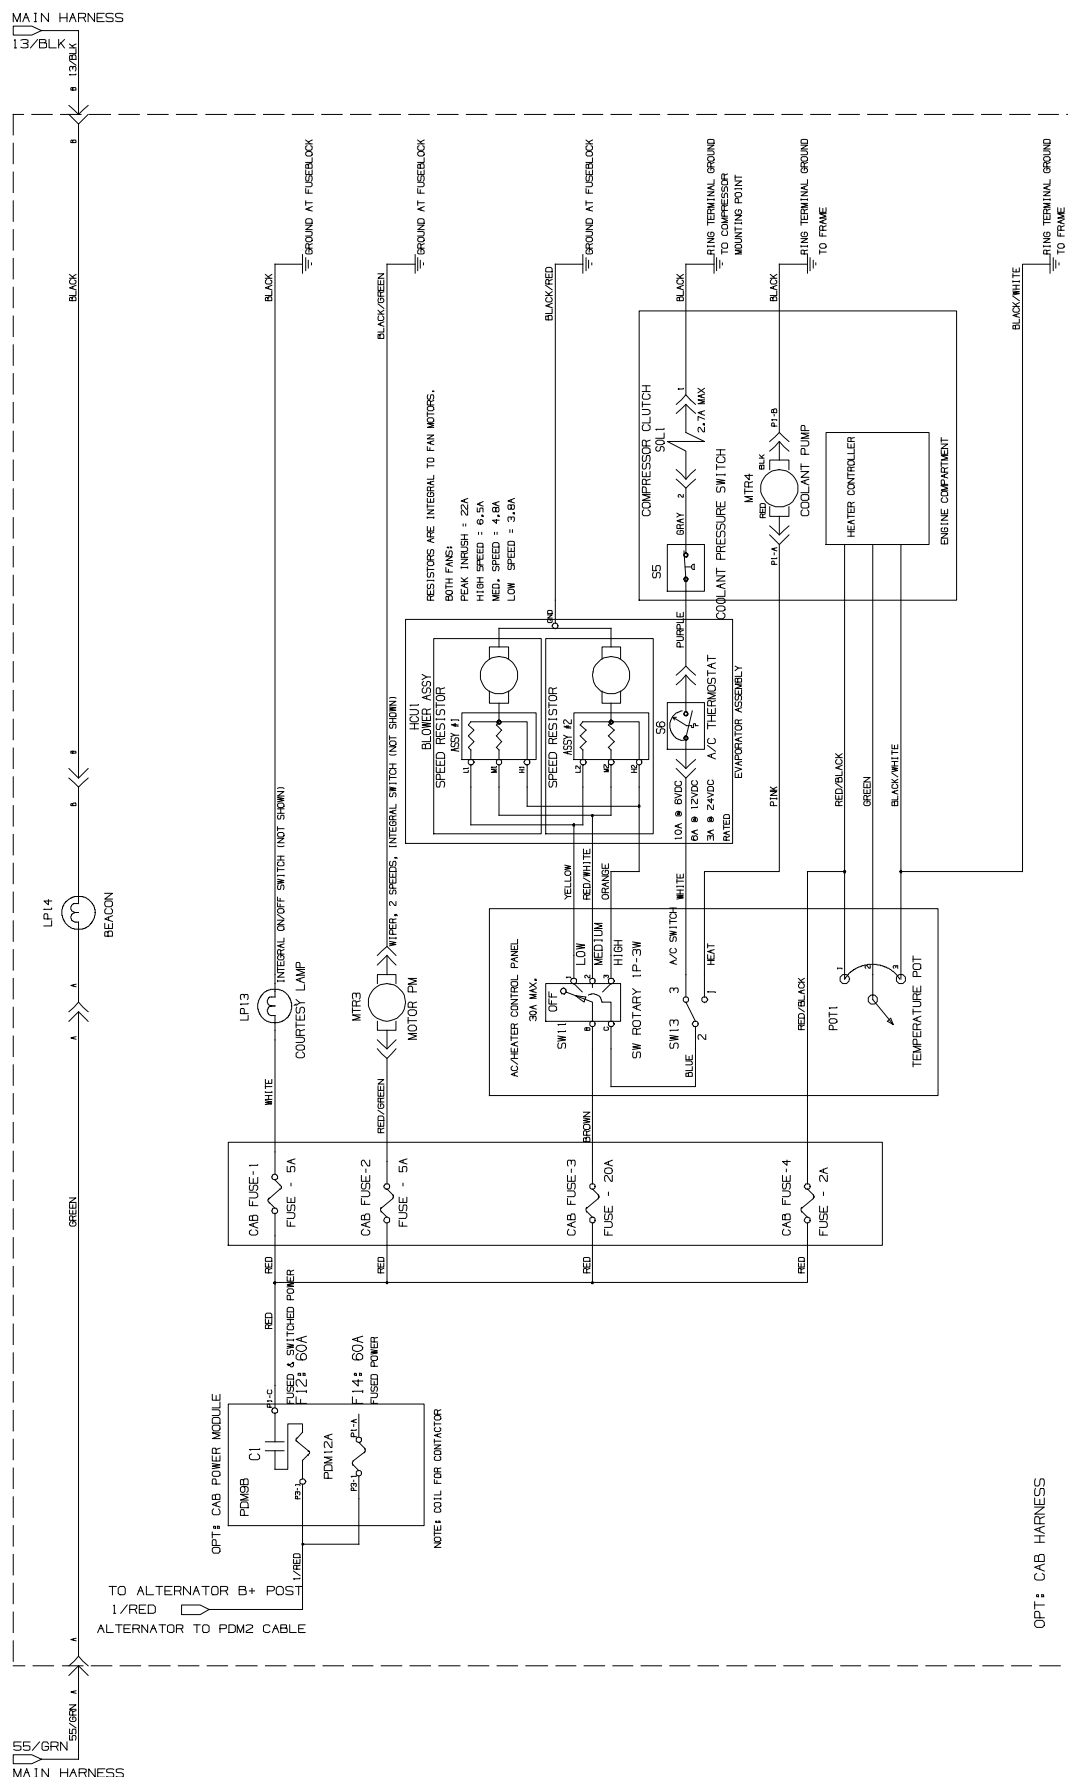



Fig. 14 - Corner Bumper Kit

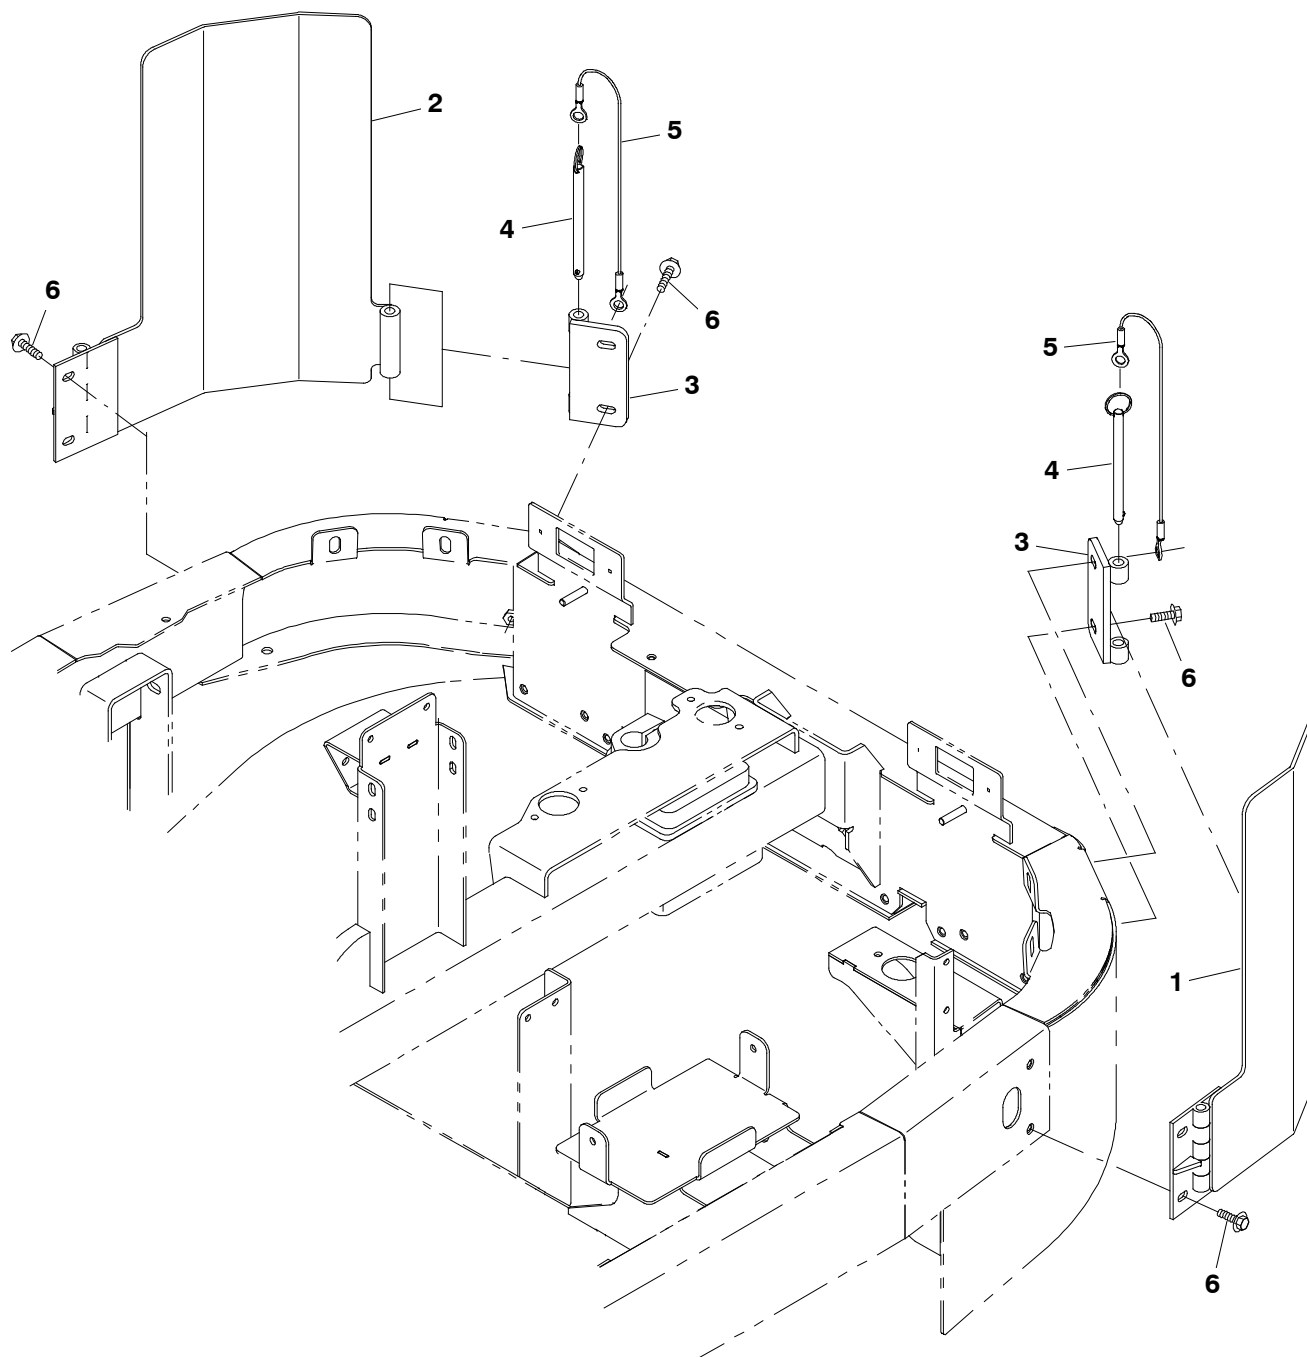

354746

Ref.	Part No.	Serial Number	Description	Qty.
▽	9008195	(006501-	) Bumper Kit, Corner, Ci, [S30]	1
▲	1 1060546	(006501-	) Angle Wldt, Bmpr, Tower, Lh	1
▲	2 1061162	(006501-	) Angle Wldt, Bmpr, Tower, Rh	1
▲	3 1061629	(006501-	) Bracket Wldt, Mtg, Bmpr	2
▲	4 1043176	(006501-	) Pin, Hitch, .500d X 6.00l, PI	2
▲	5 87172	(006501-	) Cable, Glv .13d 010.0l .52eye /.52eye	2
▲	6 1037358	(006501-	) Screw, Hex, M10 X 1.5 X 35, 9.8, Sems	8

Fig. 15 - Telemetry Group

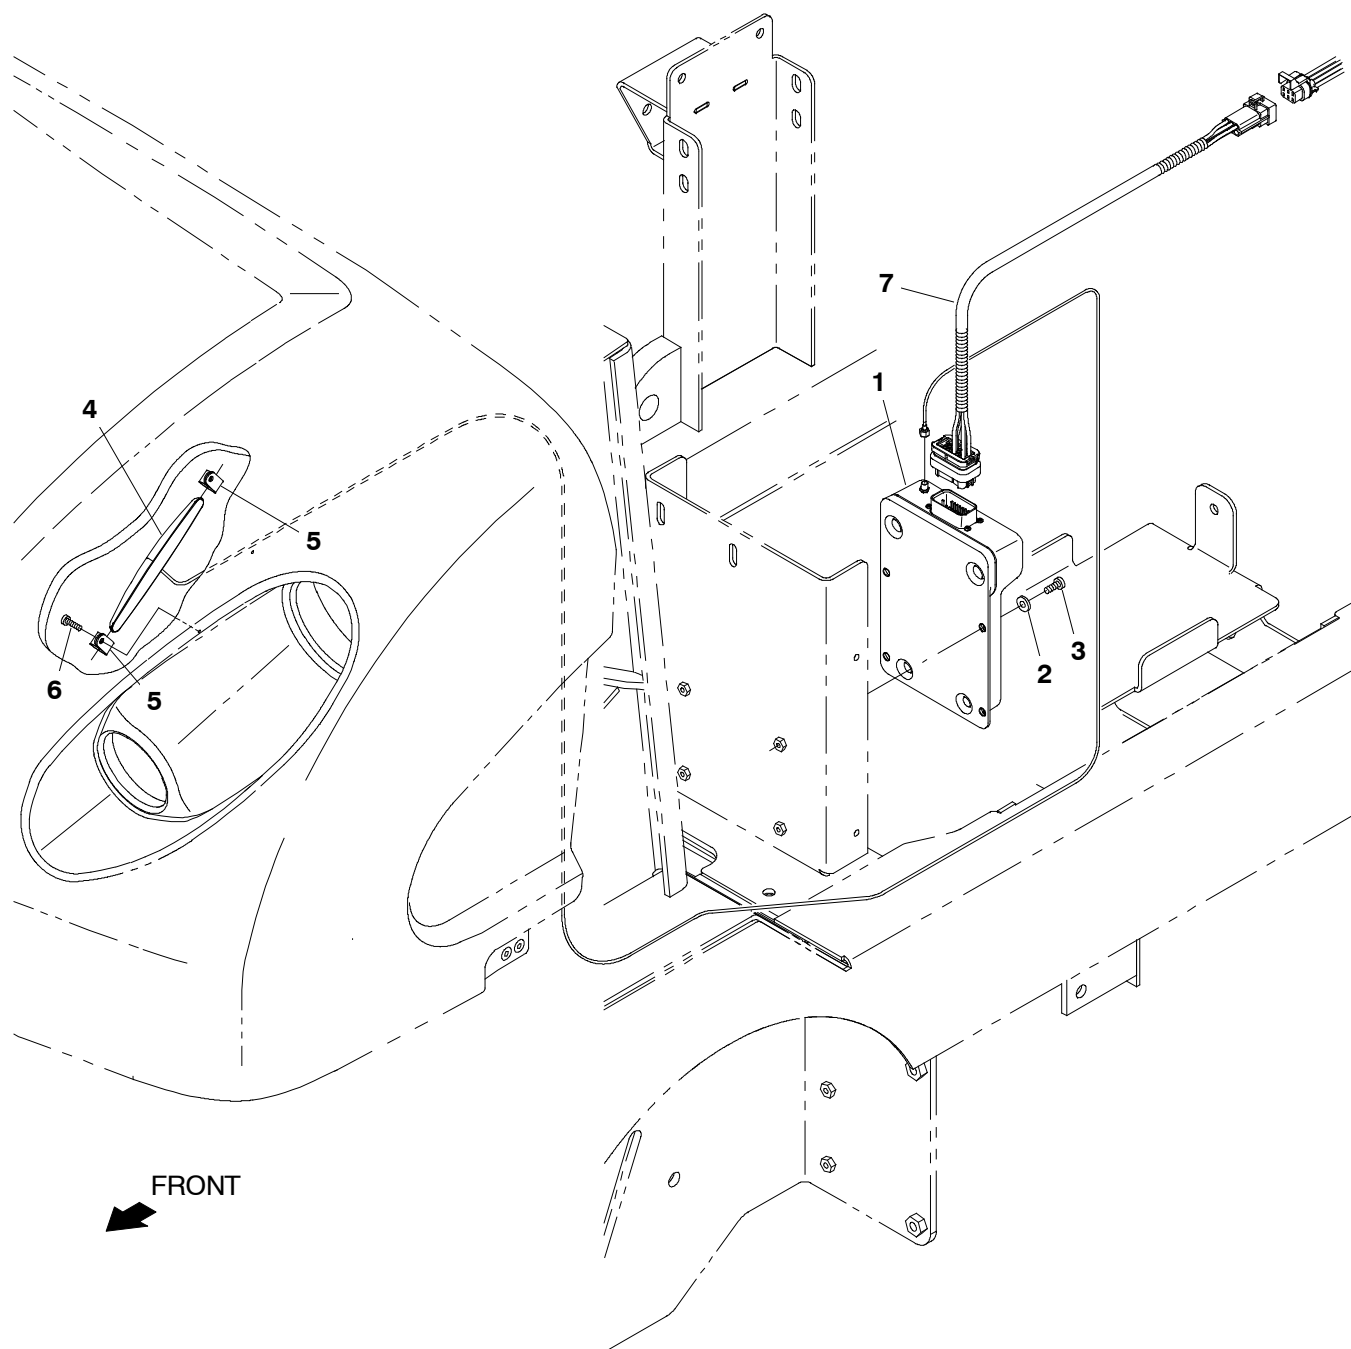

356548

Ref.	Part No.	Serial Number	Description	Qty.
1	9010085	(006501-	) Control Box Assy Kit, Replmt, Telem[Usa]	1
1	9010086	(006501-	) Control Box Assy Kit, Replmt, Telem[Intl]	1
2	19066	(006501-	) Washer, Flat, 0.25b 0.56d .05, Pl, 10	4
3	06933	(006501-	) Screw, Pan, Phl, M5 X 0.80 X 16, 4.8	4
4	1070324	(006501-	) Antenna, Telem, 110 In [Gprs]	1
5	140916	(006501-	) Clamp, Cable, Nyl, 0.62d, Nat	2
6	360973	(006501-	) Screw, Pan, 12- 16 X 0.50, F/ Plstc	2
7	1071132	(006501-	) Harness, Ele [Extn, Telemetry]	1
	1069580	(006501-	) Label, Opertnl, Telem [Fcc/lc]	1

Fig. 16 - Side and Rear Skirt Kit

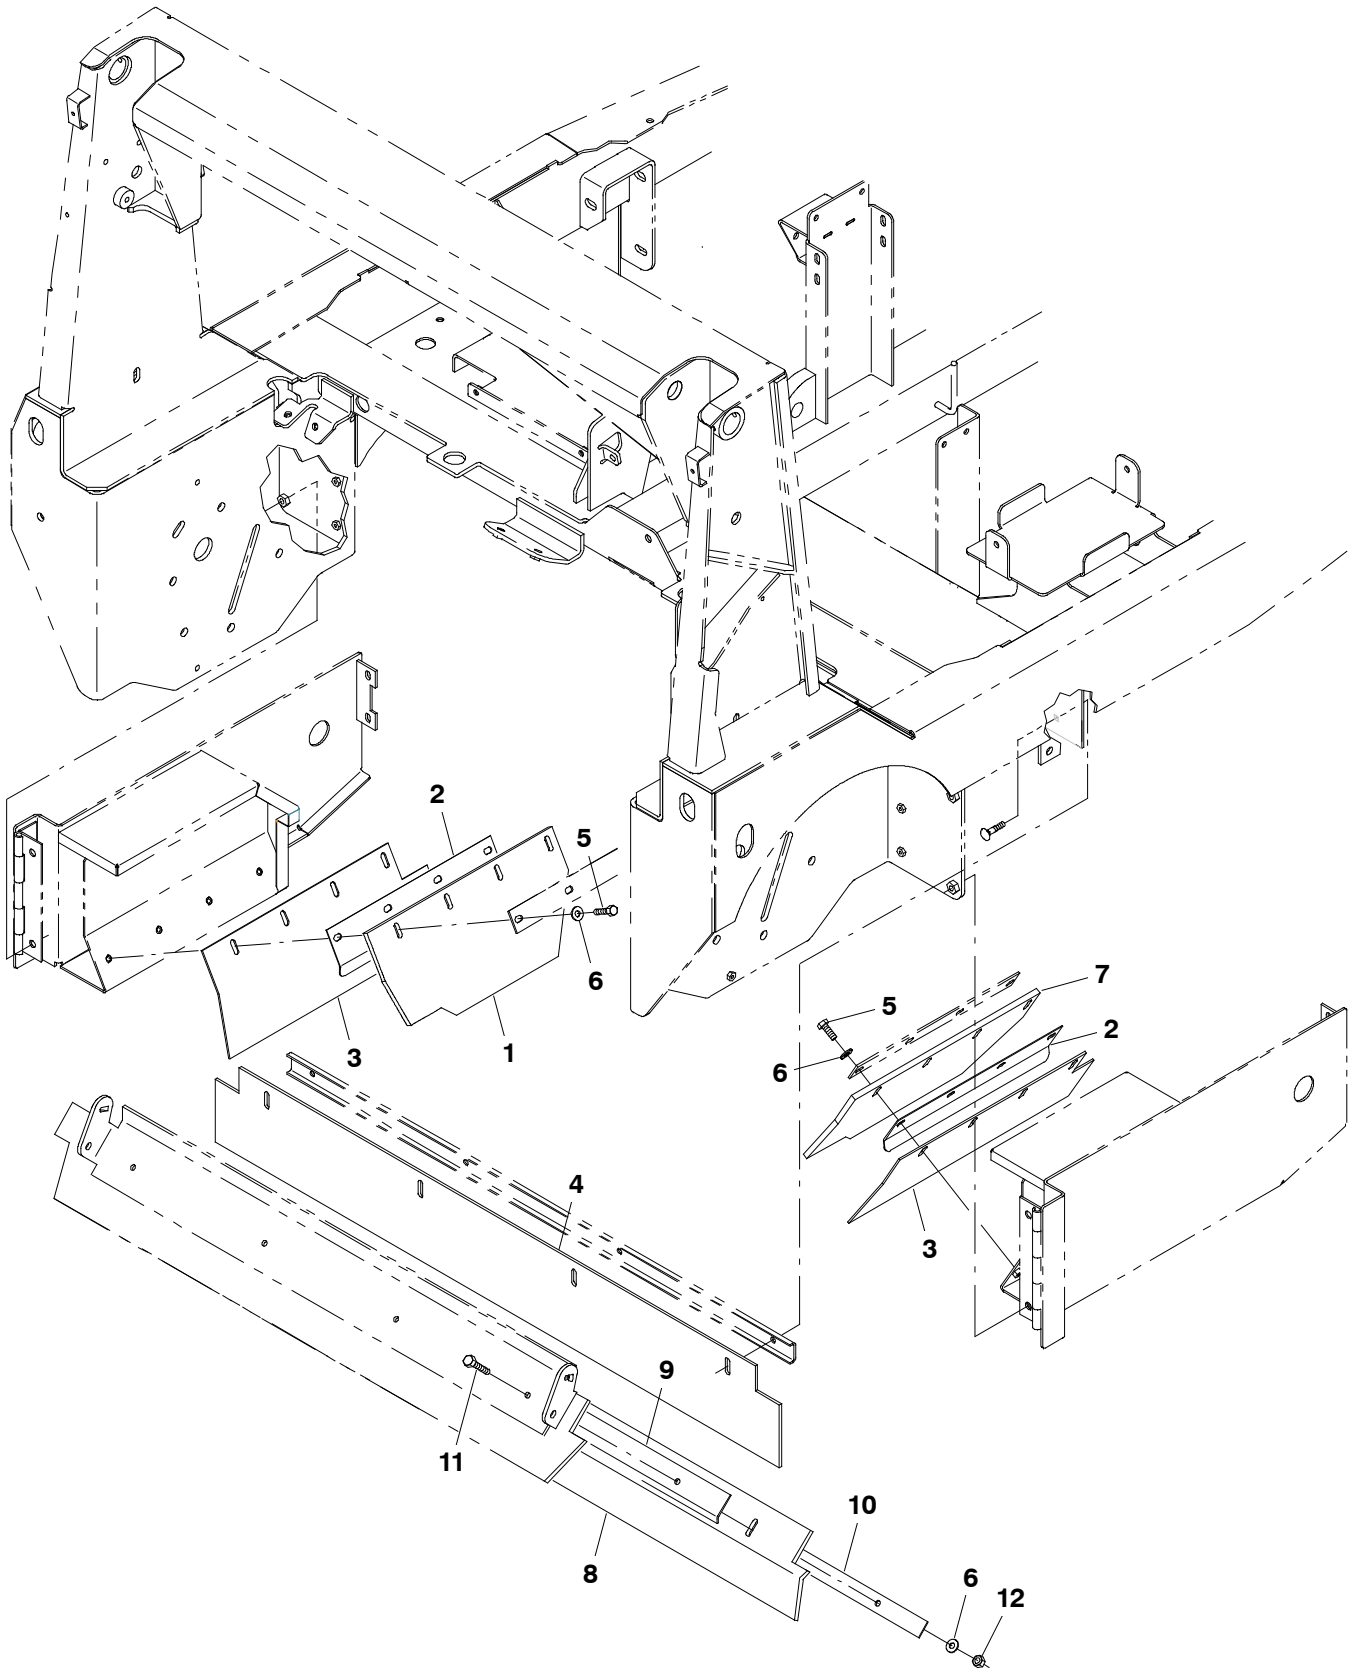


Fig. 16 - Side and Rear Skirt Kit

	Ref.	Part No.	Serial Number	Description	Qty.
▽		9013137	(006501-	) Skirt Kit, Side/ Rear [S30]	1
▲	1	1212911	(006501-	) Skirt Assy, Door, Brush, Rh	1
▲	2	1045352	(006501-	) Bracket, Skirt	2
▲	3	1212134	(006501-	) Skirt, Door, Brush	2
▲	4	1045348	(006501-	) Skirt, Neo, .18, 06.74w 50.00l, 04/ SI	1
▲	5	76570	(006501-	) Screw, Hex, M8 X 1.25 X 30, 8.8	8
▲	6	32491	(006501-	) Washer, Flat, 0.31, Std	12
▲	7	1212910	(006501-	) Skirt Assy, Door, Brush, Lh	1
▲	8	1212912	(006501-	) Skirt, Neo, .18, 6.42w X 48.73l, 04/SI	1
▲	9	1212908	(006501-	) Retainer, Blade, Deflector	1
▲	10	1212959	(006501-	) Retainer, Blade, Deflector	1
▲	11	41342	(006501-	) Screw, Hex, M8 X 1.25 X 40, 8.8	4
▲	12	08709	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI	4

Fig. 17 - Wet Side Brush Dust Control Water Tank Group (No. Amer. Only)

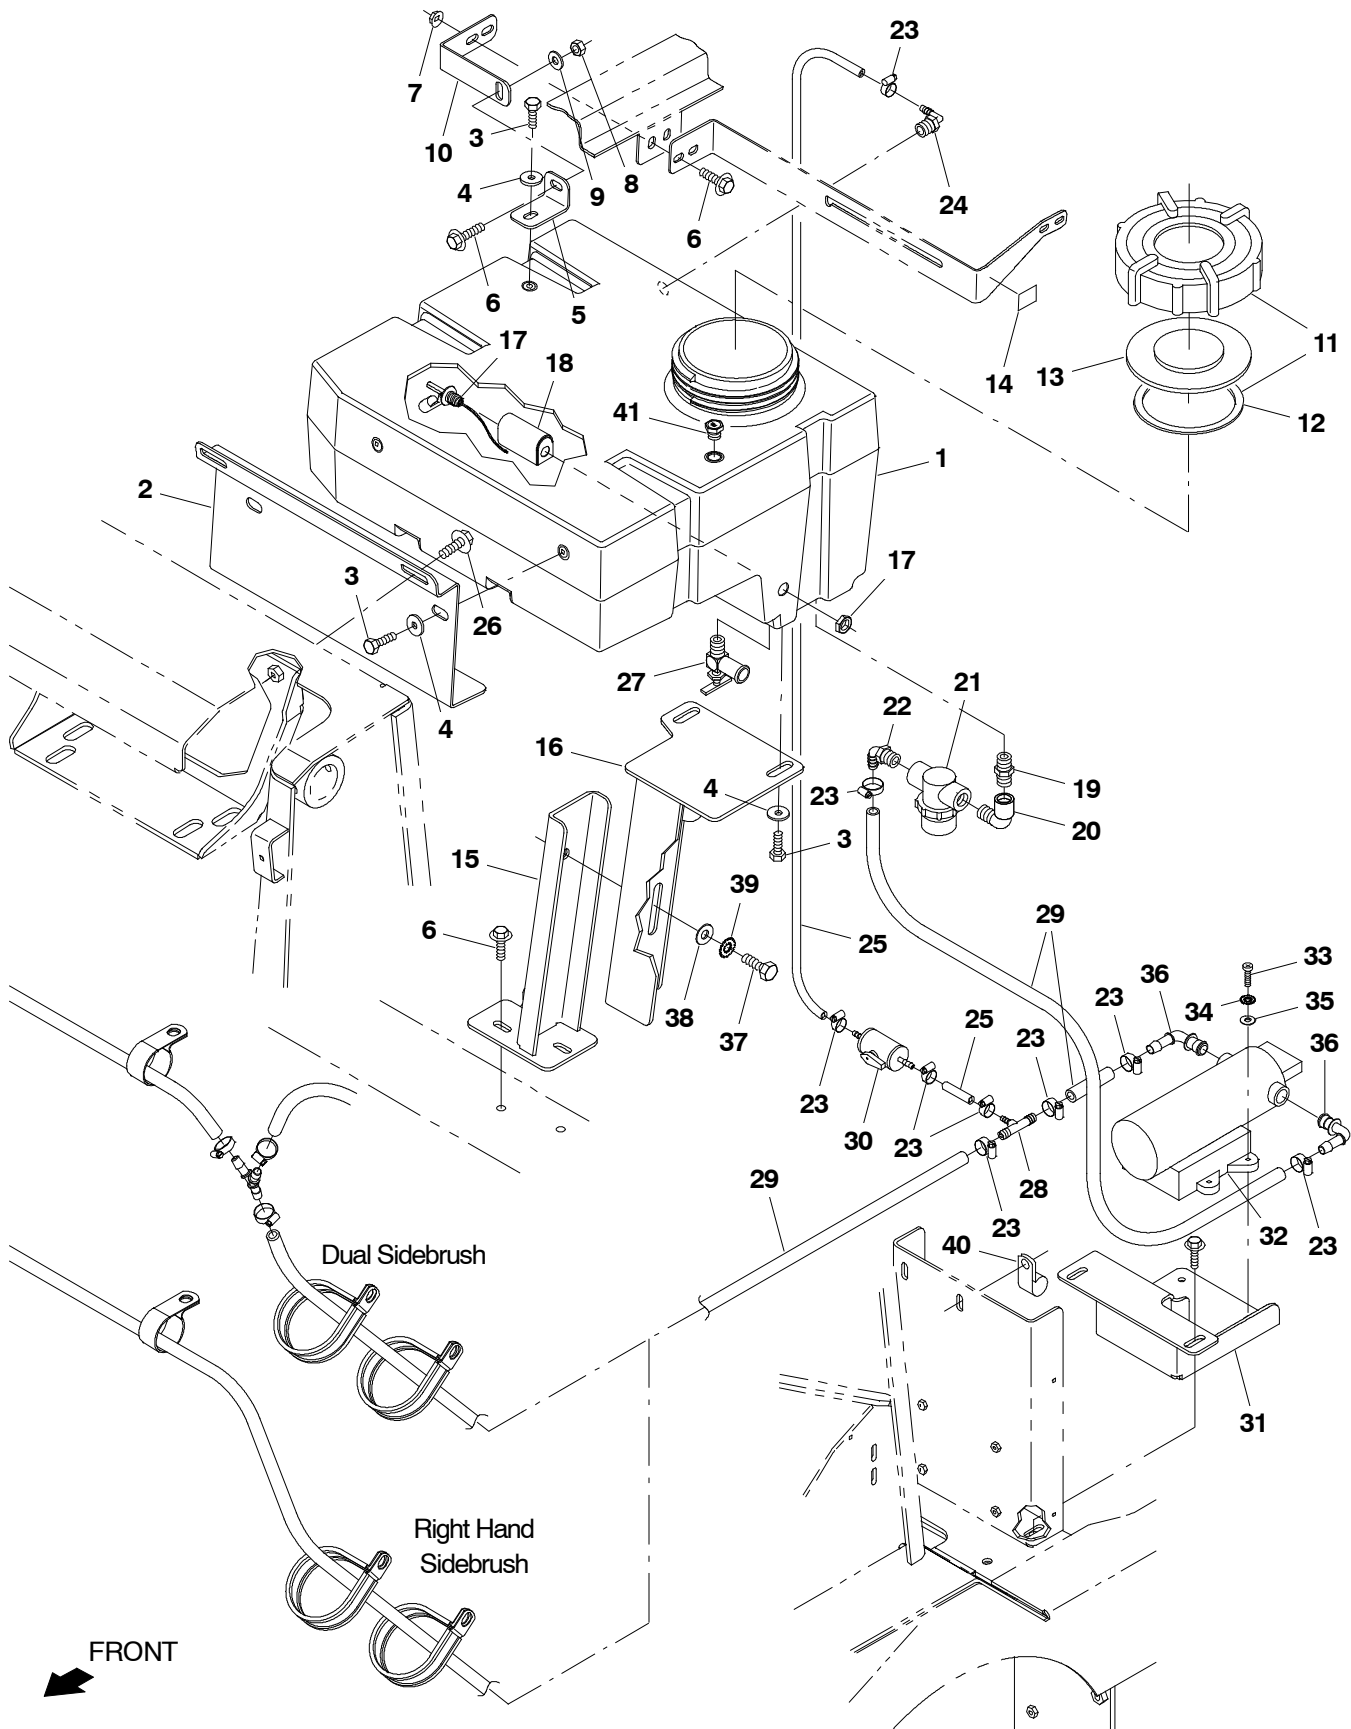


Fig. 17 - Wet Side Brush Dust Control Water Tank Group (No. Amer. Only)

NOTE: The Watershield Kit, Rh, Sbdc, Ci[S30] (S/N 008141-), TENNANT Part Number 9016145 includes Fig. 17, Fig. 18, Fig. 20, and Fig. 21.

NOTE: The Watershield Kit, Dual, Sbdc, Ci[S30] (S/N 008141-), TENNANT Part Number 9016146 includes Fig. 17, Fig. 19, Fig. 20, and Fig. 21.

NOTE: The Watershield Kit, Rh, Sbdc, Ci[S30Rwk] (S/N 006501-008140), TENNANT Part Number 9016090 includes Fig. 17, Fig. 18, Fig. 20, Fig. 21, and Fig. 22.

NOTE: The Watershield Kit, Dual, Sbdc, Ci[S30Rwk] (S/N 006501-008140), TENNANT Part Number 9016091 includes Fig. 17, Fig. 19, Fig. 20, Fig. 21, and Fig. 22.

Ref.	Part No.	Serial Number	Description	Qty.
1	9016474	(006501-	) Tank, Kit, Water, Afmkt [S30]	1
2	1232002	(006501-	) Bracket, Sppt, Rear, Tank [S30]	1
3	09740	(006501-	) Screw, Hex, M8 X 1.25 X 20, Ss	5
4	1017218	(006501-	) Washer, Flat, 0.32b 1.00d .12, Ss	5
5	1232001	(006501-	) Bracket, Angle, Tank Sppt, Top [S30]	1
6	1037354	(006501-	) Screw, Hex, M8 X 1.25 X 30, 9.8, Sems	5
7	07791	(006501-	) Nut, Hex, Flng, M8 X 1.25	2
8	08709	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI	3
9	32491	(006501-	) Washer, Flat, 0.31, Std	1
10	1232000	(006501-	) Bracket, Angle, Tank Brace	1
▽	11	24358	(006501-) Cap Assy, Tank, Drain	1
▲	12	1031699	(006501-) Gasket, .19, 4.05id 5.29od [Buna]	1
	13	86636	(006501-) Plug, Cap, Nat	1
	14	1232023	(006501-) Label, Info, Water Only	1
	15	1231991	(006501-) Brace Wldt, Sppt, Water Tank	1
	16	1231994	(006501-) Bracket Wldt, Sppt, Top, Tank	1
	17	385685	(006501-) Sensor, Level, Liq, 14vdc 01a .62- 11	1
	18	1019285	(006501-) Bracket, Protector, Float Switch	1
	19	1232027	(006501-) Fitting, Plstc, Str, Pm06/Pm06	1
	20	1005318	(006501-) Fitting, Plstc, E90, Pf06/Pm06, Nyl	1
▽	21	1076437	(006501-) Filter, In- Line, Pf06/Pf06 60 Micron	1
▲		1005304	(006501-) Screen, Fltr, 60 Micron, Caged Ss	1
	22	150412	(006501-) Fitting, Plstc, E90, Bm06/Pm06	1
	23	43844	(006501-) Clamp, Hose, Wormdrive, 0.25- 0.62d, .31w	9
	24	150417	(006501-) Fitting, Plstc, E90, Bm04/Pm06	1
	25	1014985	(006501-) Hose, Afmkt, Pvc, Clr, 0.25id, 08ft	1
	26	1036892	(006501-) Screw, Hex, M6 X 1.00 X 25, 9.8, Sems	2
	27	764183	(006501-) Fitting, Draincock, E90 Pm06	1
	28	61456	(006501-) Fitting, Plstc, Tee, Bm03/Bm06/Bm06, Br	1
	29	1014977	(006501-) Hose, Afmkt, Pvc, Brd, 0.38id, 12ft, Clr	1
	30	1232030	(006501-) Valve, Shutoff, Bm04/Bm04, Pvc	1
	31	1232051	(006501-) Bracket Wldt, Sppt, Pump Mtg	1
	32	1036801	(006501-) Pump, Soltn, 13.7vdc, 65psi [Fast li+]	1
	33	140293	(006501-) Screw, Pan, Phl, M5 X 0.80 X 30, Ss	1
	34	07514	(006501-) Washer, Lock, Int, 10, Ss	4
	35	01683	(006501-) Washer, Flat, 10, Ss	4
	36	1049259	(006501-) Fitting, Nyl, Qdc, E90, Bm06/ Qm10	2
	37	39283	(006501-) Screw, Hex, M10 X 1.50 X 25, 8.8	1
	38	32492	(006501-) Washer, Flat, 0.38, Std	1
	39	32988	(006501-) Washer, Lock, Int, 0.38	1
	40	46236	(006501-) Clamp, Cable, Stl, 0.25d X 0.56w, 1hole	1
	41	1241776	(006501-) Fitting, Brs, 3/8npt, Valve, Breather	1

Fig. 18 - Wet Right Hand Side Brush Dust Control Spray Nozzle Group (No. Amer. Only)

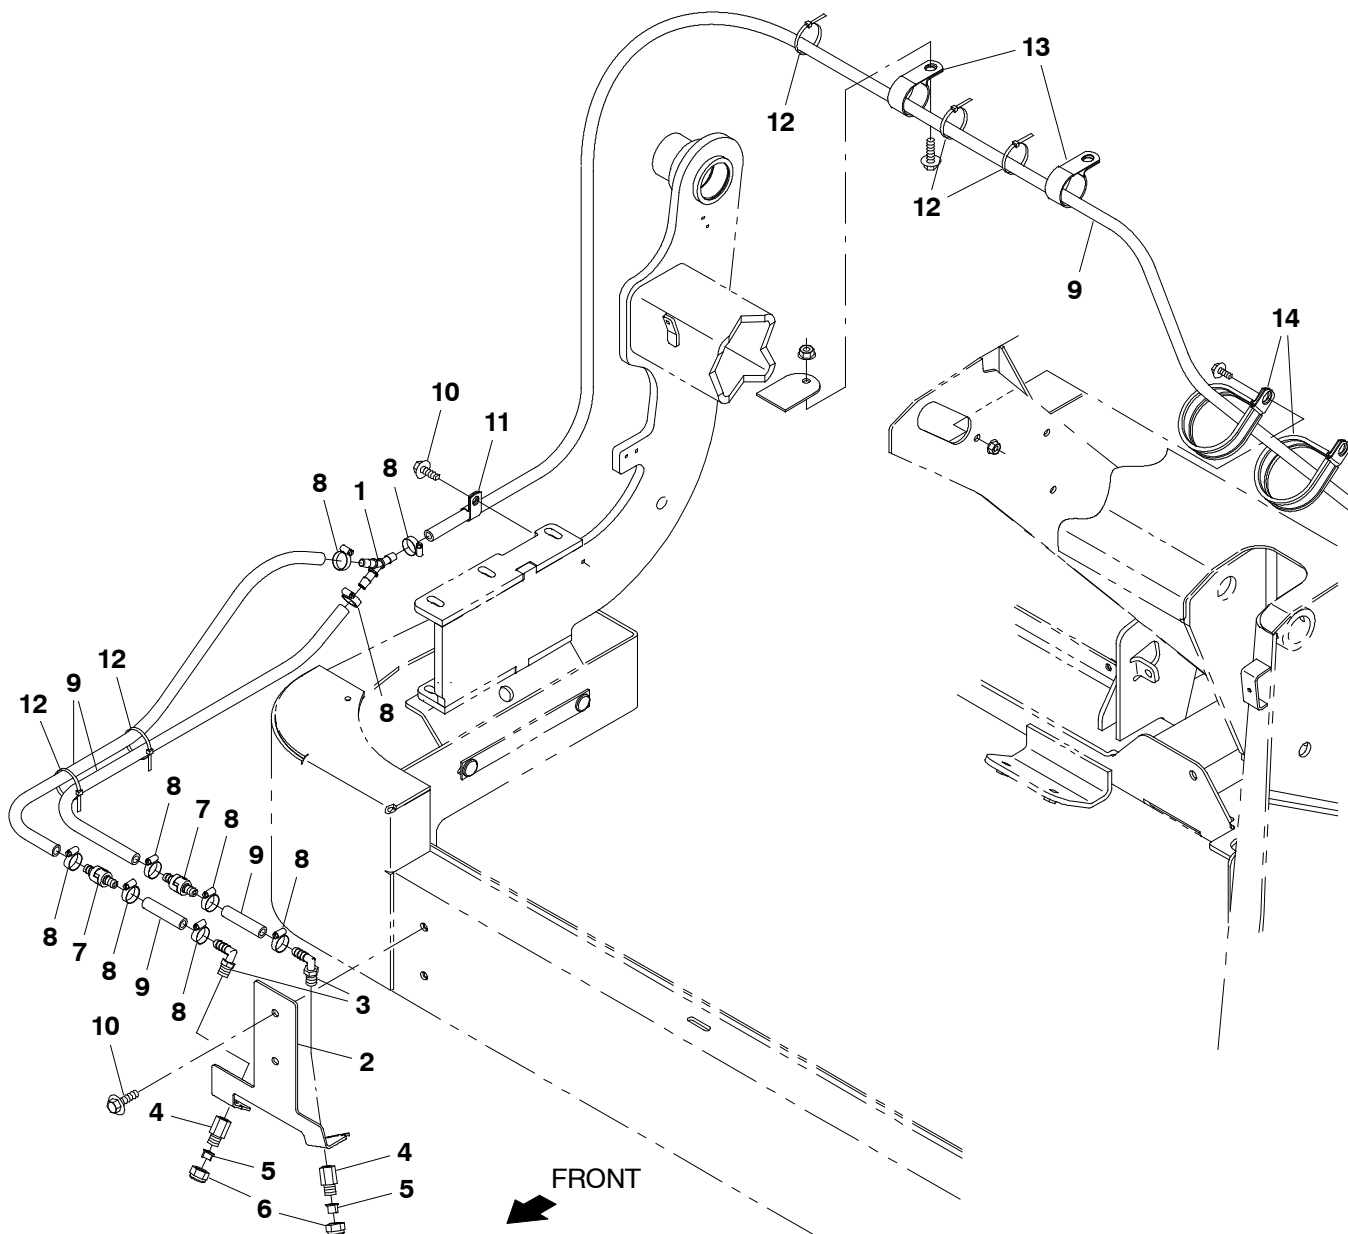


Fig. 18 - Wet Right Hand Side Brush Dust Control Spray Nozzle Group (No. Amer. Only)

NOTE: The Watershield Kit, Rh, Sbdc, Cif S30] (S/N 008141-), TENNANT Part Number 9016145 includes Fig. 17, Fig. 18, Fig. 20, and Fig. 21.

NOTE: The Watershield Kit, Rh, Sbdc, Cif S30Rwk] (S/N 006501-008140), TENNANT Part Number 9016090 includes Fig. 17, Fig. 18, Fig. 20, Fig. 21, and Fig. 22.

Ref.	Part No.	Serial Number	Description	Qty.
1	1017255	(006501-	) Fitting, Plstc, Y, Bm06/Bm06/Bm06, Nyl	1
2	1232003	(006501-	) Bracket, Mtg, Dual Nozzle, Rh	1
3	57248	(006501-	) Fitting, Plstc, E90, Bm06/Pm04, Nyl	2
4	1232066	(006501-	) Fitting, Body, Nozzel, Brs	2
5	1232065	(006501-	) Nozzel, Spray, 110 Deg, 0.05 Gpm	2
6	769778	(006501-	) Fitting, Brs, Cap [Unijet]	2
7	1015455	(006501-	) Valve, Check, 0005psi Bm06/Bm06	2
8	43844	(006501-	) Clamp, Hose, Wormdrive, 0.25- 0.62d, .31w	9
9	1014977	(006501-	) Hose, Afmkt, Pvc, Brd, 0.38id, 12ft, Clr	1
10	1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	3
11	82829	(006501-	) Clamp, Cable, Stl, 0.63d X 0.75w, 1hole	1
12	763114	(006501-	) Tie, Cable, 11.3l, 2.75d Max	6
13	41016	(006501-	) Clamp, Cable, Stl, 2.25d X 1.00w, 1hole	2
14	1207562	(006501-	) Clamp, Cable, Stl, 3.25d X 1.00w, 1hole	2

Fig. 19 - Wet Dual Side Brush Dust Control Spray Nozzle Group (No. Amer. Only)

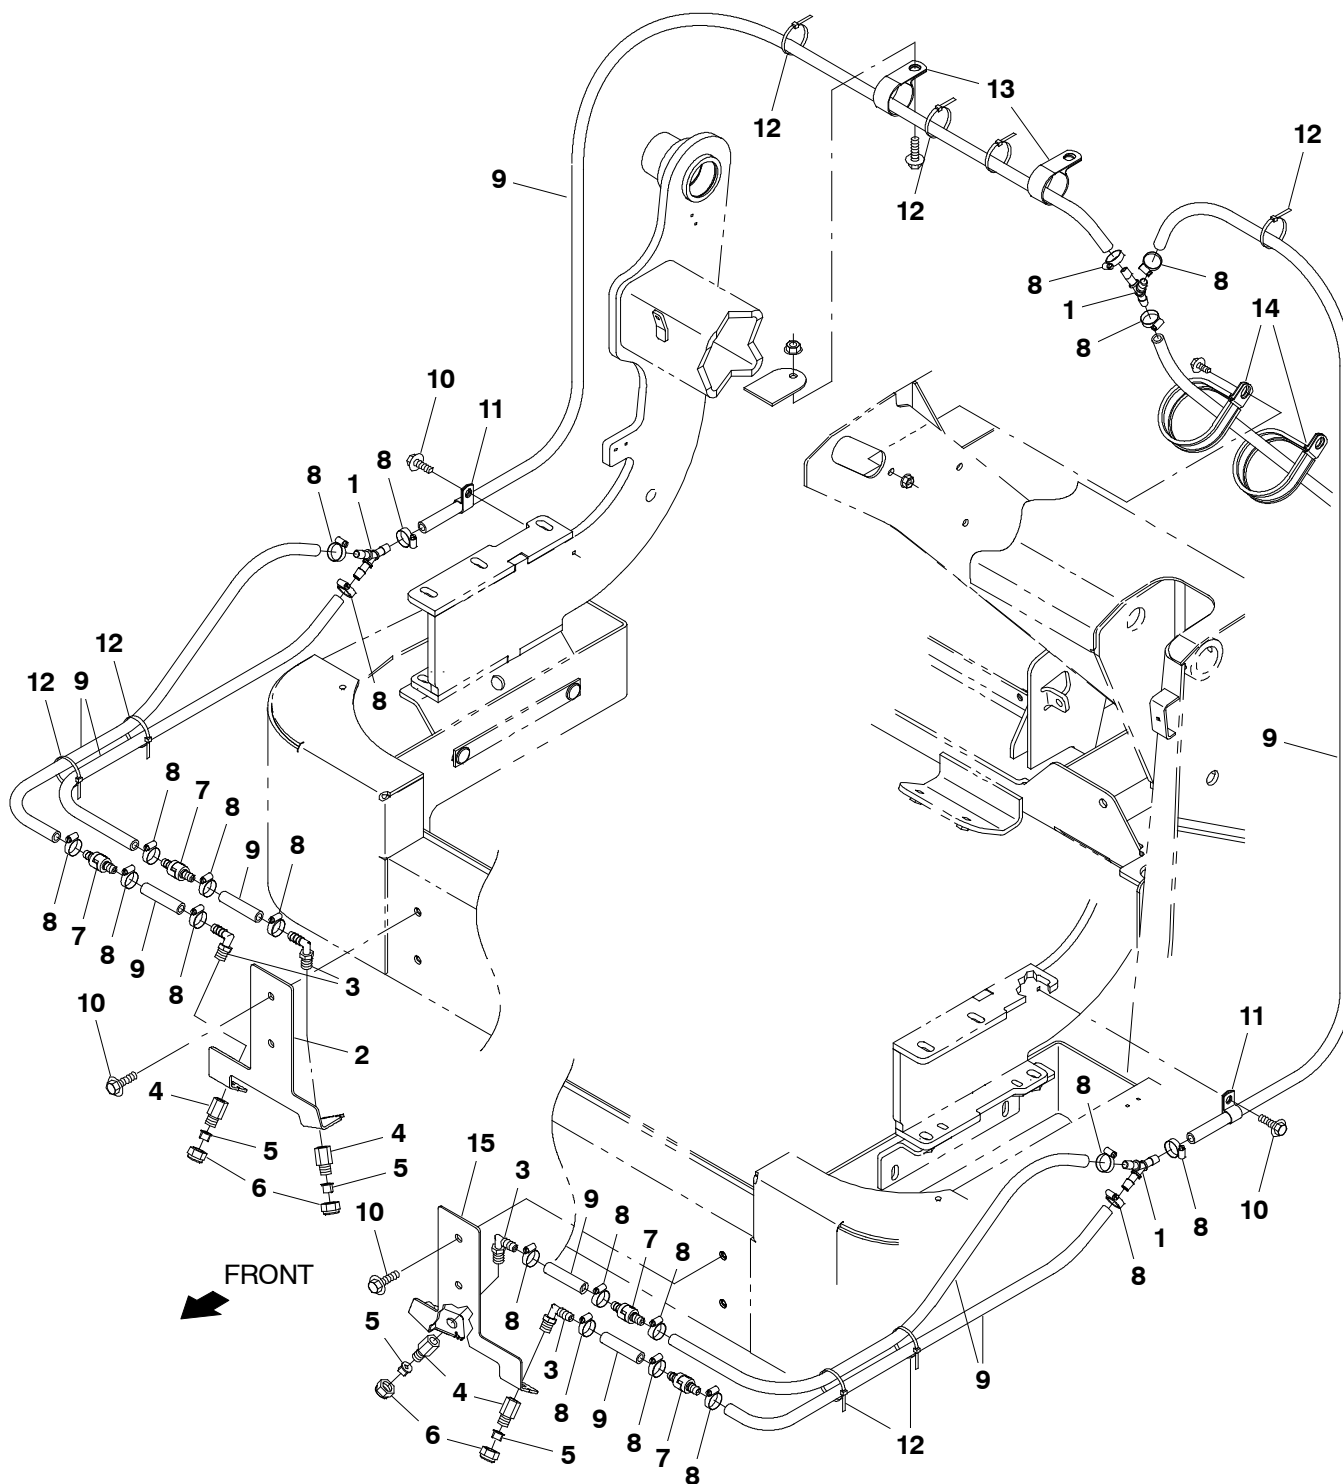


Fig. 19 - Wet Dual Side Brush Dust Control Spray Nozzle Group (No. Amer. Only)

NOTE: The Watershield Kit, Dual, Sbdc, Ci[S30] (S/N 008141-), TENNANT Part Number 9016146 includes Fig. 17, Fig. 19, Fig. 20, and Fig. 21.

NOTE: The Watershield Kit, Dual, Sbdc, Ci[S30Rwk] (S/N 006501- 008140), TENNANT Part Number 9016091 includes Fig. 17, Fig. 19, Fig. 20, Fig. 21, and Fig. 22.

Ref.	Part No.	Serial Number	Description	Qty.
1	1017255	(006501-	) Fitting, Plstc, Y, Bm06/Bm06/Bm06, Nyl	3
2	1232003	(006501-	) Bracket, Mtg, Dual Nozzle, Rh	1
3	57248	(006501-	) Fitting, Plstc, E90, Bm06/Pm04, Nyl	4
4	1232066	(006501-	) Fitting, Body, Nozzel, Brs	4
5	1232065	(006501-	) Nozzel, Spray, 110 Deg, 0.05 Gpm	4
6	769778	(006501-	) Fitting, Brs, Cap [Unijet]	4
7	1015455	(006501-	) Valve, Check, 0005psi Bm06/Bm06	4
8	43844	(006501-	) Clamp, Hose, Wormdrive, 0.25- 0.62d, .31w	21
9	1014977	(006501-	) Hose, Afmkt, Pvc, Brd, 0.38id, 12ft, Clr	2
10	1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	3
11	82829	(006501-	) Clamp, Cable, Stl, 0.63d X 0.75w, 1hole	2
12	763114	(006501-	) Tie, Cable, 11.3l, 2.75d Max	12
13	41016	(006501-	) Clamp, Cable, Stl, 2.25d X 1.00w, 1hole	2
14	1207562	(006501-	) Clamp, Cable, Stl, 3.25d X 1.00w, 1hole	2
15	1232004	(006501-	) Bracket, Mtg, Dual Nozzle, Lh	1

Fig. 20 - Wet Side Brush Dust Control Electrical Group (No. Amer. Only)

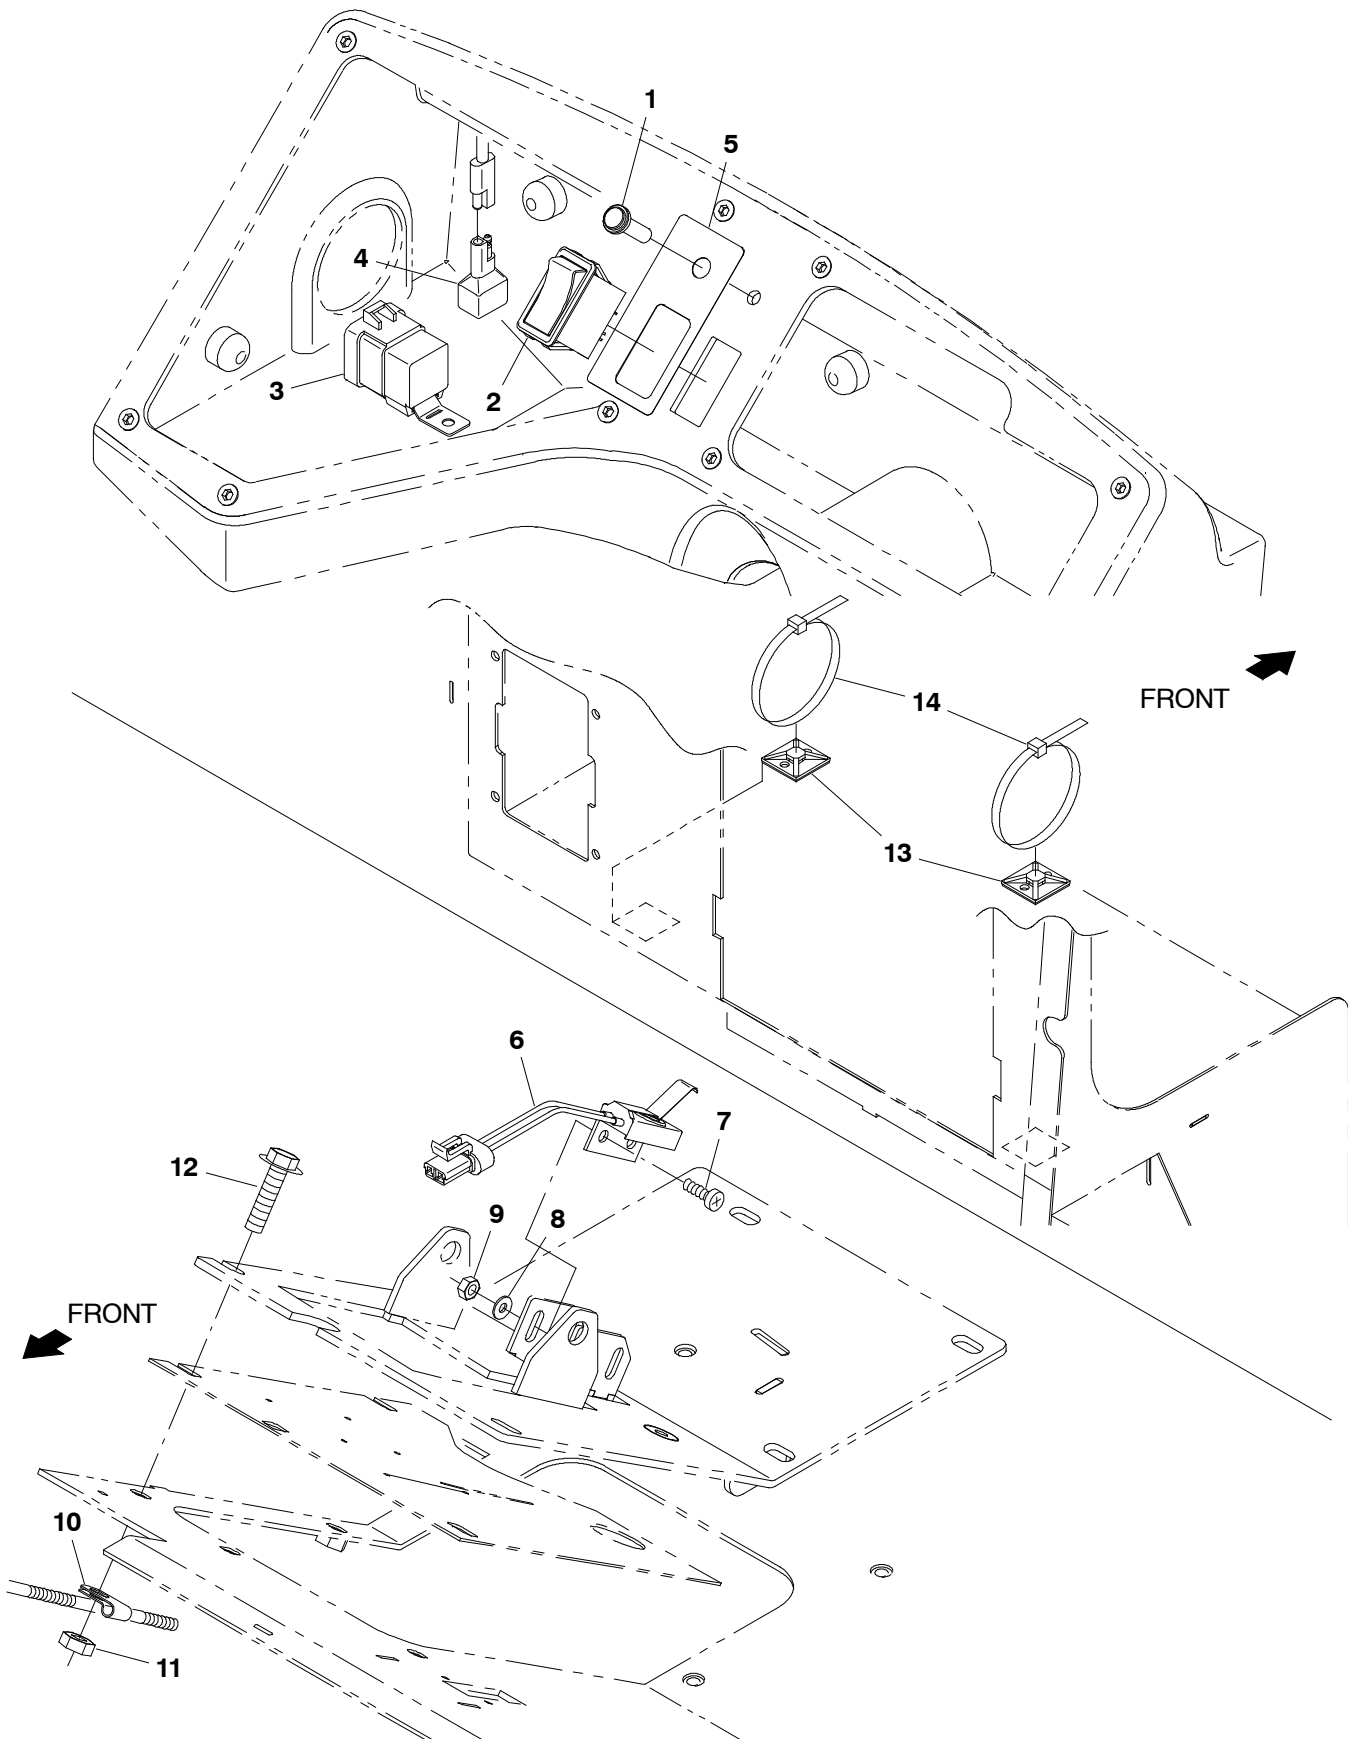


Fig. 20 - Wet Side Brush Dust Control Electrical Group (No. Amer. Only)

NOTE: The Watershield Kit, Rh, Sbd, Ci[S30] (S/N 008141-), TENNANT Part Number 9016145 includes Fig. 17, Fig. 18, Fig. 20, and Fig. 21.

NOTE: The Watershield Kit, Dual, Sbd, Ci[S30] (S/N 008141-), TENNANT Part Number 9016146 includes Fig. 17, Fig. 19, Fig. 20, and Fig. 21.

NOTE: The Watershield Kit, Rh, Sbd, Ci[S30Rwk] (S/N 006501-008140), TENNANT Part Number 9016090 includes Fig. 17, Fig. 18, Fig. 20, Fig. 21, and Fig. 22.

NOTE: The Watershield Kit, Dual, Sbd, Ci[S30Rwk] (S/N 006501-008140), TENNANT Part Number 9016091 includes Fig. 17, Fig. 19, Fig. 20, Fig. 21, and Fig. 22.

Ref.	Part No.	Serial Number	Description	Qty.
1	1232342	(006501-	) Light, Led, .312d, 12 Vdc [Tri- Color]	1
2	398528	(006501-	) Switch, Rocker, Dpdt, On / Off / Mom	1
3	56186	(006501-	) Relay, 12vdc, 040a, Spdt No	1
4	222290	(006501-	) Diode, Ele, Plug	1
5	1232091	(006501-	) Label, Wet Dust Cntrl [S30]	1
6	1212400	(006501-	) Switch, Snap, 15a Nc	1
7	06933	(006501-	) Screw, Pan, Phl, M5 X 0.80 X 16, 4.8	2
8	19324	(006501-	) Washer, Flat, 10, Sae	2
9	06549	(006501-	) Nut, Hex, Lock, M5 X 0.80, NI	2
10	46236	(006501-	) Clamp, Cable, Stl, 0.25d X 0.56w, 1hole	1
11	08709	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI	1
12	1037355	(006501-	) Screw, Hex, M8 X 1.25 X 35, 9.8, Sems	1
13	55248	(006501-	) Mount, Cable Tie	4
14	49266	(006501-	) Tie, Cable, Nyl, 07.3l .19w 1.8 Max D	4

Fig. 21 - Wet Side Brush Dust Control Wire Harness Group (No. Amer. Only)

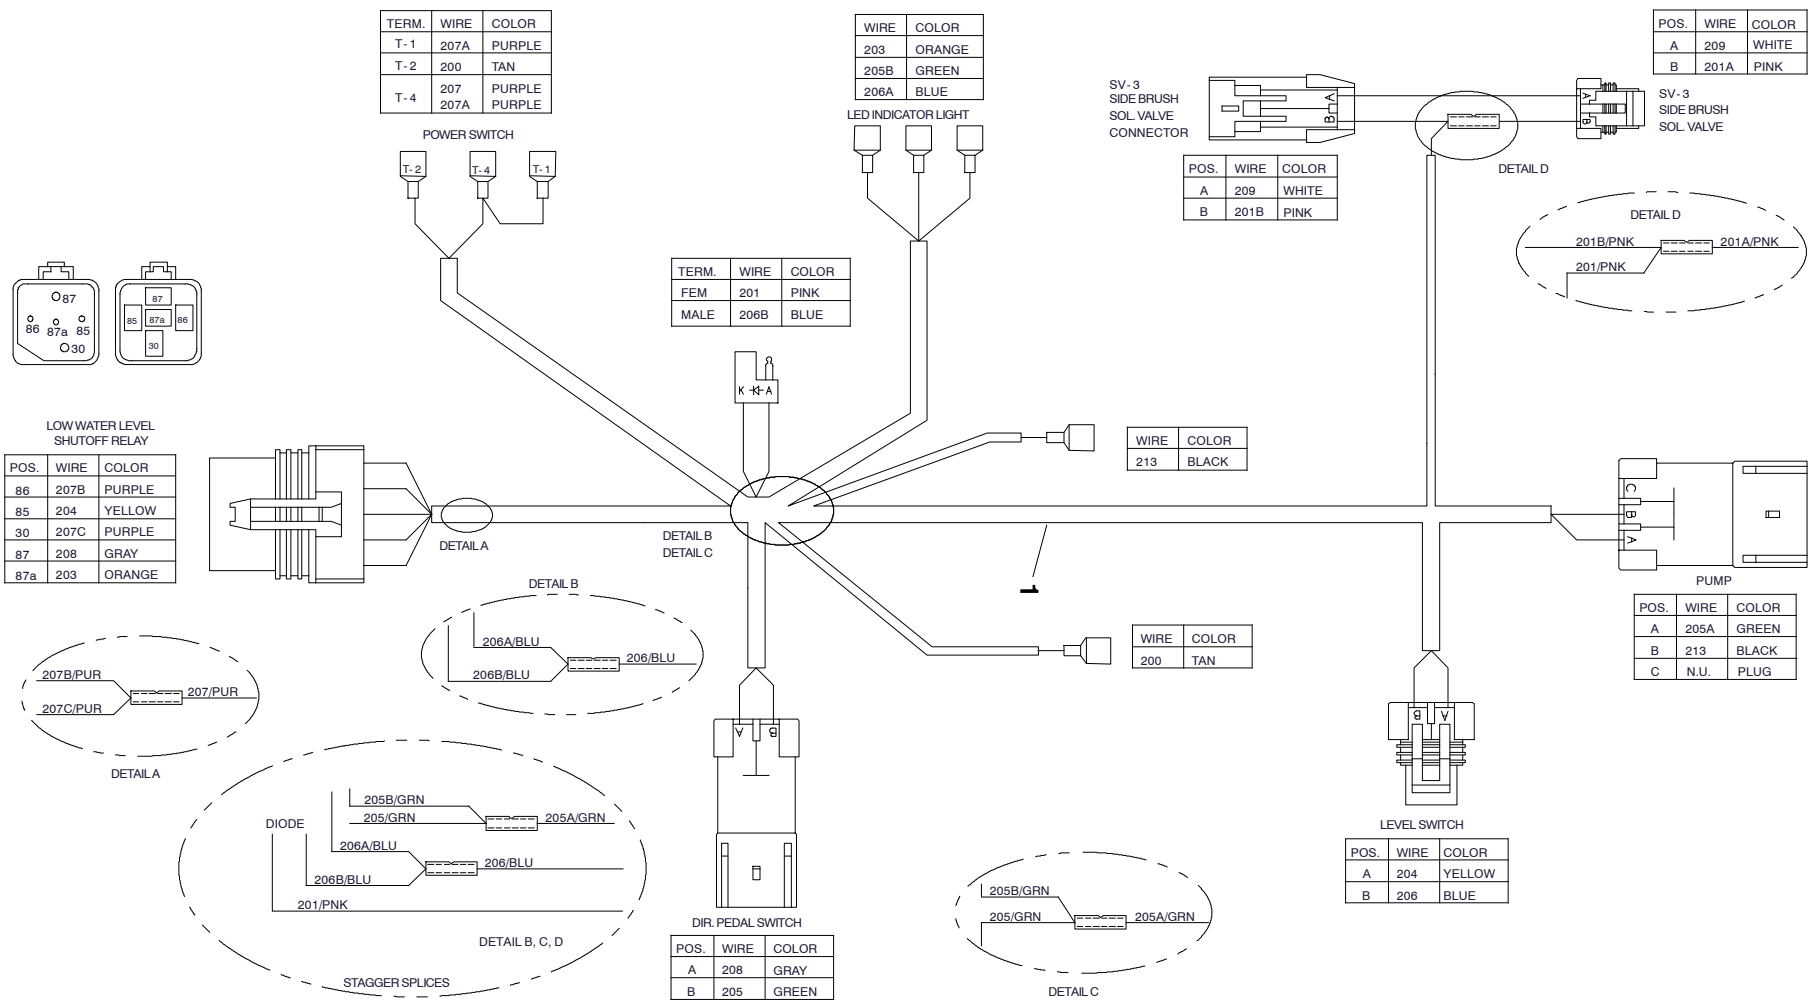


Fig. 21 - Wet Side Brush Dust Control Wire Harness Group (No. Amer. Only)

NOTE: The Watershield Kit, Rh, Sbdc, Ci[S30] (S/N 008141-), TENNANT Part Number 9016145 includes Fig. 17, Fig. 18, Fig. 20, and Fig. 21.

NOTE: The Watershield Kit, Dual, Sbdc, Ci[S30] (S/N 008141-), TENNANT Part Number 9016146 includes Fig. 17, Fig. 19, Fig. 20, and Fig. 21.

NOTE: The Watershield Kit, Rh, Sbdc, Ci[S30Rwk] (S/N 006501-008140), TENNANT Part Number 9016090 includes Fig. 17, Fig. 18, Fig. 20, Fig. 21, and Fig. 22.

NOTE: The Watershield Kit, Dual, Sbdc, Ci[S30Rwk] (S/N 006501-008140), TENNANT Part Number 9016091 includes Fig. 17, Fig. 19, Fig. 20, Fig. 21, and Fig. 22.

Ref.	Part No.	Serial Number	Description	Qty.
1	1232183	(006501-)	Harness, Cntrl, Wet Dust [S30]	1

OPTIONS

Fig. 22 - Wet Side Brush Dust Control Rework Group (S/N 006501-008140) (No. Amer. Only)

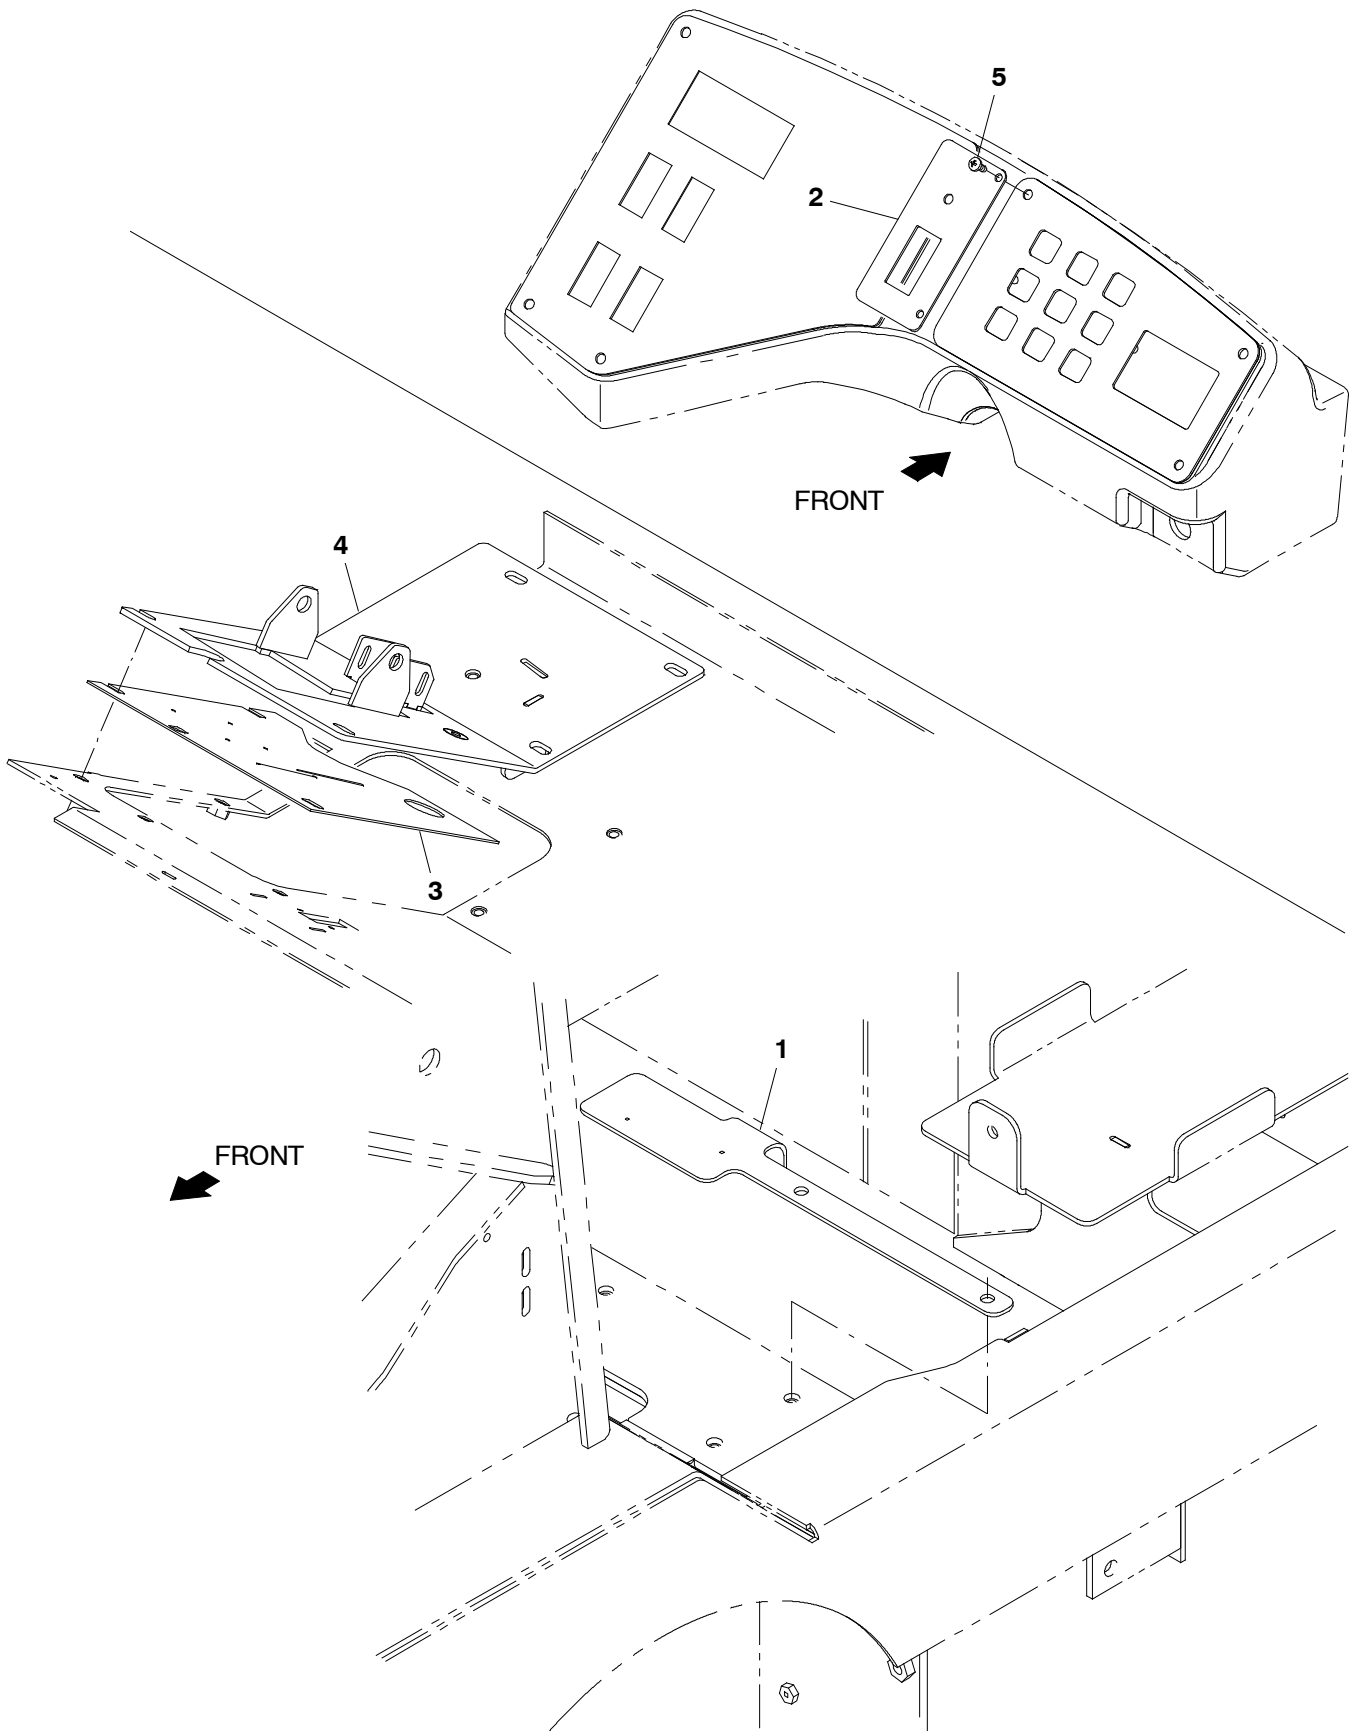


Fig. 22 - Wet Side Brush Dust Control Rework Group (S/N 006501-008140) (No. Amer. Only)

NOTE: The Watershield Kit, Rh, Sbdc, Ci[S30Rwk] (S/N 006501-008140), TENNANT Part Number 9016090 includes Fig. 17, Fig. 18, Fig. 20, Fig. 21, and Fig. 22.

NOTE: The Watershield Kit, Dual, Sbdc, Ci[S30Rwk] (S/N 006501-008140), TENNANT Part Number 9016091 includes Fig. 17, Fig. 19, Fig. 20, Fig. 21, and Fig. 22.

Ref.	Part No.	Serial Number	Description	Qty.
1	1232297	(006501-008140)	Drill Template, S30 Water Tank Sppt	1
2	1232549	(006501-008140)	Template, Drill, Cntrl Console[S30]	1
3	1026688	(006501-008140)	Panel Wldt, Access	1
4	1038360	(006501-008140)	Gasket, Rbr, Pedal, Propel	1
5	1045487	(006501-008140)	Screw, Pan, Phl, M5 X 0.80 X 16, Blk	2

Fig. 23 - Wet Side Brush Dust Control Electrical Schematic, S30 (No. Amer. Only)

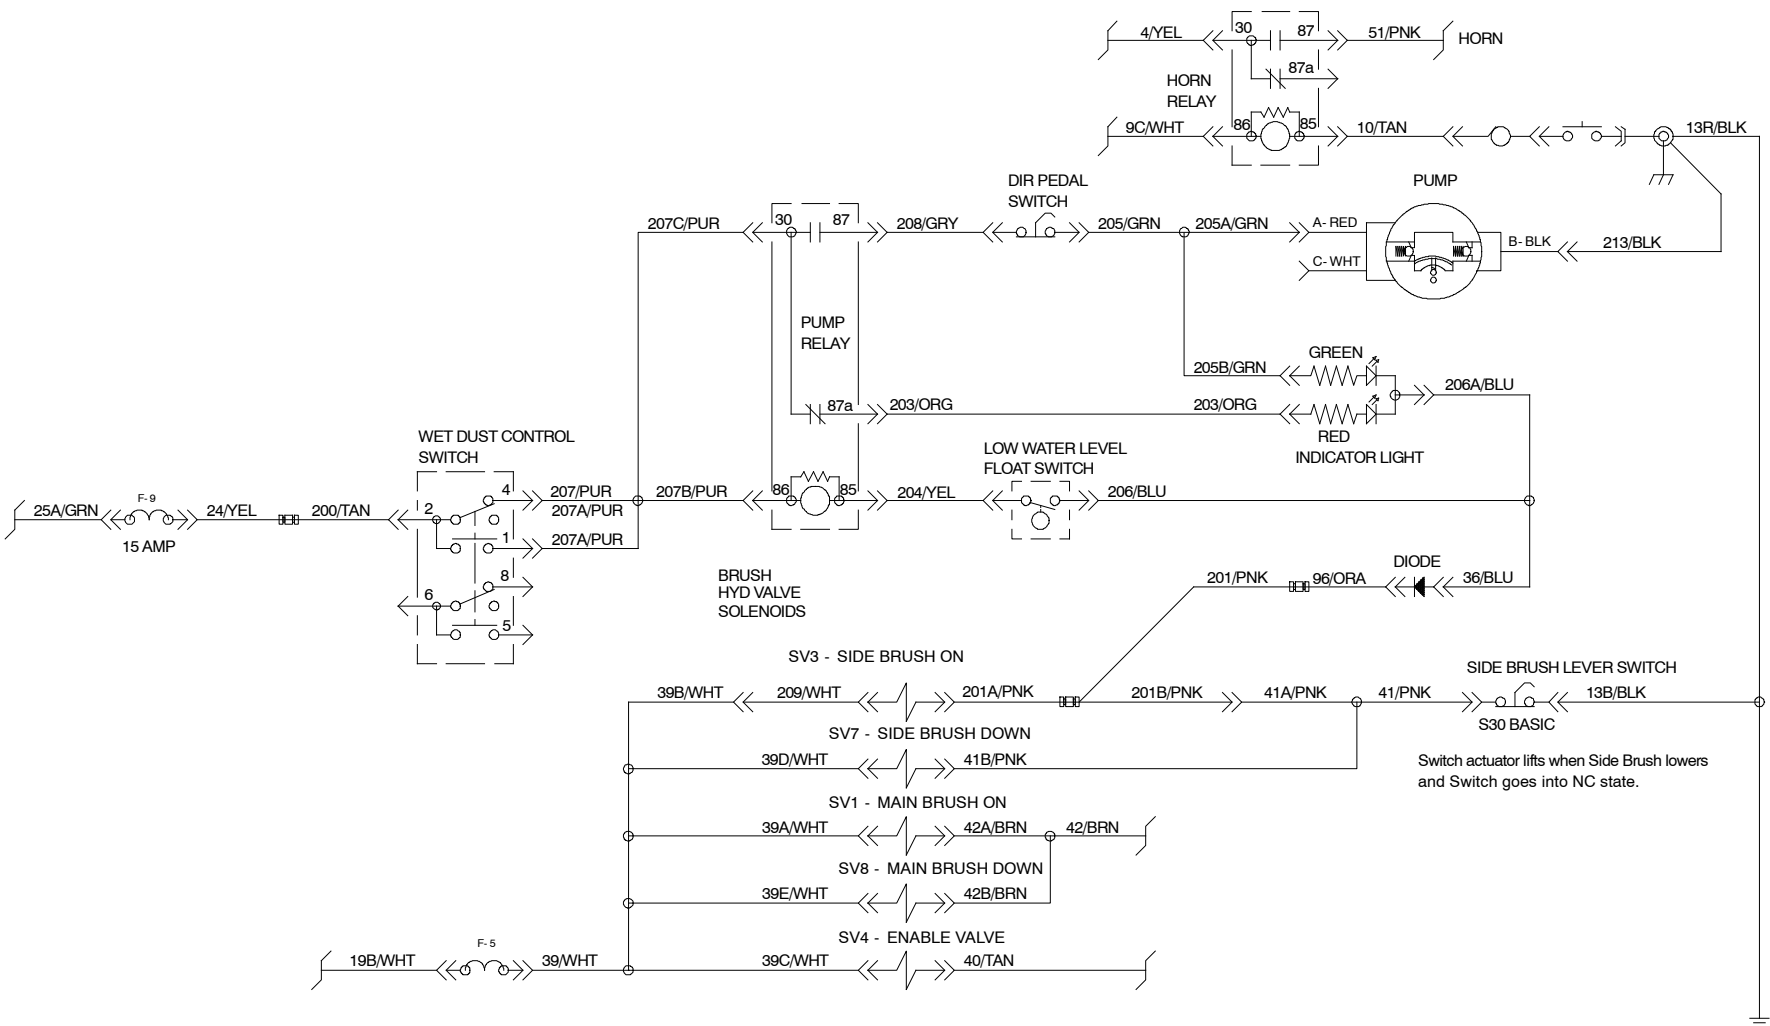




Fig. 25 - Right Hand Side Brush Dust Control Skirt Kit

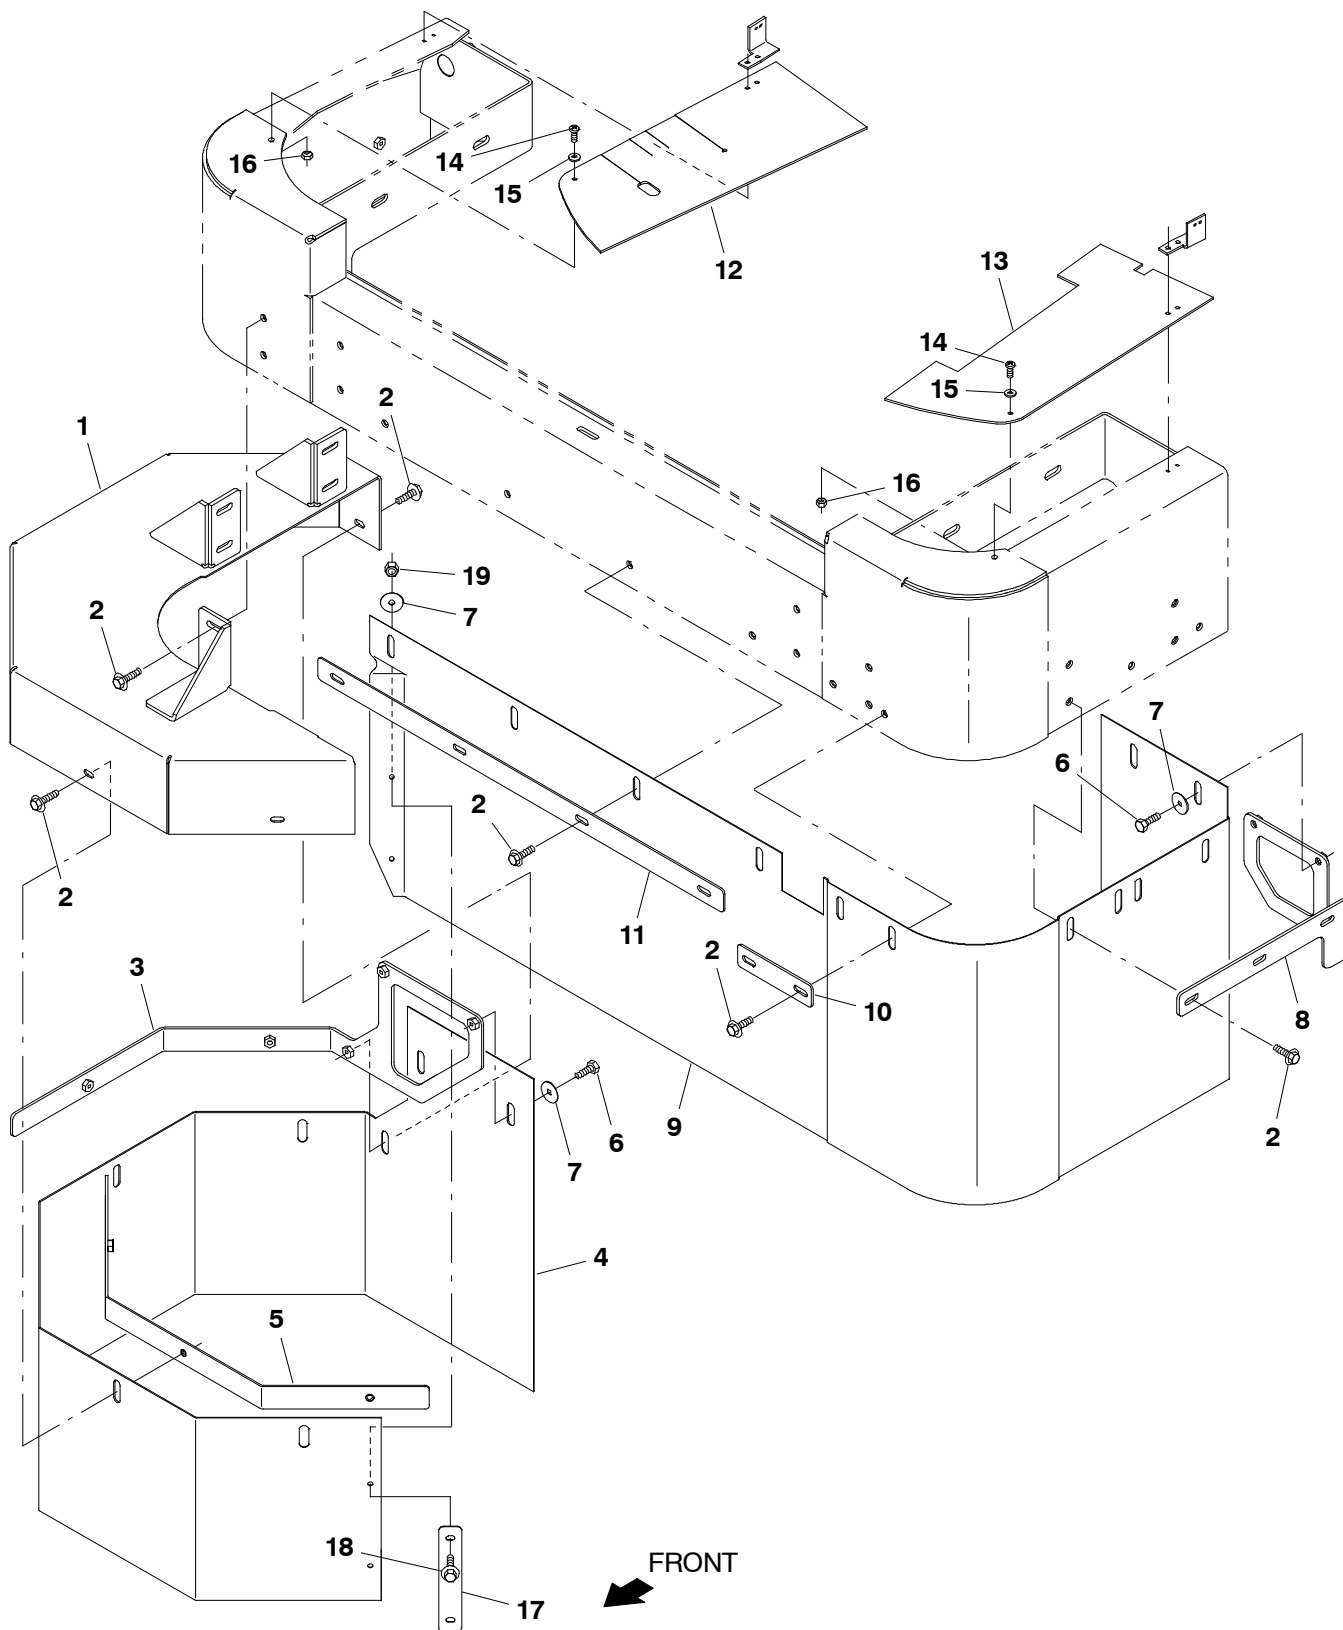


Fig. 25 - Right Hand Side Brush Dust Control Skirt Kit

	Ref.	Part No.	Serial Number	Description	Qty.
▽		9017882	(006501-	) Dust Cntrl, Dry, Single Rh Sb, Ci [S30]	1
▲	1	1076396	(006501-	) Cover Wldt, Rh, Sbdc [S30]	1
▲	2	1037354	(006501-	) Screw, Hex, M8 X 1.25 X 30, 9.8, Sems	21
▲	3	1076400	(006501-	) Strip, Retainer, Wldt, Skirt, Rh, Sbdc	1
▲	4	1076408	(006501-	) Skirt, Side Shroud, Sbdc [S30]	1
▲	5	1076402	(006501-	) Strip, Retainer, Wldt, Sbdc [S30]	1
▲	6	16931	(006501-	) Screw, Hex, M8 X 1.25 X 20, 8.8	4
▲	7	30013	(006501-	) Washer, Flat, 0.31, Fendr	6
▲	8	1076406	(006501-	) Strip, Retainer, Wldt, Skirt, Lh, Sbdc	1
▲	9	1076407	(006501-	) Skirt, Lh, Single Sbdc [S30]	1
▲	10	1076404	(006501-	) Strip, Retainer, Lh, Skirt, Sbdc	1
▲	11	1076403	(006501-	) Strip, Retainer, Front, Sbdc	1
▲	12	1076411	(006501-	) Seal, Upper, Rh, Sbdc [S30]	1
▲	13	1076412	(006501-	) Seal, Upper, Lh, Sbdc [S30]	1
▲	14	09164	(006501-	) Screw, Pan, Phl, M6 X 1.00 X 20, 4.8	2
▲	15	32483	(006501-	) Washer, Flat, 0.25, Sae	2
▲	16	08708	(006501-	) Nut, Hex, Lock, M6 X 1.00, NI	2
▲	17	1076292	(006501-	) Plate, Support, Skirt Sbdc	1
▲	18	1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	2
▲	19	08709	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI	2

Fig. 26 - Dual Side Brush Dust Control Skirt Kit

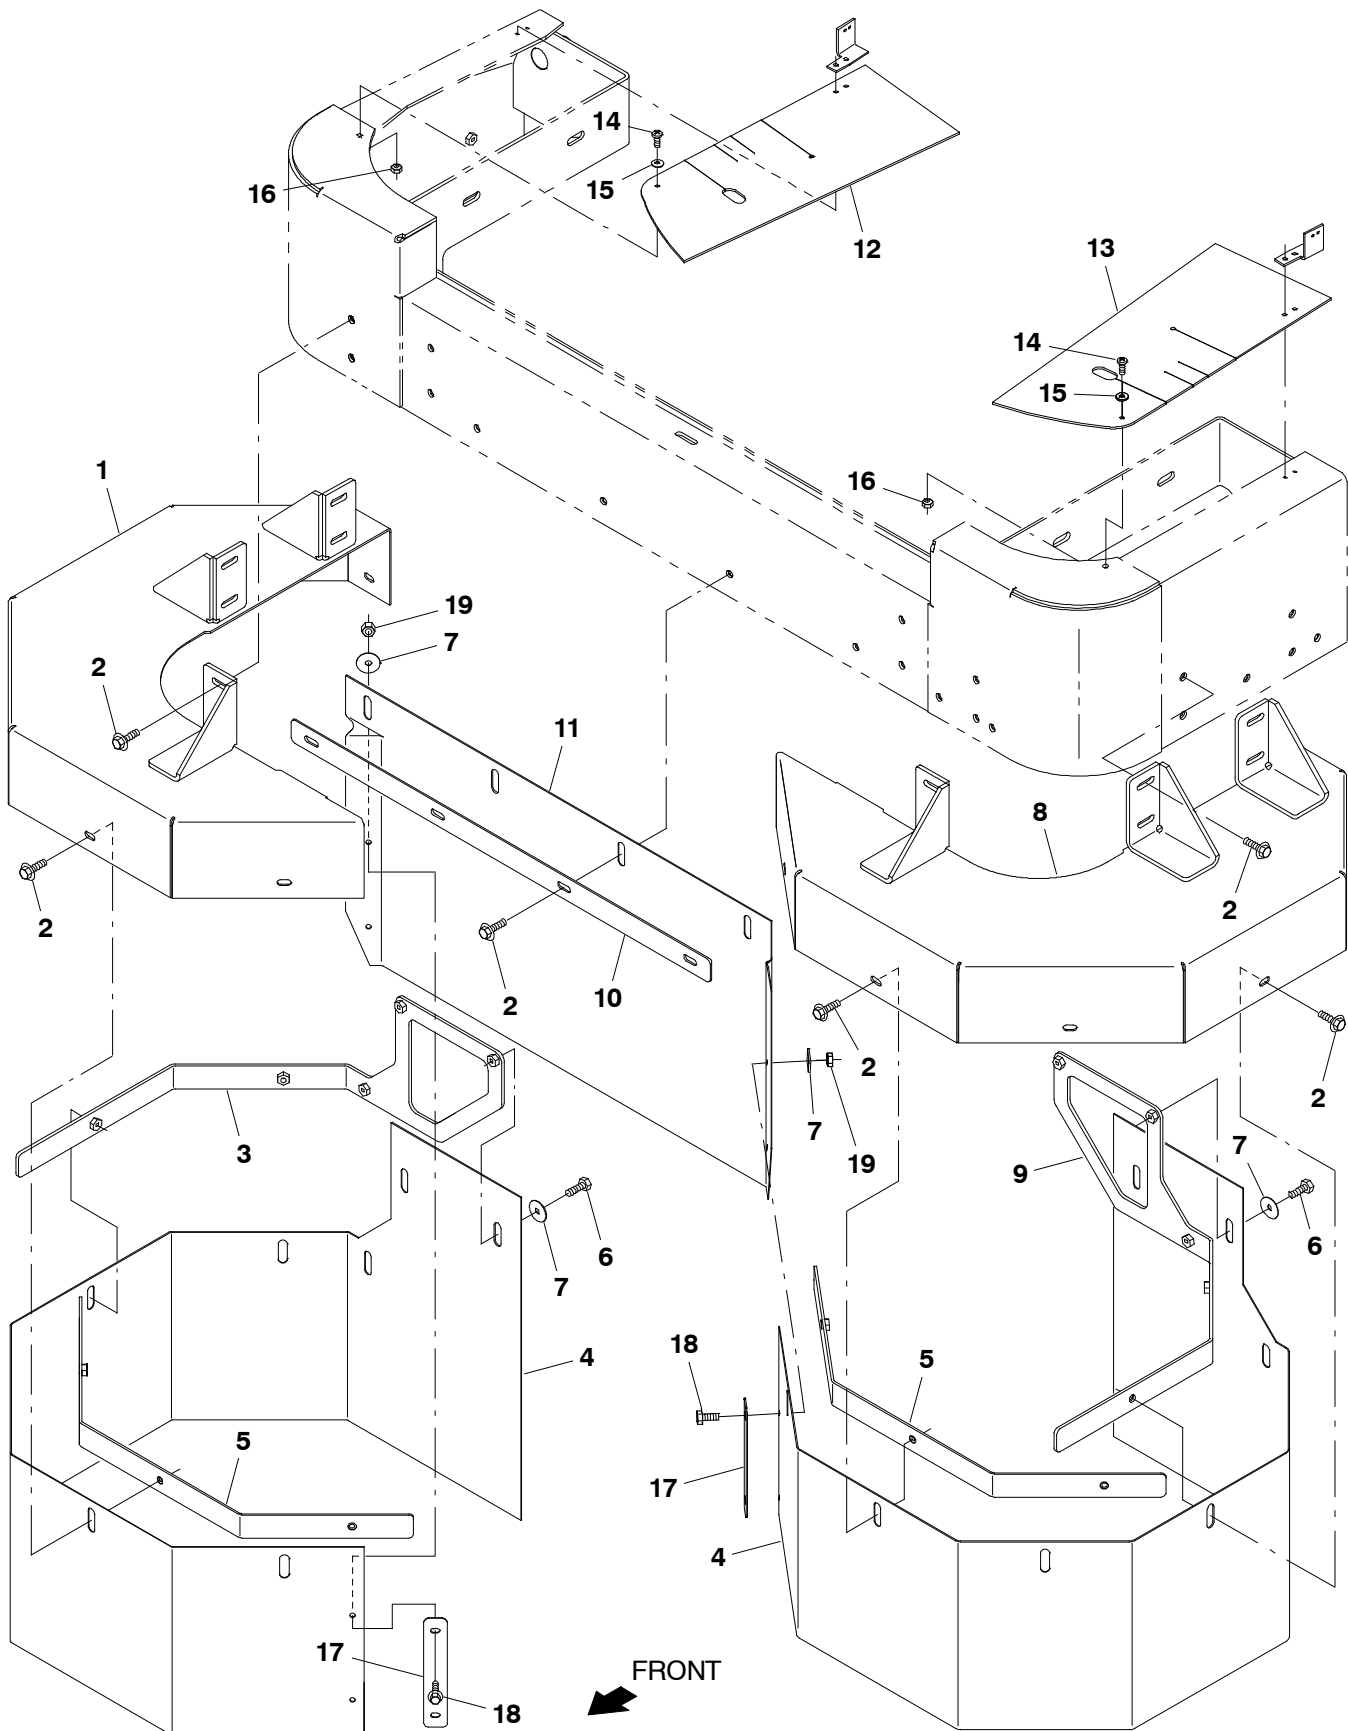


Fig. 26 - Dual Side Brush Dust Control Skirt Kit

	Ref.	Part No.	Serial Number	Description	Qty.
▽		9017883	(006501-	) Dust Cntrl, Dry, Dual Sb, Ci [S30]	1
▲	1	1076396	(006501-	) Cover Wldt, Rh, Sbdc [S30]	1
▲	2	1037354	(006501-	) Screw, Hex, M8 X 1.25 X 30, 9.8, Sems	28
▲	3	1076400	(006501-	) Strip, Retainer, Wldt, Skirt, Rh, Sbdc	1
▲	4	1076408	(006501-	) Skirt, Side Shroud, Sbdc [S30]	2
▲	5	1076402	(006501-	) Strip, Retainer, Wldt, Sbdc [S30]	2
▲	6	16931	(006501-	) Screw, Hex, M8 X 1.25 X 20, 8.8	4
▲	7	30013	(006501-	) Washer, Flat, 0.31, Fendr	6
▲	8	1076398	(006501-	) Cover Wldt, Lh, Sbdc [S30]	1
▲	9	1076410	(006501-	) Strip, Retainer, Wldt, Skirt, Lh, Sbdc	1
▲	10	1076403	(006501-	) Strip, Retainer, Front, Sbdc	1
▲	11	1076413	(006501-	) Skirt, Front, Dual Sbdc [S30]	1
▲	12	1076411	(006501-	) Seal, Upper, Rh, Sbdc [S30]	1
▲	13	1076412	(006501-	) Seal, Upper, Lh, Sbdc [S30]	1
▲	14	09164	(006501-	) Screw, Pan, Phl, M6 X 1.00 X 20, 4.8	2
▲	15	32483	(006501-	) Washer, Flat, 0.25, Sae	2
▲	16	08708	(006501-	) Nut, Hex, Lock, M6 X 1.00, NI	2
▲	17	1076292	(006501-	) Plate, Support, Skirt Sbdc	2
▲	18	1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	4
▲	19	08709	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI	4

Fig. 27 - HEPA Filter Vacuum Hose Group (No. Amer. Only)

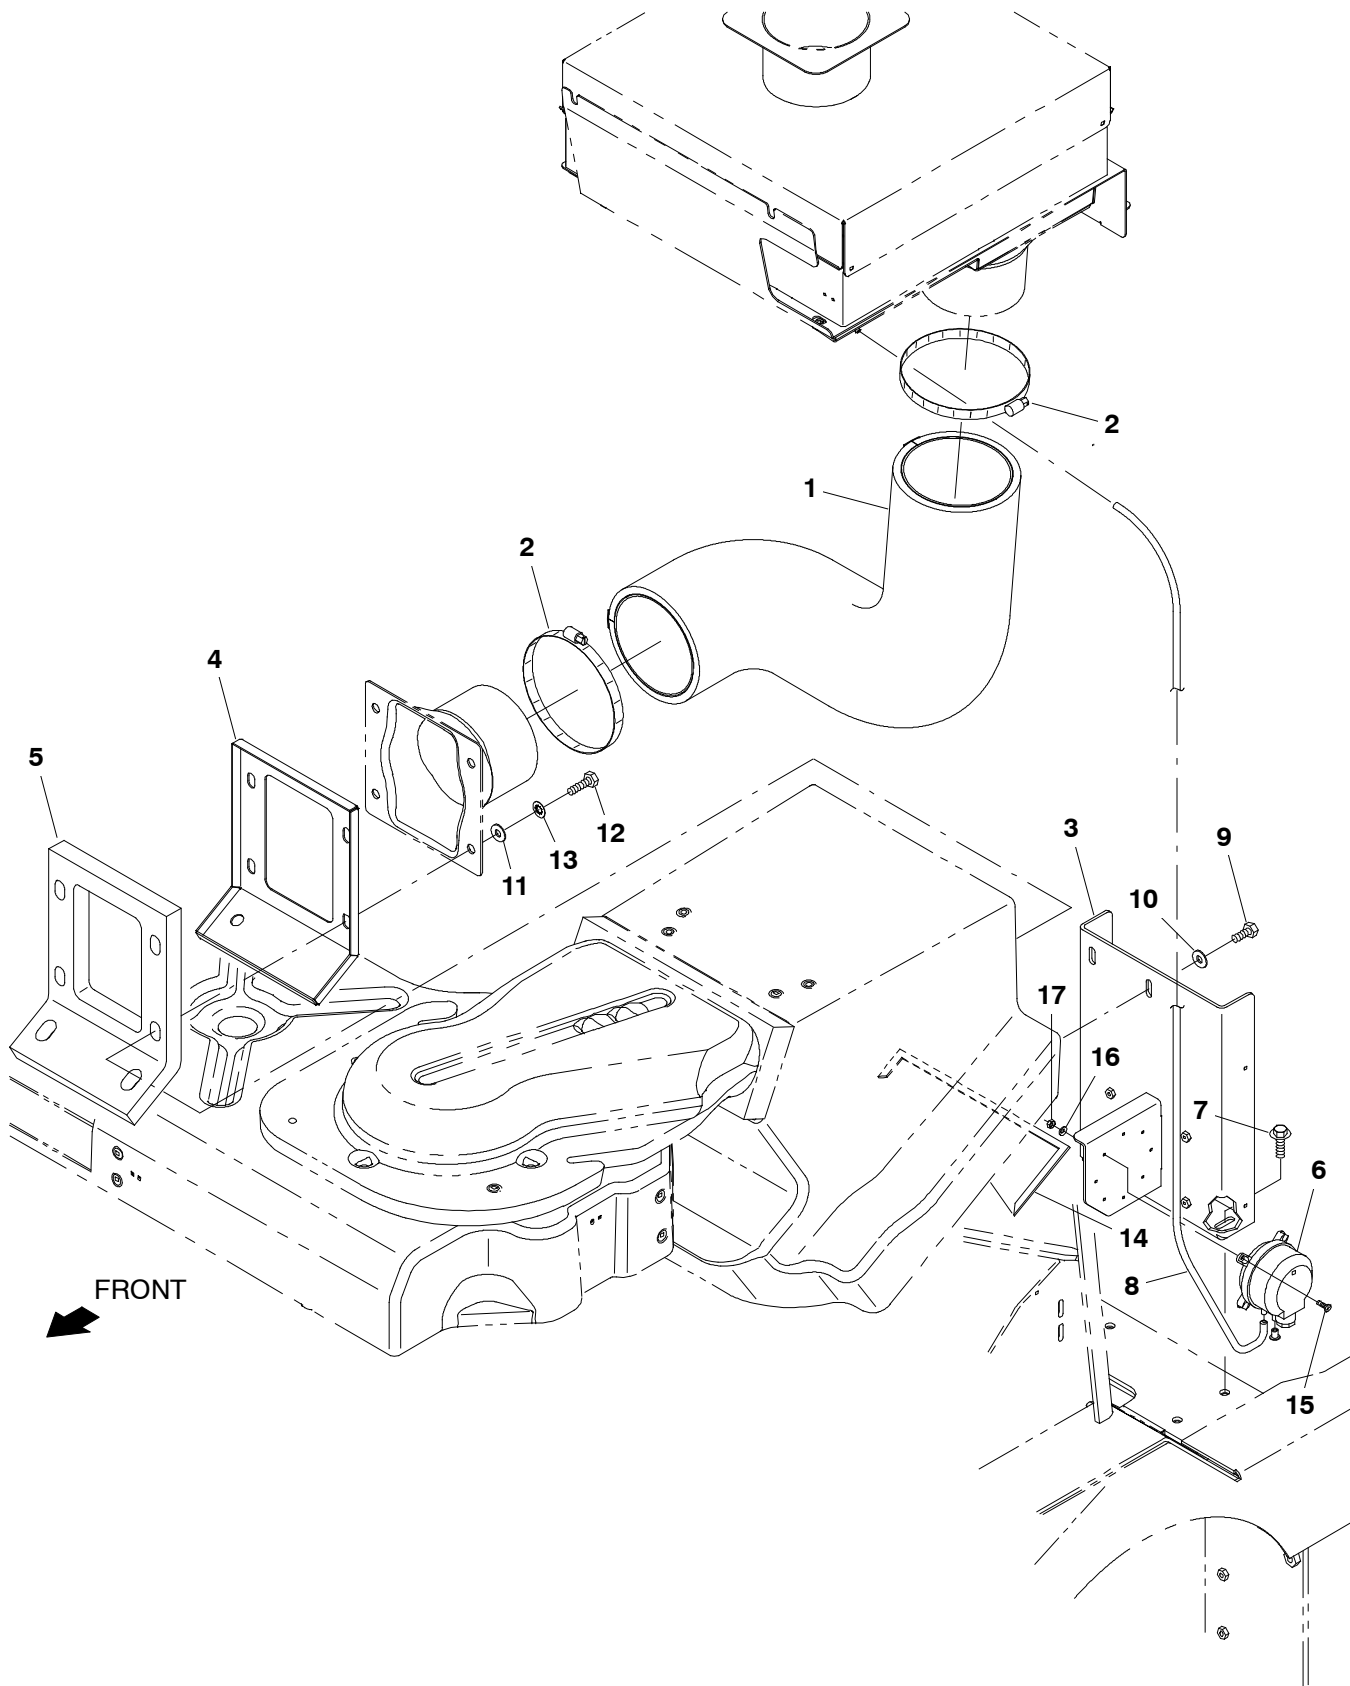


Fig. 27 - HEPA Filter Vacuum Hose Group (No. Amer. Only)

Ref.	Part No.	Serial Number	Description	Qty.
1	1042831	(006501-	) Hose, Exhaust, Vacuum, 5.0id, 40.0l	1
2	49891	(006501-	) Clamp, Hose, Wormdrive, 5.56- 6.50d, .56w	2
3	1236127	(006501-	) Bracket Wldt, Fan Mtg, Press Sw Mtg	1
4	1240478	(006501-	) Bracket, Seal, Flange, Vac	1
5	1240476	(006501-	) Seal, Flange, Rbr, Foam, Adh, 1.0th	1
6	1076268	(006501-	) Switch, Press, Adj [.80"- 4.0" Water]	1
7	1037346	(006501-	) Screw, Hex, M8 X 1.25 X 25, 9.8, Sems	2
8	1031576	(006501-	) Hose, Afmkt, Vacuum, 0.16id, 08ft	1
9	16931	(006501-	) Screw, Hex, M8 X 1.25 X 20, 8.8	2
10	32491	(006501-	) Washer, Flat, 0.31, Std	2
11	1017218	(006501-	) Washer, Flat, 0.32b 1.00d .12, Ss	5
12	41342	(006501-	) Screw, Hex, M8 X 1.25 X 40, 8.8	5
13	32984	(006501-	) Washer, Lock, Int, 0.31	5
14	1046426	(006501-	) Seal, Afmkt, Rbr, Clsd, Adh, 08ft	1
15	24265	(006501-	) Screw, Pan, Phl, M4 X 0.70 X 16, Ss	2
16	19065	(006501-	) Washer, Flat, 0.19b 0.44d .05, Pl, 08	2
17	02850	(006501-	) Nut, Hex, Lock, M4 X 0.70, NI	2

Fig. 28 - HEPA Filter Box Group (No. Amer. Only)

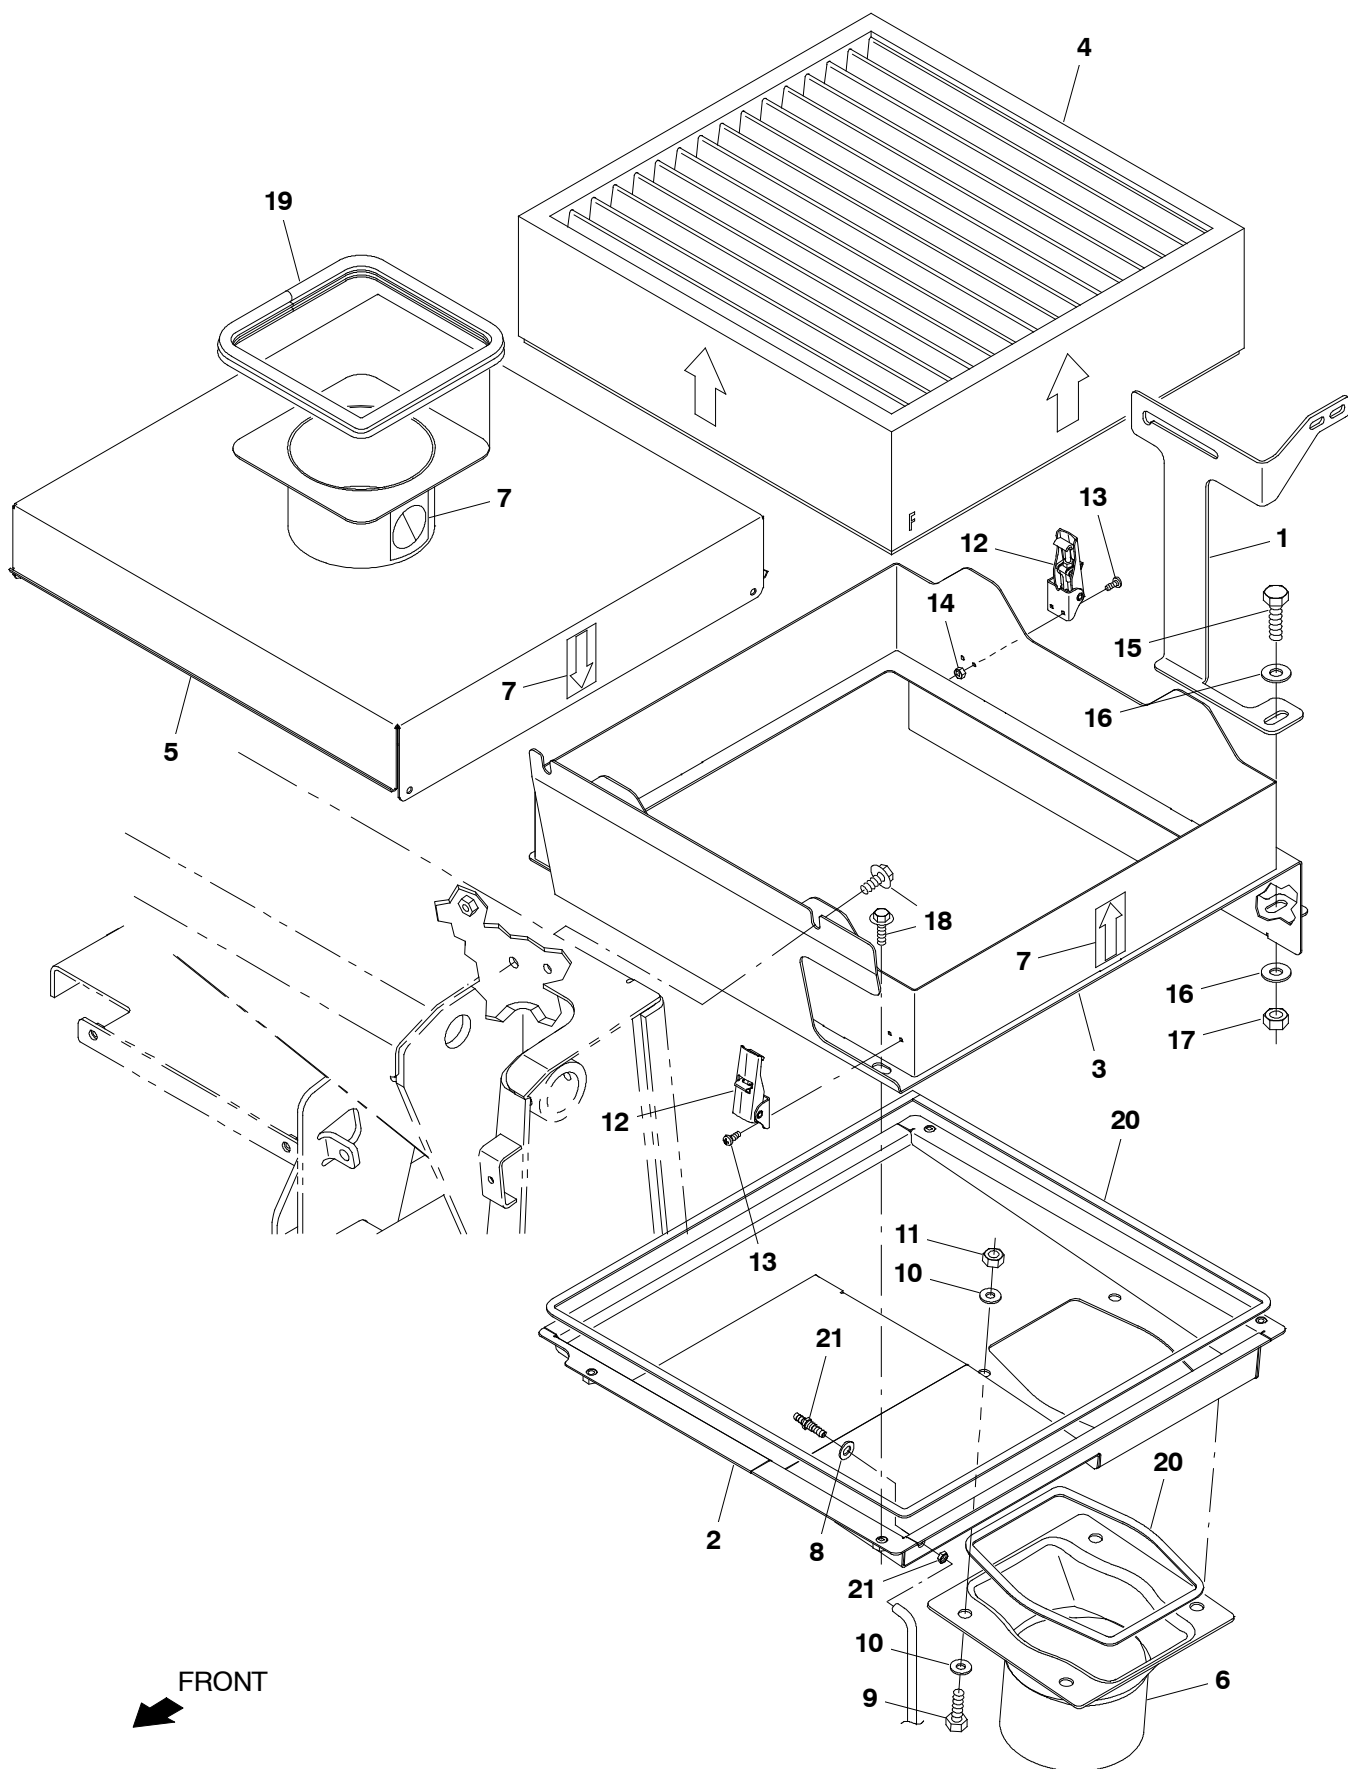


Fig. 28 - HEPA Filter Box Group (No. Amer. Only)

Ref.	Part No.	Serial Number	Description	Qty.
1	1235597	(006501-	) Bracket, Sppt, Prop Rod, [Gen II S30]	1
2	1232268	(006501-	) Diverter Wldt, Fltr, Hepa [Gen II S30]	1
3	1232173	(006501-	) Bracket Wldt, Fltr Tray, Hepa [Gen II]	1
4	315396	(006501- 008626	) Element, Filter, Hepa, 25.0h 13.5w	1
4	1232166	(008627-	) Element, Fltr, Hepa, 18 X 17 X 5 [S30]	1
5	1234043	(006501-	) Cover Wldt, Hepa, [Gen II - S30]	1
6	1031122	(006501-	) Duct, Outlet, Vacuum	1
7	1237915	(006501-	) Label Set, Fltr, Hepa [S20&S30]	1
8	43454	(006501-	) Washer, Flat, 0.34b 0.69d .06, Nyl	1
9	39277	(006501-	) Screw, Hex, M8 X 1.25 X 25, 8.8	4
10	32490	(006501-	) Washer, Flat, 0.25, Std	8
11	08709	(006501-	) Nut, Hex, Lock, M8 X 1.25, NI	4
12	384418	(006501-	) Latch, Door [Southco 91- 562- 07]	2
13	49697	(006501-	) Screw, Pan, Phl, M4 X 0.70 X 10, Ss	4
14	02850	(006501-	) Nut, Hex, Lock, M4 X 0.70, NI	4
15	03192	(006501-	) Screw, Hex, M10 X 1.50 X 30, 8.8	1
16	32492	(006501-	) Washer, Flat, 0.38, Std	2
17	41430	(006501-	) Nut, Hex, Lock, M10 X 1.5, NI	1
18	1036892	(006501-	) Screw, Hex, M6 X 1.00 X 25, 9.8, Sems	6
19	1063864	(006501-	) Seal, Afmkt, Bulb, 90, 0.38, 03ft	1
20	1020287	(006501-	) Seal, Afmkt, Rbr, Clsd, Adh, 12ft	1
21	39923	(006501-	) Fitting, Brs, Str, Bm03/Bm03, Bh	1

Fig. 29 - HEPA Filter Exhaust Cover Group (No. Amer. Only)



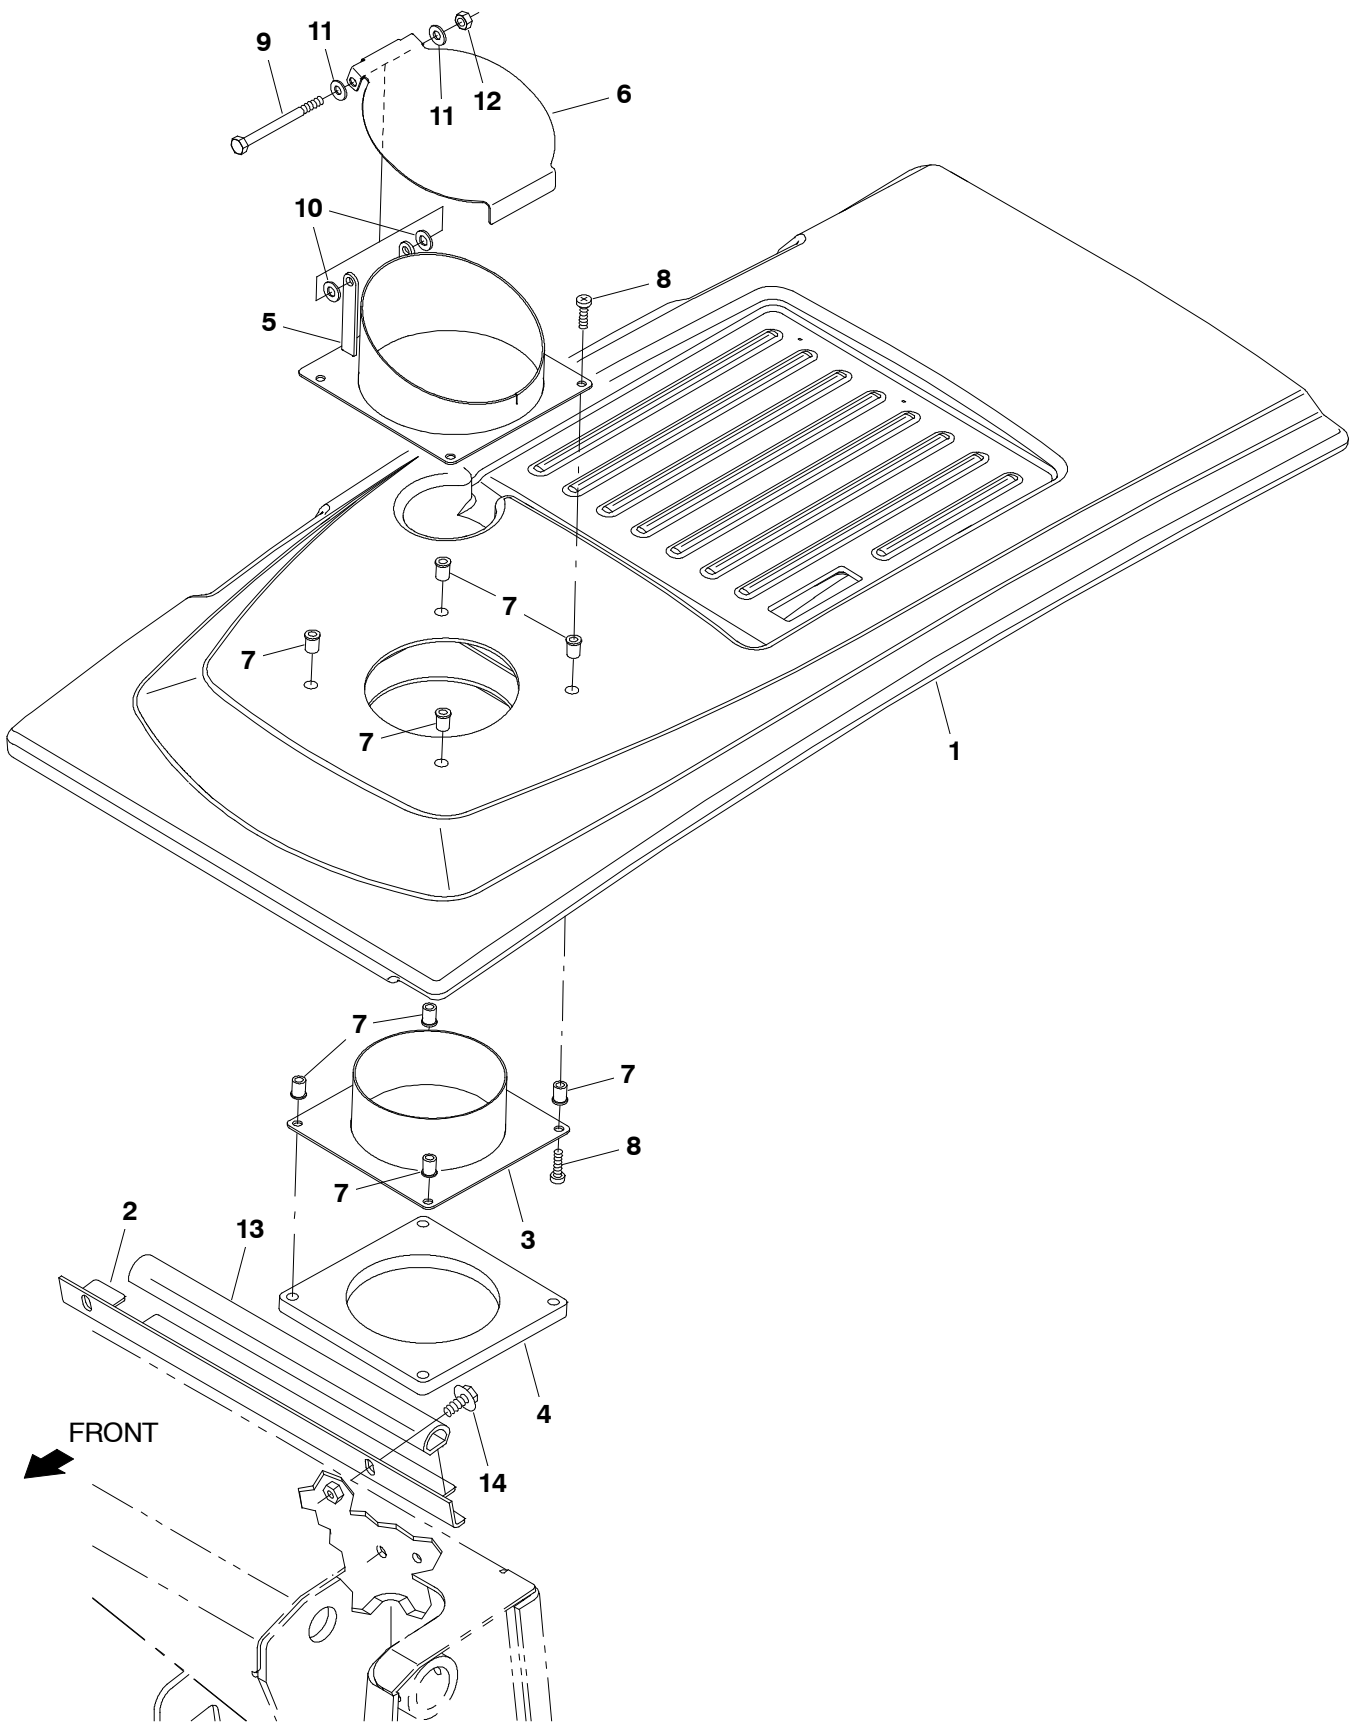


Fig. 29 - HEPA Filter Exhaust Cover Group (No. Amer. Only)

Ref.	Part No.	Serial Number	Description	Qty.
1	1239318	(006501-	) Cover, Rm- Cptl, Trimmed, Re- Work	1
2	1235750	(006501-	) Bracket, Angle, Lintel	1
3	1234409	(006501-	) Bracket Wldt, Tube Outlet [Gen li S30]	1
4	1234899	(006501-	) Gasket, Foam Seal, Hepa Exhaust [S30]	1
5	1235630	(006501-	) Bracket Wldt, Exhaust, Hepa [Gen li S30]	1
6	1235628	(006501-	) Flap, Outlet, Hepa, [Gen li S30]	1
7	314050	(006501-	) Nut, Isolator, 10- 32, .015- .192	8
8	140841	(006501-	) Screw, Pan, Phl, 10- 32 X 0.62, Ss	8
9	48419	(006501-	) Screw, Hex, .25- 20 X 3.50, G5	1
10	43454	(006501-	) Washer, Flat, 0.34b 0.69d .06, Nyl	2
11	01684	(006501-	) Washer, Flat, 0.27b 0.69d .05, Ss	2
12	32981	(006501-	) Nut, Hex, Lock, .25- 20, NI	1
13	1015273	(006501-	) Seal, Afmkt, Bulb, Str, 0.76, 0.93w 02ft	1
14	1036892	(006501-	) Screw, Hex, M6 X 1.00 X 25, 9.8, Sems	2


Fig. 30 - HEPA Filter Electrical Group (No. Amer. Only)

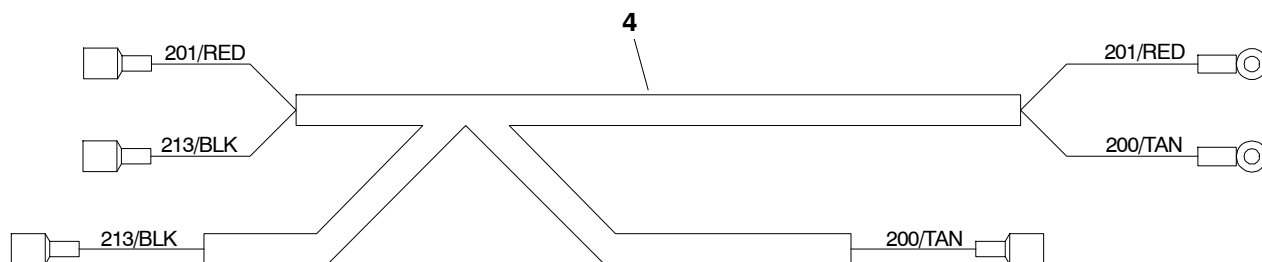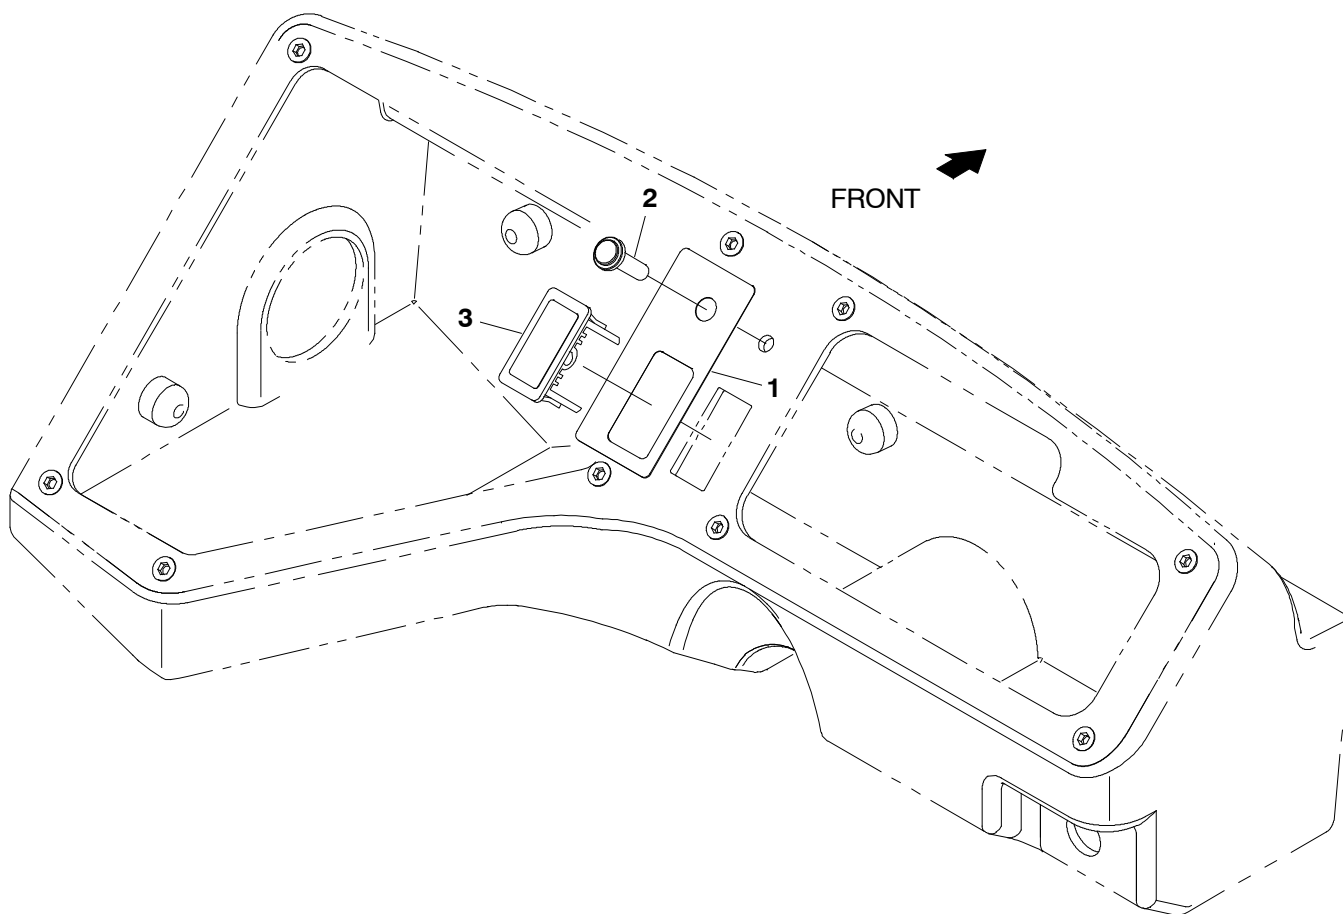

356801

Ref.	Part No.	Serial Number	Description	Qty.
1	1237915	(006501-	) Label Set, Fltr, Hepa [S20&S30]	1
2	1232342	(006501-	) Light, Led, .312d, 12 Vdc [Tri- Color]	1
3	398501	(006501-	) Plug, Hole, Rt, Rocker Switch, .87 X 1.7	1
4	1239358	(006501-	) Harness, Light, Ind, Hepa Filter [S30]	1

Fig. 31 - Fire Extinguisher Kit

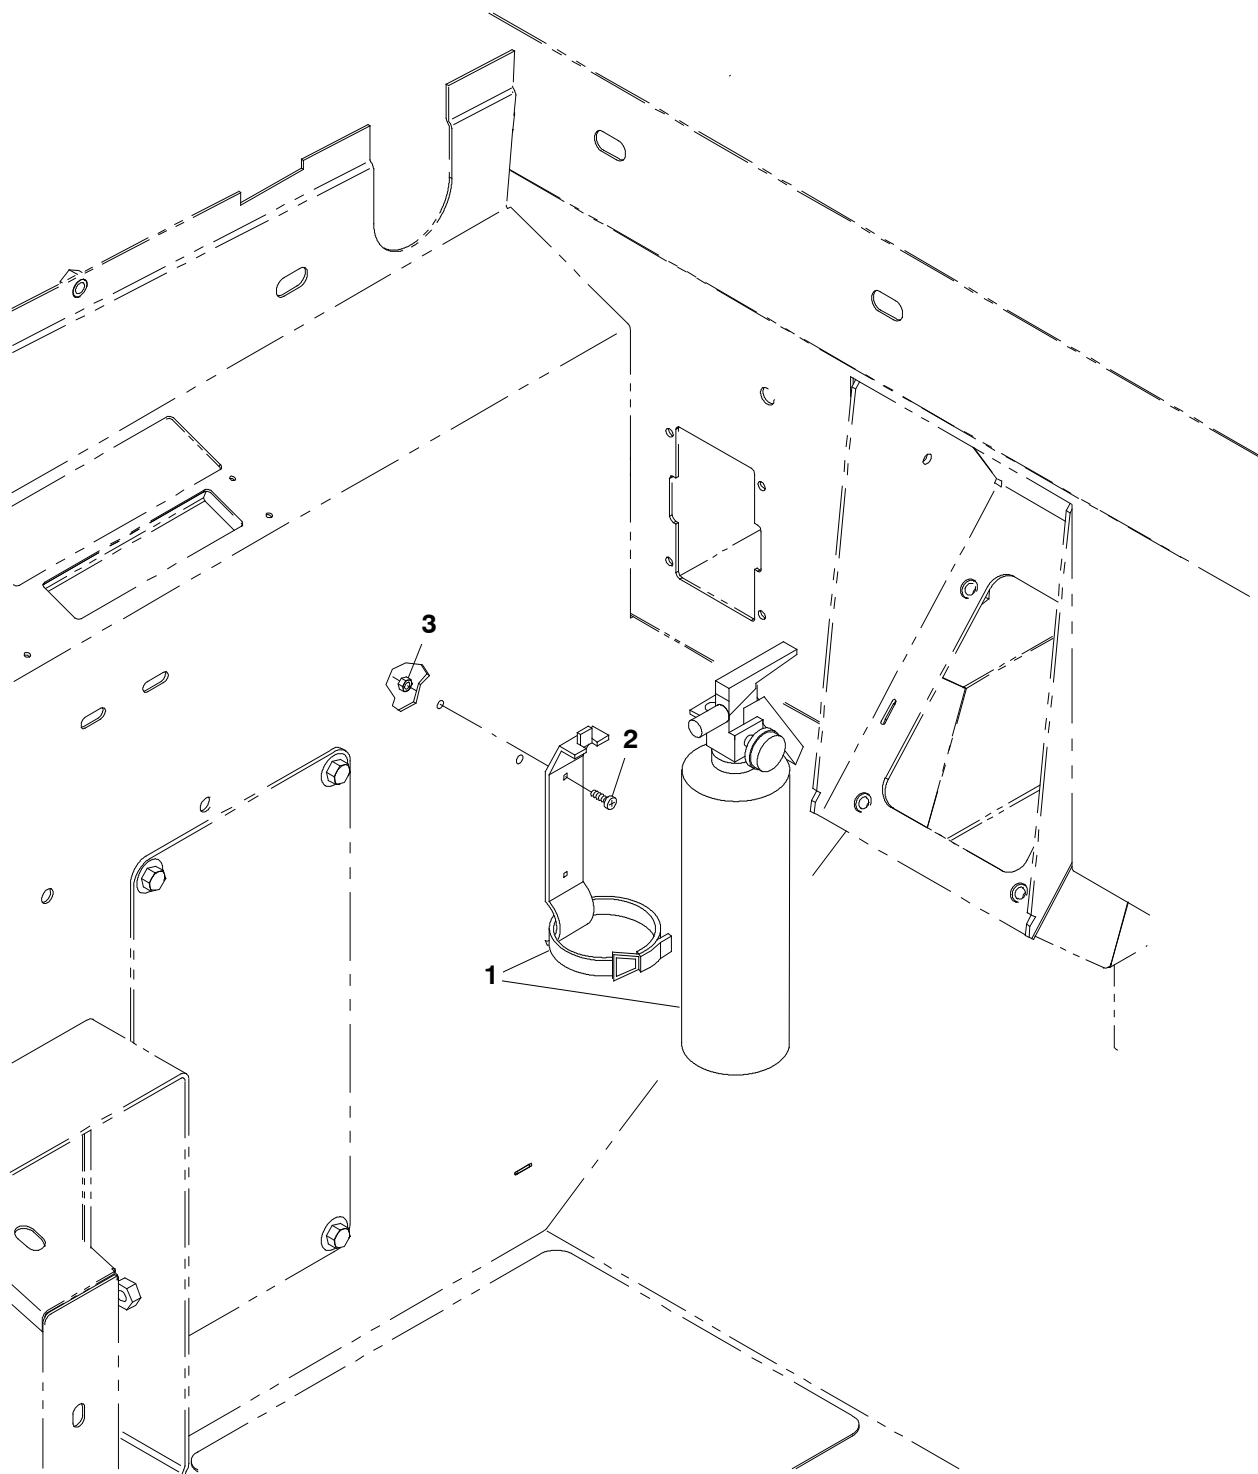

354747

Ref.	Part No.	Serial Number	Description	Qty.
▽	9003933	(006501-	) Extinguisher Kit, Fire, Ci [S30]	1
▲	1 25312	(006501-	) Extinguisher, Fire, 2.5 Lb Dry	1
▲	2 06933	(006501-	) Screw, Pan, M5 X 0.80 X 16, 4.8	2
▲	3 06549	(006501-	) Nut, Hex, Lock, M5 X 0.80, NI	2

Fig. 32 - Documentation Group

Ref.	Part No.	Serial Number	Description	Qty.
	9004087	(006501-	) Manual, Oprtr [S30, Dsl En Na]	1
	9004088	(006501-	) Manual, Oprtr [S30, Dsl Es Na]	1
	9004089	(006501-	) Manual, Oprtr [S30, Dsl Fr Na]	1
	9004090	(006501-	) Manual, Oprtr [S30, Dsl Jp]	1
	9004667	(006501-	) Manual, Oprtr [S30, Dsl Cn]	1
	9004668	(006501-	) Manual, Oprtr [S30, Dsl Pt, Br]	1
	9004645	(006501-	) Manual, Oprtr [S30 Dsl, Cz, Ce]	1
	9004646	(006501-	) Manual, Oprtr [S30 Dsl, De, Ce]	1
	9004647	(006501-	) Manual, Oprtr [S30 Dsl, Dk, Ce]	1
	9004648	(006501-	) Manual, Oprtr [S30 Dsl, En, Ce]	1
	9004649	(006501-	) Manual, Oprtr [S30 Dsl, Es, Ce]	1
	9004650	(006501-	) Manual, Oprtr [S30 Dsl, Fi, Ce]	1
	9004651	(006501-	) Manual, Oprtr [S30 Dsl, Fr, Ce]	1
	9004652	(006501-	) Manual, Oprtr [S30 Dsl, Gr, Ce]	1
	9004653	(006501-	) Manual, Oprtr [S30 Dsl, Hu, Ce]	1
	9004654	(006501-	) Manual, Oprtr [S30 Dsl, It, Ce]	1
	9004655	(006501-	) Manual, Oprtr [S30 Dsl, Nl, Ce]	1
	9004656	(006501-	) Manual, Oprtr [S30 Dsl, No, Ce]	1
	9004657	(006501-	) Manual, Oprtr [S30 Dsl, Pl, Ce]	1
	9004658	(006501-	) Manual, Oprtr [S30 Dsl, Pt, Ce]	1
	9004659	(006501-	) Manual, Oprtr [S30 Dsl, Ru, Ce]	1
	9004660	(006501-	) Manual, Oprtr [S30 Dsl, Se, Ce]	1
	9004661	(006501-	) Manual, Oprtr [S30 Dsl, Tr, Ce]	1
	9004662	(006501-	) Manual, Oprtr [S30 Dsl, Ee, Ce]	1
	9004663	(006501-	) Manual, Oprtr [S30 Dsl, Lv, Ce]	1
	9004664	(006501-	) Manual, Oprtr [S30 Dsl, Lt, Ce]	1
	9004665	(006501-	) Manual, Oprtr [S30 Dsl, Sk, Ce]	1
	9004666	(006501-	) Manual, Oprtr [S30 Dsl, Sl, Ce]	1
	9004727	(006501-	) Manual, Oprtr [S30 Dsl, Bg, Ce]	1
	9004728	(006501-	) Manual, Oprtr [S30 Dsl, Ro, Ce]	1
	9011491	(006501-	) Manual, Oprtr [S30, Dsl Hr, Ce]	1
	9013315	(006501-	) Manual, Parts [S30, Dsl En]	1
	9004086	(006501-	) Manual, Service [S30 EN]	1
	84660	(006501-	) Manual, Eng [Kubo, V1505e]	1
	9008178	(006501-	) Video, Oprtr, Dvd [S30 En Es Fr]	1
	9013317	(006501-	) Instr, Maint, Wall Chart (ONLINE ONLY)	1



To view, print, order, download the latest Parts manual, other language Operator manuals, and Use and Care Guides (wall charts) visit:

www. Tennantco.com/manual

SECTION 4

Contents	Page
Fig. 1 - Hydraulic Steering Valve Breakdown, 1024260	4- 2
Fig. 2 - Hydraulic Valve Breakdown, 1040091	4- 4
Fig. 3 - Hydraulic Valve Breakdown, 1034671	4- 6
Fig. 4 - AC and Heater Box Breakdown, 1067918	4- 8
Fig. 5 - Hydraulic Motor Breakdown, 1054901	4- 10
Fig. 6 - Hydraulic Piston Pump Breakdown, 1054905	4- 12
Fig. 7 - Hydraulic Piston Pump Breakdown, 1029255	4- 14
Fig. 8 - Hydraulic Piston Pump Breakdown, 1029255	4- 16
Fig. 9 - Hydraulic Manual Control Breakdown, 74273	4- 18
Fig. 10 - Seat Breakdown, 9018735	4- 20
Fig. 11 - Hydraulic Flow Divider Valve Breakdown, 1033685	4- 22

Fig. 1 - Hydraulic Steering Valve Breakdown, 1024260

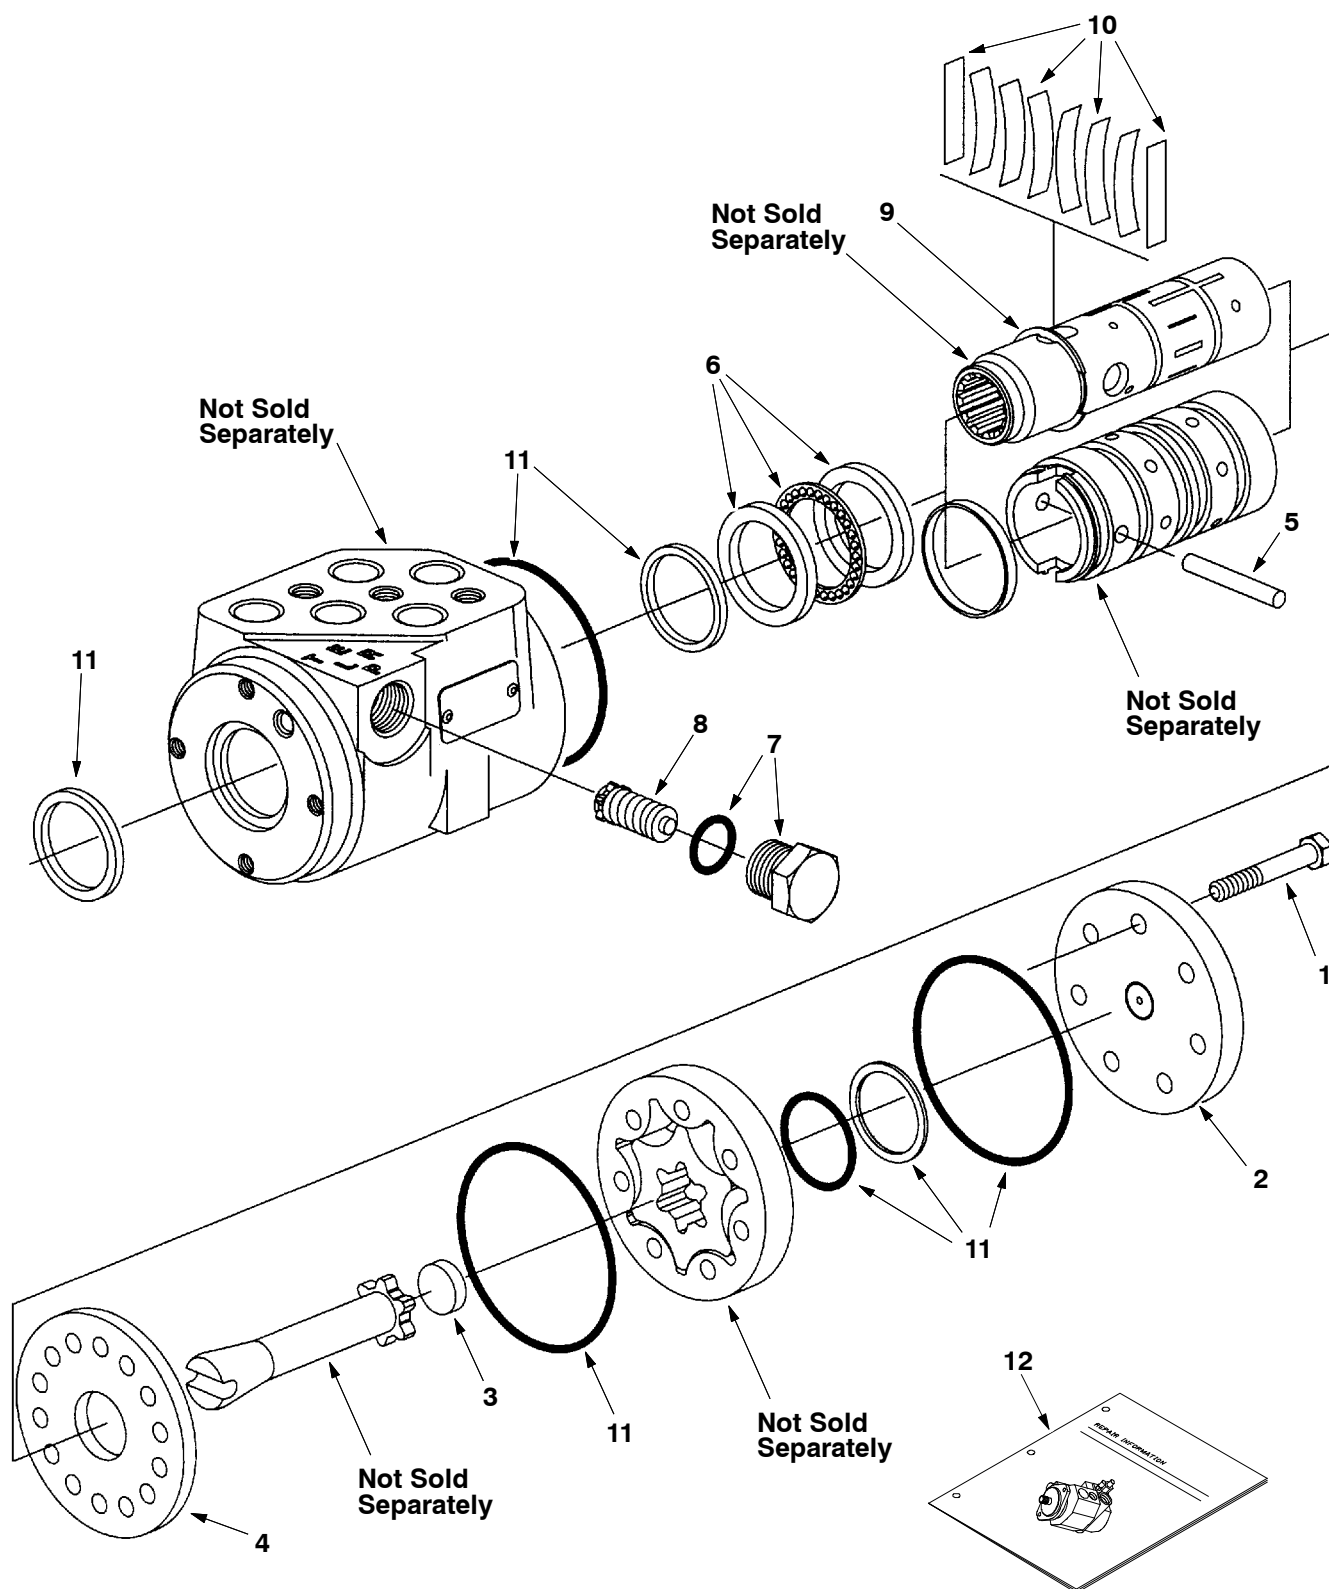


Fig. 1 - Hydraulic Steering Valve Breakdown, 1024260

	Ref.	Part No.	Serial Number	Description	Qty.
▽		1024260	(000000-	) Steer- Control, Hyd05, 06.1 2030	1
▲	1	74183	(000000-	) Screw, Valve, Steering	7
▲	2	74185	(000000-	) Cap, End, Valve, Steering	1
▲	3	74193	(000000-	) Spacer, Valve, Steering	1
▲	4	74222	(000000-	) Plate, Wear, Steering Valve	1
▲	5	74232	(000000-	) Pin, Valve, Steering	1
▲	6	21935	(000000-	) Bearing Kit [CI]	1
▲	7	21933	(000000-	) Plug Assy [CI]	1
▲	8	21934	(000000-	) Valve Assy, Relief [CI]	1
▲	9	74243	(000000-	) Ring, Retainer, Steering Valve	1
▲	10	74196	(000000-	) Spring Kit, Scu [CI]	1
▲	11	74244	(000000-	) Seal Kit, Steering [CI]	1
▲	12	74245	(000000-	) Instr, Valve, Steering, Repair	1

Fig. 2 - Hydraulic Valve Breakdown, 1040091

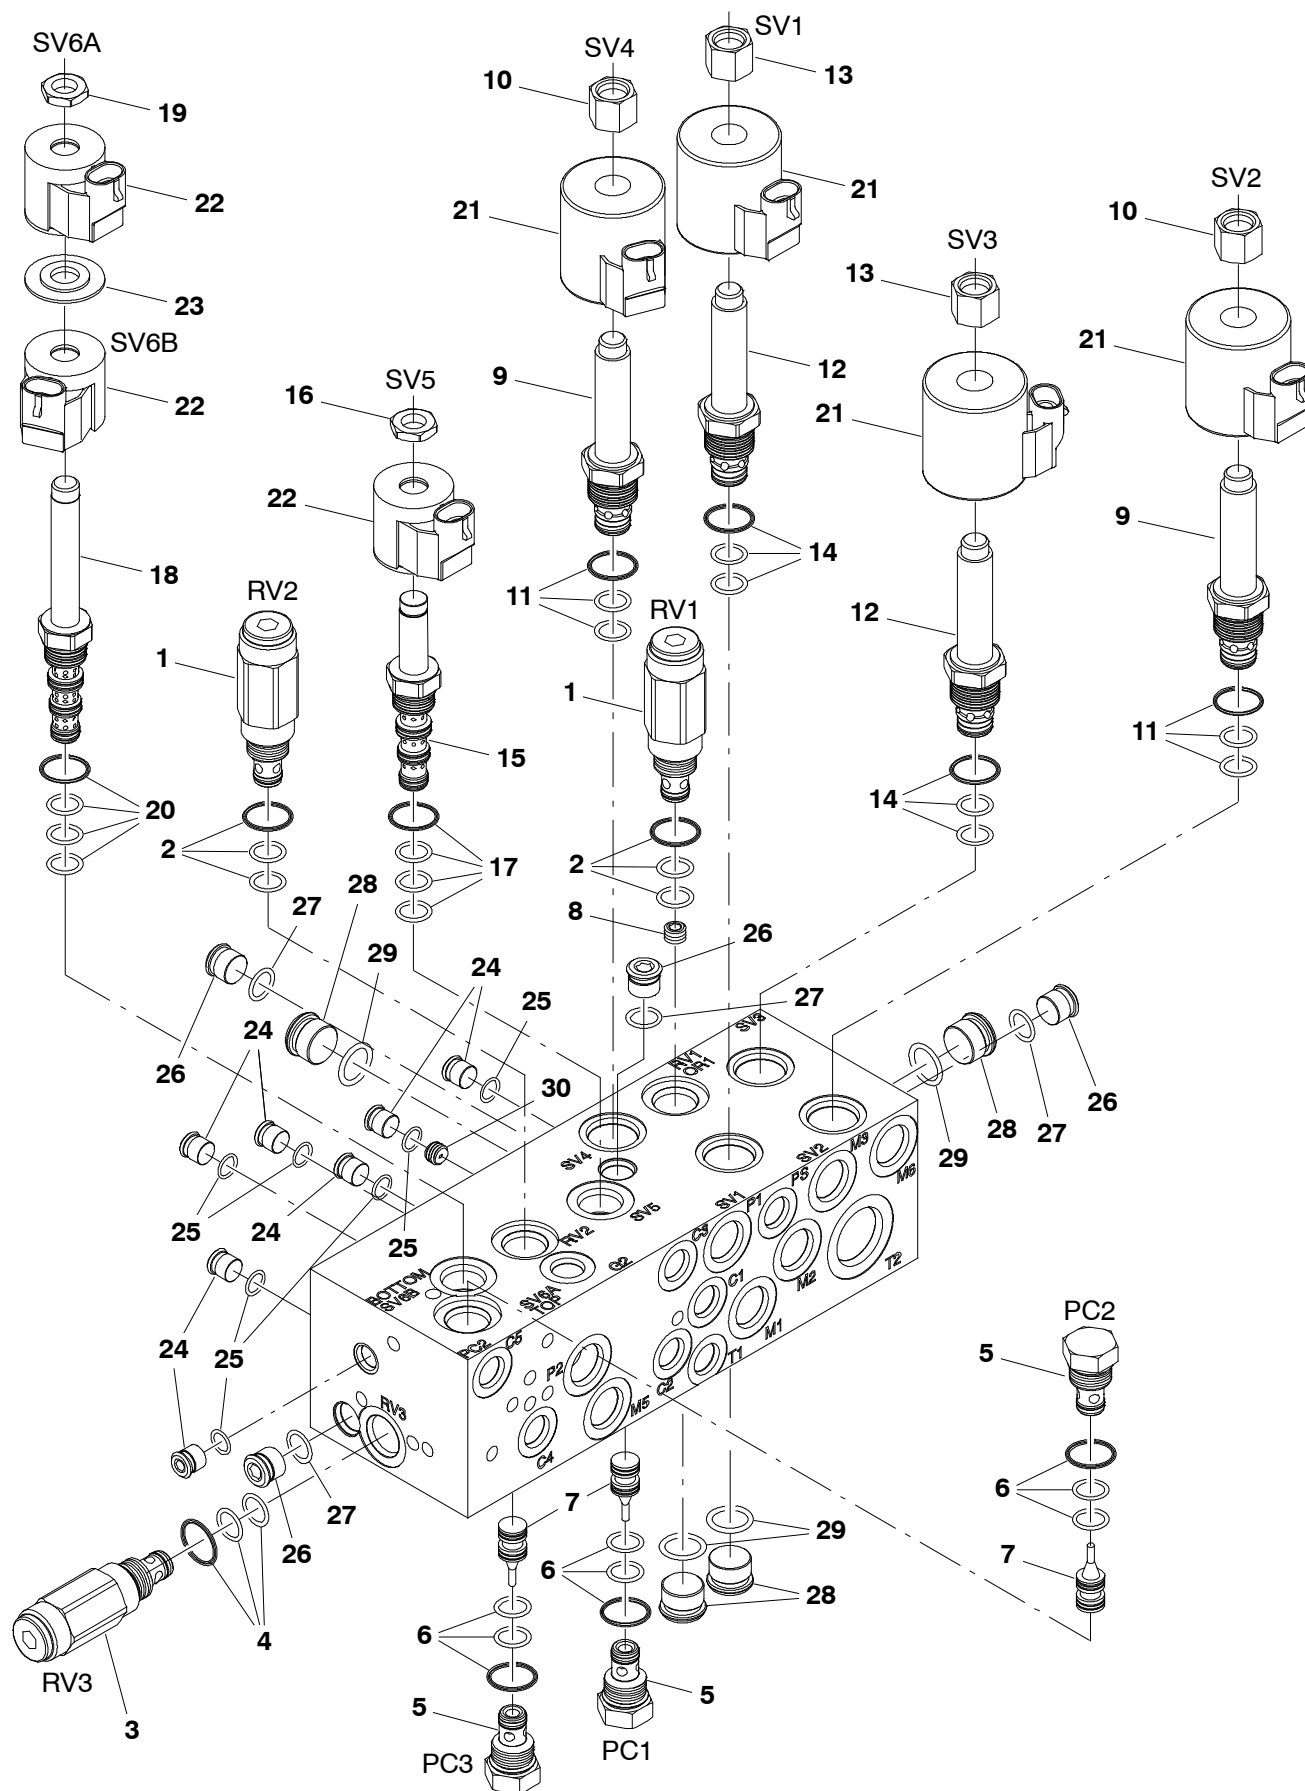


Fig. 2 - Hydraulic Valve Breakdown, 1040091

	Ref.	Part No.	Serial Number	Description	Qty.
▽		1040091	(000000-	) Valve, Hyd, Solenoid, 12vdc [06s]	1
▲▽	1	373691	(000000-	) Valve, Relief	2
▲▲	2	373647	(000000-	) Seal Kit, Cartridge	1
▲▽	3	373692	(000000-	) Valve, Relief	1
▲▲	4	373647	(000000-	) Seal Kit, Cartridge	1
▲▽	5	373656	(000000-	) Valve, Check	3
▲▲	6	373647	(000000-	) Seal Kit, Cartridge	1
▲	7	373658	(000000-	) Spool, Pilot, Hyd	3
▲	8	373694	(000000-	) Plug, Orifice, Valve, Hyd, .040	1
▲▽	9	373663	(000000-	) Valve, Stem, No	2
▲▲	10	373685	(000000-	) Nut, Coil, Nyl Patch	1
▲▲	11	373646	(000000-	) Seal Kit, Cartridge	1
▲▽	12	373690	(000000-	) Valve, Stem, No	2
▲▲	13	373685	(000000-	) Nut, Coil, Nyl Patch	1
▲▲	14	373646	(000000-	) Seal Kit, Cartridge	1
▲▽	15	373657	(000000-	) Stem, Valve, Hyd [4w2p]	1
▲▲	16	373684	(000000-	) Nut, Coil, Nyl Patch	1
▲▲	17	373647	(000000-	) Seal Kit, Cartridge	1
▲▽	18	373637	(000000-	) Valve, Cntrl, Solenoid	1
▲▲	19	373684	(000000-	) Nut, Coil, Nyl Patch	1
▲▲	20	373647	(000000-	) Seal Kit, Cartridge	1
▲	21	373642	(000000-	) Solenoid, #10, 12vdc	4
▲	22	373640	(000000-	) Solenoid, #8, 12vdc	3
▲	23	373639	(000000-	) Spacer, Coil, #8	1
▲▽	24	74098	(000000-	) Fitting, Hyd, Plug, Om04	7
▲▲	25	77003	(000000-	) Seal, Org, .072 X 00.35id #04	1
▲▽	26	13904	(000000-	) Fitting, Plug, Org, #6, Valve [Cec]	4
▲▲	27	77005	(000000-	) Seal, Org, .078 X 00.47id #06	1
▲▽	28	13907	(000000-	) Fitting, Hyd, Plug, Om08	4
▲▲	29	77006	(000000-	) Seal, Org, .087 X 00.64id #08	1
▲	30	373665	(000000-	) Plug, Orifice, Valve, Hyd, .046	1

Fig. 3 - Hydraulic Valve Breakdown, 1034671

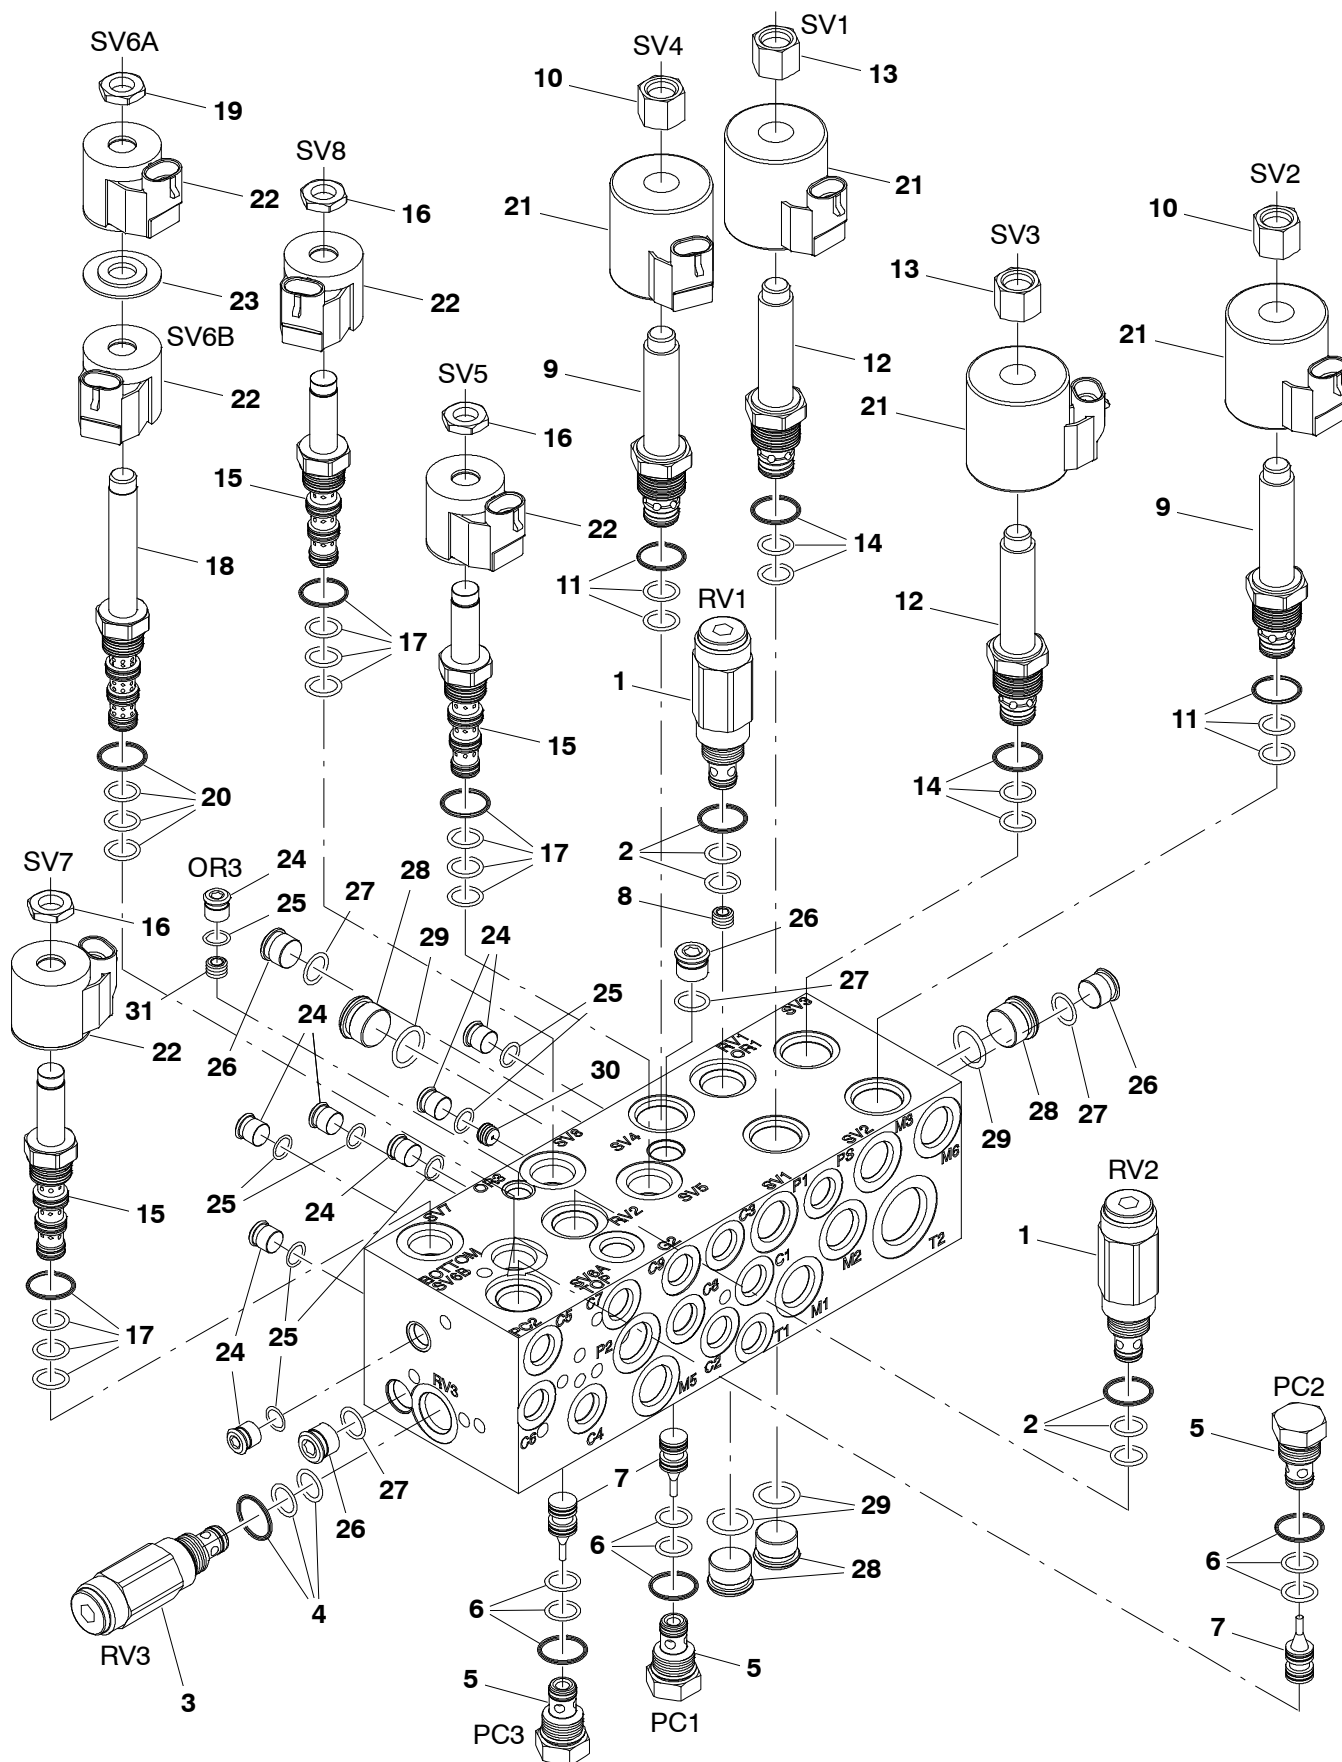


Fig. 3 - Hydraulic Valve Breakdown, 1034671

	Ref.	Part No.	Serial Number	Description	Qty.
▽		1034671	(000000-	) Valve, Hyd, Solenoid, 12vdc [06s]	1
▲▽	1	373691	(000000-	) Valve, Relief	2
▲▲	2	373647	(000000-	) Seal Kit, Cartridge	1
▲▽	3	373692	(000000-	) Valve, Relief	1
▲▲	4	373647	(000000-	) Seal Kit, Cartridge	1
▲▽	5	373656	(000000-	) Valve, Check	3
▲▲	6	373647	(000000-	) Seal Kit, Cartridge	1
▲	7	373658	(000000-	) Spool, Pilot, Hyd	3
▲	8	373694	(000000-	) Plug, Orifice, Valve, Hyd, .040	1
▲▽	9	373663	(000000-	) Valve, Stem, No	2
▲▲	10	373685	(000000-	) Nut, Coil, Nyl Patch	1
▲▲	11	373646	(000000-	) Seal Kit, Cartridge	1
▲▽	12	373690	(000000-	) Valve, Stem, No	2
▲▲	13	373685	(000000-	) Nut, Coil, Nyl Patch	1
▲▲	14	373646	(000000-	) Seal Kit, Cartridge	1
▲▽	15	373657	(000000-	) Stem, Valve, Hyd [4w2p]	3
▲▲	16	373684	(000000-	) Nut, Coil, Nyl Patch	1
▲▲	17	373647	(000000-	) Seal Kit, Cartridge	1
▲▽	18	373637	(000000-	) Valve, Cntrl, Solenoid	1
▲▲	19	373684	(000000-	) Nut, Coil, Nyl Patch	1
▲▲	20	373647	(000000-	) Seal Kit, Cartridge	1
▲	21	373642	(000000-	) Solenoid, #10, 12vdc	4
▲	22	373640	(000000-	) Solenoid, #8, 12vdc	5
▲	23	373639	(000000-	) Spacer, Coil, #8	1
▲▽	24	74098	(000000-	) Fitting, Hyd, Plug, Om04	8
▲▲	25	77003	(000000-	) Seal, Org, .072 X 00.35id #04	1
▲▽	26	13904	(000000-	) Fitting, Plug, Org, #6, Valve [Cec]	4
▲▲	27	77005	(000000-	) Seal, Org, .078 X 00.47id #06	1
▲▽	28	13907	(000000-	) Fitting, Hyd, Plug, Om08	4
▲▲	29	77006	(000000-	) Seal, Org, .087 X 00.64id #08	1
▲	30	373665	(000000-	) Plug, Orifice, Valve, Hyd, .046	1
▲	31	373693	(000000-	) Plug, Orifice, Valve, Hyd, .035	1

Fig. 4 - AC and Heater Box Breakdown, 1067918

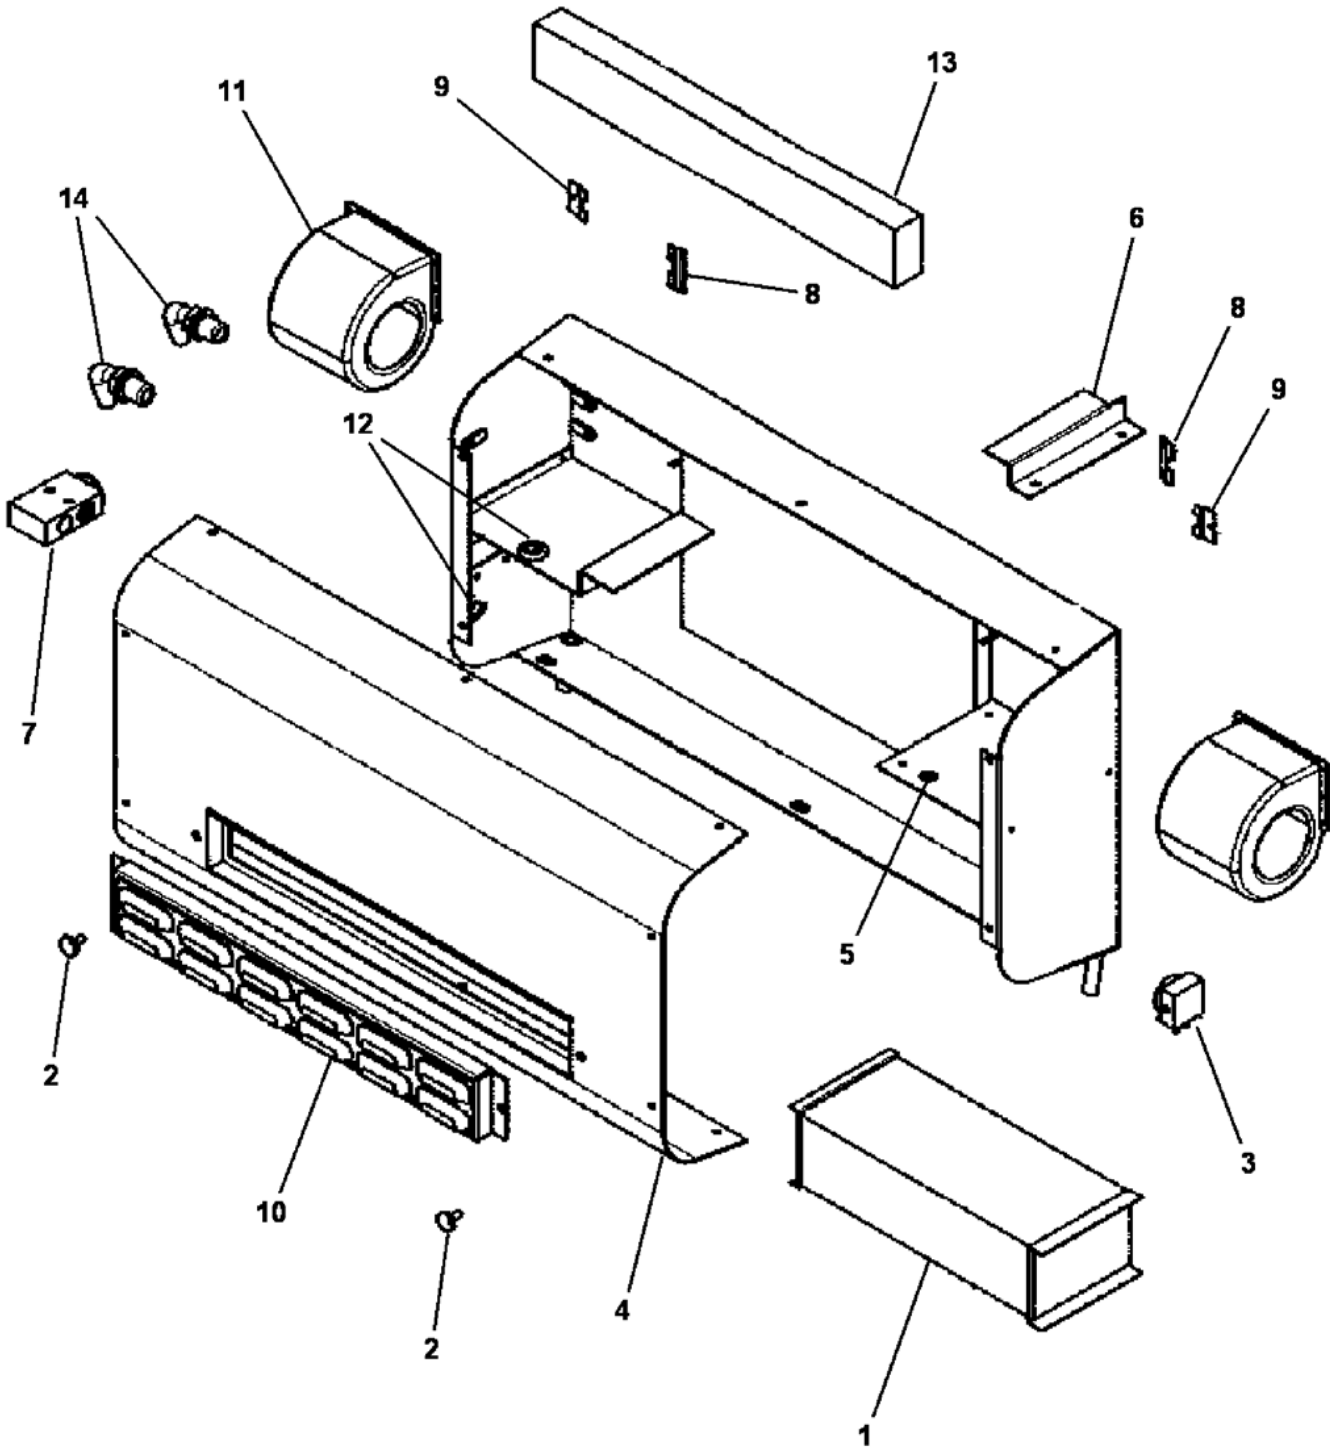


Fig. 4 - AC and Heater Box Breakdown, 1067918

	Ref.	Part No.	Serial Number	Description	Qty.
▽		1067918	(000000-	) Heater & A/C Assy, W/Fan	1
▲	1	9004590	(000000-	) Coil, Heater / Evaporator	1
▲	2	9004591	(000000-	) Knob	2
▲	3	9004592	(000000-	) Thermostat, Heater/Air	1
▲	4	9004593	(000000-	) Cover	1
▲	5	9004594	(000000-	) Grommet, Rbr, .25Id .375Od	1
▲	6	9004595	(000000-	) Bracket, Coil, Mtg	1
▲	7	9004596	(000000-	) Valve, Expansion	1
▲	8	9004597	(000000-	) Clip, Keeper, Blower Mtg	2
▲	9	9004598	(000000-	) Clip, Keeper, Blower Mtg	2
▲	10	9004599	(000000-	) Cover, Access	1
▲	11	9004600	(000000-	) Blown, Fan, Motor	2
▲	12	9004601	(000000-	) Grommet, Rbr, .50Id 1.0Od	2
▲	13	9004602	(000000-	) Filter	1
▲	14	9004603	(000000-	) Fitting, E90, Bm10/Pm08	2

Fig. 5 - Hydraulic Motor Breakdown, 1054901

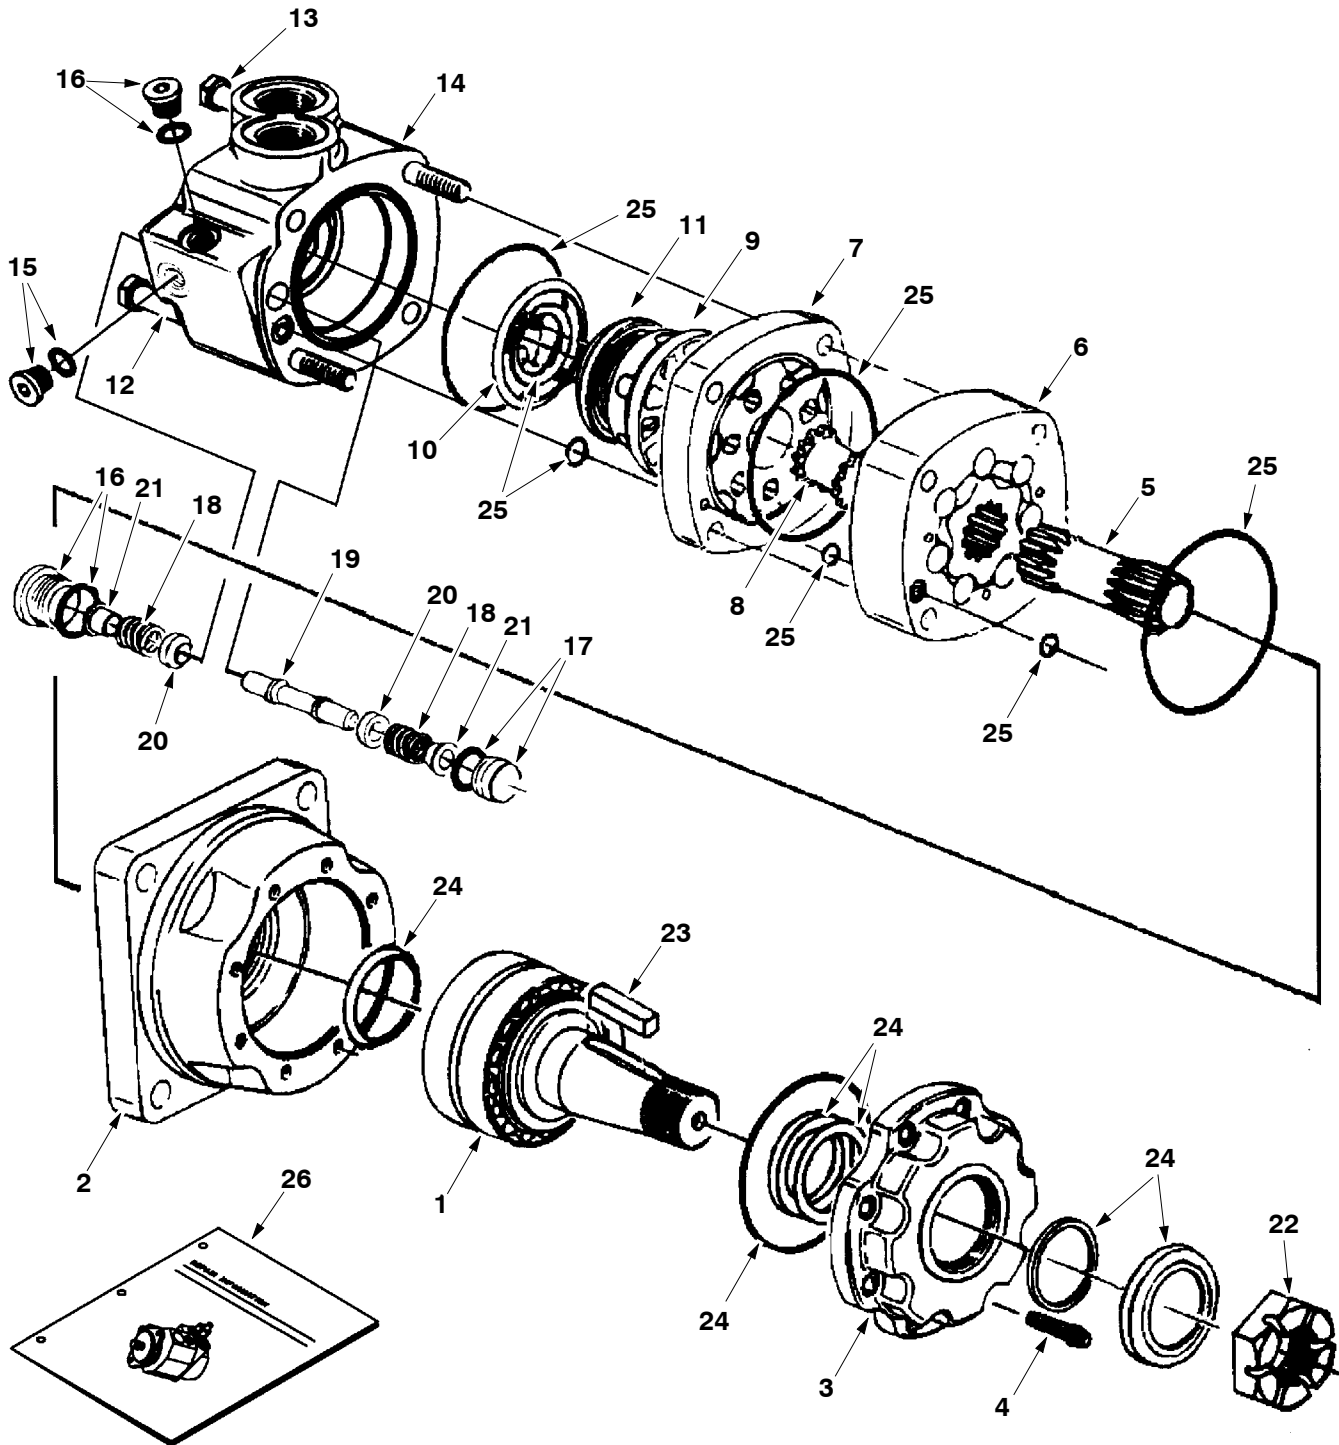


Fig. 5 - Hydraulic Motor Breakdown, 1054901

	Ref.	Part No.	Serial Number	Description	Qty.
▽		1054901	(000000-	) Motor, Hyd, Gear, Int 17.1 Bi- dir 3000	1
▲	1	74165	(000000-	) Shaft, Motor, Hyd	1
▲	2	74166	(000000-	) Housing, Brg, Motor, Hyd	1
▲	3	74167	(000000-	) Retainer, Motor, Hyd	1
▲	4	74168	(000000-	) Screw, Cap, Motor, Hyd	8
▲	5	373435	(000000-	) Drive, Motor, Hyd	1
▲	6	373436	(000000-	) Geroler, Motor, Hyd	1
▲	7	74122	(000000-	) Plate, Valve, Motor, Hyd	1
▲	8	52405	(000000-	) Valve, Motor, Hyd	1
▲	9	74123	(000000-	) Valve, Motor, Hyd	1
▲	10	34178	(000000-	) Spring, Motor, Hyd	2
▲	11	38968	(000000-	) Ring, Motor, Hyd	1
▲	12	373437	(000000-	) Bolt, Motor, Hyd	3
▲	13	373438	(000000-	) Bolt, Motor, Hyd	1
▲	14	373297	(000000-	) Housing, Valve	1
▲	15	373298	(000000-	) Plug	1
▲	16	373545	(000000-	) Plug, Pump, Hyd, Gear	2
▲	17	373299	(000000-	) Plug	1
▲	18	373291	(000000-	) Spring	2
▲	19	373543	(000000-	) Piston, Pump, Hyd, Gear	1
▲	20	373226	(000000-	) Poppet, Pump, Hyd, Gear	2
▲	21	373236	(000000-	) Sleeve, Dashpo, Pump, Hyd, Gear	2
▲	22	45622	(000000-	) Nut, Motor, Hyd	1
▲	23	45623	(000000-	) Key, Motor, Hyd	1
▲	24	79828	(000000-	) Seal Kit, Shaft [CI]	1
▲	25	33580	(000000-	) Seal Kit, Rear [CI]	1
	26	74249	(000000-	) Instr, Repair, Motor, Hyd, Gear	1

Fig. 6 - Hydraulic Piston Pump Breakdown, 1054905

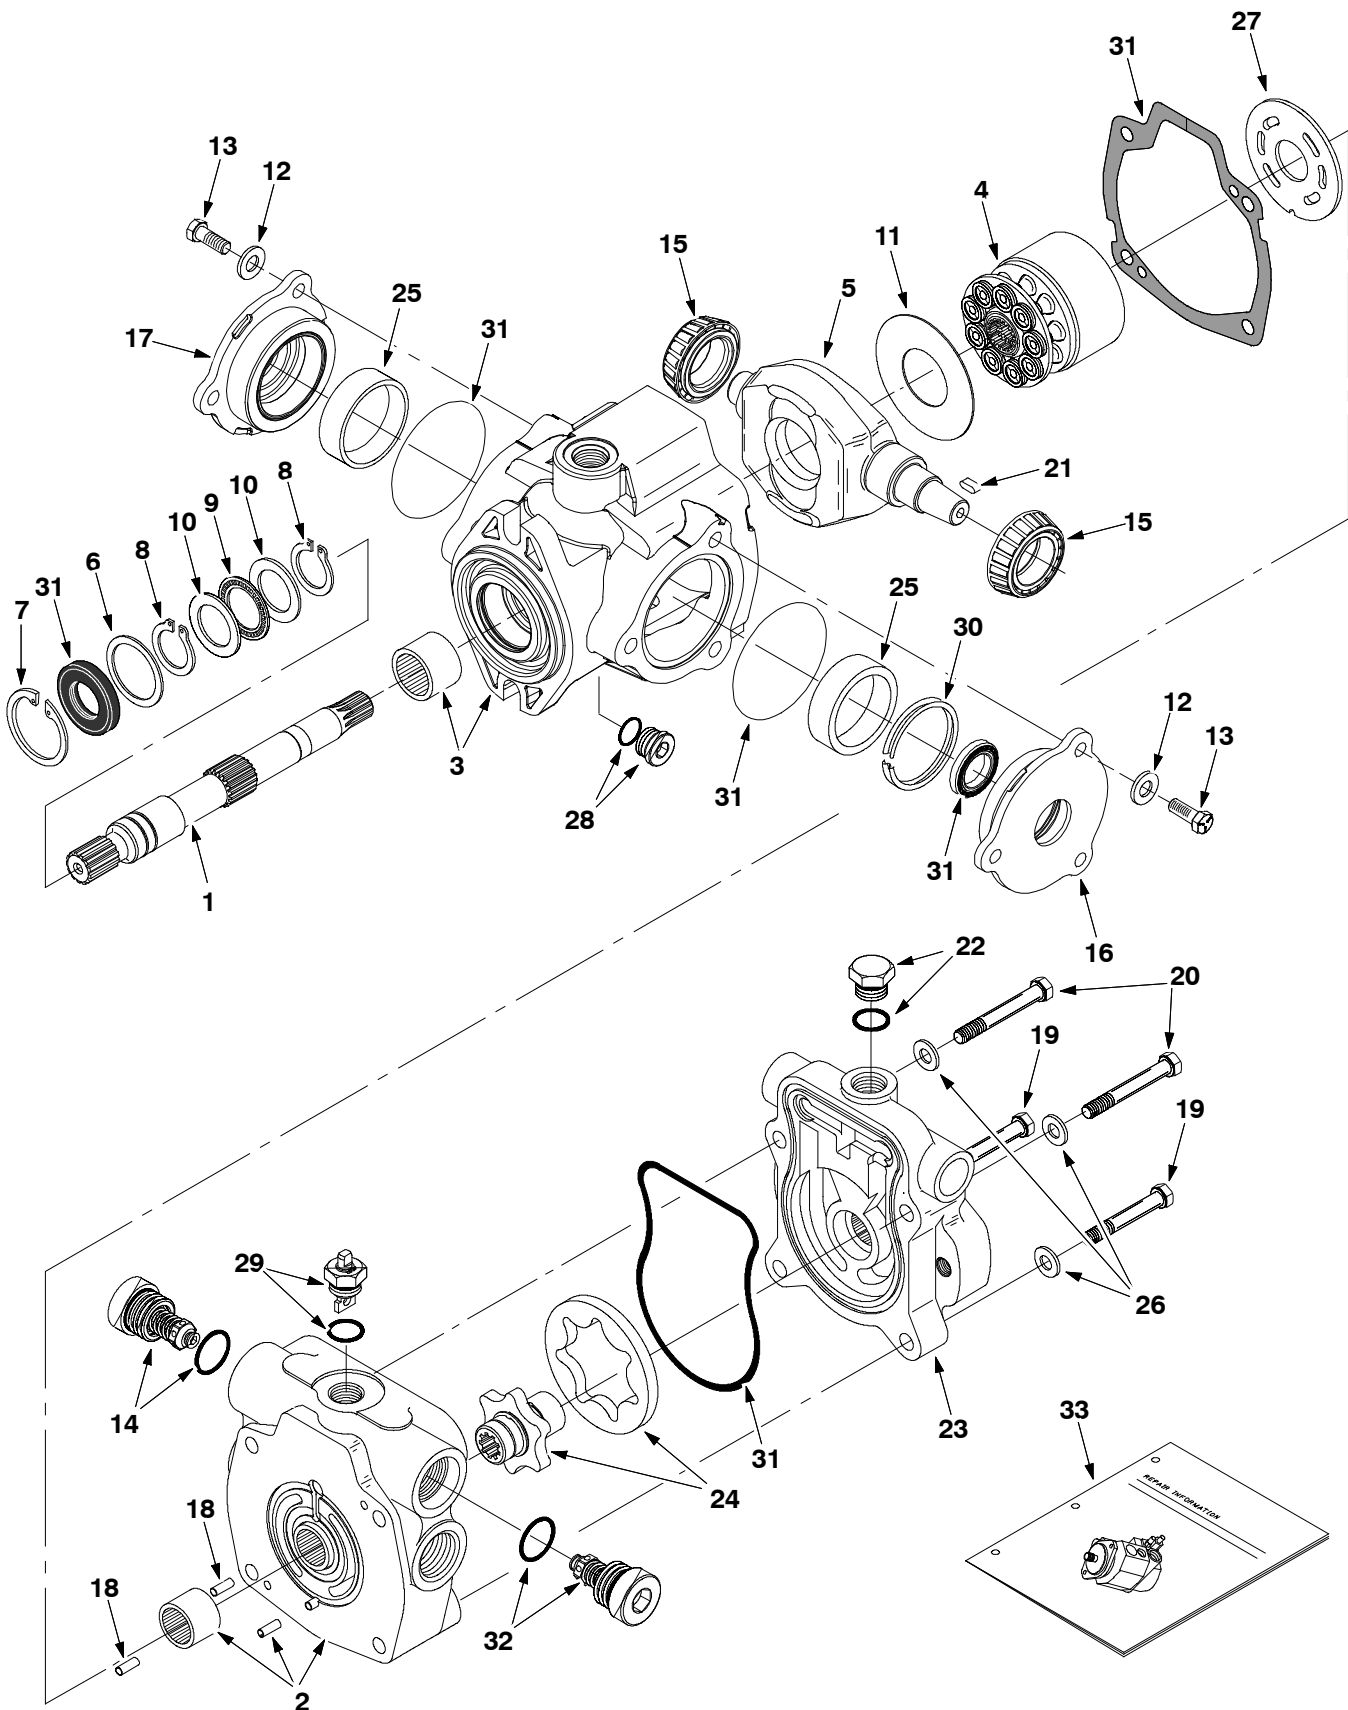


Fig. 6 - Hydraulic Piston Pump Breakdown, 1054905

	Ref.	Part No.	Serial Number	Description	Qty.
▽		1054905	(000000-	) Pump, Hyd, Piston, Var, 1.24 4500, Cw	1
▲	1	373699	(000000-	) Driveshaft, Pump, Hyd	1
▲	2	373430	(000000-	) Cover, End	1
▲	3	373389	(000000-	) Housing	1
▲	4	02706	(000000-	) Kit, Rotating, Pump, Hyd	1
▲	5	373493	(000000-	) Cam	1
▲	6	70096	(000000-	) Washer, Flt, Pump, Hyd	1
▲	7	55926	(000000-	) Ring, Retaining, Pump, Hyd	1
▲	8	373434	(000000-	) Ring, Retaining	2
▲	9	74225	(000000-	) Bearing, Thrust, Pump, Hyd	1
▲	10	74226	(000000-	) Race, Bearing, Pump, Hyd	2
▲	11	373327	(000000-	) Insert, Plate, Cam, Pump, Hyd	1
▲	12	373391	(000000-	) Washer, Pump, Hyd	6
▲	13	373346	(000000-	) Screw, Cap	6
▲	14	74259	(000000-	) Valve, Relief, Pump	1
▲	15	373317	(000000-	) Bearing, Cone, Pump, Hyd	2
▲	16	373393	(000000-	) Plate, Cover	1
▲	17	373394	(000000-	) Plate, Cover	1
▲	18	70100	(000000-	) Pin, Dowel, Pump, Hyd	2
▲	19	373336	(000000-	) Screw, Cap, Pump, Hyd	2
▲	20	373337	(000000-	) Screw, Cap, Pump, Hyd	2
▲	21	74237	(000000-	) Key, Shaft, Pump, Hyd	1
▲	22	13907	(000000-	) Fitting, Plug, O- Ring	1
▲	23	373700	(000000-	) Adaptor Assy, Pump, Hyd	1
▲	24	373701	(000000-	) Gerotor, Pump, Hyd	1
▲	25	373395	(000000-	) Bearing, Cup	2
▲	26	373396	(000000-	) Washer	4
▲	27	74180	(000000-	) Plate, Valve, Pump, Hyd	1
▲	28	13907	(000000-	) Fitting, Plug, O- Ring	1
▲	29	373413	(000000-	) Actuator, Valve, Bypass	1
▲	30	373402	(000000-	) Kit, Shim	1
▲	31	373398	(000000-	) Kit, Seal, Hyd, Pump	1
▲	32	373431	(000000-	) Valve, Relief, 3500psi	1
	33	373429	(000000-	) Instr, Repair, Pump	1

Fig. 7 - Hydraulic Piston Pump Breakdown, 1029255

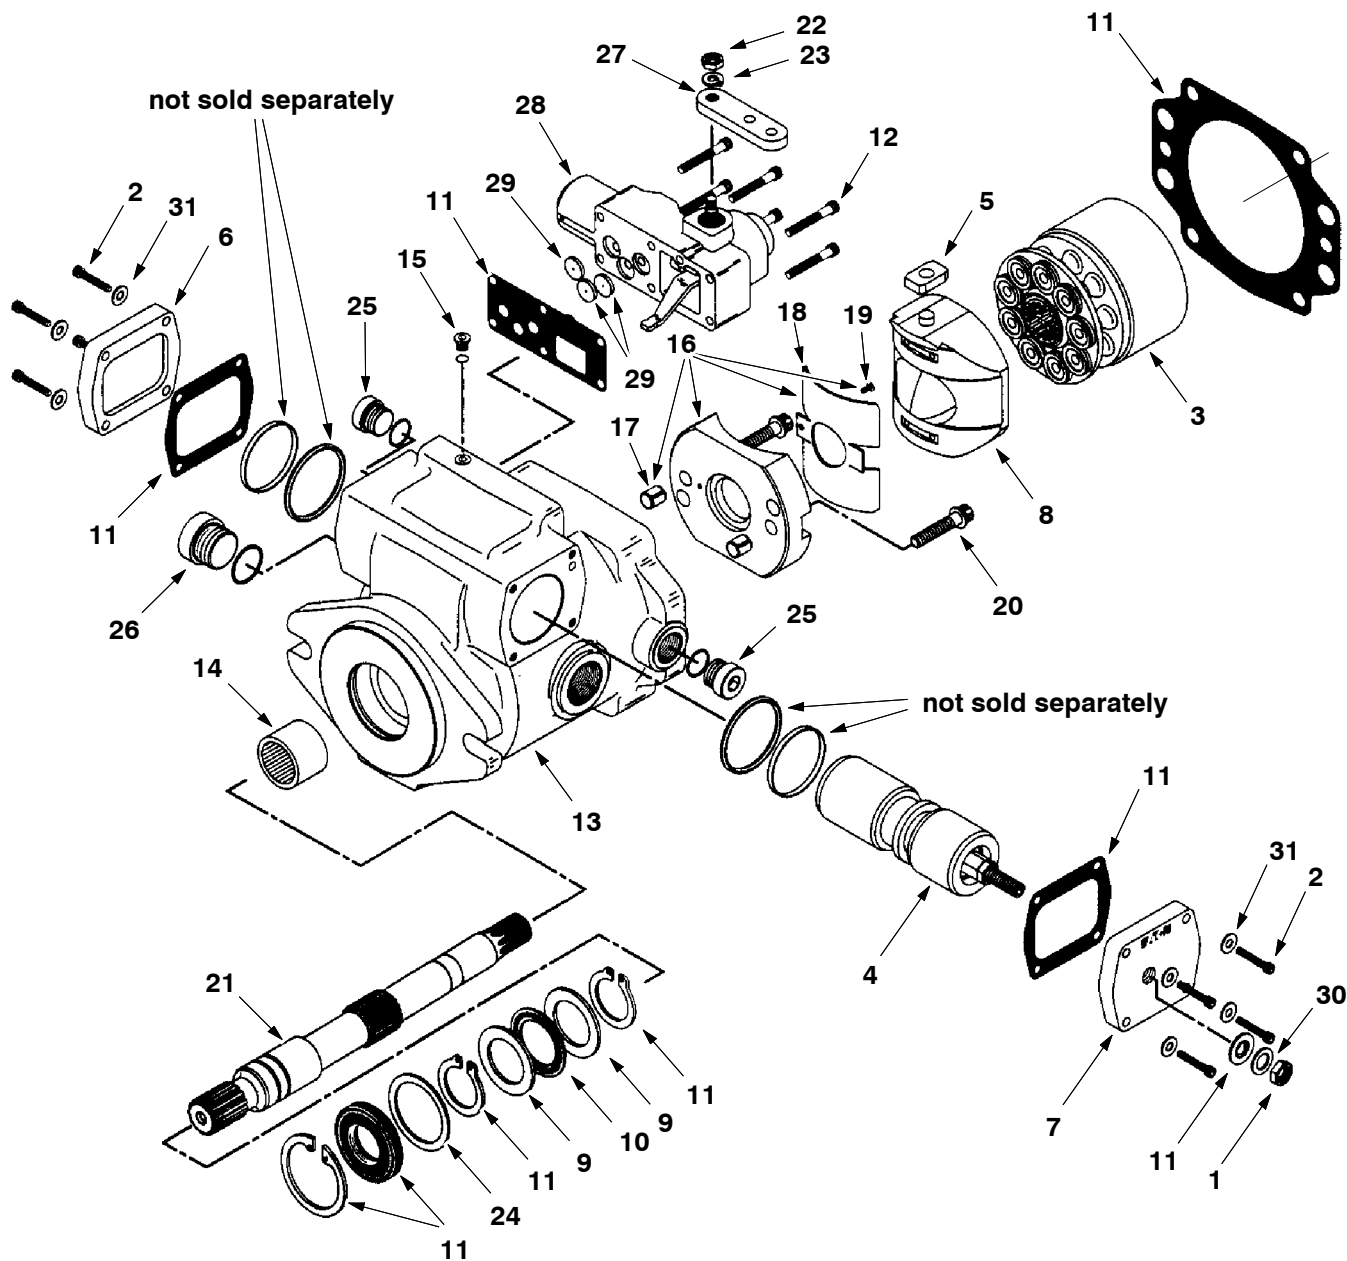


Fig. 7 - Hydraulic Piston Pump Breakdown, 1029255

NOTE: Piston Pump, TENNANT Part Number 1029255, includes Fig. 7, Fig. 8 and Fig. 9.

Ref.	Part No.	Serial Number	Description	Qty.
1	74184	(000000-	) Nut, Jam	1
2	74223	(000000-	) Screw, Cap	8
3	61882	(000000-	) Rotating Kit	1
4	373407	(000000-	) Piston, Servo	1
5	74254	(000000-	) Follower, Piston	1
6	74256	(000000-	) Plate, Cover En	1
7	74257	(000000-	) Plate, Cover En	1
8	74258	(000000-	) Camplate S/A En	1
9	74240	(000000-	) Race, Bearing Ce	2
10	74210	(000000-	) Bearing	1
11	373720	(000000-	) Seal Kit, Pump En	1
12	74262	(000000-	) Screw, Cap En	6
▽	373408	(000000-	) Housing S/A En	1
▲	13 373409	(000000-	) Housing En	1
▲	14 37462	(000000-	) Bearing	1
▲	15 79742	(000000-	) Plug S/A En	1
▽	16 373410	(000000-	) Cradle Sub Assy En	1
▲	17 373218	(000000-	) Dowel Bushing En	2
▲	18 373414	(000000-	) Bushing En	1
▲	19 373415	(000000-	) Cap Screw En	1
20	79747	(000000-	) Cap Screw En	2
21	74265	(000000-	) Shaft, Drive Sp En	1
22	74266	(000000-	) Nut En	1
23	74267	(000000-	) Lockwasher En	1
24	37460	(000000-	) Washer	1
25	13907	(000000-	) Plug #8	2
26	79779	(000000-	) Plug,#12 O- Ring Ph	1
27	74272	(000000-	) Arm, Control En	1
28	74273	(000000-	) Control, Manual (See Breakdowns)	1
29	74276	(000000-	) Orifice, Valve En	3
30	74280	(000000-	) Washer En	1
31	74281	(000000-	) Washer En	8

Fig. 8 - Hydraulic Piston Pump Breakdown, 1029255

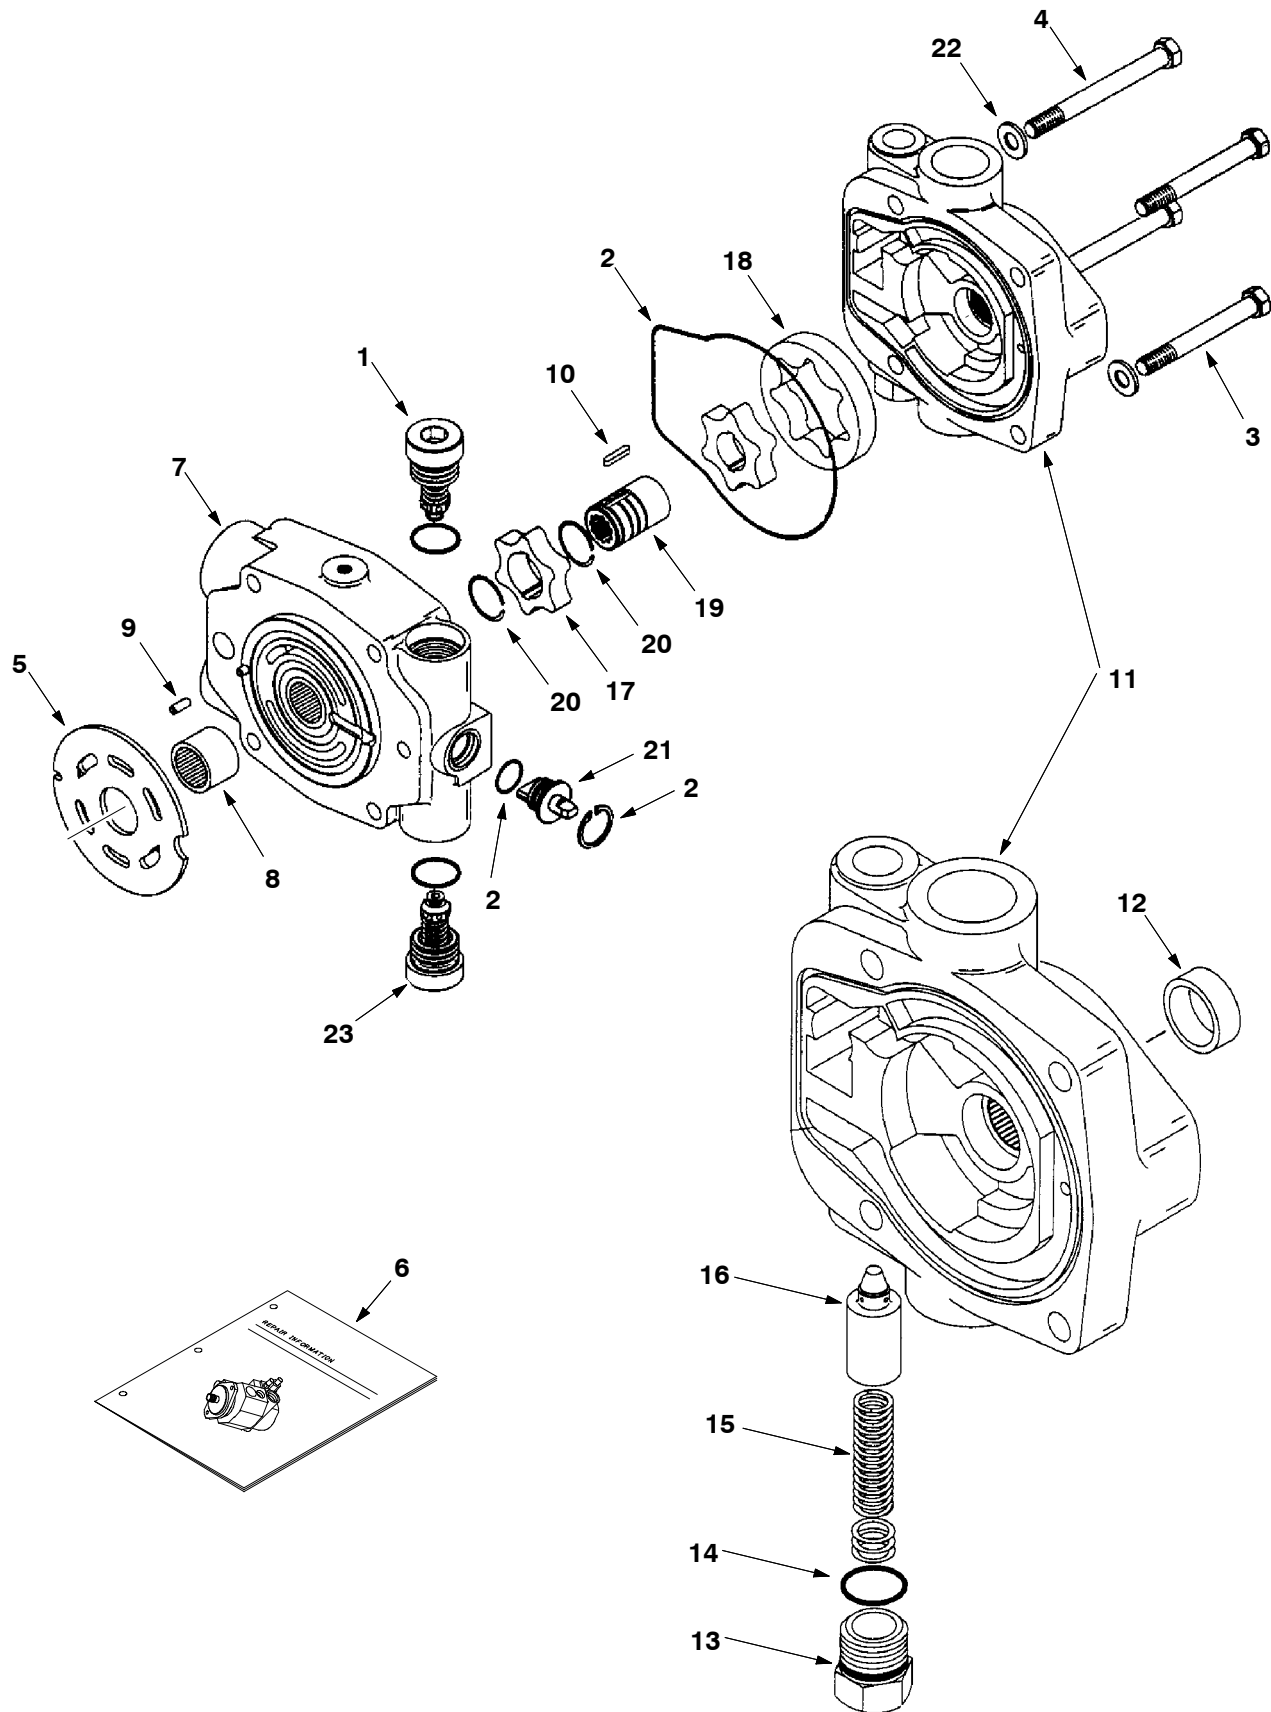


Fig. 8 - Hydraulic Piston Pump Breakdown, 1029255

NOTE: Piston Pump, TENNANT Part Number 1029255, includes .Fig. 7, Fig. 8 and Fig. 9.

Ref.	Part No.	Serial Number	Description	Qty.
1	74259	(000000-	) Relief Valve Sa En	1
2	373720	(000000-	) Seal Kit, Pump En	1
3	373374	(000000-	) Screw, Cap En	2
4	373375	(000000-	) Screw, Cap En	2
5	61886	(000000-	) Valve Plate	1
6	373406	(000000-	) Repair Info,Pmp En	1
▽ 7	373412	(000000-	) Backplate S/A En	1
▲ 8	34159	(000000-	) Bearing	1
▲ 9	79748	(000000-	) Roll Pin En	1
10	373703	(000000-	) Key En	1
▽ 11	74271	(000000-	) Charge Pmp Adap En	1
▲ 12	79749	(000000-	) Bushing En	1
▲ 13	79750	(000000-	) Plug En	1
▲ 14	79751	(000000-	) Shims En	1
▲ 15	79752	(000000-	) Spring En	1
▲ 16	79753	(000000-	) Poppet En	1
17	74274	(000000-	) Geroter,Ring In En	1
18	74275	(000000-	) Geroter,Ring Ot En	1
19	74277	(000000-	) Coupler En	1
20	74278	(000000-	) Ring, Retaining En	2
21	373413	(000000-	) Actuator, Valve En	1
22	74282	(000000-	) Washer En	4
23	373678	(000000-	) Valve, Relief, 3000psi	1

Fig. 9 - Hydraulic Manual Control Breakdown, 74273

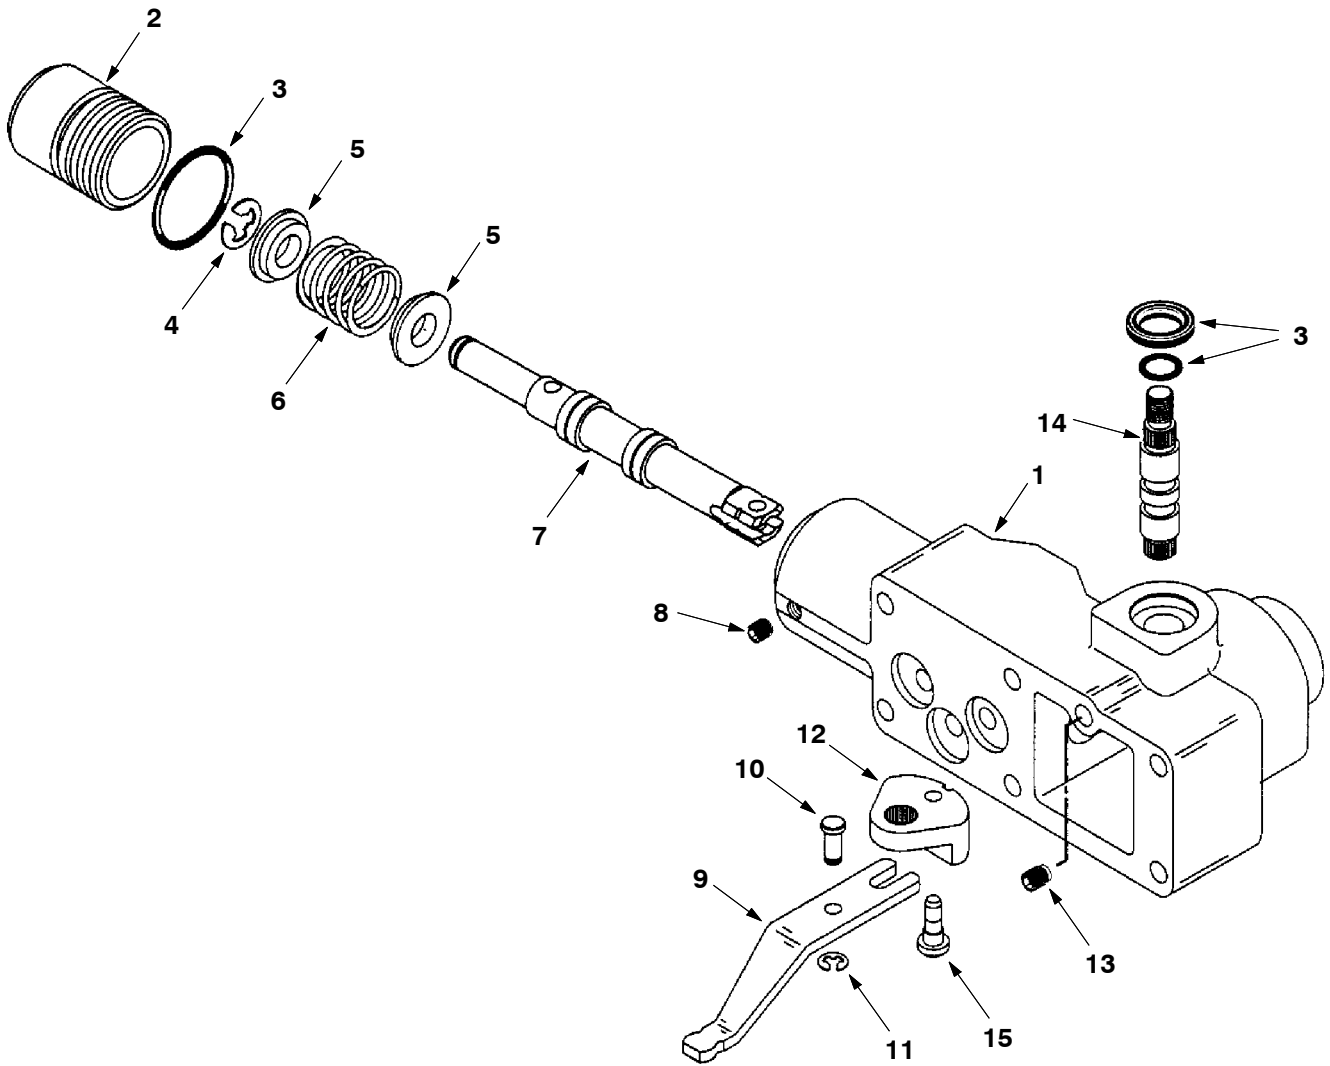


Fig. 9 - Hydraulic Manual Control Breakdown, 74273

NOTE: Piston Pump, TENNANT Part Number 1029255, includes .Fig. 7, Fig. 8 and Fig. 9.

	Ref.	Part No.	Serial Number	Description	Qty.
▽		74273	(000000-	) Control, Manual	1
▲	1	79754	(000000-	) Housing, Control	1
▲	2	79755	(000000-	) Plug	1
▲	3	79776	(000000-	) Seal Kit, Cntrl	1
▲	4	79756	(000000-	) Ring, Retaining	1
▲	5	79757	(000000-	) Spring, Retainer	2
▲	6	79758	(000000-	) Spring, Cntr	1
▲	7	79759	(000000-	) Valve Spool	1
▲	8	79760	(000000-	) Screw, Set	1
▲	9	79761	(000000-	) Link, Feedback	1
▲	10	79762	(000000-	) Dowel Pin	1
▲	11	79763	(000000-	) Ring, Retaining	1
▲	12	79764	(000000-	) Bell Crank	1
▲	13	79765	(000000-	) Screw, Set	1
▲	14	79766	(000000-	) Shaft, Input	1
▲	15	79767	(000000-	) Pin, Headed	1

Fig. 10 - Seat Breakdown, 9018735


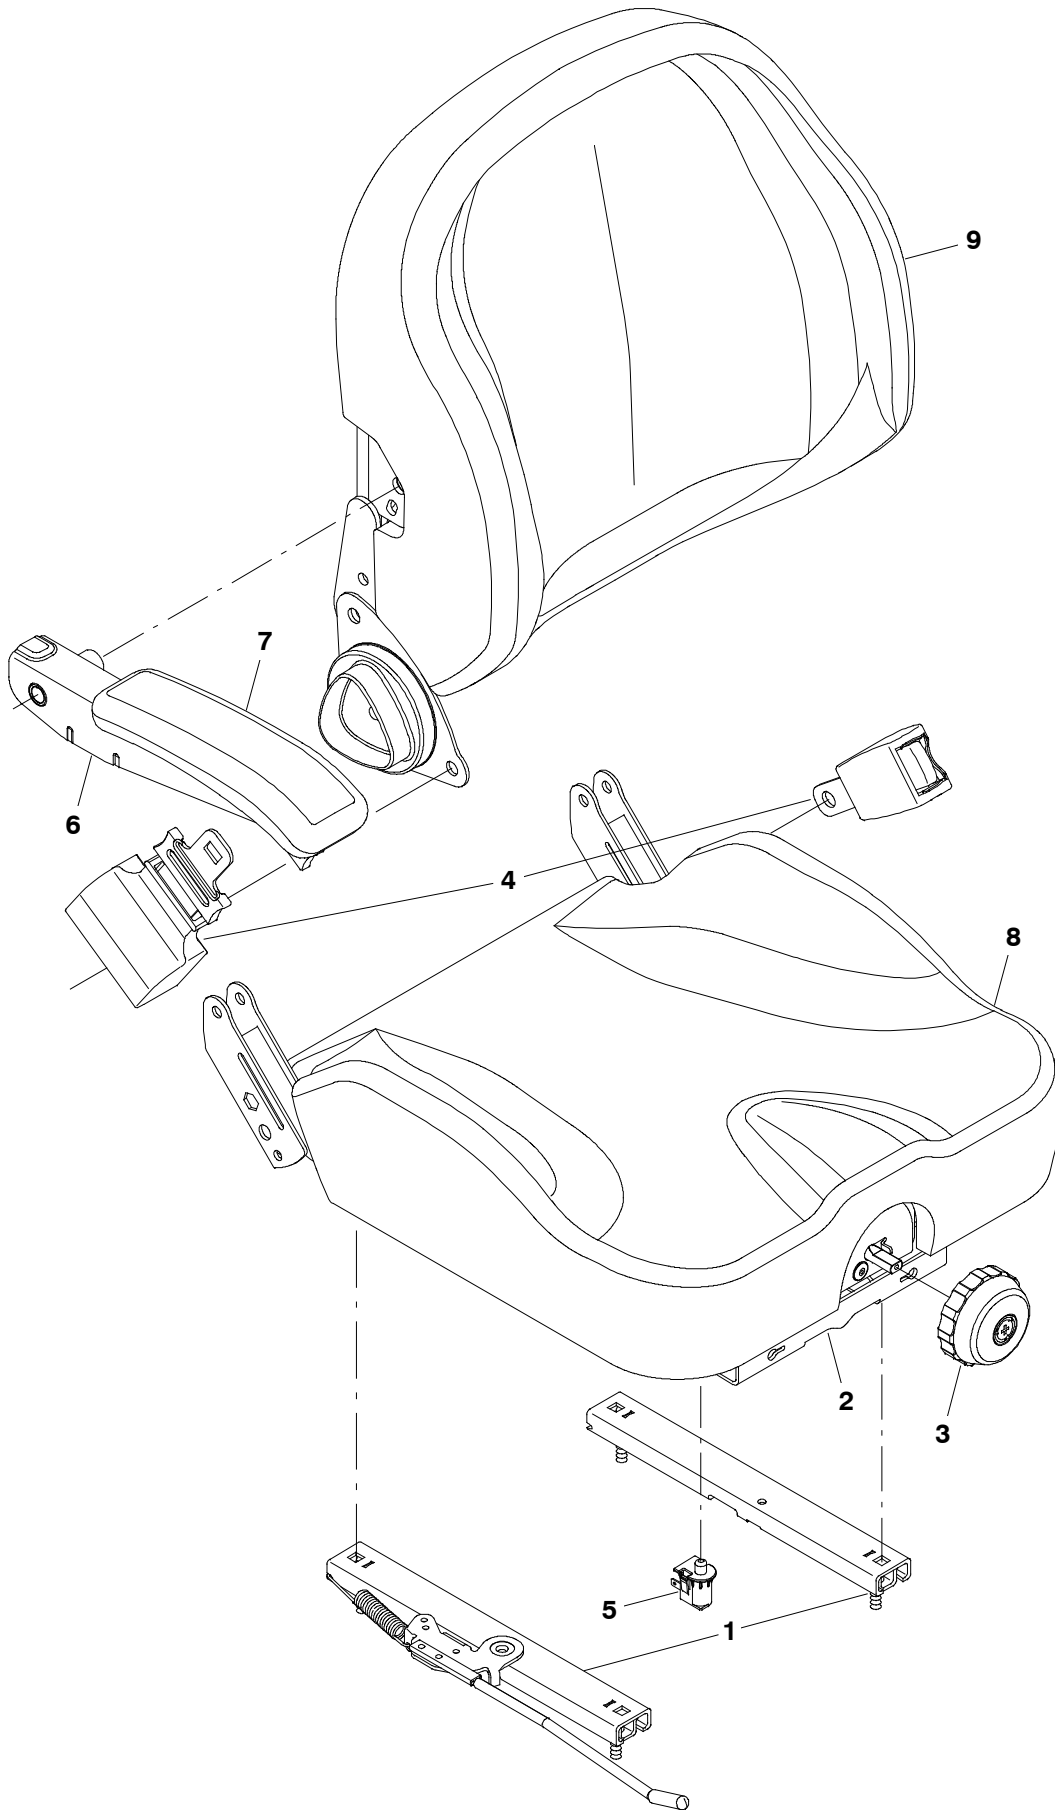


Fig. 10 - Seat Breakdown, 9018735

	Ref.	Part No.	Serial Number	Description	Qty.
▽		9018735	(000000-	) Seat, Deluxe, Replmt [S30]	1
▲	1	9012585	(000000-	) Track Assy, Slide	1
▲	2	9012587	(000000-	) Bellows, Seat	1
▲	3	9012589	(000000-	) Knobs, Adjmt, Weight	1
▲	4	9018734	(000000-	) Seatbelt, Retract, Orange, Replmt	1
▲	5	9012591	(000000-	) Switch, Seat	1
▲	6	9012592	(000000-	) Armrest	1
▲	7	9012593	(000000-	) Pad, Armrest	1
▲	8	9012594	(000000-	) Cover, Cushion	1
▲	9	9012595	(000000-	) Cover, Backrest	1

Fig. 11 - Hydraulic Flow Divider Valve Breakdown, 1033685

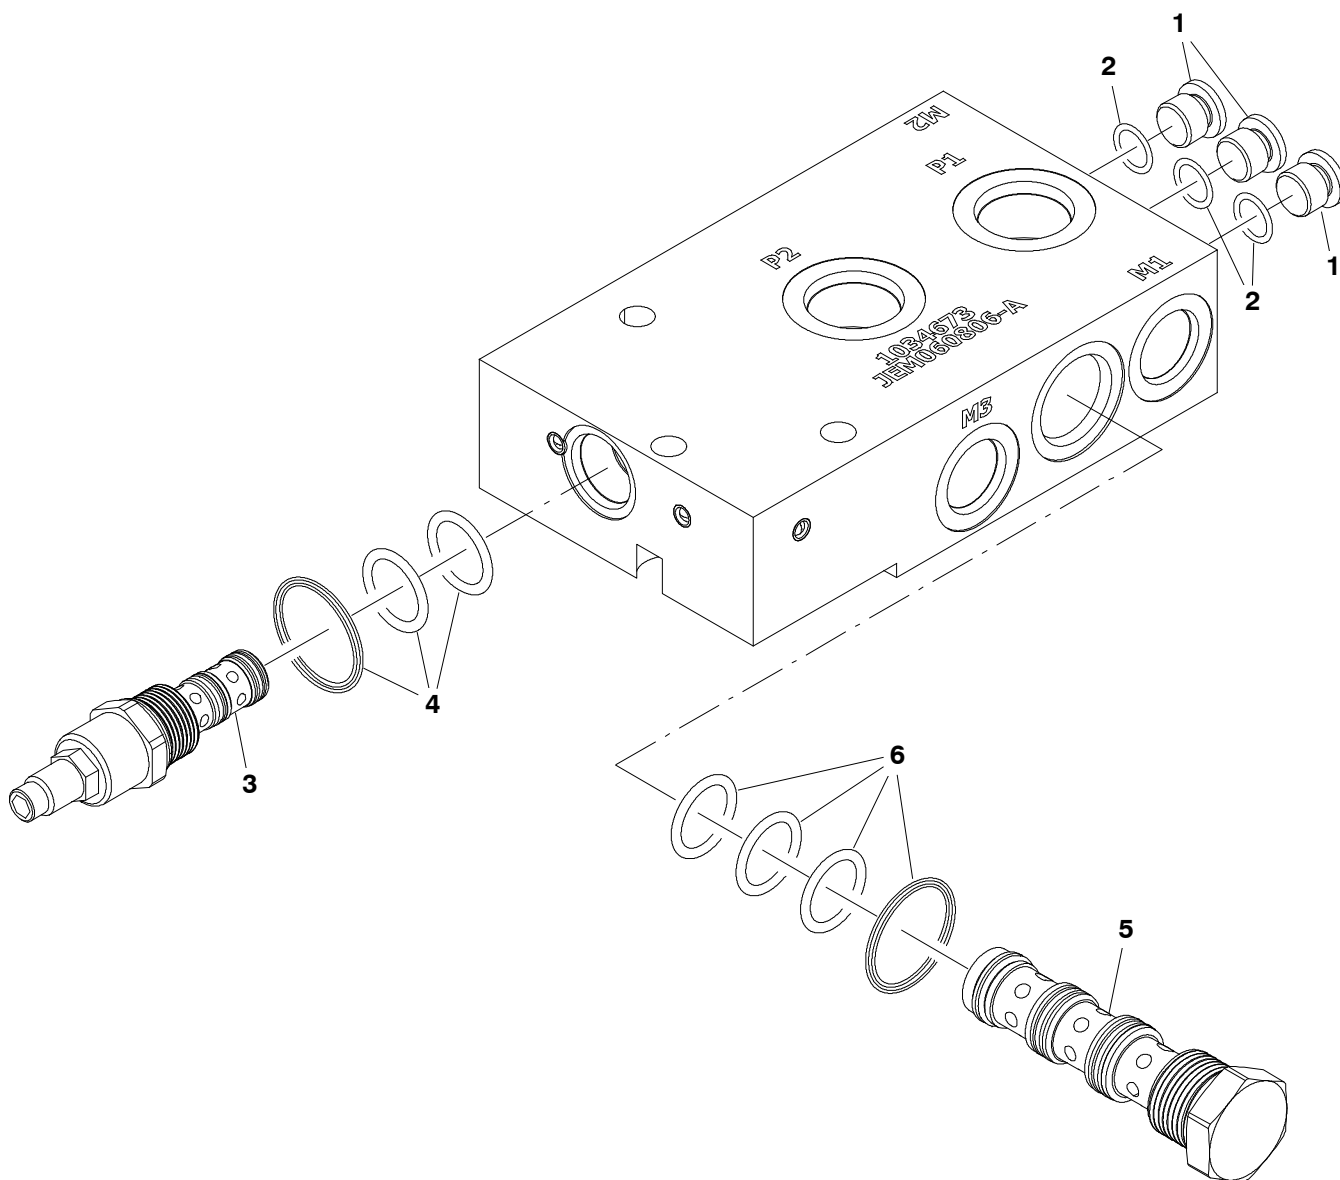

354823

Ref.	Part No.	Serial Number	Description	Qty.
▽	1033685	(000000-	) Valve, Hyd, Flow Divider, Propel [4w]	1
▲▽	1 13904	(000000-	) Fitting, Plug, Org, #6, Valve [Cec]	3
▲▲	2 77005	(000000-	) Seal, Org, .078 X 00.47id 06	1
▲▽	3 373705	(000000-	) Valve, Hyd, Flow Cntrl	1
▲▲	4 373646	(000000-	) Seal Kit, Cartridge	1
▲▽	5 373706	(000000-	) Valve, Hyd, Flow Divider	1
▲▲	6 373655	(000000-	) Seal Kit, Cartridge	1

SECTION 5

Contents	Page
Fig. 1 - Crankcase Group	5- 2
Fig. 2 - Oil Pan Group	5- 4
Fig. 3 - Cylinder Head Group	5- 5
Fig. 4 - Gear Case Group	5- 6
Fig. 5 - Water Pump Group	5- 8
Fig. 6 - Main Bearing Case Group	5- 9
Fig. 7 - Head Cover Group	5- 10
Fig. 8 - Manifold Group	5- 11
Fig. 9 - Valve, Rocker Arm Group	5- 12
Fig. 10 - Fuel Camshaft Group	5- 13
Fig. 11 - Camshaft Group	5- 14
Fig. 12 - Piston and Crankshaft Group	5- 16
Fig. 13 - Flywheel Group	5- 18
Fig. 14 - Starter Breakdown, 74405	5- 19
Fig. 15 - Nozzle Holder and Glow Plug Group .	5- 20
Fig. 16 - Nozzle Holder Breakdown	5- 21
Fig. 17 - Injection Pump Group	5- 22
Fig. 18 - Injection Pump Breakdown	5- 24
Fig. 19 - Idling Group	5- 26
Fig. 20 - Speed Control Plate Group	5- 27
Fig. 21 - Governor Group	5- 28
Fig. 22 - Water Flange Group	5- 29

Fig. 1 - Crankcase Group


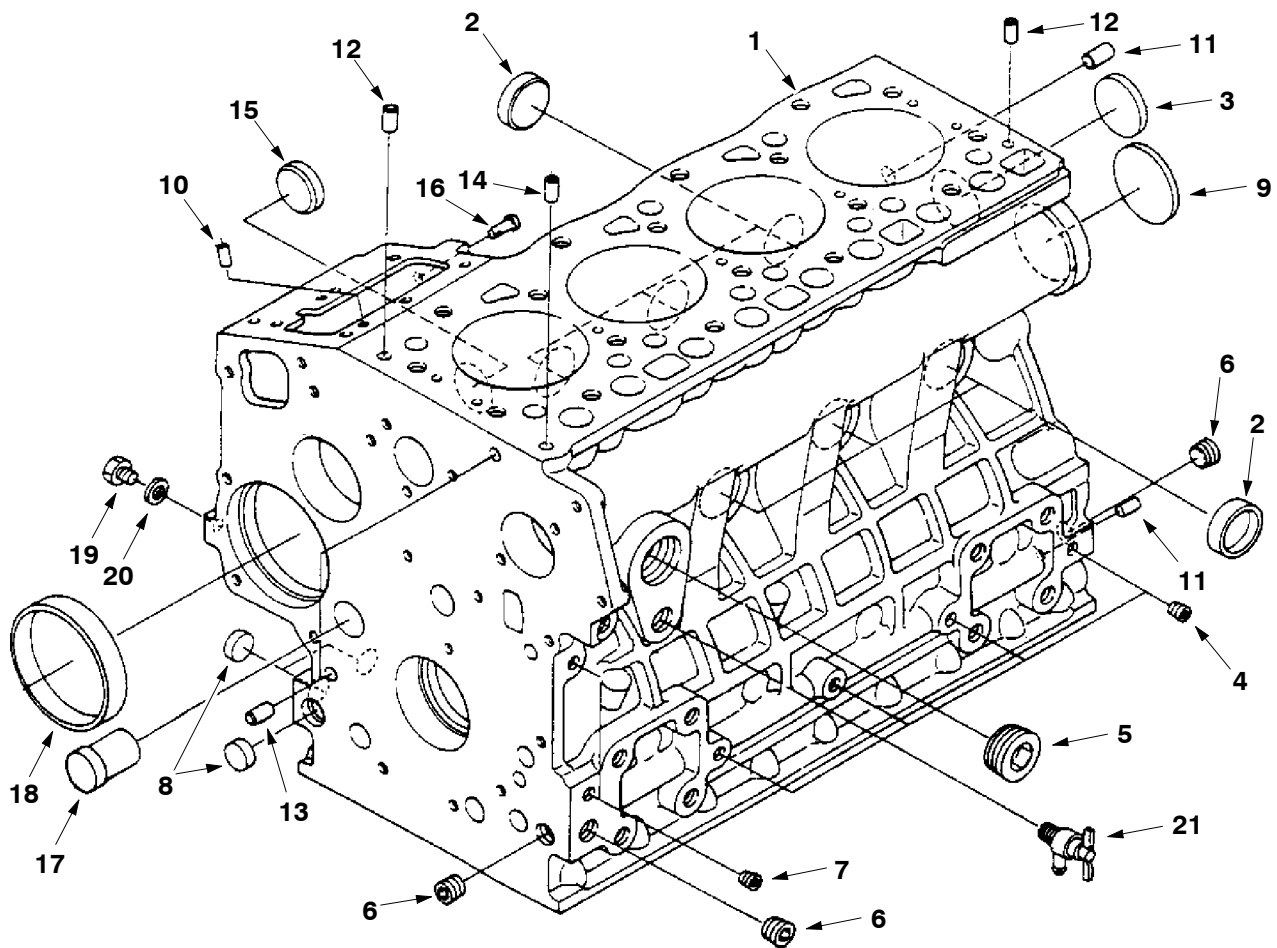


Fig. 1 - Crankcase Group


	Ref.	Part No.	Description	Qty.
▽	1	9004335	Crankcase, Complt [Ku]	1
▲	2	70998	Plug, Cup, Sealing [Ku]	6
▲	3	39087	Plug, Cup, Sealing [Ku]	1
▲	4	39088	Fitting, Pipe, Plug [Ku]	4
▲	5	70999	Plug, Eng [Ku]	1
▲	6	71985	Fitting, Pipe, Plug [Ku]	3
▲	7	39051	Fitting, Pipe, Plug [Ku]	2
▲	8	361436	Plug, Cup, Sealing [Ku]	3
▲	9	71986	Plug, Cup, Sealing [Ku]	1
▲	10	71987	Pin, Dowel [Ku]	2
▲	11	71988	Pin, Dowel [Ku]	2
▲	12	9004431	Pin, Straight [Ku]	2
▲	13	71990	Pin, Eng [Ku]	2
▲	14	71991	Tube, Pin [Ku]	1
▲	15	71992	Plug, Cup, Sealing [Ku]	1
▲	16	9004337	Pin, Start, Spring	1
▲	17	71993	Plug, Eng [Ku]	1
▲	18	70887	Bushing, Gear, Gov [Ku]	1
▲	19	39062	Fitting, Plug [Ku]	1
▲	20	393570	Gasket	1
	21	70888	Fitting, Draincock [Ku]	1

Fig. 2 - Oil Pan Group

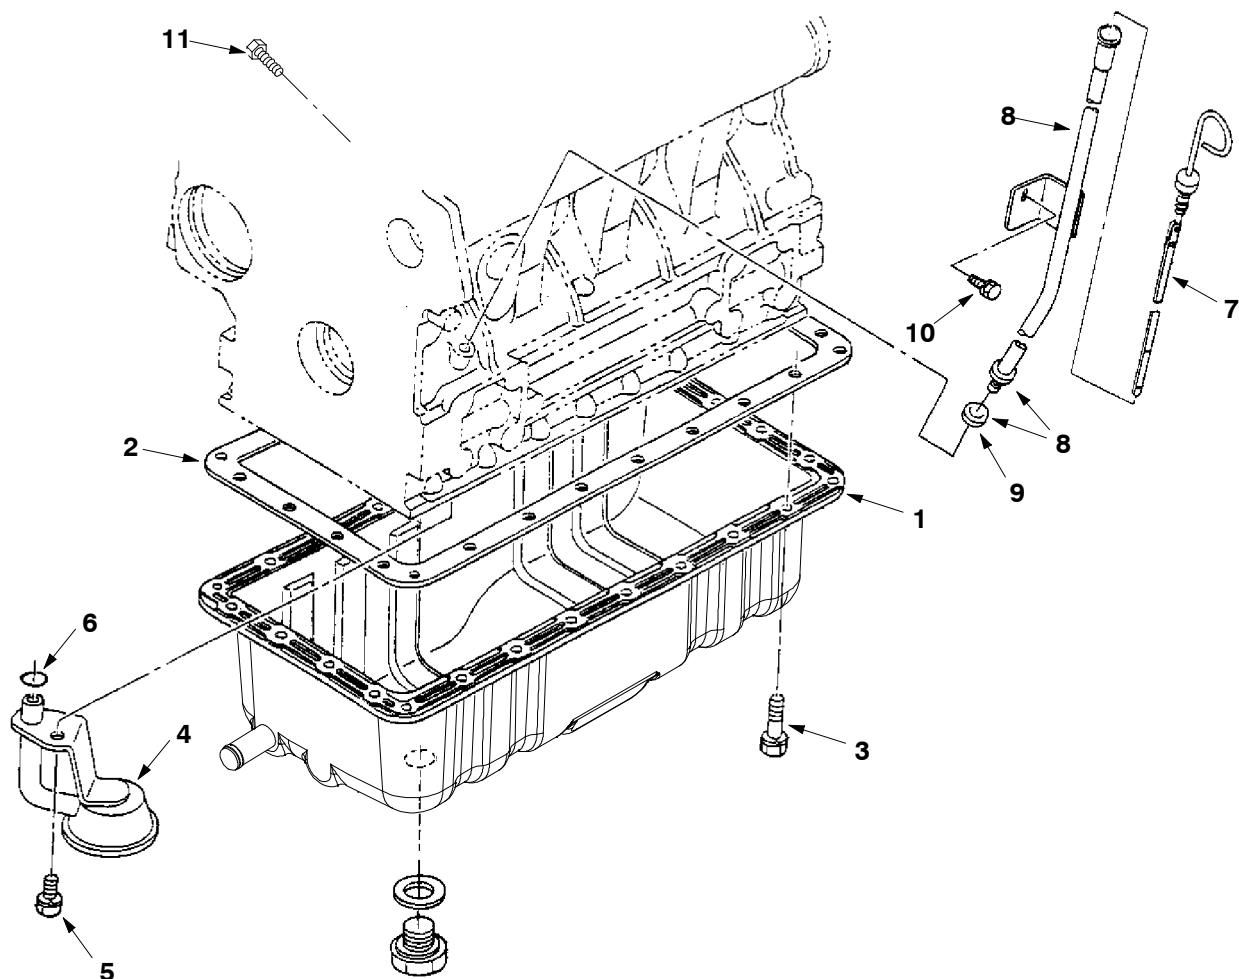

Ref.	Part No.	Description	Qty.
1	1023144	Pan, Oil, Dsl	1
2	70889	Gasket, Pan, Oil	1
3	9004338	Bolt [Ku]	26
4	9003888	Filter, Oil [Ku]	1
5	39094	Screw, Hex [Ku]	1
6	9004339	O- Ring [Ku]	1
7	9004435	Gauge, Oil [Ku]	1
▽ 8	361428	Dipstick, Oil [Ku]	1
▲ 9	361366	Seal, Org [Ku]	1
10	39073	Screw, Hex [Ku]	1
	66187	Gasket Set	1
11	9004348	Plug, Gauge, Oil [Ku]	1

Fig. 3 - Cylinder Head Group

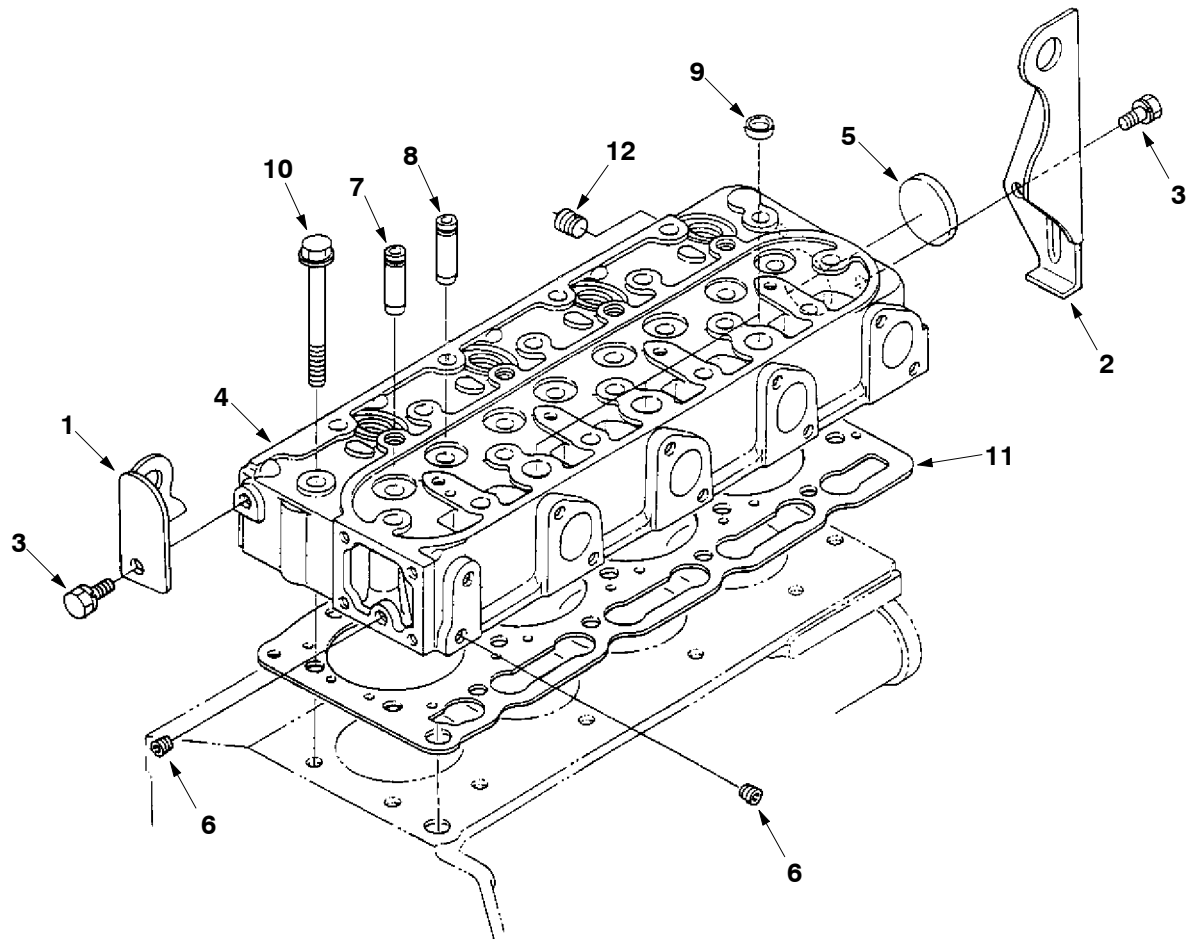

Ref.	Part No.	Description	Qty.
	1 71996	Ear, Lifting, Eng [Ku]	1
	2 71997	Ear, Lifting, Eng [Ku]	1
	3 39073	Screw, Hex [Ku]	2
▽	4 9004340	Head, Cylinder [Ku]	1
▲	5 393504	Cap, Sealing	1
▲	6 39088	Fitting, Pipe, Plug [Ku]	2
▲	7 372906	Guide, Valve, Inlet	4
▲	8 372907	Guide, Valve, Exhaust	4
▲	9 71999	Plug, Cup, Sealing [Ku]	3
	10 70897	Screw, Hex, Head, Cyl [Ku]	18
	11 9004341	Gasket, Head, Cyl [Ku]	1
	66194	Gasket Set, Upper	1
	12 72010	Fitting, Pipe, Plug [Ku]	1

Fig. 4 - Gear Case Group


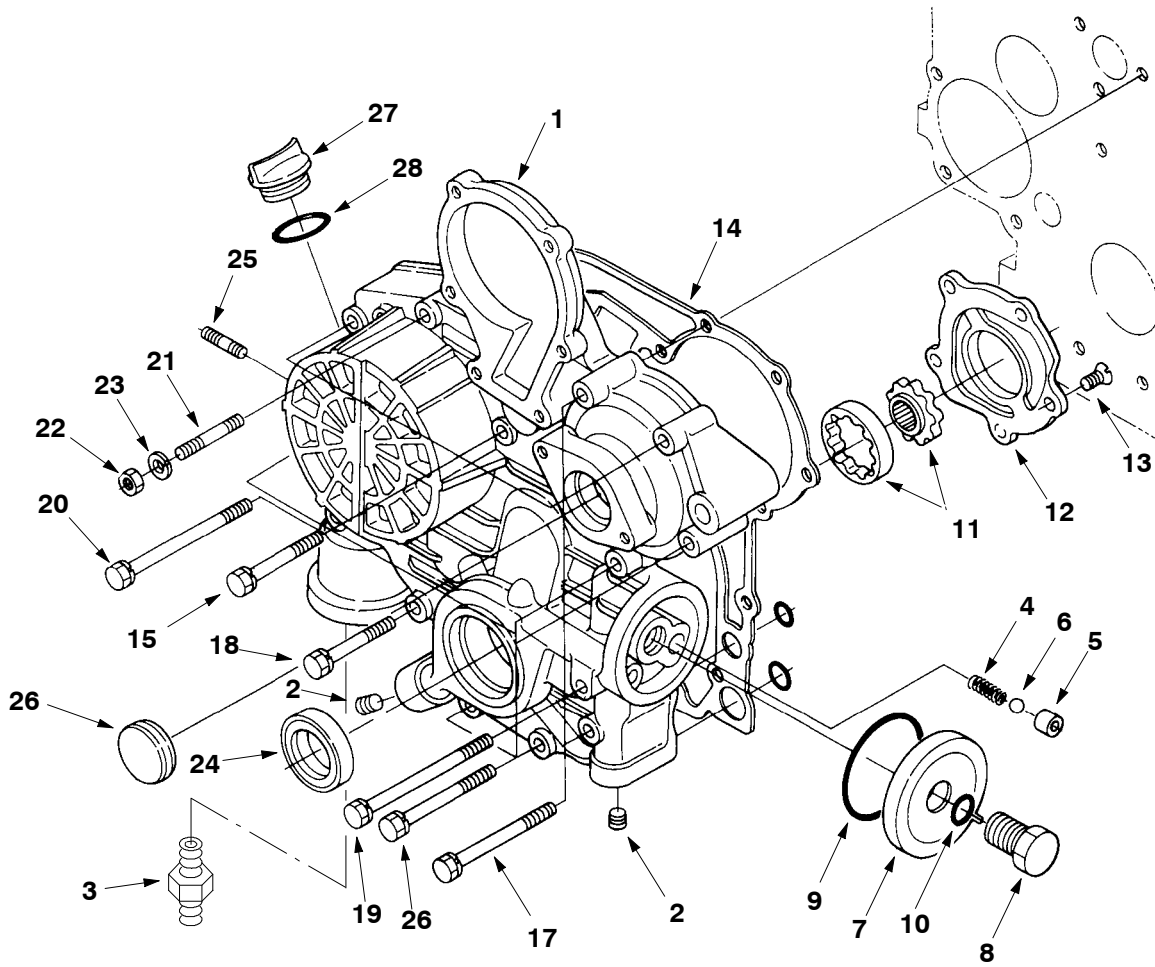


Fig. 4 - Gear Case Group


	Ref.	Part No.	Description	Qty.
▽	1	9004432	Crankcase, Comp [Ku]	1
▲	2	361401	Fitting, Pipe, Plug [Ku]	5
▲	3	12916	Fitting, Fltr, Oil [Ku]	1
▲	4	70900	Spring, Cmpr, Relief [Ku]	1
▲	5	70901	Tube, Seat, Valve, Oil [Ku]	1
▲	6	70902	Ball, Relief, Oil [Ku]	1
▲	7	70905	Cover	1
▲	8	70906	Bolt	1
▲	9	70907	Seal, Org [Ku]	1
▲	10	70911	Seal, Org	1
▲	11	70903	Pump, Oil, Eng [Ku]	1
▲	12	70904	Cover, Pump, Oil	1
	13	72013	Screw, Flt [Ku]	5
	14	70912	Gasket, Case, Gear [Ku]	1
	15	72993	Screw, Hex [Ku]	3
	16	384872	Bolt	4
	17	72994	Screw, Hex [Ku]	2
	18	72014	Screw, Hex [Ku]	1
	19	72015	Screw, Hex [Ku]	2
	20	72016	Bolt	1
	21	9004346	Stud [Ku]	1
	22	39121	Nut, Hex [Ku]	1
	23	39065	Washer, Lock, Split [Ku]	1
	24	361389	Seal, Oil, Front [Ku]	1
	25	9004347	Stud [Ku]	2
	26	72019	Cover	1
	27	361374	Cap, Filler, Oil [Ku]	1
	28	70913	Seal, Org	1

Fig. 5 - Water Pump Group

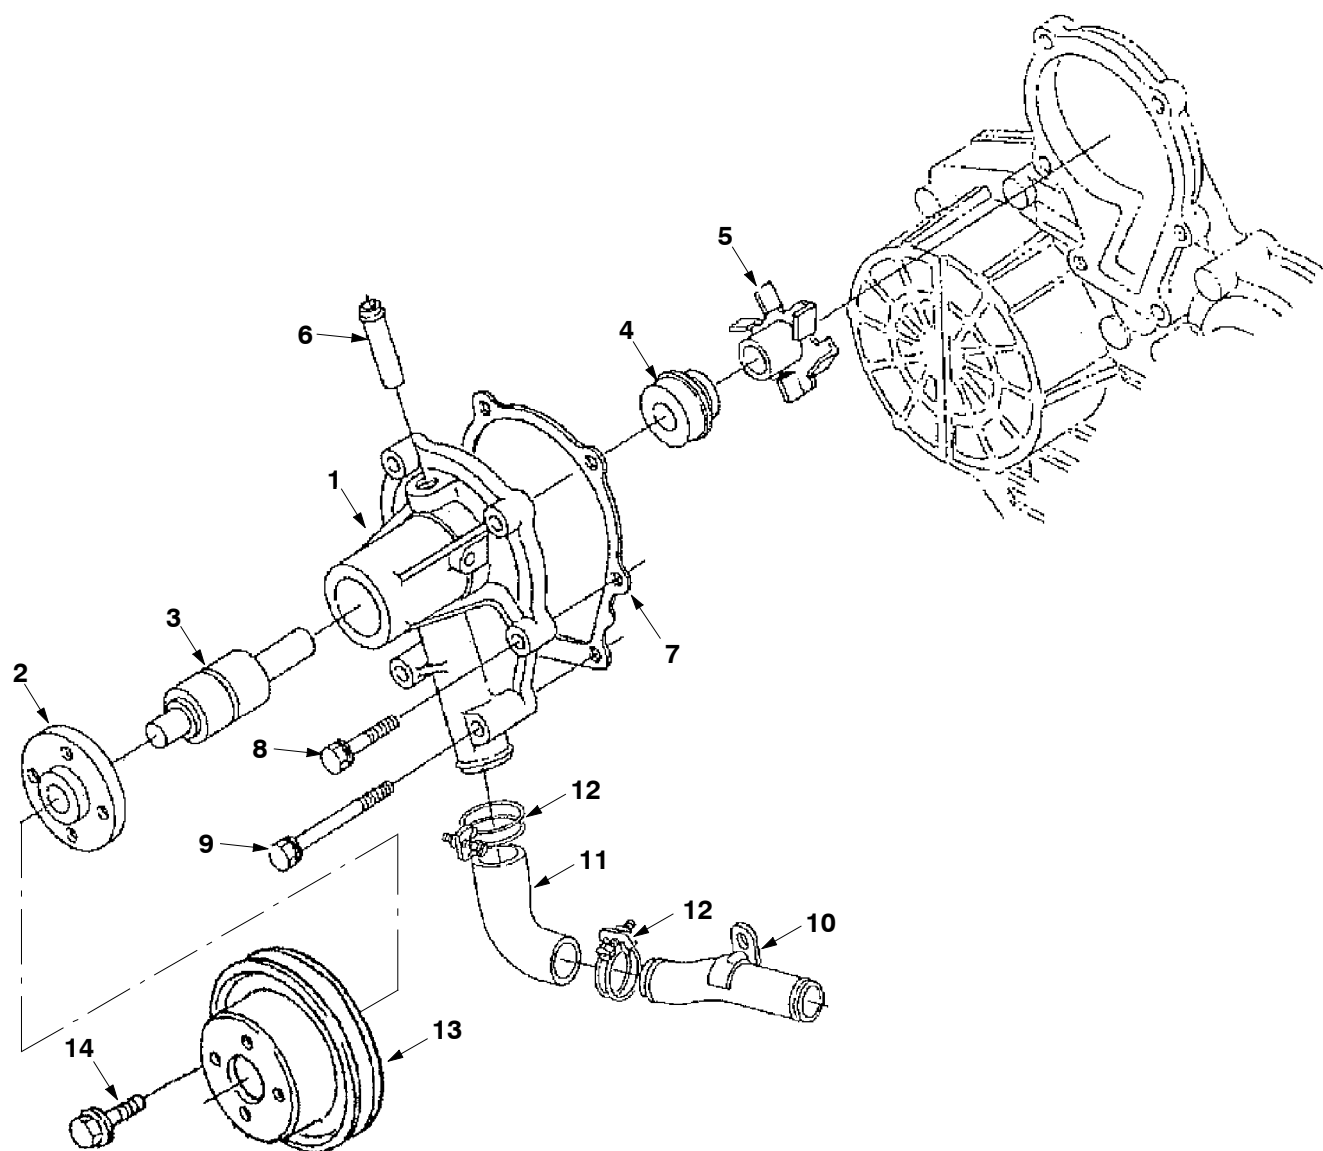


Ref.	Part No.	Description	Qty.
▽	1 9004402	Pump, Water Assy [Ku]	1
▲	2 70919	Flange, Pump, Water [Ku]	1
▲	3 9004403	Bearing [Ku]	1
▲	4 9004404	Seal, Mechanical Assy [Ku]	1
▲	5 9004405	Impeller, Pump, Water [Ku]	1
▲	6 361440	Fitting, Pipe, Water [Ku]	1
	7 70920	Gasket, Pump, Water [Ku]	1
	8 9004406	Bolt [Ku]	4
	9 9004407	Bolt [Ku]	2
	10 9003868	Pipe, Water [Kubota]	1
	11 9003869	Pipe, Water [Kubota]	1
	12 9003870	Clamp [Kubota]	2
	13 55847	Sheave, Fan [Ku]	1
	14 393588	Bolt, Flng	4

Fig. 6 - Main Bearing Case Group

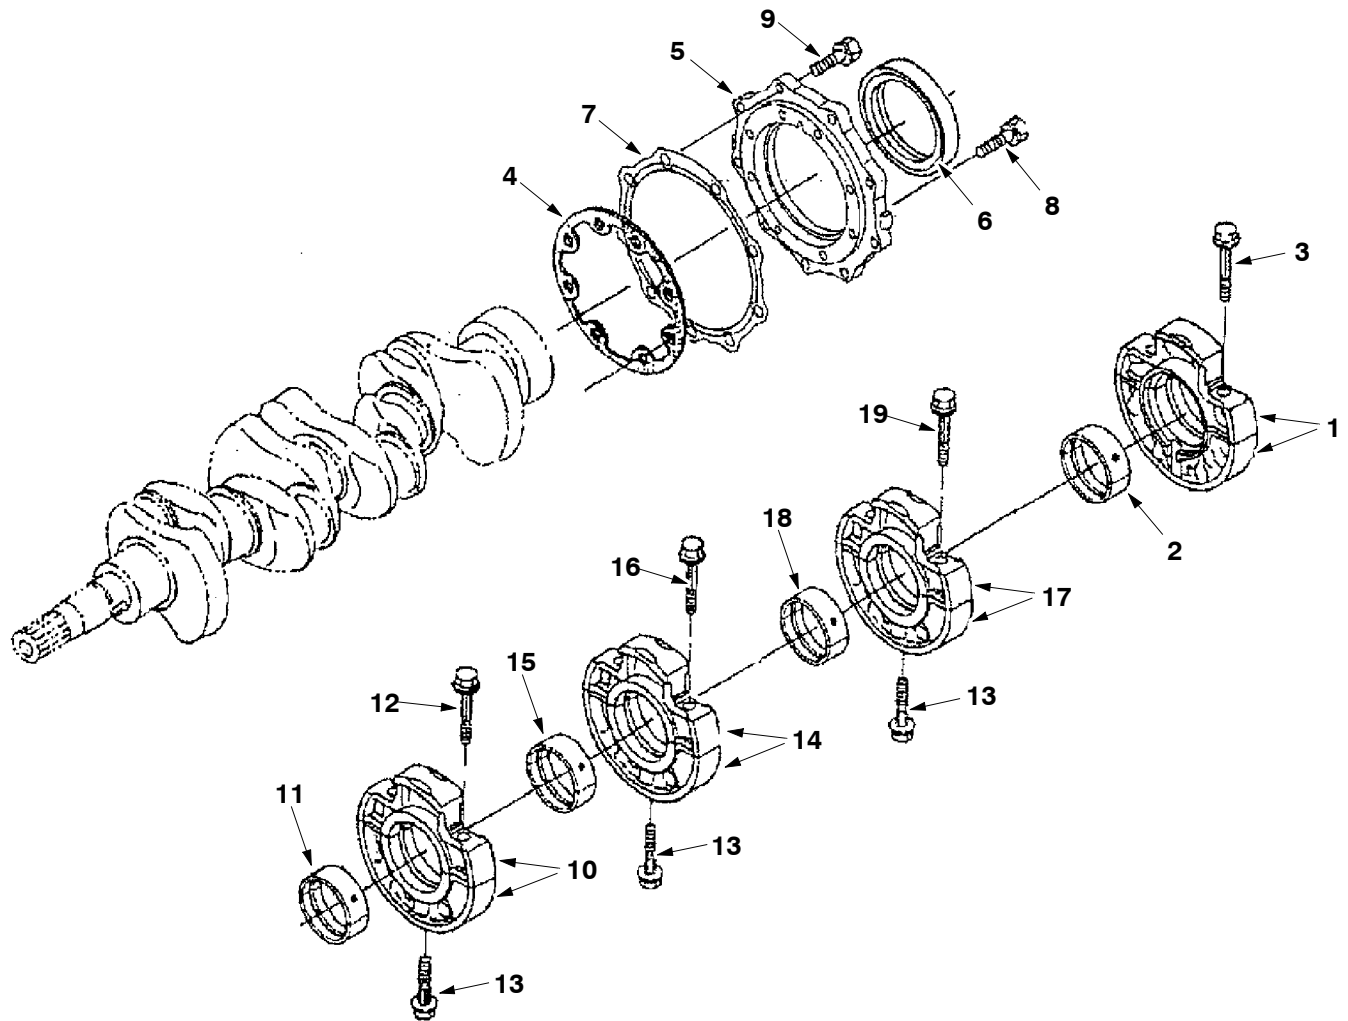


	Ref.	Part No.	Description	Qty.
▽	1	9004349	Bearing, Case [Ku]	1
▲	2	9004436	Crankshaft, Metal [Ku]	1
▲	3	72998	Screw, Hex, Case, Brg, Main [Ku]	2
	4	9004350	Gasket, Bearing, Case [Ku]	1
	5	70923	Cover, Brg Case, Eng [Ku]	1
	6	70924	Seal, Oil, Rear [Ku]	1
	7	70925	Gasket, Case, Gear [Ku]	1
	8	384871	Bolt	8
	9	371017	Bolt	9
▽	10	9004437	Case, Main, Brg Assy	1
▲	11	70948	Bearing, Cshft, Std [Ku]	1
▲	12	72998	Screw, Hex, Case, Brg, Main [Ku]	2
	13	73479	Screw, Hex, Case, Brg, Main [Ku]	3
▽	14	9004438	Case, Main, Brg Assy	1
▲	15	70948	Bearing, Cshft, Std [Ku]	1
▲	16	72998	Screw, Hex, Case, Brg, Main [Ku]	2
▽	17	9004439	Case, Main, Brg Assy	1
▲	18	70948	Bearing, Cshft, Std [Ku]	1
▲	19	72998	Screw, Hex, Case, Brg, Main [Ku]	2

Fig. 7 - Head Cover Group

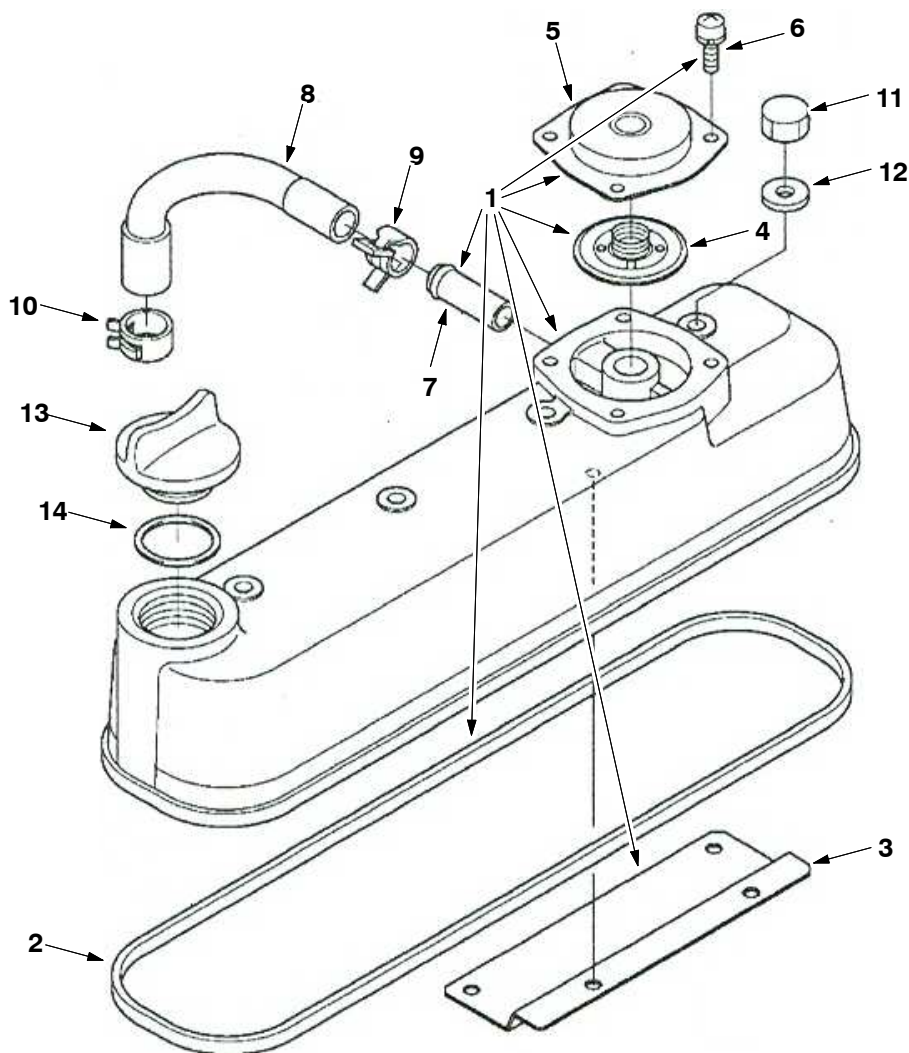


Ref.	Part No.	Description	Qty.
▽	1 9004433	Cover, Cyl Head Assy [Ku]	1
▲	2 70929	Gasket, Cover, Head, Cyl [Ku]	1
▲	3 372912	Shield, Breather	1
▲	4 372928	Valve, Breather, Complt	1
▲	5 384874	Cover, Breather	1
▲	6 73482	Screw, Hex, W/ Washer [Ku]	4
▲	7 30125	Pipe, Water	1
	8 372913	Tube, Breather	1
	9 372901	Clamp, Hose	1
	10 372904	Clamp, Hose	1
	11 73483	Nut, Hex, Cap	4
	12 73484	Gasket, F/ Bolt [Ku]	4
	13 361374	Cap, Filler, Oil [Ku]	1
	14 70913	Seal, Org	1

Fig. 8 - Manifold Group

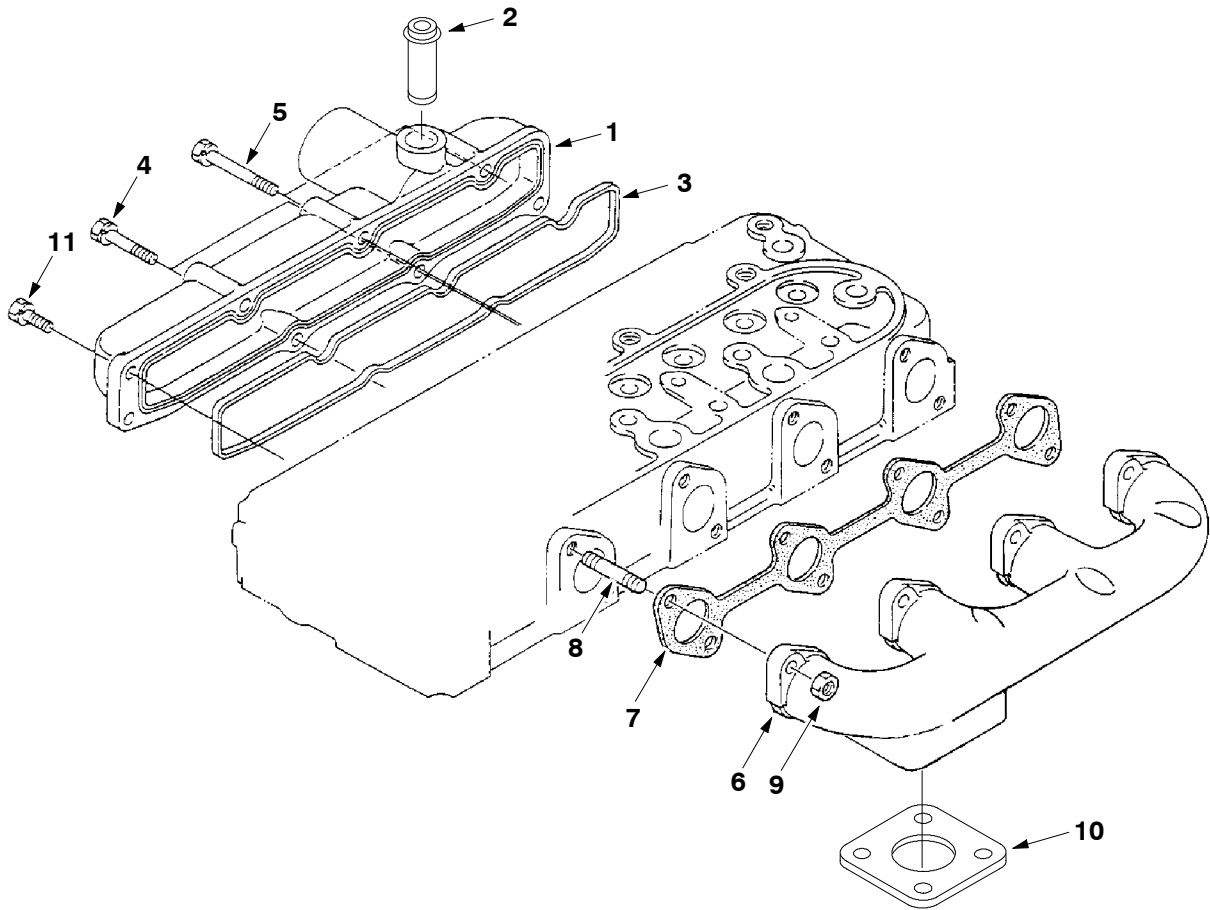


	Ref.	Part No.	Description	Qty.
▽	1	372905	Manifold Assy, Inlet	1
▲	2	73481	Pipe, Breather [Ku]	1
▲	3	70934	Gasket, Manifold, Intake [Ku]	1
	4	9004406	Bolt [Ku]	2
	5	384872	Bolt	3
	6	73487	Manifold, Exhaust [Ku]	1
	7	70935	Gasket, Manifold, Exhaust	1
	8	73488	Stud [Ku]	8
	9	73489	Nut	8
	10	51332	Gasket [Ku]	1
	11	40409	Screw, Hex [Ku]	3

Fig. 9 - Valve, Rocker Arm Group

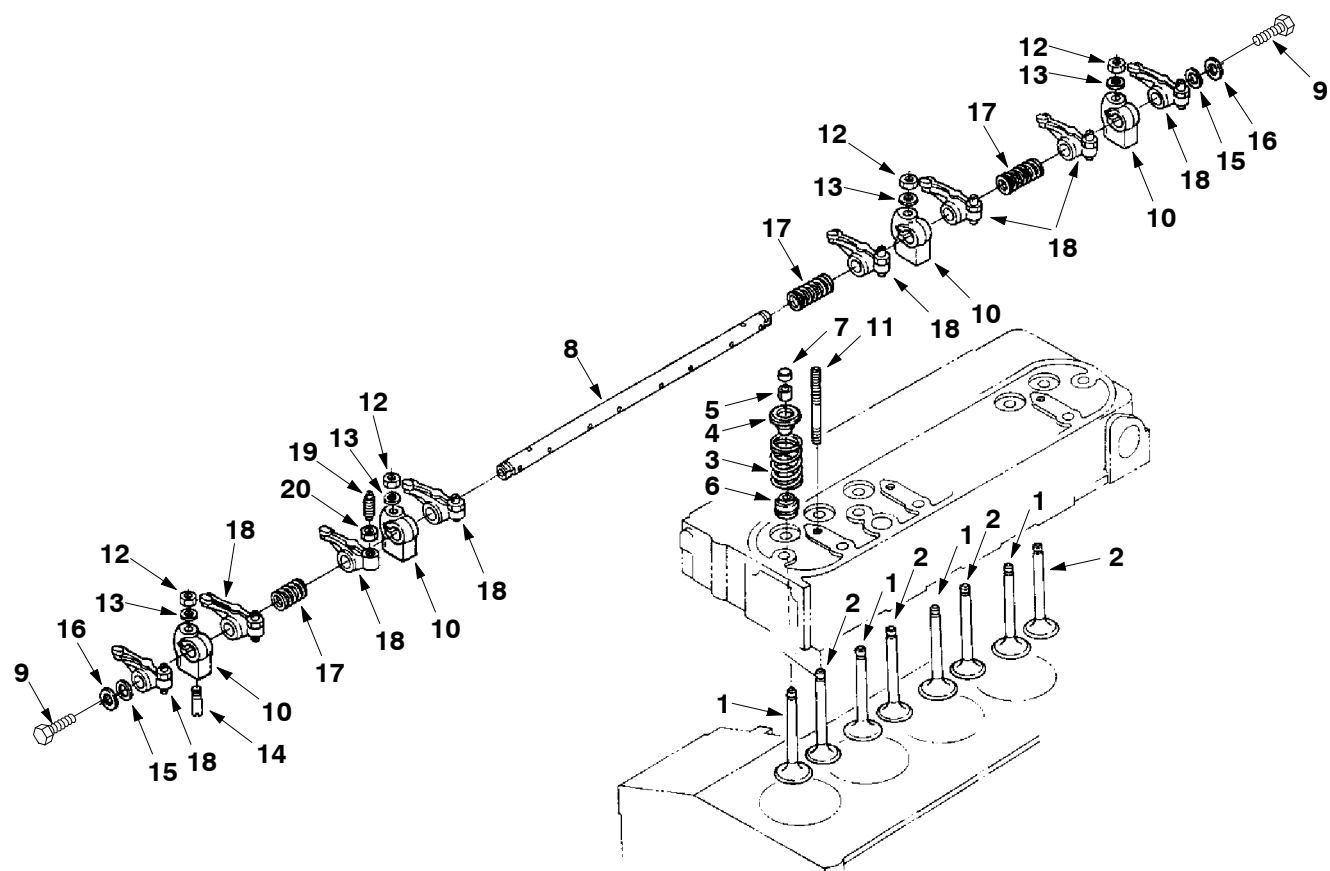

Ref.	Part No.	Description	Qty.
1	70936	Valve, Intake [Ku]	4
2	70937	Valve, Exhaust [Ku]	4
3	73491	Spring, Valve [Ku]	8
4	73492	Retainer, Spring, Valve [Ku]	8
5	73493	Retainer, Spring [Ku]	8
6	73494	Seal, Stem, Valve [Ku]	8
7	361392	Cap, Valve [Ku]	8
8	9004409	Shaft, Rocker, Arm [Ku]	1
9	393598	Bolt	2
10	73497	Bracket, Mtg, Rocker Arm [Ku]	4
11	73498	Stud [Ku]	4
12	73499	Nut, Hex [Ku]	4
13	73500	Washer, Flat [Ku]	4
14	9004410	Pin, Spring [Ku]	1
15	73502	Washer, Shaft, Rocker [Ku]	2
16	361589	Washer, Flat [Ku]	2
17	73504	Spring, Cmpr, Rocker [Ku]	3
▽ 18	73506	Arm, Rocker [Ku]	8
▲ 19	73507	Screw, Adj, Rocker Arm [Ku]	8
▲ 20	73508	Nut, Hex [Ku]	8

Fig. 10 - Fuel Camshaft Group

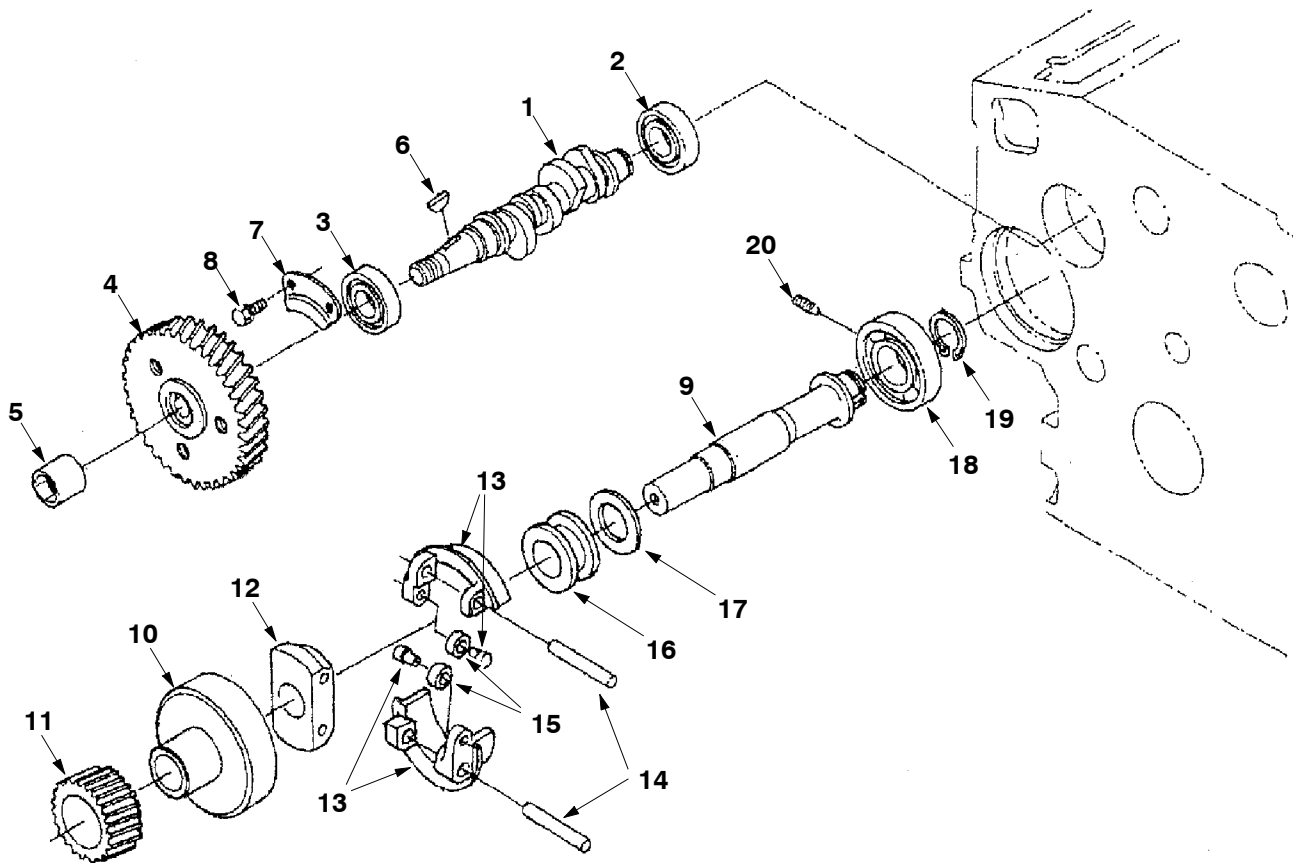

Ref.	Part No.	Description	Qty.	
	1	84636	Camshaft	1
	2	9004368	Bearing, Ball [Ku]	1
	3	9004369	Bearing, Ball [Ku]	1
	4	9004445	Gear, Injection, Pump [Ku]	1
	5	73593	Nut, Cap, Cam [Ku]	1
	6	73594	Key, Woodruff [Ku]	1
	7	73596	Stopper, Fuel [Ku]	1
	8	41973	Bolt, Hex [Ku]	2
▽		73597	Shaft, Govnr	1
▲	9	9004371	Shaft, Governor [Ku]	1
▲	10	73598	Holder, Gear [Ku]	1
▲	11	73599	Gear, Govnr [Ku]	1
▲	12	73600	Holder, Govnr [Ku]	1
▲	13	73601	Weight, Comp, Govnr [Ku]	2
▲	14	73602	Shaft, Govnr [Ku]	2
▲	15	9004372	Shaft, Governor, Weight [Ku]	2
▲	16	70977	Sleeve, Govnr [Ku]	1
▲	17	70978	Washer, Thrust [Ku]	1
	18	9004373	Bearing, Ball [Ku]	1
	19	73603	Ring, Snap [Ku]	1
	20	73604	Screw, Set [Ku]	1

Fig. 11 - Camshaft Group

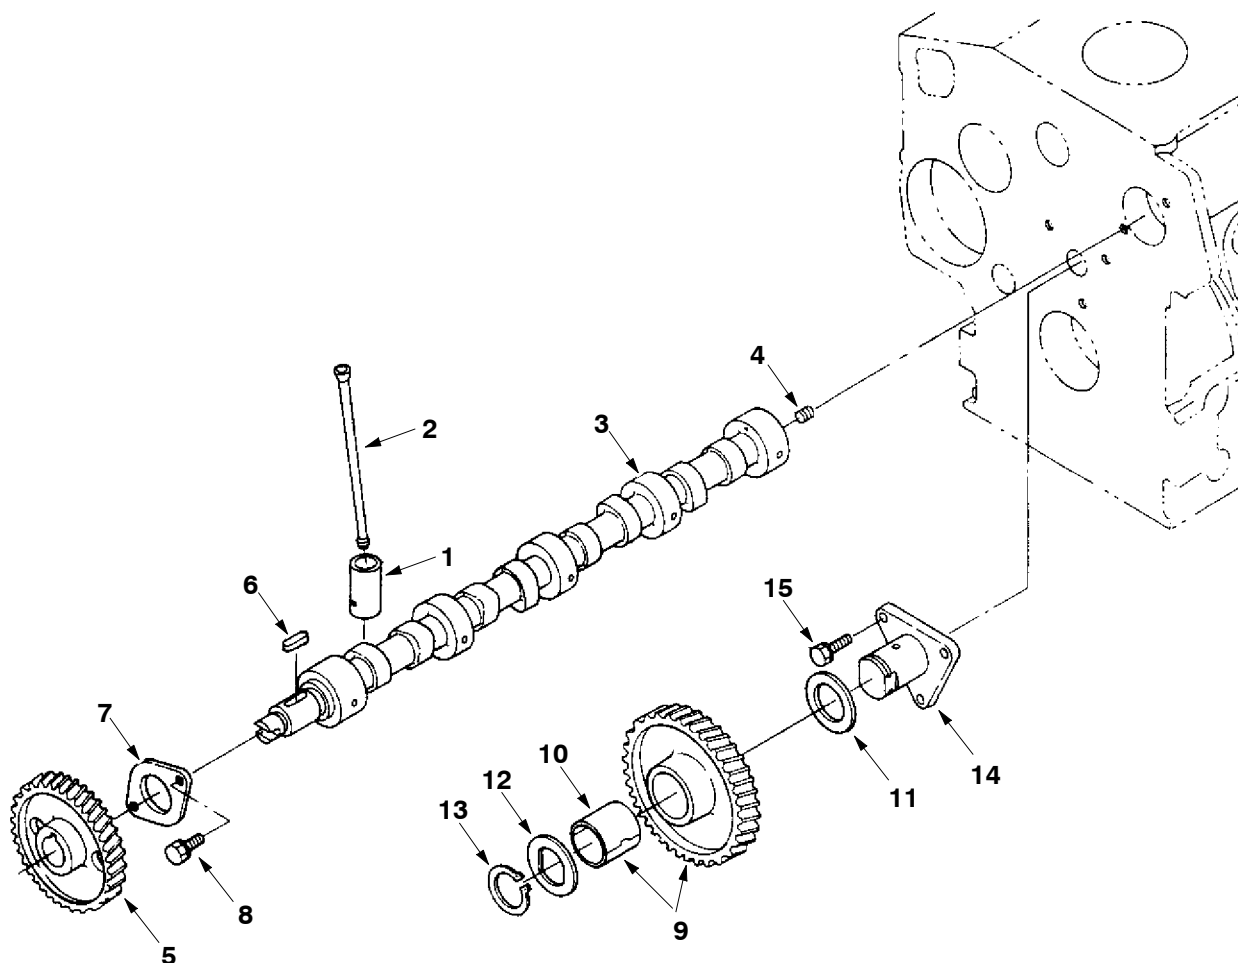


Fig. 11 - Camshaft Group

	Ref.	Part No.	Description	Qty.
	1	9004358	Tappet [Ku]	8
	2	73509	Rod, Push, Valve [Ku]	8
▽	3	9004440	Crankshaft Assy	1
▲	4	39197	Screw, Set [Ku]	1
▲	5	73511	Gear, Camshaft [Ku]	1
▲	6	73512	Key [Ku]	1
▲	7	73513	Stopper, Cam [Ku]	1
▲	8	41973	Bolt, Hex [Ku]	2
▽	9	73514	Gear, Idler, Cam [Ku]	1
▲	10	73515	Bushing, Gear, Idler [Ku]	1
	11	73516	Collar, Gear [Ku]	1
	12	73517	Washer, Collar, Gear [Ku]	1
	13	73518	Ring, Snap [Ku]	1
	14	73519	Shaft, Idler, Gear [Ku]	1
	15	41973	Bolt, Hex [Ku]	3

Fig. 12 - Piston and Crankshaft Group

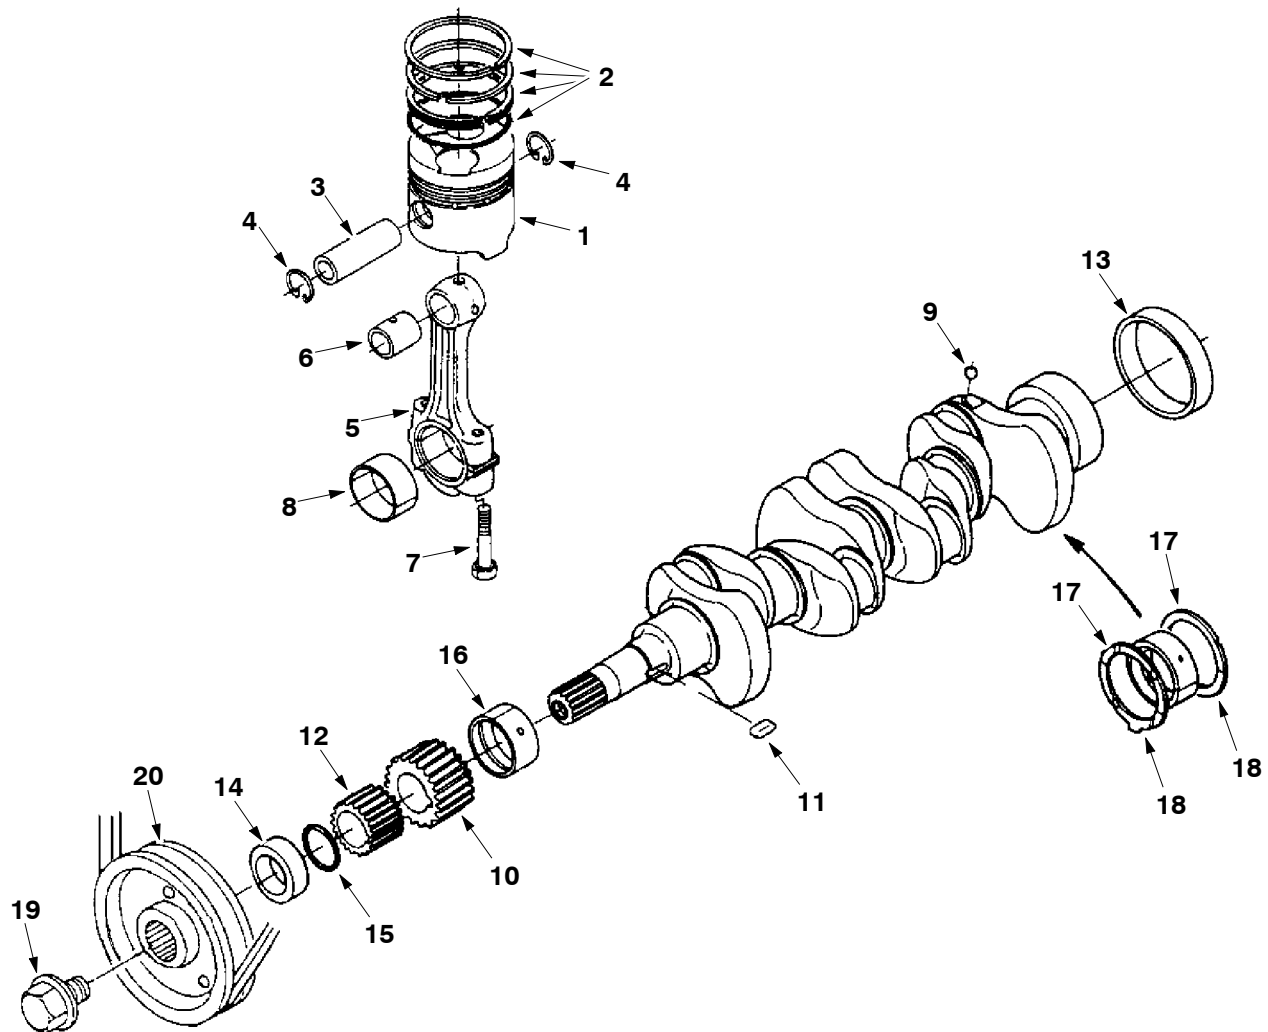



Fig. 12 - Piston and Crankshaft Group

Ref.	Part No.		Description	Qty.
1	73520		Piston, Eng [Ku]	4
1	73521		Piston, Eng [Ku]	4
2	9004361	①	Ring, Piston Assy [Ku]	4
2	Ku#1J050- 21050	②	Ring, Piston Assy [Ku]	4
2	9004441		Ring, Piston Assy [Ku]	4
	3	73522	Pin, Piston [Ku]	4
	4	73523	Ring, Snap, Piston [Ku]	8
▽	5	73524	Rod Assy, Connecting [Ku]	4
▲	6	361395	Bushing, Pin, Piston [Ku]16241- 21351	4
▲	7	73525	Screw, Rod, Connecting [Ku]	8
▲	8	70941	Bearing, Rod, Connecting, Std [Ku]	4
▲	8	66204	Bearing, Rod, Connecting [- .2mm, Ku]	4
▲	8	66207	Bearing, Rod, Connecting [- .4mm, Ku]	4
▽		73526	Crankshaft	1
▲	9	73527	Ball, Cshft [Ku]	4
▲	10	73528	Gear, Cshft [Ku]	1
▲	11	73529	Key [Ku]	1
▲	12	73530	Gear, Pump, Oil [Ku]	1
▲	13	70942	Bearing, Cshft [Ku]	1
	14	70943	Collar, Crank, Front [Ku]	1
	15	9004363	Ring [Ku]	1
	16	70945	Bearing, Cshft, Std [Ku]	1
	16	70946	Bearing, Cshft, - .2mm [Ku]	1
	16	70947	Bearing, Cshft [Ku]	1
	17	10844	Bearing, Thrust, Std [Ku]	2
	17	70954	Bearing, Thrust [Ku]	2
	17	70955	Bearing, Thrust [- .4mm, Ku]	2
	18	10845	Bearing, Thrust, Std [Ku]	2
	19	73532	Screw, Hex, Cshft [Ku]	2
	20	393400	Sheave, Cshft [Ku]	2

① Serial Number (006501- 008260)


② Serial Number (008261-)

Fig. 13 - Flywheel Group

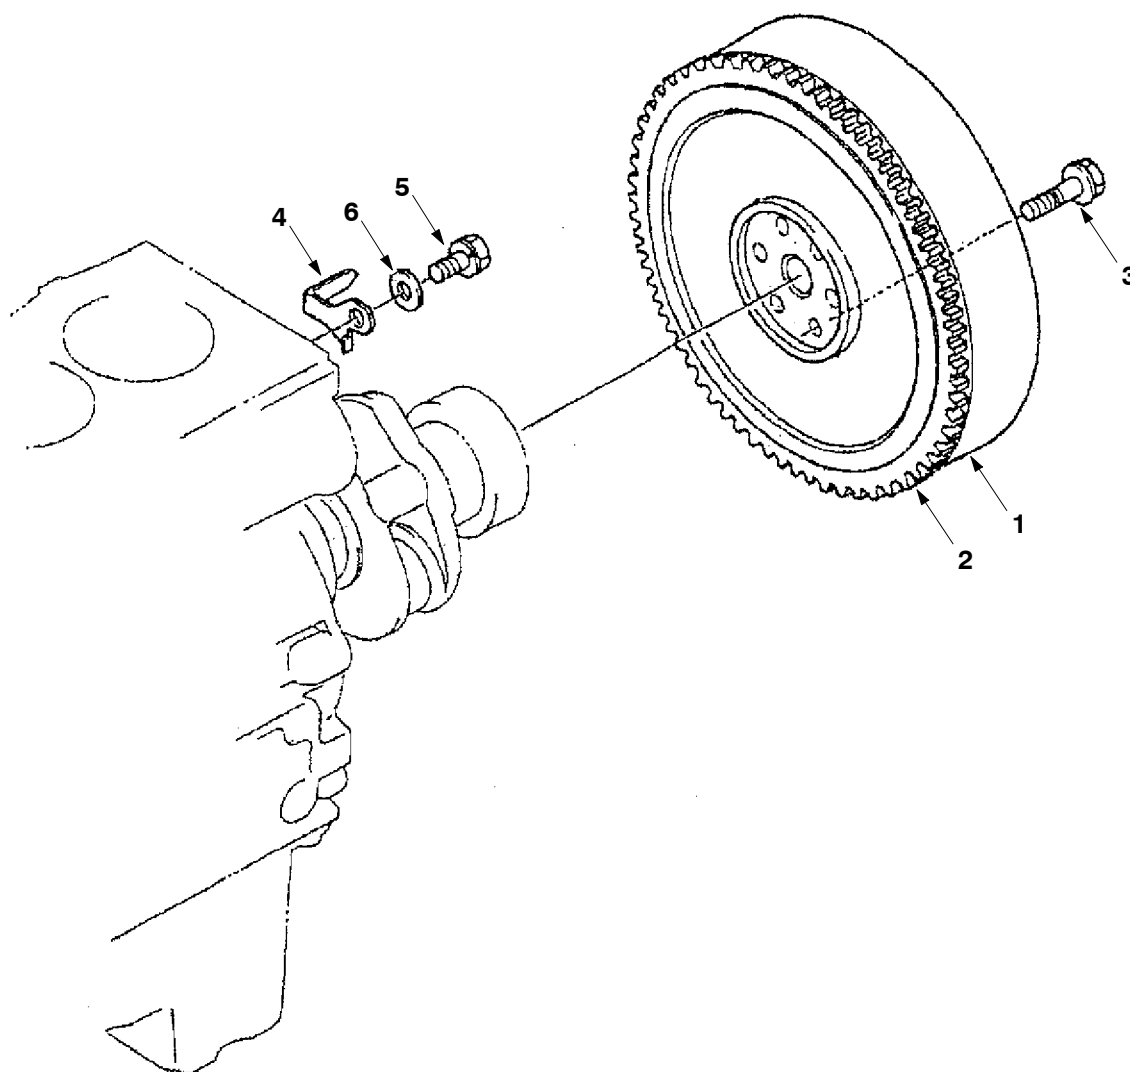


Ref.	Part No.	Description	Qty.
▽ 1	70956	Flywheel	1
▲ 2	9004442	Gear, Ring [Ku]	1
3	73533	Screw, Hex, Flywheel [Ku]	6
4	9003891	Indicator, Timing [Ku]	1
5	9004443	Bolt [Ku]	1
6	9004444	Washer, Plain [Ku]	1

Fig. 14 - Starter Breakdown, 74405

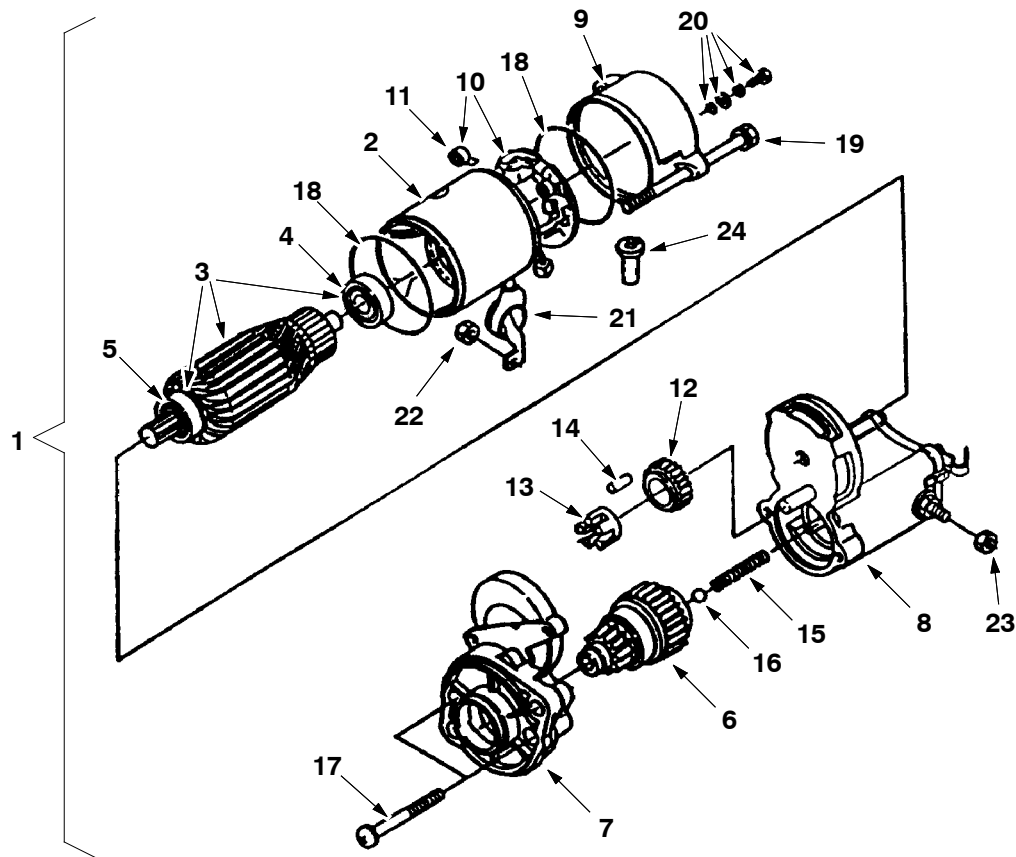


	Ref.	Part No.	Description	Qty.
▽	1	74405	Starter, 12vdc [Kubota]	1
▲	2	70196	Yoke	1
▲▽	3	70197	Armature, Motor [Ku]	1
▲▲	4	70198	Bearing	1
▲▲	5	70199	Bearing	1
▲	6	70200	Clutch	1
▲	7	70201	Frame, End, Drive	1
▲	8	70202	Switch, Magneto [Ku]	1
▲	9	70203	Frame, End	1
▲▽	10	70204	Brushholder	1
▲▲	11	70205	Spring, Brush	4
▲	12	70206	Gear	1
▲	13	70207	Retainer	1
▲	14	73545	Retainer, Gear, Starter [Ku]	5
▲	15	70208	Spring	1
▲	16	73547	Spring, Ext [Ku]	1
▲	17	70209	Bolt	2
▲	18	20433	Seal, Org	2
▲	19	70210	Bolt	2
▲	20	20432	Bolt	2
▲	21	70211	Cover	1
▲	22	73551	Nut, Hex [Ku]	1
▲	23	70212	Nut	1
▲	24	70213	Tube, Drain, Starter	1

Fig. 15 - Nozzle Holder and Glow Plug Group

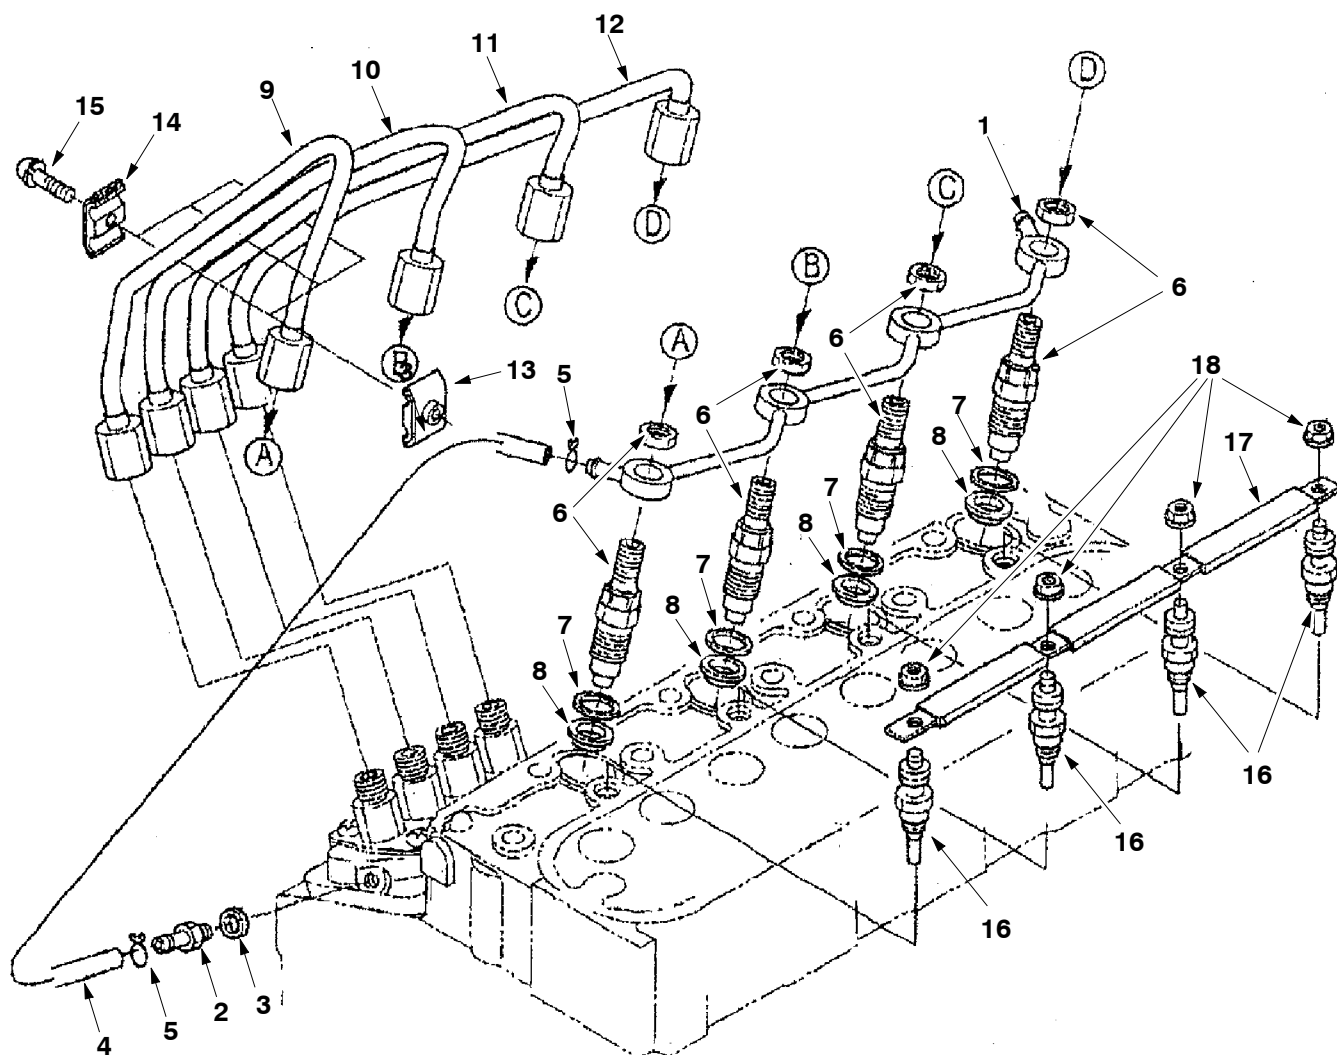

Ref.	Part No.	Description	Qty.	
	1	73554	Pipe, Overflow	1
	2	73555	Fitting, Fuel [Ku]	1
	3	40166	Gasket, F/ Bolt [Ku]	1
▽		361373	Hose, Fuel [Ku]	1
▲	4	9004389	Pipe, Fuel, Overflow [Ku]	2
▲	5	9004390	Pipe, Clip [Ku]	4
▽	6	372917	Housing Assy, Nozzle	1
▲	7	9004450	Gasket [Ku]	1
▲	8	9004451	Seal, Heat [Ku]	1
	9	70965	Tube, Injector, Pipe #1 [Ku]	1
	10	70966	Tube, Injector, Pipe #2 [Ku]	1
	11	70967	Tube, Injector, Pipe #32 [Ku]	1
	12	70968	Pipe, Injector, # 4	3
	13	30131	Clamp, Tube, Inj, Pipe #1 [Ku]	3
	14	39507	Clamp, Pipe	4
	15	393566	Screw, W / Washer	1
	16	84638	Glowplug [Ku]	3
	17	73560	Cord, Ele, Glowplug	3
	18	9004393	Nut, Flange [Ku]	3

Fig. 16 - Nozzle Holder Breakdown

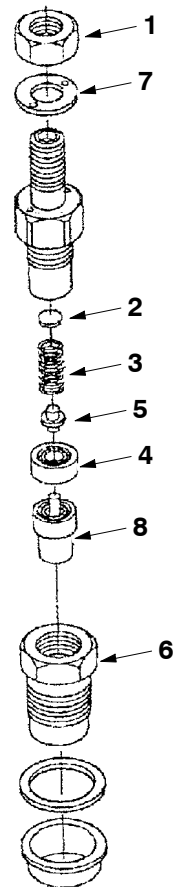

	Ref.	Part No.	Description	Qty.
▽		372917	Housing Assy, Nozzle	4
▲	1	9004395	Nut [Ku]	1
▲	2	9004396	Washer, Adjusting [Ku]	1
▲	3	9004397	Nozzle, Spring [Ku]	1
▲	4	388500	Spacer [Ku]	1
▲	5	9004398	Rod, Push [Ku]	1
	6	9004399	Nut, Nozzle [Ku]	1
	7	9004400	Washer, Plain [Ku]	1
	8	9001101	Fender, Lh	1

Fig. 17 - Injection Pump Group

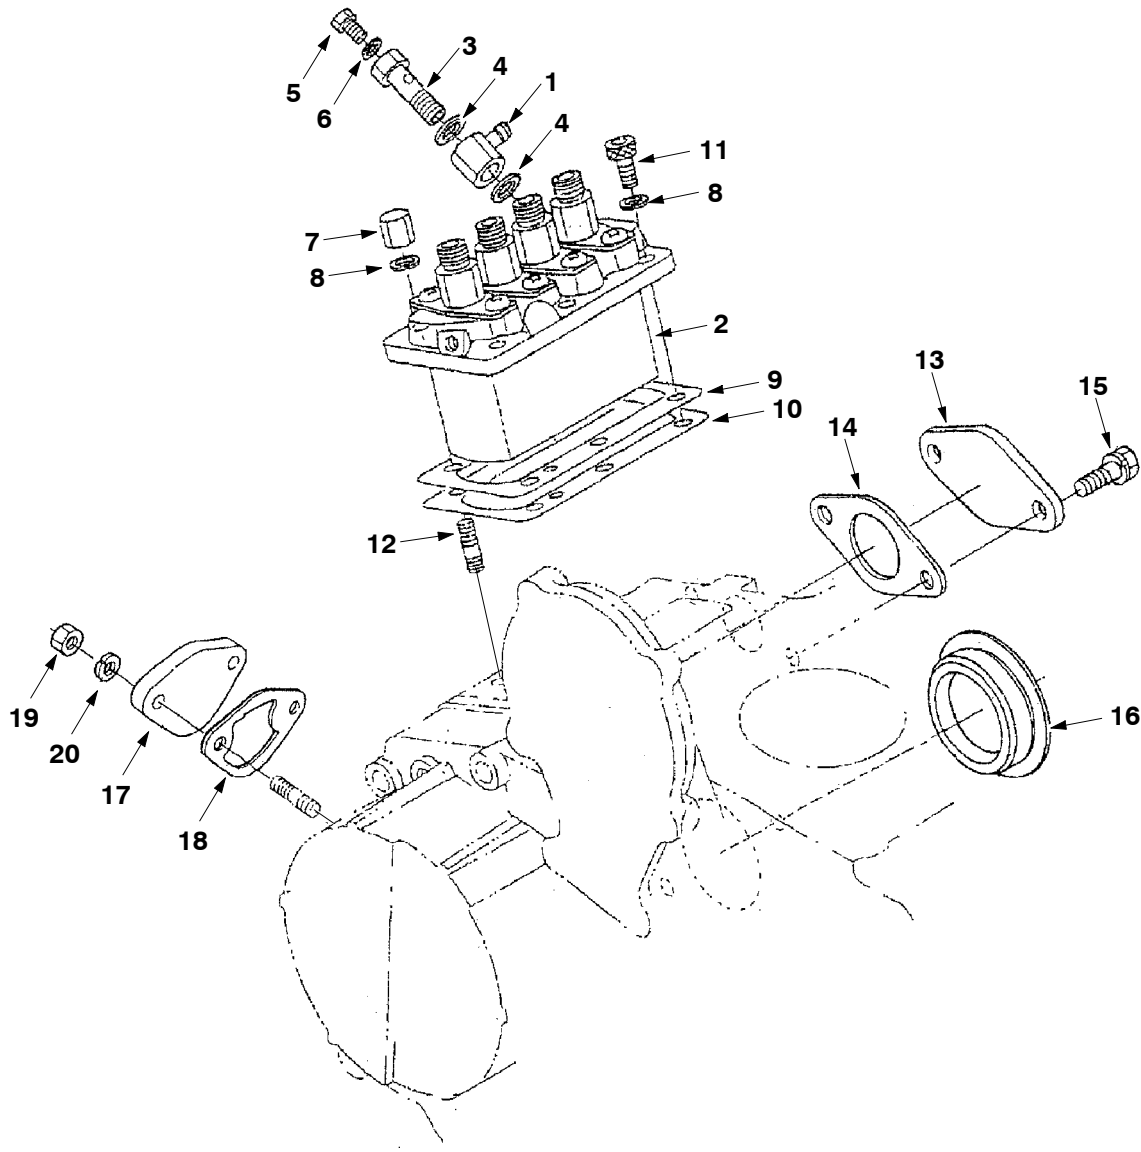


Fig. 17 - Injection Pump Group

	Ref.	Part No.	Description	Qty.
	1	9004376	Eye, Joint [Ku]	1
▽	2	84635	Pump, Injection [Kubo]	1
▲	3	84651	Follower, Screw, Pump, Injection [Ku]	1
▲	4	73588	Gasket, Ftg, Banjo [Ku]	2
▲	5	73589	Screw, Hex [Ku]	1
▲	6	73590	Gasket, F/ Screw [Ku]	1
	7	73563	Nut [Ku]	3
	8	39065	Washer, Lock, Split [Ku]	6
	9	70972	Shim	1
	9	70973	Shim	1
	10	84644	Shim, Pump, Injection	1
	11	73561	Bolt [Ku]	3
	12	73562	Stud [Ku]	3
	13	9004454	Cover, Solenoid [Ku]	1
	14	70165	Gasket, Solenoid, Throttle [Ku]	1
	15	39160	Bolt, Hex [Ku]	2
	16	70188	Cover, Hole, Pump [Ku]	1
	17	73565	Cover, Hole, Pump, Fuel [Ku]	1
	18	70974	Gasket, Pump, Fuel [Ku]	1
	19	39121	Nut, Hex [Ku]	2
	20	39065	Washer, Lock, Split [Ku]	2

Fig. 18 - Injection Pump Breakdown


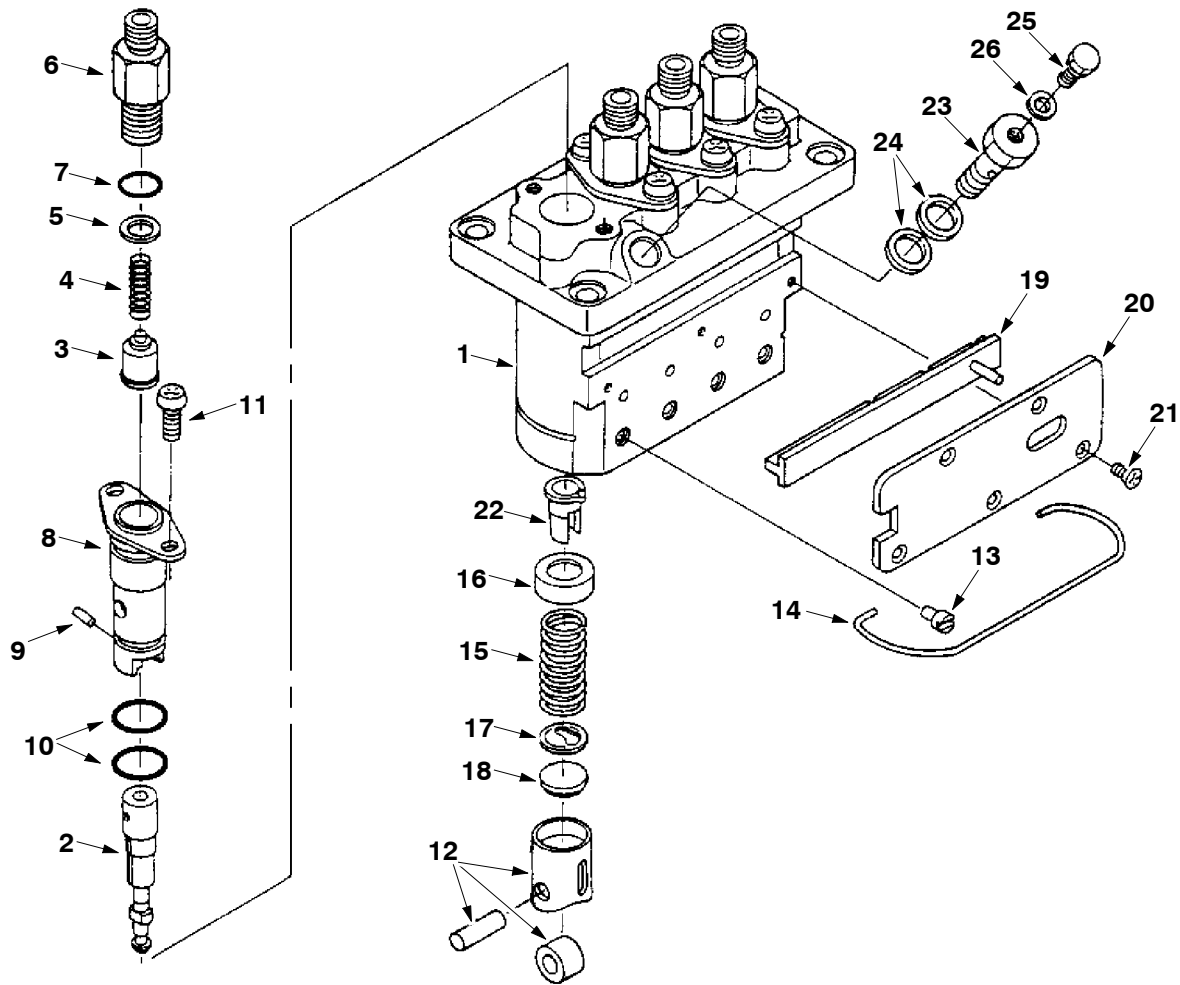


Fig. 18 - Injection Pump Breakdown


	Ref.	Part No.	Description	Qty.
▽	1	84635	Pump, Injection [Kubo]	1
▲	2	84648	Plunger, Pump, Inj [Ku]	4
▲	3	73567	Valve, Eng [Delivery, Ku]	4
▲	4	73568	Spring, Cmpr, Valve, Injector [Ku]	4
▲	5	73569	Gasket, Valve, Injector [Ku]	4
▲	6	73570	Holder, Valve, Inj [Ku]	4
▲	7	73571	Seal, Org [Ku]	4
▲	8	73572	Flange, Sleeve [Ku]	4
▲	9	73573	Pin, Joint, Inj [Ku]	4
▲	10	73574	Seal, Org [Ku]	8
▲	11	73575	Screw, Hex [Ku]	8
▲	12	73576	Tappet, Pump, Injection [Ku]	4
▲	13	73577	Pin, Tappet [Ku]	4
▲	14	73578	Pin, Clamp	1
▲	15	73579	Spring, Cmpr, Plunger [Ku]	4
▲	16	73580	Seat, Spring, Upper, Injector [Ku]	4
▲	17	73581	Seat, Spring, Lower, Injector [Ku]	4
▲	18	73582	Shim, Tappet, Injection [Ku]	1
▲	19	84649	Control, Fuel	1
▲	20	84650	Plate	1
▲	21	73585	Screw, Pump, Injection [Ku]	5
▲	22	73586	Sleeve, Cntrl, Pump, Injection [Ku]	4
▲	23	84651	Follower, Screw, Pump, Injection [Ku]	1
▲	24	73588	Gasket, Ftg, Banjo [Ku]	2
▲	25	73589	Screw, Hex [Ku]	1
▲	26	73590	Gasket, F/ Screw [Ku]	1

Fig. 19 - Idling Group

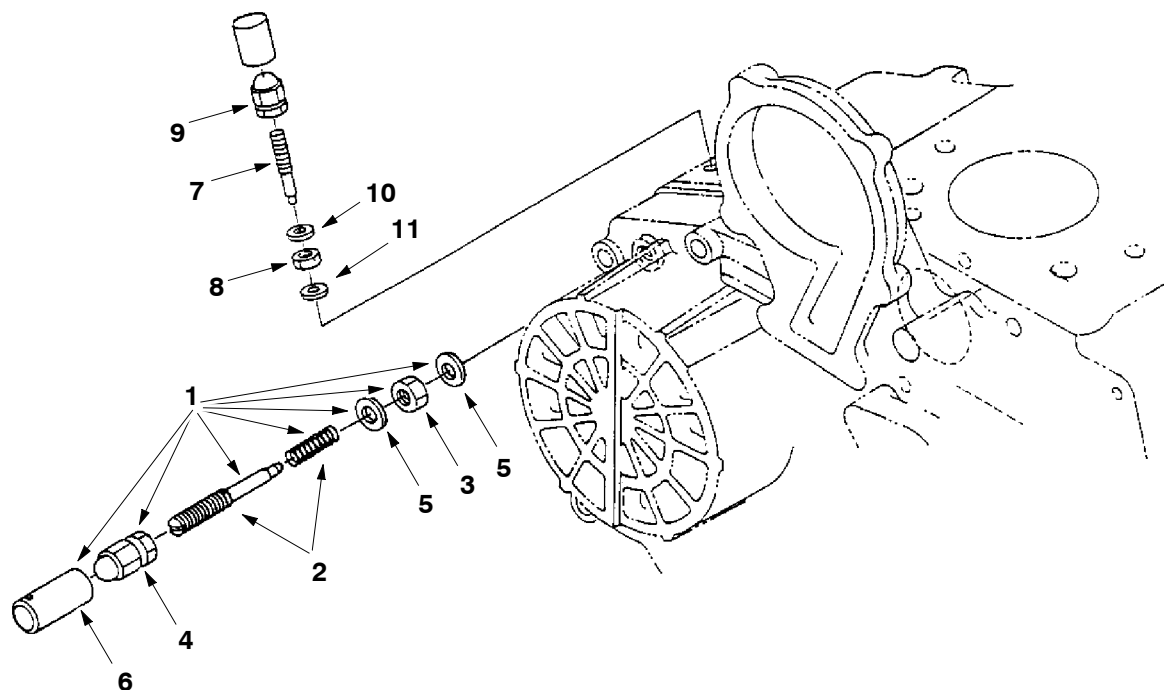

Ref.	Part No.	Description	Qty.
▽	1 9004446	Idling, Apparatus [Ku]	1
▲	2 9004447	Bolt, Adjustment Assy [Ku]	1
▲	3 73606	Nut, Hex [Ku]	1
▲	4 361375	Nut, Cap [Ku]	1
▲	5 40166	Gasket, F/ Bolt [Ku]	2
▲	6 30136	Cap, Screw, Idler [Ku]	1
	7 73610	Screw, Adj, Stop [Ku]	1
	8 9004374	Nut, Lock [Ku]	1
	9 361375	Nut, Cap [Ku]	1
	10 40166	Gasket, F/ Bolt [Ku]	2
	11 9004375	Gasket [Ku]	1


Fig. 20 - Speed Control Plate Group

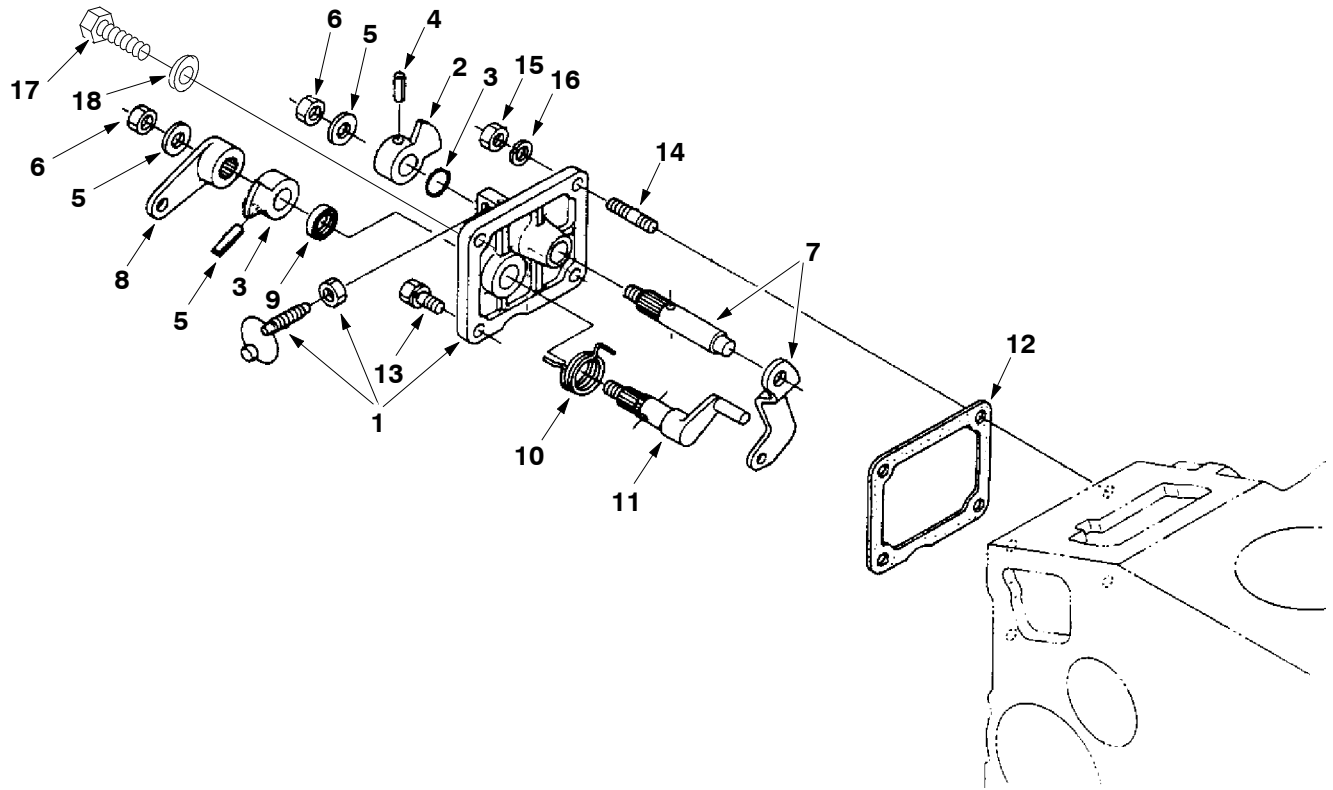

07445 - M20, D

Ref.	Part No.	Description	Qty.
▽	1 70982	Plate, Cntrl, Spd [Ku]	1
▲	2 73619	Lever, Cntrl, Spd [Ku]	2
▲	3 9004385	O- Ring [Ku]	1
▲	4 40407	Pin, Spring [Ku]	2
▲	5 73621	Washer, Flat [Ku]	2
▲	6 73622	Nut, Hex [Ku]	2
▲	7 73623	Lever, Plate, Cntrl [Ku]	1
▲	8 73624	Lever, Stop [Ku]	1
▲	9 70983	Seal, Oil [Ku]	1
▲	10 73625	Spring, Tors [Ku]	1
▲	11 73626	Shaft, Lever, Spd [Ku]	1
	12 70984	Gasket, Cover, Spd [Ku]	1
	13 41973	Bolt, Hex [Ku]	2
	14 9004386	Stud [Ku]	2
	15 39121	Nut, Hex [Ku]	2
	16 39065	Washer, Lock, Split [Ku]	2
	17 9004449	Bolt [Ku]	1
	18 40166	Gasket, F/ Bolt [Ku]	1


Fig. 21 - Governor Group

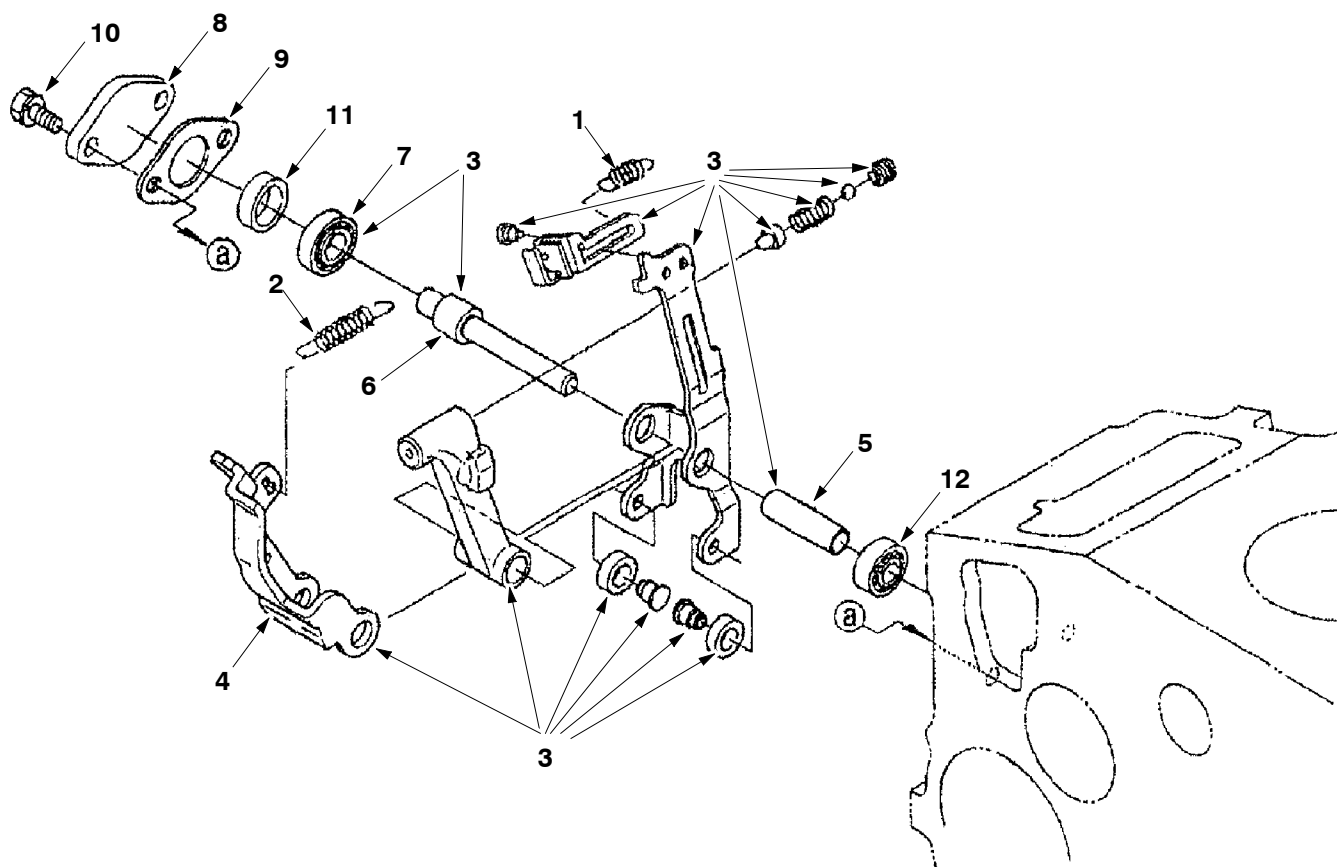

07447 - M20, D

Ref.	Part No.	Description	Qty.
1	9004379	Spring, Start [Ku]	1
2	9004448	Spring, Governor [Ku]	1
▽ 3	9004775	Lever Assy, Fork [KU]	1
▲ 4	9004381	Lever, Fork [Ku]	1
▲ 5	9004382	Lever, Fork, Shaft [Ku]	1
▲ 6	9004283	Belt Kit, W/ Installation Tool	1
▲ 7	70989	Bearing, Ball [Ku]	1
8	73631	Cover, Lever, Gov [Ku]	1
9	361430	Gasket, Cover, Gov [Ku]	1
10	71995	Screw, Hex [Ku]	2
11	70991	Collar, Govnr [Ku]	1
12	70992	Bearing, Ball [Ku]	1

Fig. 22 - Water Flange Group

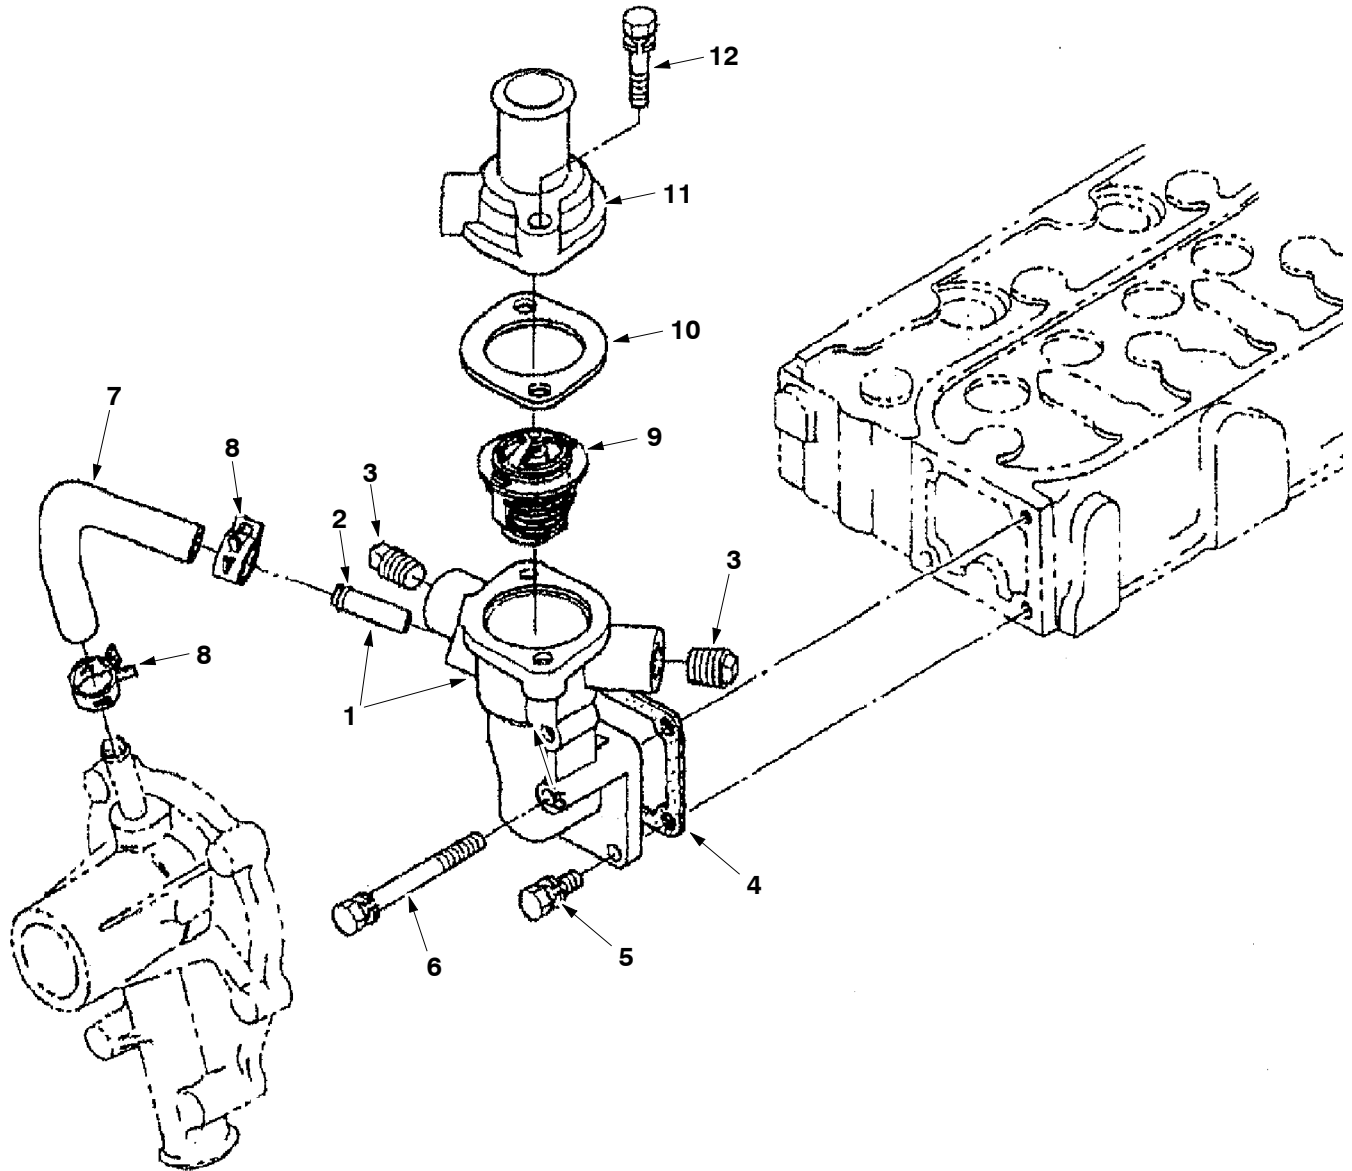

	Ref.	Part No.	Description	Qty.
▽	1	368090	Flange, Water [Ku]	1
▲	2	384859	Pipe, Water, Return	1
	3	73632	Fitting, Pipe, Plug [Ku]	2
	4	70994	Gasket, Hsg, Thermostat [Ku]	1
	5	41973	Bolt, Hex [Ku]	3
	6	384872	Bolt	1
	7	73633	Hose, Water [Ku]	1
	8	73634	Clamp, Hose, Heater [Ku]	2
	9	10852	Thermostat, 180deg, 1.7d [Ku]	1
	10	10851	Gasket	1
	11	368091	Housing, Thermostat [Ku]	1
	12	40418	Bolt [Ku]	2

SECTION 6

CONTENTS	PAGE
PART NUMBER TO PAGE NUMBER CROSS REFERENCE LIST	6-2
PART DESCRIPTION TO PAGE NUMBER CROSS REFERENCE LIST	6-14

CROSS REFERENCE

PART NUMBER TO PAGE NUMBER CROSS REFERENCE LIST

Part Number	Page Number	Part Number	Page Number	Part Number	Page Number
C460919	2-141	07789	2-13, 2-75, 3-9	09570	2-47
CD001	2-17	07790	2-11, 2-15, 2-17, 2-19, 2-27, 2-35, 2-37, 2-39, 2-43, 2-65, 3-3, 3-5, 3-21	09740	2-45, 2-73, 3-13, 3-31
Ku#1J050-21050	5-17			09771	2-63
00960	2-81			1005229	1-1, 2-50
01314	2-95			1005304	3-31
01683	2-79, 3-9, 3-31	07791	2-5, 2-15, 2-17, 2-31, 2-37, 2-39, 2-45, 2-47, 2-59, 2-87, 2-89, 2-109, 2-113, 3-15, 3-21, 3-31	1005318	3-31
01684	2-59, 2-65, 2-67, 2-97, 3-9, 3-53			1005740	2-95
01685	2-35, 2-73, 2-79, 2-83, 2-85			1007220	2-95
01686	2-69, 2-75			1007807	2-97
01754	3-15	07792	2-11, 3-21	1007953	2-113, 2-115
01762	2-97	07805	2-97	1011123	3-7
02351	2-31	07810	2-95	1012615	2-21, 2-23
02706	4-13	08175	2-87, 2-97	1013031	2-37, 2-39
02850	2-5, 2-13, 2-15, 2-73, 2-79, 3-13, 3-49, 3-51	08178	2-59	1013117	2-37, 2-39
		08179	2-85, 2-93	10143	2-35
03026	2-33	08182	2-53, 2-59, 2-85, 2-87, 2-91, 2-95, 3-7	1014563	2-43
03192	2-27, 3-51	08202	2-53, 2-55	1014977	3-31, 3-33, 3-35
03193	2-77	08236	2-69, 2-71	1014985	3-31
04706	2-25, 2-65, 2-67, 3-9	08329	2-45, 2-47	1015205	2-43
06537	2-27	08708	2-21, 2-23, 2-25, 2-29, 2-31, 2-47, 2-61, 2-63, 2-65, 2-67, 2-75, 2-113, 2-115, 3-9, 3-19, 3-21, 3-45, 3-47	1015273	2-17, 3-53
06549	2-75, 2-85, 3-3, 3-5, 3-9, 3-37, 3-55			1015274	2-15
06925	2-79			1015314	2-43
06927	2-15, 2-73, 2-79			1015455	3-33, 3-35
06928	2-13			1016029	3-15
06932	3-9	08709	2-5, 2-17, 2-27, 2-33, 2-35, 2-37, 2-39, 2-43, 2-57, 2-61, 2-75, 2-81, 2-85, 2-87, 2-91, 2-93, 2-95, 2-97, 2-109, 2-121, 3-7, 3-29, 3-31, 3-37, 3-45, 3-47, 3-51	1016314	2-35, 3-19
06933	2-13, 2-29, 3-3, 3-5, 3-27, 3-37, 3-55			1016563	3-19
06934	2-29, 3-9			1016827	2-31
06935	3-3, 3-5, 3-9			1017126	1-1, 2-31
06938	2-29, 3-3, 3-5			1017141	2-141
06940	3-19			1017218	2-19, 2-65, 2-81, 3-31, 3-49
06943	3-21			1017255	3-33, 3-35
06944	2-63, 2-75, 2-113, 2-115	08711	2-49, 2-53, 2-55, 2-67, 2-69, 2-97	1018289	2-109
06945	2-47, 2-61			1019285	3-31
06946	1-1, 2-69, 2-71	08712	1-1, 2-59, 2-63, 2-69, 2-71	1020287	3-51
06955	2-17, 2-57, 2-95, 3-21	08713	1-1, 2-65, 2-67, 2-69, 2-71, 2-85, 3-13	1020341	2-65, 2-67, 3-9
06961	2-25, 2-83			1021265	2-25
06962	2-43, 2-95	08714	2-77	1021579	1-1, 2-109
06963	2-27, 2-91	08716	3-3, 3-5	1022569	2-47
06965	2-87, 3-7	09007	2-59	1023144	5-4
06966	2-27, 3-21	09010	2-59, 2-97	1023862	2-47
06969	2-53, 2-55, 2-115	09011	2-45	1024249	2-47
06974	2-49	09062	2-65, 2-67, 2-69, 2-71, 3-9	1024260	2-25, 4-3
06975	2-97			1024478	2-25
06977	2-97	09088	2-53	1025132	2-109
07259	2-75	09120	2-97	1025133	2-109
07299	2-27	09145	2-65, 3-3, 3-5, 3-9	1026019	2-49
07450	2-93	09164	3-45, 3-47	1026459	2-91, 3-7
07471	2-113	09200	2-11, 2-79	1026462	2-91, 3-7
07514	3-31	09244	2-93, 3-5	1026525	2-91, 3-7
07785	3-3, 3-5	09252	2-75	1026605	2-57
07788	2-7, 2-9			1026610	2-57
				1026688	2-59, 3-41
				1026798	1-1, 2-65, 2-67
				1026825	2-11
				1026833	2-49
				1026841	2-55

CROSS REFERENCE

Part Number	Page Number	Part Number	Page Number	Part Number	Page Number
1026856	2-55	1031683	2-21	1034910	2-59
1027079	2-47	1031699	3-31	1034943	2-47
1027148	2-37	1031820	2-41	1034978	2-77
1027273	2-27	1031916	3-7	1035138	2-49
1027293	2-49	1031921	2-61	1035144	2-121
1027317	2-49	1031939	2-61	1035153	2-21, 2-23
1027332	2-49	1032012	1-1	1035400	2-95
1027380	2-3	1032067	3-11	1035488	2-49
1027531	2-61	1032108	2-27	1035507	2-21, 2-23
1027533	2-61	1032119	2-33	1035619	2-61
1027589	2-43	1032184	2-27	1035620	2-59
1027651	2-61	1032262	3-11	1035660	2-65, 2-67, 3-9
1028094	2-47	1032315	2-11	1035684	1-1, 2-65, 2-67
1028146	2-55	1032393	2-47	1035813	2-31
1028159	2-55	1032429	2-95	1035826	2-59
1028190	2-47	1032432	2-95	1035857	2-37
1028201	2-11	1032449	2-95	1035889	2-139
1028246	2-61	1032456	2-47	1035922	2-47
1028252	2-5	1032488	2-55	1035999	2-27
1028492	2-45	1032515	1-1, 2-55	1036014	2-21, 2-23
1028750	2-21	1032584	3-9	1036027	2-55
1028790	2-21, 2-23	1032707	3-9	1036103	2-37, 2-39
1028832	2-21, 2-23	1032722	3-11	1036157	2-63
1029018	2-27	1032752	3-9	1036173	3-3, 3-5
1029105	3-19	1032812	2-31	1036183	3-5
1029238	2-73	1032915	2-109	1036230	3-19
1029255	2-115	1032919	2-27	1036377	2-33
1029580	2-7	1032950	2-107	1036489	2-13
1029674	2-87, 2-89	1032962	2-15	1036500	2-13
1029682	2-87, 2-91, 3-7	1032993	2-47	1036502	2-13
1029689	2-35	1032995	2-47	1036564	3-21
1029704	2-87	1033034	2-47	1036608	3-23
1029709	2-87	1033237	2-61	1036702	2-85
1029801	2-9	1033286	2-11	1036801	3-31
1029951	2-21, 2-23	1033287	2-11	1036819	2-5
1030218	1-1, 2-69, 2-71	1033288	2-11	1036844	2-35
1030306	2-43	1033291	2-13	1036847	2-35
1030374	2-113, 2-115	1033343	2-7, 2-9	1036859	2-35
1030585	2-15	1033520	2-139	1036892	2-7, 2-9, 2-11, 2-15, 2-17, 2-19, 2-27, 2-31, 2-35, 2-43, 3-3, 3-5, 3-31, 3-51, 3-53
1030588	2-11, 2-15	1033575	2-31	1036913	2-5
1030592	3-15	1033578	2-5	1036985	3-3, 3-5
1030593	2-15, 2-17	1033630	2-31	1036995	3-3, 3-5
1030601	3-17	1033685	2-121, 4-22	1037139	2-63
1030813	2-21	1033746	2-31	1037265	2-85
1030972	2-139	1033760	2-21, 2-23	1037345	1-1, 2-7, 2-9, 2-31, 2-69, 2-71, 2-87, 2-89, 3-7
1030973	3-3, 3-5	1033771	2-21, 2-23	1037346	2-5, 2-11, 2-13, 2-15, 2-17, 2-29, 2-31, 2-35, 2-37, 2-39, 2-43, 2-59, 2-73, 2-79, 2-81, 2-83, 2-87, 2-89, 2-93, 2-109, 3-7, 3-13, 3-23, 3-33, 3-35, 3-45, 3-47, 3-49
1030985	2-21, 2-23	1033883	2-21, 2-23		
1031026	2-43	1033884	2-21		
1031122	2-81, 3-51	1033897	2-31		
1031207	3-15	1033969	2-25		
1031211	2-21	1033995	2-59, 2-61, 2-63		
1031503	2-5, 2-77	1034191	3-3, 3-5		
1031566	2-43	1034244	2-61		
1031576	2-79, 3-49	1034378	2-15		
1031616	3-13	1034455	2-53		
1031623	2-15, 2-43	1034462	2-53		
1031625	2-13	1034671	2-119, 4-7		
1031664	2-21, 2-23	1034760	2-85		
1031665	2-85, 3-15	1034763	2-85		
		1034806	2-45		

CROSS REFERENCE

Part Number	Page Number	Part Number	Page Number	Part Number	Page Number
1037354	2-27, 2-33, 2-55, 2-69, 2-71, 2-85, 2-91, 2-93, 2-109, 3-21, 3-31, 3-45, 3-47	1040198	2-63	1045153	3-21
1037355	2-33, 2-43, 2-53, 2-55, 2-65, 2-69, 2-71, 2-79, 2-87, 2-93, 3-37	1040276	2-67	1045155	3-21
1037358	2-11, 2-47, 2-49, 2-85, 2-93, 2-95, 3-11, 3-13, 3-21, 3-26	1040363	2-13	1045156	3-21
1037476	2-85	1040400	2-67	1045203	3-21
1037786	2-31	1040408	2-67	1045348	1-1, 2-5, 3-29
1038037	1-1, 2-65	1040467	2-25, 2-29, 2-31, 2-37, 2-39, 2-43, 2-65, 2-67, 2-79, 2-93, 2-95, 3-9, 3-13	1045352	2-7, 2-9, 3-29
1038060	2-85	1040590	2-67	1045354	1-1
1038101	2-85	1040753	2-93, 2-95	1045366	1-1
1038176	2-69, 2-71, 2-95	1040759	2-69, 2-71	1045487	2-21, 2-23, 2-85, 3-41
1038209	2-33	1040761	2-59	1045525	3-23
1038329	2-85	1040816	2-15	1045681	3-21
1038360	2-59, 3-41	1040835	2-29	1045764	2-43
1038372	2-85	1041034	2-91, 3-7	1045865	2-29
1038387	2-139	1041102	2-3	1045888	3-19
1038570	2-41	1041123	2-93	1045900	1-1, 2-83
1038806	2-11	1041393	2-45	1045964	2-93, 2-95
1038896	2-85	1041446	2-95	1045999	2-29
1038915	2-75	1041473	3-9	1046048	2-93
1038959	2-11	1041539	2-93	1046052	2-93
1039007	3-9	1041558	2-47	1046426	2-11, 2-81, 3-49
1039038	3-9	1041754	3-9	1046428	2-7, 2-9
1039127	2-81	1041870	3-21	1046613	2-31
1039208	2-35	1041873	2-21, 2-23	1046893	2-21
1039212	2-35	1041882	3-9	1046946	3-21
1039228	2-85	1042004	2-107	1046993	3-9
1039286	2-49	1042021	2-57	1047225	3-21
1039290	2-39	1042024	2-57	1047543	2-65, 2-67, 3-9
1039295	2-39	1042097	2-3	1047618	2-139
1039309	2-113	1042515	2-47	1047619	2-139
1039320	2-7, 2-9	1042718	3-9	1047691	2-11
1039327	2-49	1042785	2-93	1047717	2-83
1039388	2-39	1042791	2-7, 2-9	1047720	2-47
1039389	2-39	1042812	2-7	1047741	2-141
1039501	2-97	1042829	2-9	1047806	2-47
1039517	2-55	1042831	3-49	1047929	2-47
1039520	2-55	1042855	2-93	1048061	2-47
1039523	2-55	1043176	3-26	1048072	2-47
1039553	2-85	1043610	2-37	1048084	2-47
1039628	2-91	1043613	2-37	1048261	2-13
1039649	3-7	1043652	2-117, 2-119	1048335	2-79
1039735	3-3, 3-5	1043754	2-113, 2-115	1048353	2-79
1039752	2-63	1043755	2-113, 2-115	1048538	2-75
1039846	2-81	1044109	2-47	1048740	3-13
1039971	2-73	1044279	3-19	1048743	3-13
1039999	2-73	1044351	2-83	1049017	3-13
1040019	2-93, 3-5	1044352	2-83	1049061	3-13
1040091	2-117, 4-5	1044419	1-1, 2-69, 2-71	1049158	2-65, 2-67
1040126	3-21	1044752	2-39	1049259	3-31
1040146	2-5	1044754	2-39	1049860	2-79
1040162	2-59	1044764	2-65, 2-67	1049982	2-79
		1044768	2-65, 2-67	1050295	3-13
		1044950	1-1, 2-69, 2-71	1050757	2-27
		1044992	2-31	1051052	2-13
		1045033	3-21	1051199	2-83
		1045063	3-19	1051863	2-43
		1045125	2-109	1052552	2-43
		1045151	3-21	1053291	2-83
				1053318	2-17
				1053321	2-83

CROSS REFERENCE

Part Number	Page Number	Part Number	Page Number	Part Number	Page Number
1053523	2-51	1060449	2-15	1067103	2-107
1054256	2-87, 2-89, 3-7	1060546	3-26	1067105	3-7
1054382	2-43	1060586	3-13	1067106	2-103, 2-105, 2-107
1054428	2-43	1060639	2-15	1067109	2-103, 2-105, 2-107
1054901	2-45, 4-11	1060648	3-15	1067110	2-103, 2-105, 2-107
1054905	2-113, 4-13	1060763	2-85	1067113	2-103, 2-105
1055002	2-43	1060764	2-91	1067114	2-107
1055029	2-41	1061000	2-15	1067115	2-103, 2-105, 2-107
1055106	2-27	1061002	2-73	1067153	2-107
1055564	2-43	1061016	3-11	1067154	2-107
1056769	2-21, 2-23	1061047	2-141	1067177	2-111
1056815	2-73	1061048	2-141	1067180	2-113
1057337	2-97	1061140	3-3, 3-5	1067181	2-113
1057338	2-87, 2-89, 3-7	1061145	2-15	1067182	2-113
1057643	2-97	1061146	2-15	1067185	2-111
1057707	1-2	1061147	2-15	1067186	2-111
1057708	1-2	1061162	3-26	1067187	2-111
1057710	1-2	1061203	3-3, 3-5	1067216	3-17
1057711	1-2	1061498	2-43	1067217	3-15
1057776	2-15	1061503	2-43	1067298	2-107
1057778	2-15	1061629	3-26	1067299	2-103, 2-105
1057786	2-15	1061961	1-1, 2-53	1067300	2-103, 2-105
1057875	2-11	1062083	3-13	1067301	2-107
1057880	2-11	1062084	3-13	1067661	2-103, 2-105, 2-107, 3-7
1057890	2-33	1062944	3-17		
1057934	2-73	1062952	3-17	1067773	2-109
1057961	2-17	10632	3-15	1067869	3-13
1058133	1-1, 3-21	10632-14	3-3, 3-5	1067870	3-15
1058273	2-11	10632-8	2-11	1067872	3-13
1058404	2-43	10632-9	3-3, 3-5	1067873	3-15
1058670	2-43	1063864	3-51	1067874	3-13
1058784	2-25	1064528	2-11	1067875	3-13
1058785	2-25	1065452	2-103, 2-105	1067876	3-17
1058807	2-25	1065453	2-103, 2-105	1067877	3-17
1058996	2-25	1065781	2-113	1067878	3-13
1059052	2-43	1066063	2-73	1067879	3-17
1059211	2-15	1066933	3-15	1067880	3-17
1059221	2-19	1066952	3-13	1067881	3-17
1059252	3-13, 3-15	1066957	3-17	1067884	3-17
1059269	2-17	1066972	3-15	1067885	3-17
1059276	2-17	1066980	3-17	1067886	3-15
1059285	2-17	1067053	2-113	1067887	3-15
1059286	2-17	1067057	2-115	1067889	3-17
1059291	2-17	1067058	2-107	1067890	3-17
1059307	2-11	1067059	2-75	1067891	3-13
1059440	2-15	1067084	2-103, 2-105	1067895	3-17
1059468	2-41	1067085	2-107	1067907	3-17
1059477	2-15	1067086	2-103, 2-105, 2-107	1067910	3-15
1059478	2-15	1067087	2-103, 2-105, 2-107	1067911	3-13
1059479	2-15	1067088	2-105, 2-107, 3-7	1067912	3-24
1059481	2-15	1067089	2-103, 2-105, 2-107	1067917	3-15
1059516	2-15	1067092	2-107	1067918	3-13, 4-9
1059520	2-15	1067093	2-107	1067919	3-17
1059532	2-37, 2-39	1067094	2-103, 2-105, 2-107	1068299	2-111, 2-117, 2-119
1059868	2-19	1067095	2-107	1068687	3-15
1059874	2-15, 2-19	1067096	2-107	1068688	3-15
1059996	2-15	1067099	2-103, 2-105	1068689	3-15
1060009	2-43	1067100	2-107	1068690	3-15
1060343	2-43	1067101	2-103, 2-105	1068751	3-15
1060413	2-73	1067102	2-103, 2-105	1069019	1-2

CROSS REFERENCE

Part Number	Page Number	Part Number	Page Number	Part Number	Page Number
1069020	1-2	1076406	3-45	1212460	1-1, 2-65, 2-67
1069201	3-15	1076407	3-45	1212509	1-1, 2-65
1069210	3-13	1076408	3-45, 3-47	1212510	1-1, 2-65
1069211	3-13	1076410	3-47	1212512	2-79
1069229	3-15	1076411	3-45, 3-47	1212516	1-1, 2-65, 2-67
1069231	3-15	1076412	3-45, 3-47	1212570	1-1, 2-69, 2-71
1069232	3-13	1076413	3-47	1212592	2-81
1069310	3-15	1076437	3-31	1212709	2-81
1069311	3-17	10832	2-113, 2-115	1212756	1-1, 2-69, 2-71
1069312	3-17	10844	5-17	1212820	2-75
1069313	3-17	10845	5-17	1212838	2-5
1069314	3-15	10851	5-29	1212908	2-5, 3-29
1069315	3-15	10852	5-29	1212910	2-9, 3-29
1069316	3-13	10959	2-69	1212911	2-7, 3-29
1069317	3-15	11531	3-5	1212912	2-5, 3-29
1069318	3-15	11635	1-1, 2-65	1212959	2-5, 3-29
1069322	3-17	1201894	2-13	1213191	2-79
1069326	3-13, 3-15, 3-17	1207562	3-33, 3-35	1213221	2-79
1069330	3-15	1210746	2-79	1213263	2-65, 2-67
1069580	3-27	1210785	2-75	1213278	2-65, 2-67
1069681	3-13	1210796	2-79	1213336	2-7
1069687	3-13	1210805	2-85	1213382	2-79
1069688	3-13, 3-15	1210807	2-65, 2-69, 2-81	1213549	2-69, 2-71
1070324	3-27	1210813	2-75	1213565	2-65, 2-67, 3-9
1071053	2-45	1210931	2-75	1213604	2-65, 2-67
1071132	3-27	1210940	2-75	1213656	2-87, 2-89, 3-7
1071716	2-113, 2-115	1210948	2-75	1213673	2-65
1071717	2-113, 2-115	1210954	2-75	1213817	2-79
1072046	3-15	1210993	2-65	1213825	2-79
1072047	3-15	1210996	2-79	1213971	2-65, 2-67, 3-9
1072195	3-7	1211007	2-79	1214034	3-9
1072224	2-27	1211012	2-73	1214092	2-65
1072476	2-61	1211024	2-73	1214146	2-7, 2-9
1072531	2-103, 2-105, 2-107	1211061	2-69, 2-71	1214152	3-9
1072632	2-111	1211089	2-69	1214153	3-9
1072633	2-103, 2-105, 2-107	1211096	2-69, 2-71	1214258	3-9
1072649	2-103, 2-105, 2-107	1211263	2-79	1215033	2-81
1073794	2-139	1211353	2-83	1215646	2-73
1073795	2-139	1211378	2-83	12267	2-85, 2-93, 2-95
1074041	2-103, 2-105	1211379	2-83	12277	2-97
1074072	2-107	1211382	2-83	1227836	3-13
1074093	2-43	1211409	2-83	1231991	3-31
1074108	3-15	1211554	2-79	1231994	3-31
1074155	2-65, 2-79	1211566	2-79	1232000	3-31
1074156	2-79	1211570	2-81	1232001	3-31
1074668	2-109	1211585	2-67	1232002	3-31
1075003	2-21, 2-23	1211682	2-79	1232003	3-33, 3-35
1075296	3-5	1211685	2-83	1232004	3-35
1075297	3-3	1211691	2-81	1232023	3-31
1075327	2-83	1212087	2-75	1232027	3-31
1075439	2-91, 3-7	1212134	2-7, 2-9, 3-29	1232030	3-31
1075444	2-91, 3-7	1212137	2-5	1232051	3-31
1076268	3-49	1212149	2-79	1232065	3-33, 3-35
1076292	3-45, 3-47	1212373	2-69, 2-71	1232066	3-33, 3-35
1076396	3-45, 3-47	1212389	2-73	1232091	3-37
1076398	3-47	1212400	3-37	1232166	3-51
1076400	3-45, 3-47	1212410	2-75	1232173	3-51
1076402	3-45, 3-47	1212440	1-1, 2-69, 2-71	1232183	3-39
1076403	3-45, 3-47	1212451	2-7	1232268	3-51
1076404	3-45	1212452	2-9	1232297	3-41

CROSS REFERENCE

Part Number	Page Number	Part Number	Page Number	Part Number	Page Number
1232342	3-37, 3-54	19066	2-11, 2-15, 2-21, 2-23, 2-29, 2-73, 2-75, 2-83, 2-85, 2-93, 3-3, 3-5, 3-9, 3-21, 3-27	31525	2-35, 3-21
1232549	3-41			315396	3-51
1233504	2-79			31613	1-1, 2-109
1234043	3-51			31701	2-49
1234409	3-53			31922	3-5
1234899	3-53	19207	2-141	32126	2-45
1235597	3-51	19252	2-27	32183	2-31
1235628	3-53	19324	3-37	32483	2-25, 2-61, 2-63, 2-65, 2-73, 3-3, 3-5, 3-45, 3-47
1235630	3-53	19580	2-63		
1235750	3-53	19583	2-45, 2-47	32485	2-21, 2-23, 2-53, 2-85, 2-87, 2-97, 2-113, 2-115, 3-9
1236127	3-49	20432	5-19		
1236153	2-79	20433	5-19	32486	2-25, 2-49, 2-53, 2-55, 2-59, 2-85, 2-87
1237915	3-51, 3-54	21168	2-11, 2-75		
1239318	3-53	21195	2-65, 2-67, 3-9	32490	1-1, 2-31, 2-69, 2-71, 3-9, 3-19, 3-51
1239358	3-54	21198	2-61, 2-113		
1240476	3-49	21246	2-5	32491	1-1, 2-5, 2-7, 2-9, 2-11, 2-13, 2-15, 2-17, 2-27, 2-33, 2-37, 2-39, 2-43, 2-45, 2-47, 2-61, 2-65, 2-67, 2-69, 2-71, 2-73, 2-79, 2-81, 2-91, 2-95, 2-121, 3-7, 3-9, 3-13, 3-21, 3-29, 3-31, 3-49
1240478	3-49	21933	4-3		
1241776	3-31	21934	4-3	32492	2-7, 2-9, 2-27, 2-35, 2-37, 2-39, 2-43, 2-59, 2-65, 2-67, 2-75, 2-83, 2-87, 2-89, 2-91, 2-95, 3-7, 3-11, 3-17, 3-31, 3-51
1242544	2-73	21935	4-3		
1242555	2-73	222158	2-75, 2-109	32493	2-5, 2-39, 2-67, 2-69, 2-77
1242881	2-73	222159	3-19		
12916	5-7	222196	2-87, 2-91, 3-7	32522	2-53
13015	2-35	222236	2-61	32598	2-53, 2-55, 2-75
13248	2-61, 2-117, 2-119	222290	2-21, 2-23, 2-139, 3-37	32716	2-85, 2-93, 2-95
13773	2-97			32960	2-43
13904	4-5, 4-7, 4-22	222460	2-53, 2-55, 2-85, 2-93, 2-95	32981	3-53
13907	4-5, 4-7, 4-13, 4-15			32982	2-109
140293	3-31	222497	2-37, 2-39	32983	2-13
140841	3-53	22290	2-25, 2-91, 3-7	32984	2-35, 3-49
140916	3-27	223350	2-11	32987	2-45, 2-47, 2-97
140962	2-13	223609	2-85	32988	3-31
14242	2-53, 2-55	24012	2-37, 2-39	33580	4-11
14432	2-33	24265	2-67, 2-79, 3-49	33807	2-93
14605	2-59	24339	2-45, 2-47, 2-55	33928	2-57
150006	2-41	24358	3-31	33932	2-57
150412	3-31	24899	2-97	34159	4-17
150417	3-31	24976	2-27	34178	4-11
150709	3-19	25014	2-37, 2-39, 3-17	34816	2-21
15331	2-59	25122	2-109	34821	2-35
15555-2	2-31	25312	3-55	34823	2-35
15675	2-73, 2-79, 2-83, 2-85	25643	1-1	34877	2-27
		25887	2-97	35529	2-75
16213	2-61, 2-63	26395-2	2-5	35707	2-35
16376	2-27	26663	2-57		
16411	1-1	27767	3-19		
16412	1-1	28296	2-73		
16735	2-11, 2-15, 2-17, 2-19, 2-27, 2-113, 3-13	29558	2-85, 2-91, 3-7		
		30013	2-15, 2-65, 2-81, 3-45, 3-47		
16930	2-5, 2-39, 2-77	30125	5-10		
16931	2-81, 2-97, 3-9, 3-21, 3-45, 3-47, 3-49	30131	5-20		
		30136	5-26		
17414	2-31	30251	2-97		
19064	2-15	30252	2-97		
19065	2-5, 2-57, 2-73, 3-49	30253	2-97		
		30255	2-97		
		30406	2-83		
		30407	2-27		
		31249	2-57		
		314050	3-53		

CROSS REFERENCE

Part Number	Page Number	Part Number	Page Number	Part Number	Page Number
35886	2-45, 2-47	373291	4-11	373698	2-45
35973	2-97	373297	4-11	373699	4-13
360369	2-13	373298	4-11	373700	4-13
360370	2-13	373299	4-11	373701	4-13
360460	2-85	373317	4-13	373702	2-75
360801	2-85	373327	4-13	373703	4-17
360943	2-65, 2-73, 2-79	373336	4-13	373704	2-25
360973	2-15, 3-27	373337	4-13	373705	4-22
361023	2-109	373346	4-13	373706	4-22
361075	2-21, 2-23	373374	4-17	373707	2-113, 2-115
361366	5-4	373375	4-17	373708	2-113, 2-115
361373	5-20	373389	4-13	373720	4-15, 4-17
361374	5-7, 5-10	373391	4-13	374000	2-141
361375	5-26	373393	4-13	374224	2-141
361389	5-7	373394	4-13	374560	2-45
361392	5-12	373395	4-13	374563	2-45
361395	5-17	373396	4-13	37460	4-15
361401	5-7	373398	4-13	37462	4-15
361428	5-4	373402	4-13	374710	2-53
361430	5-28	373406	4-17	377084	2-21, 2-23
361436	5-3	373407	4-15	377165	2-5
361440	5-8	373408	4-15	377249	2-97
361589	5-12	373409	4-15	377537	1-1
363087	2-93, 2-95	373410	4-15	377538	1-1
36328	2-49, 2-67, 2-69, 2-97, 2-115	373412	4-17	377540	1-1
363976	2-57	373413	4-13, 4-17	379656	2-29
364779	2-31	373414	4-15	379684	2-93
364805	2-37, 2-39	373415	4-15	379686	2-93
365066	2-31	373429	4-13	380521	2-27
36643	2-35	373430	4-13	380559	2-29
367403	2-85	373431	4-13	381391	2-43
367404	2-75	373434	4-13	383000	3-9
367679	2-65, 2-67	373435	4-11	383139	2-97
367950	3-9	373436	4-11	383142	2-97
367974	3-9	373437	4-11	383143	2-97
368090	5-29	373438	4-11	383161	2-5
368091	5-29	373493	4-13	383194	2-95
368197	2-95	373543	4-11	383202	2-141
369481	2-49	373545	4-11	383203	2-97, 2-141
369704	2-5	373619	2-25	383205	2-93, 2-95
369746	1-1, 2-33	373637	4-5, 4-7	383255	2-49
369747	2-33	373639	4-5, 4-7	384418	2-79, 3-51
369781	2-53, 2-55, 2-85	373640	4-5, 4-7	384419	2-79
370008	2-3	373642	4-5, 4-7	384859	5-29
370009	2-3	373646	4-5, 4-7, 4-22	384871	5-9
370181	2-7, 2-9, 2-50, 2-55	373647	4-5, 4-7	384872	5-7, 5-11, 5-29
371017	5-9	373655	4-22	384874	5-10
372901	5-10	373656	4-5, 4-7	385685	3-31
372904	5-10	373657	4-5, 4-7	388153	2-25
372905	5-11	373658	4-5, 4-7	388500	5-21
372906	5-5	373663	4-5, 4-7	38968	4-11
372907	5-5	373665	4-5, 4-7	39005	2-53, 2-91, 3-7
372912	5-10	373678	4-17	39051	5-3
372913	5-10	373684	4-5, 4-7	39062	5-3
372917	5-20, 5-21	373685	4-5, 4-7	39065	5-7, 5-23, 5-27
372928	5-10	373690	4-5, 4-7	39073	5-4, 5-5
373218	4-15	373691	4-5, 4-7	39087	5-3
373226	4-11	373692	4-5, 4-7	39088	5-3, 5-5
373236	4-11	373693	4-7	39094	5-4
		373694	4-5, 4-7	39121	5-7, 5-23, 5-27

CROSS REFERENCE

Part Number	Page Number	Part Number	Page Number	Part Number	Page Number
39160	5-23	41139	2-35, 2-73	51332	2-37, 2-39, 5-11
39197	5-15	41140	2-27, 2-65, 2-79, 2-83, 3-21	51338	2-45, 2-47, 2-53, 2-55
39239	2-21, 2-23	41141	2-35	51339	2-45, 2-47, 2-53, 2-55
392611	2-35	41142	2-5, 2-27	51534	2-91, 3-7
39272	2-35	41178	1-1, 2-65	51538	2-59, 2-87, 2-91, 3-7
39277	2-17, 2-35, 2-43, 2-47, 2-57, 2-81, 3-13, 3-51	41186	2-35, 2-61, 2-97, 3-21	51560-5	2-33
39278	2-37, 2-39, 2-85	41187	2-7, 2-9	51564	2-97
39279	2-75, 2-121	41342	2-5, 2-35, 2-85, 3-29, 3-49	51715	2-97
39283	2-27, 2-35, 2-49, 3-11, 3-31	41359	2-59, 2-61, 2-63	51813	2-85
39284	2-27, 2-61, 2-75	41361	2-35	52405	4-11
39285	2-27, 2-75, 2-117, 2-119, 3-21	41430	2-5, 2-27, 2-35, 2-39, 2-43, 2-55, 2-61, 2-75, 2-85, 2-95, 3-11, 3-21, 3-51	53029	2-31
39311	2-85	41517	2-49	53468	2-87, 2-89, 3-7
39312	2-95	41619	2-7, 2-9, 2-49	53816	2-50
39313	2-49	41973	5-13, 5-15, 5-27, 5-29	53817	1-1, 2-50
39322	2-83	42011	2-35	53818	2-50
393244	1-1, 2-35	42120-1	2-75	53819	2-50
393359	3-21	43290	2-91, 2-95, 3-7	53819-2	2-50
393370	3-21	43454	2-73, 3-51, 3-53	54051	2-45, 2-47
393371	3-21	43555	3-21	54052	2-45, 2-47
393400	5-17	43611	2-17	54086	2-47
393401	2-29	43844	2-31, 2-41, 2-43, 3-31, 3-33, 3-35	54087	2-45, 2-47
39349	2-27, 2-35, 2-43, 2-45, 2-61, 2-85, 3-13	44906	2-73	54182	2-5
39350	2-45, 2-47, 2-117, 2-119	44961	2-41, 2-87, 2-89	54190	1-1
393504	5-5	45181	2-57	54204	2-97
393566	5-20	45261	2-87, 2-91, 3-7	54274	2-43, 2-117, 2-119
393570	5-3	45622	4-11	54333	2-31
393588	5-8	45623	4-11	54390	2-53, 2-55
393598	5-12	45780	2-5	54400	2-53, 2-85
39394	2-87, 2-89, 3-7	45786	2-50, 2-55	54577	2-53
39395	2-97	46236	2-79, 3-31, 3-37	54878	2-97
394922	2-21, 2-23	46480	2-121	54911-16	2-27
39507	5-20	46482	2-109, 2-117, 2-119	54911-32	2-41
39562	2-53	46559	2-87, 2-89, 3-7	54922	2-3
395973	2-117, 2-119	46563	2-57	54923	2-3
396810	2-121	47167	3-19	54925	2-3
397826	2-85	47501	2-87, 2-89, 3-7	54927	2-3
397889	2-21, 3-9	47566	2-31	54995	2-85, 2-93
398279	1-1, 2-33	47585	2-25	55248	3-37
398481	2-141	47801	2-45, 2-47	55779	2-97
398501	2-21, 2-23, 3-54	48419	3-53	55837	2-27
398508	2-21	48985	2-53	55845	3-21
398528	2-21, 3-37	49034	3-11, 3-13	55847	5-8
398806	2-17, 2-19	49177	2-13	55849	2-27
39923	3-51	49266	2-31, 2-43, 3-3, 3-5, 3-37	55926	4-13
40166	5-20, 5-26, 5-27	49697	2-73, 3-51	56185	2-25
40352	2-53	49800	2-13, 2-15, 2-73	56186	2-21, 2-23, 2-29, 3-37
40407	5-27	49891	3-49	56228	2-97
40409	5-11	50850	2-83	57248	3-33, 3-35
40418	5-29	51109	2-57	57315	2-45
40607	2-79	51225	2-87, 2-91, 3-7	57773	2-27
40625	2-111			57824	2-97
40678	2-31			58056	2-47
41016	3-33, 3-35			58078	2-53
				58228	2-27
				58286	2-27, 2-35
				58592	2-109
				58842	2-45

CROSS REFERENCE

Part Number	Page Number	Part Number	Page Number	Part Number	Page Number
59009	2-57	70200	5-19	70974	5-23
59015	2-31	70201	5-19	70977	5-13
59192	2-7, 2-9	70202	5-19	70978	5-13
59194	2-9	70203	5-19	70982	5-27
59195	2-7	70204	5-19	70983	5-27
59440	2-3	70205	5-19	70984	5-27
59542	2-75	70206	5-19	70989	5-28
59634	2-91, 3-7	70207	5-19	70991	5-28
59649	2-61	70208	5-19	70992	5-28
59658	2-85	70209	5-19	70994	5-29
59767	2-141	70210	5-19	70998	5-3
59899	2-85	70211	5-19	70999	5-3
60751	3-5	70212	5-19	71373	2-53
610943	3-9	70213	5-19	71385	2-29
611140	3-15	70280	2-50	71388	2-29
61456	3-31	70622	2-25	71539	2-29
61882	4-15	70623	2-25	71579	2-5
61886	4-17	70709	2-25	71985	5-3
630448	2-69, 2-71	70717	2-25	71986	5-3
63296	2-75	70887	5-3	71987	5-3
63378	2-13	70888	5-3	71988	5-3
63511	2-109	70889	5-4	71990	5-3
63810	2-27, 3-19	70897	5-5	71991	5-3
64173	2-85	70900	5-7	71992	5-3
64425	2-85	70901	5-7	71993	5-3
64489	2-61	70902	5-7	71995	5-28
64886	2-45	70903	5-7	71996	5-5
64887	2-45	70904	5-7	71997	5-5
65145-1	2-113, 2-115	70905	5-7	71999	5-5
65215	2-109	70906	5-7	72010	5-5
66018	2-3	70907	5-7	72013	5-7
66019	2-3	70911	5-7	72014	5-7
66187	5-4	70912	5-7	72015	5-7
66188	2-141	70913	5-7, 5-10	72016	5-7
66194	5-5	70919	5-8	72019	5-7
66204	5-17	70920	5-8	72381	2-141
66207	5-17	70923	5-9	72489	2-31
66211	2-53	70924	5-9	72926	2-45, 2-49
66213	2-53	70925	5-9	72968	2-5, 2-43, 2-67
67366	2-75	70929	5-10	72970	2-25, 2-29
67665	2-55	70934	5-11	72977	2-35
67767	2-69, 2-79	70935	5-11	72993	5-7
68872	2-35	70936	5-12	72994	5-7
69461	2-13	70937	5-12	72998	5-9
69904	2-5	70941	5-17	73281	2-45
69915	2-5	70942	5-17	73411	2-61, 2-63
69972	2-67, 2-69	70943	5-17	73471	2-41
70096	4-13	70945	5-17	73479	5-9
70100	4-13	70946	5-17	73481	5-11
70157	2-45, 2-69, 2-71, 2-87, 2-89, 2-121	70947	5-17	73482	5-10
70158	2-53	70948	5-9	73483	5-10
70161	2-53	70954	5-17	73484	5-10
70165	2-29, 5-23	70955	5-17	73487	5-11
70173	2-31	70956	5-18	73488	5-11
70188	5-23	70965	5-20	73489	5-11
70196	5-19	70966	5-20	73491	5-12
70197	5-19	70967	5-20	73492	5-12
70198	5-19	70968	5-20	73493	5-12
70199	5-19	70972	5-23	73494	5-12
		70973	5-23	73497	5-12

CROSS REFERENCE

Part Number	Page Number	Part Number	Page Number	Part Number	Page Number
73498	5-12	73589	5-23, 5-25	74266	4-15
73499	5-12	73590	5-23, 5-25	74267	4-15
73500	5-12	73593	5-13	74271	4-17
73502	5-12	73594	5-13	74272	4-15
73504	5-12	73596	5-13	74273	4-15, 4-19
73506	5-12	73597	5-13	74274	4-17
73507	5-12	73598	5-13	74275	4-17
73508	5-12	73599	5-13	74276	4-15
73509	5-15	73600	5-13	74277	4-17
73511	5-15	73601	5-13	74278	4-17
73512	5-15	73602	5-13	74280	4-15
73513	5-15	73603	5-13	74281	4-15
73514	5-15	73604	5-13	74282	4-17
73515	5-15	73606	5-26	74405	2-27, 5-19
73516	5-15	73610	5-26	74455	2-83
73517	5-15	73619	5-27	75934	2-61, 2-63
73518	5-15	73621	5-27	75968	2-25
73519	5-15	73622	5-27	762156	2-109
73520	5-17	73623	5-27	762179	2-87, 2-89
73521	5-17	73624	5-27	762180	2-41
73522	5-17	73625	5-27	762425	2-75, 2-81, 2-109
73523	5-17	73626	5-27	762426	2-45, 2-117, 2-119
73524	5-17	73631	5-28	762427	2-47, 2-69, 2-71, 2-91, 2-95, 2-121, 3-7
73525	5-17	73632	5-29	762428	2-25, 2-43, 2-95, 2-121
73526	5-17	73633	5-29	762432	2-45, 2-47
73527	5-17	73634	5-29	762433	2-25, 2-117, 2-119, 2-121
73528	5-17	73737	2-35	762438	2-25, 2-121
73529	5-17	74027	3-17	762439	2-87, 2-89, 2-113, 2-115, 3-7
73530	5-17	74098	4-5, 4-7	762445	2-81, 2-97, 2-117, 2-119
73532	5-17	74122	4-11	762456	2-43, 2-113, 2-115
73533	5-18	74123	4-11	762463	2-109
73545	5-19	74165	4-11	762466	2-113
73547	5-19	74166	4-11	762468	2-45, 2-115
73551	5-19	74167	4-11	762469	2-109, 2-113
73554	5-20	74168	4-11	762481	2-109
73555	5-20	74180	4-13	762484	2-109
73560	5-20	74183	4-3	762492	2-109, 2-111
73561	5-23	74184	4-15	762516	2-139
73562	5-23	74185	4-3	763042	2-85
73563	5-23	74193	4-3	763045	3-9
73565	5-23	74196	4-3	763114	3-33, 3-35
73567	5-25	74210	4-15	764183	3-31
73568	5-25	74222	4-3	76426	3-13
73569	5-25	74223	4-15	76570	2-7, 2-9, 2-27, 2-59, 2-61, 2-85, 2-91, 3-7, 3-29
73570	5-25	74225	4-13	767315	2-103, 2-105, 2-107
73571	5-25	74226	4-13	767407	2-115
73572	5-25	74232	4-3	767422	3-7
73573	5-25	74237	4-13	767430	2-117, 2-119
73574	5-25	74240	4-15	767441	2-103, 2-105, 2-107
73575	5-25	74243	4-3	769077	2-117, 2-119
73576	5-25	74244	4-3	76956	2-35
73577	5-25	74245	4-3	76957	3-21
73578	5-25	74249	4-11		
73579	5-25	74254	4-15		
73580	5-25	74256	4-15		
73581	5-25	74257	4-15		
73582	5-25	74258	4-15		
73585	5-25	74259	4-13, 4-17		
73586	5-25	74262	4-15		
73588	5-23, 5-25	74265	4-15		

CROSS REFERENCE

Part Number	Page Number	Part Number	Page Number	Part Number	Page Number
769778	3-33, 3-35	87316	2-13	9004409	5-12
77002	2-31	87738	2-43	9004410	5-12
77003	4-5, 4-7	87816	2-57	9004431	5-3
77005	4-5, 4-7, 4-22	9000355	2-31	9004432	5-7
77006	4-5, 4-7	9001101	5-21	9004433	5-10
771090	2-25	9003868	5-8	9004435	5-4
77214	2-27	9003869	5-8	9004436	5-9
77345	2-45	9003870	5-8	9004437	5-9
79380	3-9	9003888	5-4	9004438	5-9
79381	2-41	9003891	5-18	9004439	5-9
79742	4-15	9003933	3-55	9004440	5-15
79747	4-15	9004086	3-56	9004442	5-18
79748	4-17	9004087	3-56	9004443	5-18
79749	4-17	9004088	3-56	9004444	5-18
79750	4-17	9004089	3-56	9004445	5-13
79751	4-17	9004090	3-56	9004446	5-26
79752	4-17	9004283	5-28	9004447	5-26
79753	4-17	9004325	2-23	9004448	5-28
79754	4-19	9004335	5-3	9004449	5-27
79755	4-19	9004337	5-3	9004450	5-20
79756	4-19	9004338	5-4	9004451	5-20
79757	4-19	9004339	5-4	9004454	5-23
79758	4-19	9004340	5-5	9004513	2-23
79759	4-19	9004341	5-5	9004517	2-37, 2-39
79760	4-19	9004346	5-7	9004518	2-109
79761	4-19	9004347	5-7	9004522	2-35
79762	4-19	9004348	5-4	9004523	2-35
79763	4-19	9004349	5-9	9004526	3-23
79764	4-19	9004350	5-9	9004527	2-75
79765	4-19	9004358	5-15	9004528	2-21, 2-23
79766	4-19	9004361	5-17	9004529	2-21
79767	4-19	9004363	5-17	9004545	1-1, 2-21, 2-23
79776	4-19	9004368	5-13	9004574	2-59
79779	4-15	9004369	5-13	9004575	2-59
79828	4-11	9004371	5-13	9004590	4-9
79868	2-121	9004372	5-13	9004591	4-9
80061	2-21, 2-23, 3-13	9004373	5-13	9004592	4-9
80395	2-87, 2-91, 3-7	9004374	5-26	9004593	4-9
81710	3-21	9004375	5-26	9004594	4-9
82733	2-65, 2-67	9004376	5-23	9004595	4-9
82829	2-73, 3-33, 3-35	9004379	5-28	9004596	4-9
82839	2-59	9004381	5-28	9004597	4-9
84170	2-61, 2-63	9004382	5-28	9004598	4-9
84581	2-87, 2-89, 3-7	9004385	5-27	9004599	4-9
84635	5-23, 5-25	9004386	5-27	9004600	4-9
84636	5-13	9004389	5-20	9004601	4-9
84638	5-20	9004390	5-20	9004602	4-9
84644	5-23	9004393	5-20	9004603	4-9
84648	5-25	9004395	5-21	9004644	1-1
84649	5-25	9004396	5-21	9004645	3-56
84650	5-25	9004397	5-21	9004646	3-56
84651	5-23, 5-25	9004398	5-21	9004647	3-56
84660	3-56	9004399	5-21	9004648	3-56
86240	2-53, 2-93, 2-95	9004400	5-21	9004649	3-56
86618	2-83	9004402	5-8	9004650	3-56
86636	3-31	9004403	5-8	9004651	3-56
86799	2-11	9004404	5-8	9004652	3-56
86866	2-59	9004405	5-8	9004653	3-56
86953	2-85	9004406	5-8, 5-11	9004654	3-56
87172	3-26	9004407	5-8	9004655	3-56

Part Number	Page Number	Part Number	Page Number
9004656	3-56	9013364	2-79
9004657	3-56	9013366	2-65, 2-67
9004658	3-56	9013446	3-9
9004659	3-56	9013447	3-9
9004660	3-56	9013448	3-9
9004661	3-56	9013873	3-9
9004662	3-56	9014656	3-17
9004663	3-56	9015652	2-91, 3-7
9004664	3-56	9016474	3-31
9004665	3-56	9017882	3-45
9004666	3-56	9017883	3-47
9004667	3-56	9018569	2-73
9004668	3-56	9018734	4-21
9004727	3-56	9018735	2-13, 4-21
9004728	3-56	99321	1-2
9004775	5-28	99997	2-50
9004865	2-55		
9004867	2-55		
9004868	2-55		
9004869	2-55		
9004870	2-55		
9004871	2-55		
9004873	2-55		
9005007	1-1		
9007131	3-3, 3-5		
9007973	2-19		
9007974	2-15		
9007975	2-15		
9007976	2-17		
9007977	2-11		
9007978	2-11		
9007979	2-11		
9008178	3-56		
9008195	3-26		
9008198	3-5		
9008199	3-3		
9008200	3-11		
9009218	3-13		
9009219	3-13		
9009220	3-17		
9009247	2-79		
9010085	3-27		
9010086	3-27		
9011154	2-117, 2-119		
9011419	2-75		
9011491	3-56		
9012585	4-21		
9012587	4-21		
9012589	4-21		
9012591	4-21		
9012592	4-21		
9012593	4-21		
9012594	4-21		
9012595	4-21		
9013113	3-7		
9013115	1-1, 2-65		
9013116	1-1, 2-69, 2-71		
9013137	3-29		
9013315	3-56		
9013317	3-56		

PART DESCRIPTION TO PAGE NUMBER CROSS REFERENCE LIST

A

Actuator, Govnr, Dsl, 2-29
 Actuator, Valve En, 4-17
 Actuator, Valve, Bypass, 4-13
 Adapter, Actuator, Govnr, Eng, Dsl, 2-29
 Adapter, Hsng, Flywheel [1505, Kubo], 2-27
 Adaptor Assy, Pump, Hyd, 4-13
 Adjuster Kit, Manual, W/ Pivot, 2-55
 Alarm Assy, Backup, 12-24vdc 82-107dba, 3-3, 3-5
 Alternator, 12vdc, 075a [Valeo], 2-35
 Angle, 2-91, 3-7
 Angle Wldt, Bmpr, Tower, Lh, 3-26
 Angle Wldt, Bmpr, Tower, Rh, 3-26
 Angle Wldt, Mtg, Shagr, 2-83
 Angle, Keeper, Cable, 2-93
 Angle, Mtg, Cover, Hppr, 2-73
 Angle, Mtg, Ground, 3-21
 Antenna, Telem, 110 In [Gprs], 3-27
 Arm Wldt, Alternator, Dsl, 2-35
 Arm Wldt, Brush, Main, Drive, Lh, 2-97
 Arm Wldt, Brush, Side, 2-87, 2-91, 3-7
 Arm Wldt, Hppr, Rear Dump, 2-75
 Arm Wldt, Lever, 2-85
 Arm Wldt, Neutral, 2-61
 Arm, Brush, Main, W/ Label, 2-97
 Arm, Brush, Side, 2-87
 Arm, Control En, 4-15
 Arm, Linkage, Side Brush, 2-91, 3-7
 Arm, Rocker [Ku], 5-12
 Arm, Safety, Hppr, W/ Label, Replmt, 2-75
 Arm, Wiper, Windshield, 3-13
 Armature, Motor [Ku], 5-19
 Armrest, 4-21
 Axle Wldt, Rear, 4 Wheel, 2-47

B

Backplate S/A En, 4-17
 Ball, Cshft [Ku], 5-17
 Ball, Relief, Oil [Ku], 5-7
 Bar, Flat, Ss 0.12 1.5 X 18.5l, 4/0.5h, 2-65
 Bar, Flat, Stl 0.19, 01.50 X 04.1l, 2-45
 Bar, Flat, Stl 0.38, 01.00 X 03.3l, 2-31
 Bar, Flt, Stl 0.38, 01.50 X 03.0l, 1/6h, 2-49
 Battery, Wet, 12vdc 0600cca, 2-35
 Bearing, 4-15, 4-17, 5-19
 Bearing [Ku], 5-8
 Bearing Assy, Cup / Cone, 45mmb, 2-47
 Bearing Kit [Cl], 4-3
 Bearing, Ball [Ku], 5-13, 5-28
 Bearing, Ball, 8mmb X 22mmd X 7mmw, 2-61
 Bearing, Ball, 1.38b 2.83d 0.67w, 2-97
 Bearing, Case [Ku], 5-9
 Bearing, Cone, 1.38b 0.71w, 2-45, 2-47, 2-53, 2-55
 Bearing, Cone, Pump, Hyd, 4-13

Bearing, Cshft [Ku], 5-17
 Bearing, Cshft, -.2mm [Ku], 5-17
 Bearing, Cshft, Std [Ku], 5-9, 5-17
 Bearing, Cup, 4-13
 Bearing, Cup, 2.56d 0.55w, 2-45, 2-47, 2-53, 2-55
 Bearing, Flng, 0.75b 1.00d 0.75l, Bnz, 2-61
 Bearing, Flng, 2hole, 0.50b, 2-25
 Bearing, Flng, 2hole, 0.50b [Nyl], 2-25
 Bearing, Flng, 2hole, 0.75b, 2-57
 Bearing, Journal-1.25 I.D. X .75 Lg, 2-69, 2-71
 Bearing, Rod, Connecting [-.2mm, Ku], 5-17
 Bearing, Rod, Connecting [-.4mm, Ku], 5-17
 Bearing, Rod, Connecting, Std [Ku], 5-17
 Bearing, Self Align, 1.25b 2.00d, 2-75
 Bearing, Thrust [-.4mm, Ku], 5-17
 Bearing, Thrust [Ku], 5-17
 Bearing, Thrust, 0.66b 1.25d 0.06w, 2-93
 Bearing, Thrust, Pump, Hyd, 4-13
 Bearing, Thrust, Std [Ku], 5-17
 Bearing, W/ Collar, 0.75b 1.85d 1.06w, 2-97
 Bell Crank, 4-19
 Bellows, Seat, 4-21
 Belt Kit, W/ Installation Tool, 5-28
 Belt, V, 37.3l [Ax], 1-1, 3-21
 Belt, V, 42.0l [Hc41], 1-1, 2-35
 Belt, V, 42.5l [3v], 1-1
 Bezel, Switch [3 Gang], 2-21, 2-23
 Blade, Wiper, Windshield, 3-13
 Block, Nylon, 2-65, 2-67, 3-9
 Block, Spacer, Hinge, 3-9
 Blown, Fan, Motor, 4-9
 Bolt, 5-7, 5-9, 5-11, 5-12, 5-19, 5-29
 Bolt [Ku], 5-4, 5-8, 5-11, 5-18, 5-23, 5-27, 5-29
 Bolt, Adjustment Assy [Ku], 5-26
 Bolt, Carriage, M8 X 1.25 X 30, 1-1, 2-65, 2-67
 Bolt, Carriage, M8 X 1.25 X 40, 2-5
 Bolt, Eye, M10 X 1.50 X 117mm, 08.00 Eye, 2-95
 Bolt, Flng, 5-8
 Bolt, Hex [Ku], 5-13, 5-15, 5-23, 5-27, 5-29
 Bolt, Hold-Down, Battery 08.5l, 2-35
 Bolt, Motor, Hyd, 4-11
 Bolt, Shld, .25d X 1.25, #10-24, 2-57
 Bolt, Shld, .31d X 1.00, .25-20, 2-61, 2-63
 Bolt, Shld, 1.37d X 5.13l, 1.1-18 Drilled, 2-45
 Bolt, U, .50-20 X 6.00, 4.13id, 2-49
 Boot, 90deg .50id 1.00id 2.50l, Red, 2-35, 3-19
 Boot, Bellows, 3.1l 4.4w 2.8h 1hole, Neo, 2-25

Boot, Terminal, Battery, 02-01ga, Blk, 2-35
 Box, Instrument, li, Trimmed, 2-21, 2-23
 Box, Lower, Cyclone, Trimmed, 2-79
 Box, Pre-Filter, Upper, 2-79
 Brace Wldt, Sppt, 2-15
 Brace Wldt, Sppt, Water Tank, 3-31
 Bracket Wldt, 2-79, 2-85
 Bracket Wldt, Arm, 2-85
 Bracket Wldt, Brush, Side, 2-85
 Bracket Wldt, Door, 2-69, 2-71
 Bracket Wldt, Door, Front, 2-65, 2-67, 3-9
 Bracket Wldt, Exhaust, Hepa [Gen li S30], 3-53
 Bracket Wldt, Fan Mtg, Press Sw Mtg, 3-49
 Bracket Wldt, Fltr, 2-83
 Bracket Wldt, Fltr Tray, Hepa [Gen II], 3-51
 Bracket Wldt, Linkage, Propel [Mits], 2-61
 Bracket Wldt, Mtg, Alternator, Dsl, 2-35
 Bracket Wldt, Mtg, Bmpr, 3-26
 Bracket Wldt, Mtg, Bumper, 2-75
 Bracket Wldt, Mtg, Compressor, 3-21
 Bracket Wldt, Mtg, Cyl, 2-95
 Bracket Wldt, Mtg, Door, Hppr, 2-69
 Bracket Wldt, Mtg, Fan, 2-81
 Bracket Wldt, Mtg, Hppr, Lh, 2-75
 Bracket Wldt, Mtg, Hppr, Rh, 2-75
 Bracket Wldt, Mtg, Motor (S30 and XP only), 2-43
 Bracket Wldt, Mtg, Propel, 2-63
 Bracket Wldt, Mtg, Radiator, 2-43
 Bracket Wldt, Radiator (S30 and XP only), 2-43
 Bracket Wldt, Radiator (S30 X4 only), 2-43
 Bracket Wldt, Reservoir, Hyd, 2-109
 Bracket Wldt, Shagr, Filter, 2-83
 Bracket Wldt, Sppt, Cover, Rear, Rh, 2-15
 Bracket Wldt, Sppt, Pump Mtg, 3-31
 Bracket Wldt, Sppt, Radiator, Rh, 2-43
 Bracket Wldt, Sppt, Top, Tank, 3-31
 Bracket Wldt, Steering, Tilt, 2-25
 Bracket Wldt, Tube Outlet [Gen li S30], 3-53
 Bracket, Mtg, Cover, 3-13
 Bracket, Alarm, Backup, 3-3, 3-5
 Bracket, Angle, Hold-Down, Battery, 2-35
 Bracket, Angle, Keeper, Cable, 2-53, 2-85
 Bracket, Angle, Lintel, 2-17, 3-53
 Bracket, Angle, Mtg, Seat, 2-13
 Bracket, Angle, Tank Brace, 3-31
 Bracket, Angle, Tank Sppt, Top [S30], 3-31
 Bracket, Brush, Stop Adj, 2-95
 Bracket, Coil, Mtg, 4-9
 Bracket, Flap, Recirculation, 2-5
 Bracket, Grill, 2-15
 Bracket, Handle, Latch, 3-17
 Bracket, Latch, Cover, Top, 2-17
 Bracket, Latch, Keeper [Southco], 2-79
 Bracket, Latch, Lh, 2-73

Bracket, Latch, Rh, 2-73
 Bracket, Latch, Shrd, 2-15
 Bracket, Latch, Shrd, Seat, 2-11
 Bracket, Latch, Side, Door, 2-19
 Bracket, Lift, 2-93
 Bracket, Light, 3-3, 3-5
 Bracket, Mtg, Air- Clnr, 2-33
 Bracket, Mtg, Cab, 3-13
 Bracket, Mtg, Cntrl, Eng, 2-29
 Bracket, Mtg, Condenser, 2-43
 Bracket, Mtg, Cyclonics, 2-79
 Bracket, Mtg, Dual Nozzle, Lh, 3-35
 Bracket, Mtg, Dual Nozzle, Rh, 3-33, 3-35
 Bracket, Mtg, Eng [Kubota], 2-27
 Bracket, Mtg, Eng, Rear [Kubota], 2-27
 Bracket, Mtg, Heat Shield, 2-37, 2-39
 Bracket, Mtg, Isolator, 2-39
 Bracket, Mtg, Lh, 2-97
 Bracket, Mtg, Mirror, 3-11, 3-13
 Bracket, Mtg, Mirror, Lower, 3-13
 Bracket, Mtg, Mirror, Upper, 3-13
 Bracket, Mtg, Motor, Side Brush, 2-87,
 2-89, 3-7
 Bracket, Mtg, Rh, 2-97
 Bracket, Mtg, Rocker Arm [Ku], 5-12
 Bracket, Mtg, Switch, 2-75
 Bracket, Mtg, Tube, 3-9
 Bracket, Mtg, Wand, 3-9
 Bracket, Prop, Rod, Cover, 2-17
 Bracket, Protector, Float Switch, 3-31
 Bracket, Retainer, Safety, 2-61, 2-63
 Bracket, Retainer, Seal, 2-7, 2-9
 Bracket, Seal, Flange, Vac, 3-49
 Bracket, Seal, Lh, 2-65, 2-67
 Bracket, Seal, Rh, 2-65, 2-67
 Bracket, Skirt, 2-7, 2-9, 3-29
 Bracket, Sppt, 3-21
 Bracket, Sppt, Alternator, Dsl, 2-35
 Bracket, Sppt, Cover, Rear, Lh, 2-15
 Bracket, Sppt, Hppr Seal, 1-1, 2-65, 2-67
 Bracket, Sppt, Hyd Tube, 2-113
 Bracket, Sppt, Prop Rod, [Gen II S30],
 3-51
 Bracket, Sppt, Prop, Rod, 2-17
 Bracket, Sppt, Radiator, 2-43
 Bracket, Sppt, Rear, Shrd, 2-15
 Bracket, Sppt, Rear, Tank [S30], 3-31
 Bracket, Sppt, Shrd, Rear, Lower, Lh, 2-15
 Bracket, Sppt, Shrd, Rear, Lower, Rh,
 2-15
 Bracket, Sppt, Shrd, Rear, Upper, Lh, 2-15
 Bracket, Support, Tube, 2-47
 Bracket, Switch, 2-93, 2-95
 Bracket, Switch, Reverse, 3-3, 3-5
 Bracket, U, .12, 1.2w 2.3 1.0l, 2/0.6h, 2-85
 Bracket, U, .19, 2.8w 0.9 1.0l, 1/0.3h, 2-97
 Bracket, Wldt, Mtg, Hyd, 3-7
 Bracket, Wldt, Mtg, Hyd, 2-87, 2-89
 Brake Assy, Drum, Mech, 07.9d [6600]],
 2-53
 Brake Kit, Repair, 2-53
 Brake Wldt, Parking, 2-57
 Brake, Knot, Lh, 7.0d, 2-55

Brake, Knot, Rh, 7.0d, 2-55
 Brush Kit, Side, Lh, Ci [S30], 3-7
 Brush, Disk, Swp, 25.4 D, Flat Wire, 2-3
 Brush, Disk, Swp, 26.0 D, Nylon, 2-3
 Brush, Disk, Swp, 26.0 D, Polypropylene,
 2-3
 Brush, Swp, 45L, 5 Double Row Patrol,
 Nylon, 2-3
 Brush, Swp, 45L, 8 Double Row, Nylon,
 2-3
 Brush, Swp, 45L, 8 Double Row,
 Polypropylene, 2-3
 Brush, Swp, 45L, 8 Double Row,
 Polypropylene & Wire, 2-3
 Brush, Swp, 45L, 8 Double Row, Wire,
 2-3
 Brush, Swp, 45L, 24 Single Row, Natural
 Fiber & Wire, 2-3
 Brush, Swp, 45L, 24 Single Row, Nylon,
 2-3
 Brush, Swp, 45L, Sand Wedge,
 Polypropylene, 2-3
 Brush, Swp, 45L, Window, Polypropylene,
 2-3
 Brushholder, 5-19
 Bumper Kit, Corner, Ci, [S30], 3-26
 Bumper Wldt, Front, 2-75
 Bumper, Rbr, 2.5d X 1.00, 2-49
 Bushing En, 4-15
 Bushing En, 4-17
 Bushing, Flng, 0.44b 1.25d 0.25l, 2-93,
 2-95
 Bushing, Gear, Gov [Ku], 5-3
 Bushing, Gear, Idler [Ku], 5-15
 Bushing, Pin, Piston [Ku]16241-21351,
 5-17
 Bushing, Sleeve, 0.31b 0.55d 0.38l, Oib,
 2-59
 Bushing, Sleeve, 0.37b 0.50d 0.50l, Oib,
 2-57
 Bushing, Sleeve, 0.50b 0.59d 0.38l, Stil,
 2-85
 Bushing, Sleeve, 0.50b 0.59d 0.62l, Fgl,
 2-91, 3-7
 Bushing, Sleeve, 1.00b 1.13d 0.99l, Fgl,
 2-75
 Button, Cntrl, Horn, 2-25

C

Cable, 06ga 13.0l Blk, 2-27
 Cable, 06ga 16.0l Red .38ring / .38ring,
 2-35
 Cable, Battery, 02ga 33.0l Red .38ring,
 2-35
 Cable, Battery, 02ga 36.0l Blk .38ring,
 2-35
 Cable, Brake, 2-53
 Cable, Glv .13d 010.0l .52eye / .52eye,
 3-26
 Cable, Glv .13d 063.4l .50eye / M10, 2-85
 Cable, Glv .19 24.5l .3 Eye / M10, 2-93

Cable, Glv .19d 009.88l .38eye / M10,
 2-95
 Cable, Push / Pull, 057.1l M6x1.0/M6x1.0,
 2-63
 Cable, Push / Pull, 062.5l M6x1.0/M6x1.0,
 2-61
 Cable, Push / Pull, 070.4l M6x1.0/M6x1.0,
 2-59
 Cam, 4-13
 Camplate S/A En, 4-15
 Camshaft, 5-13
 Cap Assy, Tank, Drain, 3-31
 Cap Screw En, 4-15
 Cap, Breather, Hyd, 2.4 Ds Dipstick, 2-109
 Cap, Breather, Hyd, W Chain, 2-109
 Cap, Enclosure, Hose, 3-9
 Cap, End, Valve, Steering, 4-3
 Cap, Filler, Oil [Ku], 5-7, 5-10
 Cap, Fuel, Tank, 2-31
 Cap, Hub, Dust, 2.57d 0.77l, 2-53, 2-55
 Cap, Radiator, 14psi [Stant Ao-2516],
 2-43
 Cap, Screw, Idler [Ku], 5-26
 Cap, Sealing, 5-5
 Cap, Valve [Ku], 5-12
 Cap, Valve, Tire, Tubeless [Schrader],
 2-50, 2-55
 Cap, Vinyl, 3.28d 0.45l, 2-97
 Case, Main, Brg Assy, 5-9
 Channel, 2-11
 Channel, .12, 1.5w 0.5 44.6l, 3/0.4h, 2-5
 Channel, Mtg, Fan Motor (S30 X4 only),
 2-43
 Channel, Shield, Muffler, 2-37, 2-39
 Charge Pmp Adap En, 4-17
 Clamp [Kubota], 5-8
 Clamp, Cable, Nyl, 0.62d, Nat, 3-27
 Clamp, Cable, Ss, 2.50d X 1.00w, 1hole,
 2-45, 2-69, 2-71, 2-87, 2-89, 2-121
 Clamp, Cable, Stil, 0.25d X 0.56w, 1hole,
 2-79, 3-31, 3-37
 Clamp, Cable, Stil, 0.38d X 0.38w, 1hole,
 2-5
 Clamp, Cable, Stil, 0.44d X 0.62w, 1hole,
 2-31
 Clamp, Cable, Stil, 0.63d X 0.75w, 1hole,
 2-73, 3-33, 3-35
 Clamp, Cable, Stil, 0.69d X 0.62w, 1hole,
 2-69, 2-79
 Clamp, Cable, Stil, 0.75d X 0.75w, 1hole,
 2-113
 Clamp, Cable, Stil, 0.9x1.8x0.62w, 1hole,
 2-47
 Clamp, Cable, Stil, 1.0x2.0x0.62w, 1hole,
 2-75
 Clamp, Cable, Stil, 1.75d X 1.00w, 1hole,
 2-87, 2-89, 3-7
 Clamp, Cable, Stil, 2.25d X 1.00w, 1hole,
 3-33, 3-35
 Clamp, Cable, Stil, 3.25d X 1.00w, 1hole,
 3-33, 3-35
 Clamp, Hose, 5-10
 Clamp, Hose, Heater [Ku], 5-29

CROSS REFERENCE

Clamp, Hose, Wormdrive, 0.25-0.62d, .31w, 2-31, 2-41, 2-43, 3-31, 3-33, 3-35
 Clamp, Hose, Wormdrive, 0.31-0.88d, .31w, 2-31
 Clamp, Hose, Wormdrive, 0.56-1.06d, .56w, 2-27, 3-19
 Clamp, Hose, Wormdrive, 1.06-2.00d, .56w, 3-5
 Clamp, Hose, Wormdrive, 1.25-2.00d, .50w, 2-41
 Clamp, Hose, Wormdrive, 1.81-2.75d, .50w, 2-33
 Clamp, Hose, Wormdrive, 2.50-3.50d, .50w, 3-21
 Clamp, Hose, Wormdrive, 3.75-4.62d, .62w, 3-9
 Clamp, Hose, Wormdrive, 5.56-6.50d, .56w, 3-49
 Clamp, Mtg, Fltr, Air, 2-33
 Clamp, Muffler, 1.62d, 2-37, 2-39
 Clamp, Pipe, 5-20
 Clamp, Tube, 0.37d 0.50d, 2 Hole, 2-113, 2-115
 Clamp, Tube, 0.50d 0.50d, 2 Hole, 2-113, 2-115
 Clamp, Tube, 0.63d 0.63d, 2 Hole, 2-47
 Clamp, Tube, Inj, Pipe #1 [Ku], 5-20
 Clevis Wldt, Adj, .50pin 0.50-20, Pl, 2-53
 Clevis, Adj, 0.38pin, 0.50-20thd, 2-53
 Clevis, Adj, 0.38pin, M10x1.5, 2-85, 2-93, 2-95
 Clevis, Adj, M6 Pin, M6 X 1.0 Rh, Pl, 2-59
 Clip, .250h, Plstc [Pine-Tree], 2-11
 Clip, Grip, Rod, 0.49-0.63, Blk Plstc., 2-73
 Clip, Keeper, 2-83
 Clip, Keeper, Blower Mtg, 4-9
 Clip, Keeper, Open, 2-27
 Clip, Rod, Cab, 3-17
 Clip, Spring, 2-55
 Clip, Spring, Prop Arm, 2-75
 Clutch, 5-19
 Coil, Heater / Evaporator, 4-9
 Collar, Crank, Front [Ku], 5-17
 Collar, Gear [Ku], 5-15
 Collar, Govnr [Ku], 5-28
 Column, Steering, 09.9l 0.86d 36tooth, 2-25
 Compressor, A/C [134, Tm-08hd], 3-21
 Condenser, Ac, 3-21
 Contact Kit, W/ Brush [En], 2-25
 Control Box Assy Kit, Replmt, Telem[Intl], 3-27
 Control Box Assy Kit, Replmt, Telem[Usa], 3-27
 Control, Fuel, 5-25
 Control, Govnr [All Purpose], 2-29
 Control, Manual, 4-19
 Control, Manual (See Breakdowns), 4-15
 Controls, Ac/Heater [S30], 3-15
 Cord, Ele, Glowplug, 5-20
 Cord, Sponge, 1-1, 2-69, 2-71

Coupler En, 4-17
 Coupling, Drive, Flex, 09.5d /13tooth (S30 Only), 2-27
 Coupling, Drive, Flex, 09.5d /15tooth (S30 X4 Only), 2-27
 Cover, 4-9, 5-7, 5-19
 Cover Wldt, Hepa, [Gen II - S30], 3-51
 Cover Wldt, Lh, Sbdc [S30], 3-47
 Cover Wldt, Rh, Sbdc [S30], 3-45, 3-47
 Cover, Access, 4-9
 Cover, Backrest, 4-21
 Cover, Breather, 5-10
 Cover, Brg Case, Eng [Ku], 5-9
 Cover, Cushion, 4-21
 Cover, Cyl Head Assy [Ku], 5-10
 Cover, Dsl, W/ Label, Replmt, 3-23
 Cover, End, 4-13
 Cover, Filter, Trimmed, 2-79
 Cover, Fuse, 3-15
 Cover, Hole, Pump [Ku], 5-23
 Cover, Hole, Pump, Fuel [Ku], 5-23
 Cover, Hose, Plstc, Cab, 3-13
 Cover, Hppr, Rm-Cptl, Trimmed, 2-73
 Cover, Latch, 3-17
 Cover, Lever, Gov [Ku], 5-28
 Cover, Lntl, Lh, Rotomold, Afmkt [S30], 2-11
 Cover, Lntl, Rh, Rotomold, Afmkt [S30], 2-11
 Cover, Pump, Oil, 5-7
 Cover, Rear, Lh, Rotomold, Afmkt [S30], 2-15
 Cover, Rear, Rh, Rotomold, Afmkt [S30], 2-15
 Cover, Rm-Cptl, Trimmed, Re-Work, 3-53
 Cover, Seat, Rotomold, Afmkt [S30], 2-11
 Cover, Side, Rotomold, Afmkt [S30], 2-19
 Cover, Solenoid [Ku], 5-23
 Cover, Top, Rotomold, Afmkt [S30], 2-17
 Cradle Sub Assy En, 4-15
 Crankcase, Comp [Ku], 5-7
 Crankcase, Complt [Ku], 5-3
 Crankshaft, 5-17
 Crankshaft Assy, 5-15
 Crankshaft, Metal [Ku], 5-9
 Cylinder, Hyd, 1.5b 06.3l 01.50strk 2500, 2-91, 3-7
 Cylinder, Hyd, 2.0b 08.0l 04.00strk 2500, 2-69, 2-71, 2-95
 Cylinder, Hyd, 2.0b 15.0l 08.00strk 1500, 2-45
 Cylinder, Hyd, 2.0b 16.8l 09.50strk 3000, 2-47
 Cylinder, Hyd, 2.5b 28.6l 18.62strk 3000, 2-75

D

Diode, Ele, Plug, 2-21, 2-23, 3-37
 Diode, Ele, Plug (Europe Only), 2-139
 Dipstick, Oil [Ku], 5-4
 Disc, 0.06, 04.39d 01.67b, 4/.30h 3.8bc, 2-97

Disc, 0.08, 04.39d 02.56b, 4/.28h 3.8bc, 2-97
 Diverter Wldt, Fltr, Hepa [Gen II S30], 3-51
 Door, Vacuum, 3-9
 Door Assy, Cab [S30], 3-17
 Door Wldt, Brush, Lh, 2-9
 Door Wldt, Brush, Rh, 2-7
 Door Wldt, Cleanout, 2-79
 Door Wldt, Cleanout [S30], 2-79
 Door Wldt, Hppr, 2-65, 2-67, 2-69, 2-71
 Door Wldt, Hppr, Vac-Wand, Replmt, Ce, 3-9
 Door Wldt, Hppr, Vac-Wand, Replmt, Jp, 3-9
 Door Wldt, Hppr, Vac-Wand, Replmt, Na, 3-9
 Door Wldt, Rh, 3-17
 Door, Access, 2-13
 Dowel Bushing En, 4-15
 Dowel Pin, 4-19
 Drill Template, S30 Water Tank Sppt, 3-41
 Drive, Motor, Hyd, 4-11
 Driveshaft, Pump, Hyd, 4-13
 Drum Assy, Brake, 2-55
 Dryer, A/C, 3-21
 Duct, Outlet, Vacuum, 2-81, 3-51
 Dust Cntrl, Dry, Dual Sb, Ci [S30], 3-47
 Dust Cntrl, Dry, Single Rh Sb, Ci [S30], 3-45

E

Ear, Lifting, Eng [Ku], 5-5
 Element, Filter, Hepa, 25.0h 13.5w, 3-51
 Element, Fltr, Air [Dn], 1-1, 2-33
 Element, Fltr, Air, Safety, 1-1, 2-33
 Element, Fltr, Fuel [Dn], 1-1, 2-31
 Element, Fltr, Hepa, 18 X 17 X 5 [S30], 3-51
 Element, Fltr, Oil, Eng, Spin-On[Ku], 2-27
 Element, Fltr, Oil, Spin-on [Ku], 1-1
 Engine Assy, Dsl, 25hp [Ku V1505 Tier4f] (See Engine Breakdown), 2-27
 Extinguisher Kit, Fire, Ci [S30], 3-55
 Extinguisher, Fire, 2.5 Lb Dry, 3-55
 Eye, Joint [Ku], 5-23

F

Fan, Cooling, 14.1d, 6 Blade, 0.5b Taper, 2-43
 Fastener, Wire, Tie [Button Head], 2-21, 2-23
 Fender, Lh, 5-21
 Filter, 4-9
 Filter Assy, Fuel, Dsl, 2-31
 Filter Assy, Hyd, 10mic, 1-1, 2-109
 Filter, Air, 2.0 Inlet, Str, 2-33
 Filter, Cyl, 11.09d, 13.31l, 6.724 Id, 1-1, 2-83
 Filter, In-Line, Pf06/Pf06 60 Micron, 3-31

Filter, Oil [Ku], 5-4
 Fitting, Body, Nozzel, Brs, 3-33, 3-35
 Fitting, Brs, 3/8npt, Valve, Breather, 3-31
 Fitting, Brs, Cap [Unijet], 3-33, 3-35
 Fitting, Brs, E45, Pf02/Pm02, 2-27
 Fitting, Brs, E90, Bm03/Pm02, 2-31
 Fitting, Brs, E90, Bm10/Pm04, 3-19
 Fitting, Brs, E90, Em05/Pm02, 2-31
 Fitting, Brs, E90, Em05/Pm04, 2-31
 Fitting, Brs, E90, If05/Pm04, 2-31
 Fitting, Brs, Str, Bm03/Bm03, Bh, 3-51
 Fitting, Brs, Str, Bm03/Pm02, 2-79
 Fitting, Brs, Str, Em10/Pm06, 3-19
 Fitting, Brs, Str, Pf04/Pm06, Bshg, 2-41
 Fitting, Brs, Str, Pf06/Pm08, 3-19
 Fitting, Brs, Str, Pm02, Service, 2-33
 Fitting, Brs, Tee, Pf04/Pf04/Pm04, Run, 3-19
 Fitting, Draincock [Ku], 5-3
 Fitting, Draincock, .25npt, 2-41
 Fitting, Draincock, E90 Pm06, 3-31
 Fitting, E90, Bm10/Pm08, 4-9
 Fitting, Fltr, Oil [Ku], 5-7
 Fitting, Fuel [Ku], 5-20
 Fitting, Grease, Str Pm04 .47l, 2-75
 Fitting, Grease, Str Pm04 .63l, 2-45, 2-47
 Fitting, Hyd, Cap, Jf06, 2-111
 Fitting, Hyd, E45, Ff04/Fm04, 3-7
 Fitting, Hyd, E45, Ff12/Jm12, 2-115
 Fitting, Hyd, E45, Jm10/Om12, 2-47
 Fitting, Hyd, E90, Ff06/Fm06, 3-7
 Fitting, Hyd, E90, Fm04/Om04, 2-69, 2-71, 2-91, 2-95, 2-121, 3-7
 Fitting, Hyd, E90, Fm04/Om06, 2-47, 2-75, 2-81, 2-109
 Fitting, Hyd, E90, Fm04/Om06 (S30 X4 Only), 2-109
 Fitting, Hyd, E90, Fm06/Om06, 2-45, 2-47
 Fitting, Hyd, E90, Fm10/Om08, 2-113
 Fitting, Hyd, E90, Fm10/Om12, 2-109, 2-113
 Fitting, Hyd, E90, Fm12/Om08, 2-113
 Fitting, Hyd, E90, Fm12/Om12, 2-109, 2-111
 Fitting, Hyd, E90, Fm12/Om16, 2-115
 Fitting, Hyd, E90, Fm20/Om20, 2-109
 Fitting, Hyd, Plug, Fm10, 2-109
 Fitting, Hyd, Plug, Jm08, 2-27
 Fitting, Hyd, Plug, Om04, 4-5, 4-7
 Fitting, Hyd, Plug, Om06, 2-117, 2-119
 Fitting, Hyd, Plug, Om06 (S30 and XP Only), 2-109
 Fitting, Hyd, Plug, Om08, 4-5, 4-7
 Fitting, Hyd, Plug, Pm02, 2-109
 Fitting, Hyd, Rst, Fm04/Of04, .047, 2-75
 Fitting, Hyd, Str, Ff16/Fm12, 2-111
 Fitting, Hyd, Str, Fm04/Om04, 2-43, 2-95, 2-121
 Fitting, Hyd, Str, Fm04/Om04 (S30 X4 Only), 2-25
 Fitting, Hyd, Str, Fm04/Om06, 2-45, 2-117, 2-119

Fitting, Hyd, Str, Fm06/Om06, 2-25, 2-117, 2-119, 2-121
 Fitting, Hyd, Str, Fm06/Om06, Long, 2-25
 Fitting, Hyd, Str, Fm06/Om08, 2-121
 Fitting, Hyd, Str, Fm06/Om08 (S30 X4 Only), 2-25
 Fitting, Hyd, Str, Fm06/Om10, 2-87, 2-89, 2-113, 2-115, 3-7
 Fitting, Hyd, Str, Fm08/Om08, 2-81, 2-97, 2-117, 2-119
 Fitting, Hyd, Str, Fm08/Om08, Long, 2-117, 2-119
 Fitting, Hyd, Str, Fm08/Om10, 2-43, 2-113, 2-115
 Fitting, Hyd, Str, Fm10/Om10, 2-109
 Fitting, Hyd, Str, Fm10/Om12, 2-45, 2-115
 Fitting, Hyd, Str, Fm12/Om12, 2-121
 Fitting, Hyd, Str, Fm16/Om12, 2-111, 2-117, 2-119
 Fitting, Hyd, Str, Fm16/Om16, 2-109
 Fitting, Hyd, Str, Fm20/Om16, 2-113, 2-115
 Fitting, Hyd, Str, Jm10/Om10, 2-121
 Fitting, Hyd, Str, Metric, Om10/If05, 2-31
 Fitting, Hyd, Str, Om04/Qm04, 2-117, 2-119
 Fitting, Hyd, Str, Om06/Qm04, 2-117, 2-119
 Fitting, Hyd, Str, Pf02/Pm04, 2-31
 Fitting, Hyd, Str, Pm02/Pm02, 2-31
 Fitting, Hyd, Tee, Ff04/Fm04/Fm04, Run, 3-7
 Fitting, Hyd, Tee, Fm04/Fm04/Fm04, Bh Br, 2-107
 Fitting, Nyl, Qdc, E90, Bm06/Qm10, 3-31
 Fitting, Pipe, Plug [Ku], 5-3, 5-5, 5-7, 5-29
 Fitting, Pipe, Plug, Pm04, Sq Head, 2-31
 Fitting, Pipe, Water [Ku], 5-8
 Fitting, Plstc, E90, Bm04/Pm06, 3-31
 Fitting, Plstc, E90, Bm06/Pm04, Nyl, 3-33, 3-35
 Fitting, Plstc, E90, Bm06/Pm06, 3-31
 Fitting, Plstc, E90, Pf06/Pm06, Nyl, 3-31
 Fitting, Plstc, Str, Pm06/Pm06, 3-31
 Fitting, Plstc, Tee, Bm03/Bm06/Bm06, Br, 3-31
 Fitting, Plstc, Y, Bm06/Bm06/Bm06, Nyl, 3-33, 3-35
 Fitting, Plug [Ku], 5-3
 Fitting, Plug, O-Ring, 4-13
 Fitting, Plug, Org, #6, Valve [Cec], 4-5, 4-7, 4-22
 Flange, Brg, 1.9id 2h, 2-97
 Flange, Brg, Mount, 2-25
 Flange, Pump, Water [Ku], 5-8
 Flange, Sleeve [Ku], 5-25
 Flange, Water [Ku], 5-29
 Flap, Outlet, Hepa, [Gen li S30], 3-53
 Flap, Tire/Tube, 570/500-8, 2-50
 Flap, Wand, Vacuum, 3-9
 Flasher, 12-80vdc, 2a, 3-3, 3-5
 Flasher, Hd, 12vdc 25a [10-57300], 3-5

Flywheel, 5-18
 Follower, Piston, 4-15
 Follower, Screw, Pump, Injection[Ku], 5-23, 5-25
 Frame Wldt, Crossmember, 4 Wheel, 2-49
 Frame Wldt, Main [S30], 2-5
 Frame, End, 5-19
 Frame, End, Drive, 5-19
 Fuelline, .31d 05if/05if, Stl, 2-31
 Fuse, 60a, 32vdc [Fem Maxi], 3-19
 Fuse, Blade, 002a, 32vdc, 3-15
 Fuse, Blade, 005a, 32vdc, 3-15
 Fuse, Blade, 020a, 32vdc, 3-15
 Fuse, Blade, 030A, 32Vdc, 2-139
 Fuse, Blade, 060a [Maxi], 2-21, 2-23
 Fuse, Blade, 15a, 32v [Mini], 2-21, 2-23
 Fuse, Blade, 25a, 32vdc [Mini], 2-21, 2-23
 Fuse, Blade, 40A [Maxi], 2-139
 Fuseholder, Cab, 3-15

G

Gasket, 5-3, 5-29
 Gasket [Ku], 2-37, 2-39, 5-11, 5-20, 5-26
 Gasket Set, 5-4
 Gasket Set, Upper, 5-5
 Gasket, .19, 4.05id 5.29od [Buna], 3-31
 Gasket, Bearing, Case [Ku], 5-9
 Gasket, Case, Gear [Ku], 5-7, 5-9
 Gasket, Cover, 2-79
 Gasket, Cover, Gov [Ku], 5-28
 Gasket, Cover, Head, Cyl [Ku], 5-10
 Gasket, Cover, Spd [Ku], 5-27
 Gasket, F/ Bolt [Ku], 5-10, 5-20, 5-26, 5-27
 Gasket, F/ Screw [Ku], 5-23, 5-25
 Gasket, Foam Seal, Hepa Exhaust [S30], 3-53
 Gasket, Ftg, Banjo [Ku], 5-23, 5-25
 Gasket, Head, Cyl [Ku], 5-5
 Gasket, Hsg, Thermostat [Ku], 5-29
 Gasket, Manifold, Exhaust, 5-11
 Gasket, Manifold, Intake [Ku], 5-11
 Gasket, Pan, Oil, 5-4
 Gasket, Panel, Instmt, 2-21
 Gasket, Panel, Switch, 2-21, 2-23
 Gasket, Pump, Fuel [Ku], 5-23
 Gasket, Pump, Water [Ku], 5-8
 Gasket, Rbr, .13, 07.87w 09.84l, Adh, 2-13
 Gasket, Rbr, Pedal, Propel, 2-59, 3-41
 Gasket, Sender, Fuel, 2-31
 Gasket, Sensor, Thermal, 2-65, 2-67
 Gasket, Solenoid, Throttle [Ku], 2-29, 5-23
 Gasket, Tray, Cyclonic, 2-79
 Gasket, Ure, .50, 07.47w, 15.47l, Adh, 2-65, 2-67, 3-9
 Gasket, Vacuum, 2-81
 Gasket, Valve, Injector [Ku], 5-25
 Gasket, Harness, 2-21, 2-23
 Gauge, Oil [Ku], 5-4
 Gauge, Sensing, Level, 2-109

CROSS REFERENCE

Gear, 5- 19
 Gear, Camshaft [Ku], 5- 15
 Gear, Cshft [Ku], 5- 17
 Gear, Govnr [Ku], 5- 13
 Gear, Idler, Cam [Ku], 5- 15
 Gear, Injection, Pump [Ku], 5- 13
 Gear, Pump, Oil [Ku], 5- 17
 Gear, Ring [Ku], 5- 18
 Geroler, Motor, Hyd, 4- 11
 Geroter, Ring In En, 4- 17
 Geroter, Ring Ot En, 4- 17
 Gerotor, Pump, Hyd, 4- 13
 Glovenet- 525 Document Rack/Net
 60200104-, 2- 17
 Glowplug [Ku], 5- 20
 Grill, 2- 15
 Grill Wldt, Rear, Rh, 2- 15
 Grill Wldt, Screen, Rear, Rh, 2- 15
 Grommet, Rbr, .25Id .375Od, 4- 9
 Grommet, Rbr, .50Id 1.0Od, 4- 9
 Grommet, Rbr, 0.63Id, F/0.8h, .12 Matl,
 3- 3, 3- 5
 Grommet, Rbr, 0.75Id, F/1.3h, .12 Matl
 (S30XP Only) (Europe Only), 2- 11
 Grommet, Rbr, 0.89Id, F/1.2h, .14 Matl,
 3- 15
 Grommet, Rbr, 1.00Id, F/1.4h, .12 Matl,
 3- 3, 3- 5
 Guard Wldt, Ohg, Top, 3- 11
 Guard, Belt, Compressor, 3- 21
 Guard, Belt, Dsl, W/ Label, Replmt, 2- 35
 Guard, Brush, 2- 87, 2- 89, 3- 7
 Guard, Fan, 2- 43
 Guard, Fan (S30 and XP only), 2- 43
 Guard, Fan (S30 X4 only), 2- 43
 Guard, Hose, Rbr, 5.0I, 2- 87, 2- 89
 Guard, Hose, Rbr, 8.0I, 2- 41
 Guard, Hose, Wrap, Plstc, 37.0, 2- 45
 Guard, Rear, Lh [4- Wheel], 2- 47
 Guard, Rear, Rh [4- Wheel], 2- 47
 Guide, Valve, Exhaust, 5- 5
 Guide, Valve, Inlet, 5- 5

H

Handle, Door, Cab, 3- 17
 Handle, Locking, Cab, 3- 17
 Harness, Backup, Rev [S30], 3- 3, 3- 5
 Harness, Cntrl, Wet Dust [S30], 3- 39
 Harness, Cover, Hppr [S30], 2- 139
 Harness, Ele [Extn, Telemetry], 3- 27
 Harness, Eng, Dsl [S30], 2- 139
 Harness, Hppr [S30], 2- 139
 Harness, Light, Ind, Hepa Filter [S30],
 3- 54
 Harness, Main, [S30 Xp] (S30 XP Only),
 2- 139
 Harness, Main, [S30 Phoenix] (S30 Only),
 2- 139
 Harness, Ohg [S30], 3- 3, 3- 5
 Harness, Shakr, Motor [S20], 2- 83
 Harness, Switch, Seat, Ce [S30 Xp]
 (Europe Only) (S30XP Only), 2- 139

Harness, Switch, Seat, Ce [S30] (Europe
 Only), 2- 139
 Harness, Wire, Cab, 3- 24
 Head, Cylinder [Ku], 5- 5
 Headlight Kit, Led, Replmt [S30], 2- 73
 Headlight, Led, Rnd [S20/S30 Ic], 2- 73
 Heater & A/C Assy, W/Fan, 4- 9
 Heater Unit, W/ A/C & Fan (See
 Breakdowns), 3- 13
 Hinge Wldt, Mtg, Cover, Hppr [S30], 2- 73
 Hinge Wldt, Shrd, Lh, 2- 15, 2- 19
 Hinge Wldt, Shrd, Rh, 2- 11, 2- 15
 Hinge Wldt, Shrd, Side, Lh, 2- 19
 Hinge, .25pin .12, Cover, Top, 2- 17
 Hinge, .40pin 2.2w 02.0I, 4/0.21h, 3- 9
 Hinge, Bracket, Door, Cab, 3- 17
 Holder, Gear [Ku], 5- 13
 Holder, Govnr [Ku], 5- 13
 Holder, Valve, Inj [Ku], 5- 25
 Hopper Wldt, Stl [S30], 2- 67
 Hopper, Plstc, Trimmed [S30], 2- 65
 Horn, 12vdc, Dbw [Wolo], 2- 5
 Hose Assy, W/2cuff, 4.0d 156I 4.0/4.0, 3- 9
 Hose Kit, Hyd, Replmt [S30], 2- 117, 2- 119
 Hose, 0050, 04, If05str / Im05str, 10.0,
 2- 31
 Hose, 0300, 08, Jf08str / None, 19.0, 2- 27
 Hose, A/C, 06, E90/E90, 021.0I [R134],
 3- 21
 Hose, A/C, 06, E90/E90, 052.0I [R134],
 3- 21
 Hose, A/C, 08, E90/E90, 052.0I [R134],
 3- 21
 Hose, A/C, 10, E90/E90, 060.0I [R134],
 3- 21
 Hose, Afmkt, Pvc, Brd, 0.38Id, 12ft, Clr,
 3- 31, 3- 33, 3- 35
 Hose, Afmkt, Pvc, Clr, 0.25Id, 08ft, 3- 31
 Hose, Afmkt, Rbr, Heater, 0.62Id, 20ft,
 3- 19
 Hose, Afmkt, Vacuum, 0.16Id, 08ft, 2- 79,
 3- 49
 Hose, Coolant, Upper, Dsl, 2- 41
 Hose, Drain, Overflow, Radiator, 2- 43
 Hose, Exhaust, Vacuum, 5.0Id, 40.0I, 3- 49
 Hose, Fuel [Ku], 5- 20
 Hose, Fuel, 0.31Id [Evap Emission 07],
 2- 31
 Hose, Fuel, 0.18Id, 29.0I, 2- 43
 Hose, Fuel, 0.18Id, 54.0I, 2- 31
 Hose, Hyd, Med04, Ff04str/Ff04str, 042.0,
 2- 107
 Hose, Hyd, Med04, Ff04str/Ff04str, 051.0,
 2- 107
 Hose, Hyd, Med04, Ff04str/Ff04str, 052.0,
 2- 107
 Hose, Hyd, Med04, Ff04str/Ff04str, 42.0,
 2- 107
 Hose, Hyd, Med10, Ff10str/Ff10str, 024.0,
 2- 107
 Hose, Hyd, Spcl, Ff10e45/Ff10str, 056.0,
 2- 103, 2- 105

Hose, Hyd, Spcl, Ff10str/Ff10str, 046.0,
 2- 103, 2- 105
 Hose, Hyd, Spcl, Ff12e45/Ff12str, 025.0,
 2- 107
 Hose, Hyd, Spcl, Ff12e45/Ff12str, 028.0,
 2- 107
 Hose, Hyd, Spcl, Jf10e45/Jf10str, 029.0,
 2- 107
 Hose, Hyd, Suc12, Ff12e45/Ff12str, 32.0,
 2- 107
 Hose, Hyd, Suc12, Ff12str/Ff12str, 025.0,
 2- 103, 2- 105
 Hose, Hyd, Suc20, Ff20e45/Ff20str, 022.5,
 2- 103, 2- 105
 Hose, Hyd, Suc20, Ff20e45/Ff20str, 025.0,
 2- 107
 Hose, Hyd, Tc04, Ff04e45/Ff04str, 078.0,
 2- 103, 2- 105
 Hose, Hyd, Tc04, Ff04e90/Ff04str, 042.0,
 2- 103, 2- 105, 2- 107
 Hose, Hyd, Tc04, Ff04e90/Ff04str, 092.0,
 2- 103, 2- 105, 2- 107
 Hose, Hyd, Tc04, Ff04e90/Ff04str, 126.0,
 2- 105, 2- 107, 3- 7
 Hose, Hyd, Tc04, Ff04e90/Ff04str, 21.0,
 2- 107
 Hose, Hyd, Tc04, Ff04str/Ff04str, 018.0,
 2- 103, 2- 105, 2- 107
 Hose, Hyd, Tc04, Ff04str/Ff04str, 052.0,
 2- 103, 2- 105, 2- 107
 Hose, Hyd, Tc06, Ff06e90/Ff06str, 026.0,
 2- 107
 Hose, Hyd, Tc06, Ff06e90/Ff06str, 032.0,
 2- 103, 2- 105
 Hose, Hyd, Tc06, Ff06e90/Ff06str, 035.0,
 2- 107
 Hose, Hyd, Tc06, Ff06e90/Ff06str, 054.0,
 2- 103, 2- 105
 Hose, Hyd, Tc06, Ff06e90/Ff06str, 062.0,
 2- 103, 2- 105
 Hose, Hyd, Tc06, Ff06e90/Ff06str, 080.0,
 2- 103, 2- 105
 Hose, Hyd, Tc06, Ff06e90/Ff06str, 102.0,
 2- 103, 2- 105, 2- 107, 3- 7
 Hose, Hyd, Tc06, Ff06e90/Ff06str, 20.0,
 2- 107
 Hose, Hyd, Tc06, Ff06e90/Ff06str, 58.0,
 2- 107
 Hose, Hyd, Tc06, Ff06e90/Ff06str, 84.0,
 2- 107
 Hose, Hyd, Tc06, Ff06e90/Qm06str, 134.0,
 2- 103, 2- 105, 2- 107
 Hose, Hyd, Tc06, Ff06str/Ff06str, 048.0,
 2- 103, 2- 105, 2- 107
 Hose, Hyd, Tc08, Ff06e90/Ff06str, 134.0,
 3- 7
 Hose, Hyd, Tc08, Ff08e90/Ff08str, 030.0,
 2- 103, 2- 105, 2- 107
 Hose, Hyd, Tc08, Ff08e90/Ff08str, 042.0,
 2- 103, 2- 105, 2- 107
 Hose, Hyd, Tc08, Ff08e90/Ff08str, 046.0,
 2- 103, 2- 105, 2- 107

Hose, Hyd, Tc08, Ff08e90/Ff08str, 052.0, 2-103, 2-105, 2-107
 Hose, Hyd, Tc08, Ff08str/Ff08str, 041.0, 2-103, 2-105, 2-107
 Hose, Hyd, Tc10, Ff10e90/Ff10str, 027.0, 2-103, 2-105
 Hose, Hyd, Tc10, Ff10e90/Ff10str, 42.0, 2-109
 Hose, Hyd, Tc12, Ff12e90/Ff12str, 014.0, 2-103, 2-105, 2-107
 Hose, Hyd, Tc16, Ff16e90/Ff16str, 016.0, 2-103, 2-105, 2-107
 Hose, Intake, Mold, 1.75id 2.00id [Epdm], 2-33
 Hose, Nozzle, Floor, 3-9
 Hose, Pvc, Clr, 0.38id 0.56od 022.0l, 2-41
 Hose, Rbr, 3-9
 Hose, Rbr, 1.25id 1.25id, 2-41
 Hose, Rbr, 2.00id 2.50od 02.5l, 2-33
 Hose, Rbr, E90, 1.25id 1.25id 04.2 02.6, 2-41
 Hose, Water [Ku], 5-29
 Housing, 4-13
 Housing Assy, Nozzle, 5-20, 5-21
 Housing En, 4-15
 Housing S/A En, 4-15
 Housing Wldt, Sppt, Drive, Lh, 2-47
 Housing Wldt, Sppt, Drive, Rh, 2-47
 Housing, Brg, Motor, Hyd, 4-11
 Housing, Fan, Rm-Cphg, 2-81
 Housing, Flywheel, Mach, Dsl, 3 Wheel (S30 Only), 2-27
 Housing, Flywheel, Mach, Dsl, 4 Wheel (S30 X4 Only), 2-27
 Housing, Sppt, Drive, 2-45
 Housing, Thermostat [Ku], 5-29
 Housing, Valve, 4-11
 Housing, Control, 4-19
 Hub Assy, Wheel, 5 Bolt 4.50bc Taper B, 2-45, 2-47
 Hub Wldt, 2-61
 Hub, Adapter, Brush, 1.00b, 2-87, 2-89, 3-7

I

Idling, Apparatus [Ku], 5-26
 Impeller Assy, Vacfan [Coyote], 2-81
 Impeller, Pump, Water [Ku], 5-8
 Indicator, Ele, [Multi-Display], 2-21
 Indicator, Press, 60psi (S30 Only), 2-109
 Indicator, Service, Fltr, Air [20h20 Dn], 2-33
 Indicator, Timing [Ku], 5-18
 Innertube, 6.00 X 9.00 [Js-2], 2-55
 Innertube, Valve [5.00r-8, Js2, 500-8], 2-50
 Insert, Plate, Cam, Pump, Hyd, 4-13
 Instr, Maint, Wall Chart (ONLINE ONLY), 3-56
 Instr, Repair, Motor, Hyd, Gear, 4-11
 Instr, Repair, Pump, 4-13
 Instr, Valve, Steering, Repair, 4-3

Insulation, Acstc, 0.5, 03.0 X 23.0 Adh, 2-15
 Insulation, Acstc, 0.5, 05.5 X 23.0 Adh, 2-15
 Insulation, Acstc, 0.5, 11.5 X 14.5 Adh, 2-15
 Insulation, Acstc, 1.0, 2.0 X 03.8 Adh, 2-65, 2-67
 Insulation, Acstc, 2.0, 02.0 X 12.0, 2-7, 2-9
 Insulation, Acstc, Rnd, 0.8, 02.5d 0.5h, 2-25
 Insulation, Flame-Retardant, 0.5, 2-31
 Insulation, Flame-Retardant, 0.75-0.88, 2-11
 Insulation, Flame-Retardant, 1.00, 2-13
 Insulation, Heat, Liner, Lh, 3-15
 Insulation, Heat, Liner, Rh, 3-15
 Insulation, Sound, Liner, 3-15
 Insulation, Sound, Liner, Lh, 3-15
 Insulation, Sound, Liner, Rh, 3-15
 Insulation, Sound, Liner, Side, Lh, 3-15
 Insulation, Sound, Liner, Side, Rh, 3-15
 Insulation, Sound, Liner, Top, 3-15
 Isolator, Rbr, 2-37, 2-39
 Isolator, Vib, Bshg, 1.1d 0.6l .4b 0.78h, 2-43, 2-61, 2-117, 2-119
 Isolator, Vib, Flng, 1.3h .4b 2/.34h, 2-27

K

Key [Ku], 5-15, 5-17
 Key En, 4-17
 Key, Ignition [Replmt W/O Dust Boot], 1-1, 2-21, 2-23
 Key, Latch, Door Assy, 3-17
 Key, Motor, Hyd, 4-11
 Key, Shaft, Pump, Hyd, 4-13
 Key, Sq, 0.12 X 0.12, 0.50l, 2-81
 Key, Woodruff [Ku], 5-13
 Keychain, Rectangle, Parts & Service, 2-21, 2-23
 Kit, Rotating, Pump, Hyd, 4-13
 Kit, Seal, Hyd, Pump, 4-13
 Kit, Shim, 4-13
 Knob, 4-9
 Knob Assy, Star, 1.97d 4ear M10x1.5 10.75l, 2-85
 Knob Kit, Repair Side Brush, 2-91, 3-7
 Knob, 1.12d 3.86l M10 X 1.5, Plstc Tpr], 2-85, 2-93
 Knob, Assy, Sb Xp, 2-91, 3-7
 Knob, Rnd, 2.38d 0.88l M6 X 1.0, Plstc, 2-65, 2-67, 3-9
 Knob, Star, 2.20d 8ear 1.1l M10x1.5, Nyl, 2-93, 2-95
 Knob, Star, 2.75d 4ear 1.1l M8x1.25, 2-79
 Knob, Tee, 0.38-16, 2.5 X 1.0 1.1l, Plstc, 2-25, 2-65, 2-67, 3-9
 Knobs, Adjmt, Weight, 4-21

L

Label [Fuse Block], 3-15
 Label Set, Fltr, Hepa [S20&S30], 3-51, 3-54
 Label Set, Hi Temp, 2-141
 Label Set, Info/Hzrd [Multi-Mach], 2-141
 Label Set, Info/Hzrd, Misc, Ce (Europe Only), 2-141
 Label Set, Info/Hzrd, Misc, Tj (Japan Only), 2-141
 Label, Caution, Battery, Tj (Japan Only), 2-141
 Label, Circuitbreaker [Fuse Box], 3-15
 Label, Cyclone [S30], 2-141
 Label, Handle, Lift, 2-141
 Label, Info [Exit], 3-13
 Label, Info, Arm, Brush, 2-141
 Label, Info, Brush Arm, 2-97
 Label, Info, Hyd Fluid, Na / Ce (Japan Only), 2-141
 Label, Info, Water Only, 3-31
 Label, Level, Sound [100 Db] (Europe Only), 2-141
 Label, Logo, 10.4l, White [Tennant], 2-141
 Label, Opertnl, Telem [Fcc/lc], 3-27
 Label, Overlay Panel, Replmt [S30], 2-23
 Label, Panl, Instmt, Basic, 2-21
 Label, Panl, Instmt, Rh, 2-21, 2-23
 Label, Wet Dust Cntrl [S30], 3-37
 Label, White [S30], 2-141
 Lamp, 12vdc, 0.5a, 04cp [#1157], 2-5
 Lamp, 12vdc, 37.5watt, Halogen, 2-73
 Lamp, Clr, 12vdc [#3157 Series], 3-5
 Latch, 2-13, 2-15, 2-17, 2-19, 2-73
 Latch Kit, Door, Access, Ci [S30], 2-65, 2-67
 Latch, Bolt, 2-7, 2-9
 Latch, Cab, 3-17
 Latch, Cmpr, M5 X 0.8 Blk, 2-97
 Latch, Cmpr, Spring, Knurled Knob, Pl, 2-13
 Latch, Door, 2-65, 2-67
 Latch, Door [Southco 91-562-07], 2-79, 3-51
 Latch, Hook, 2-7, 2-9
 Leg Wldt, Guard, Lh, 3-11
 Leg Wldt, Guard, Rh, 3-11
 Lens Assy, W/ Reflector, 2-73
 Lever Assy, 177.8 X 45, 2-55
 Lever Assy, Fork [KU], 5-28
 Lever Wldt, Brush, Side, 2-85
 Lever Wldt, Lift, Brush, Main, 2-93
 Lever, Cntrl, Spd [Ku], 5-27
 Lever, Fork [Ku], 5-28
 Lever, Fork, Shaft [Ku], 5-28
 Lever, Lift, Brush, 2-91, 3-7
 Lever, Plate, Cntrl [Ku], 5-27
 Lever, Pump, 2-61
 Lever, Stop [Ku], 5-27
 Light Kit, Inside, Ci [S30], 3-3
 Light Kit, outdoor, Ci [S30], 3-5
 Light, Dome, Cab, 3-15
 Light, Flsh, 12vdc, Amb, Rwk, 3-3, 3-5

CROSS REFERENCE

Light, Led, .312d, 12 Vdc [Tri-Color],
3-37, 3-54
Light, Led, White, 12-24vdc, 3-3, 3-5
Light, Panl, 14vdc, 1.1 X 1.0, 2-21, 2-23
Light, Panl, 14vdc, 1.1 X 1.0 (Europe
Only), 2-21, 2-23
Link, Crank, Limiter, 2-59
Link, Feedback, 4-19
Lip Wldt, Oprtr Station / Cab, 3-13
Lip Wldt, Station, Oprtr, 2-11
Lockwasher En, 4-15
Louver, Nozzle, Spindle, Blk, 3-15

M

Magnet, Drive Brush, 2-13
Magnet, Pickup, 2-27
Maint Kit, 400Hr, Diesel [S30], 1-1
Manifold Assy, Inlet, 5-11
Manifold, Exhaust [Ku], 5-11
Manual, Eng [Kubo, V1505e], 3-56
Manual, Oprtr [S30 Dsl, Bg, Ce], 3-56
Manual, Oprtr [S30 Dsl, Cz, Ce], 3-56
Manual, Oprtr [S30 Dsl, De, Ce], 3-56
Manual, Oprtr [S30 Dsl, Dk, Ce], 3-56
Manual, Oprtr [S30 Dsl, Ee, Ce], 3-56
Manual, Oprtr [S30 Dsl, En, Ce], 3-56
Manual, Oprtr [S30 Dsl, Es, Ce], 3-56
Manual, Oprtr [S30 Dsl, Fi, Ce], 3-56
Manual, Oprtr [S30 Dsl, Fr, Ce], 3-56
Manual, Oprtr [S30 Dsl, Gr, Ce], 3-56
Manual, Oprtr [S30 Dsl, Hu, Ce], 3-56
Manual, Oprtr [S30 Dsl, It, Ce], 3-56
Manual, Oprtr [S30 Dsl, Lt, Ce], 3-56
Manual, Oprtr [S30 Dsl, Lv, Ce], 3-56
Manual, Oprtr [S30 Dsl, Ni, Ce], 3-56
Manual, Oprtr [S30 Dsl, No, Ce], 3-56
Manual, Oprtr [S30 Dsl, Pl, Ce], 3-56
Manual, Oprtr [S30 Dsl, Pt, Ce], 3-56
Manual, Oprtr [S30 Dsl, Ro, Ce], 3-56
Manual, Oprtr [S30 Dsl, Ru, Ce], 3-56
Manual, Oprtr [S30 Dsl, Se, Ce], 3-56
Manual, Oprtr [S30 Dsl, Sk, Ce], 3-56
Manual, Oprtr [S30 Dsl, Sl, Ce], 3-56
Manual, Oprtr [S30 Dsl, Tr, Ce], 3-56
Manual, Oprtr [S30, Dsl Cn], 3-56
Manual, Oprtr [S30, Dsl En Na], 3-56
Manual, Oprtr [S30, Dsl Es Na], 3-56
Manual, Oprtr [S30, Dsl Fr Na], 3-56
Manual, Oprtr [S30, Dsl Hr, Ce], 3-56
Manual, Oprtr [S30, Dsl Jp], 3-56
Manual, Oprtr [S30, Dsl Pt, Br], 3-56
Manual, Parts [S30, Dsl En], 3-56
Manual, Service [S30 EN], 3-56
Mirror, Convex, 0.50d, 3-13
Mirror, Convex, 06.7 X 06.2, 3-11, 3-13
Molding, Afmkt, Trim, Wndw, Glass, 12ft,
3-13
Molding, Trim, Pvc, .08-.11 03.2l, 2-83
Motor, Ele, 12vdc 2108rpm 0.09hp 07.0a,
2-83
Motor, Hyd, Gear, Ext 0.28 Rh 3000, 2-81
Motor, Hyd, Gear, Ext 0.67 Rh 2500, 2-43

Motor, Hyd, Gear, Int 02.8 Bi-Dir 2500,
2-97
Motor, Hyd, Gear, Int 07.9 Bi-Dir 3000,
2-47
Motor, Hyd, Gear, Int 17.1 Bi-dir 3000,
4-11
Motor, Hyd, Gear, Int 17.1 Bi-Dir 3000
(See Breakdowns), 2-45
Motor, Hyd, Gear, Int 17.9 Bi-Dir 2500,
2-87, 2-89, 3-7
Motor, Starter, 12vdc [Kubota] (See Engine
Breakdown), 2-27
Motor, Wiper, Cab, 3-13
Mount, Cable Tie, 3-37
Muffler, Exhaust, 2-37, 2-39

N

Nozzel, Spray, 110 Deg, 0.05 Gpm, 3-33,
3-35
Nozzle, Spring [Ku], 5-21
Nut, 5-11, 5-19
Nut [Ku], 5-21, 5-23
Nut En, 4-15
Nut, Cap [Ku], 5-26
Nut, Cap, Cam [Ku], 5-13
Nut, Coil, Nyl Patch, 4-5, 4-7
Nut, Flange [Ku], 5-20
Nut, Hex [Ku], 5-7, 5-12, 5-19, 5-23,
5-26, 5-27
Nut, Hex, Cap, 5-10
Nut, Hex, Flexlock, .50-20, 2-49
Nut, Hex, Flng, M10 X 1.50, 2-11, 3-21
Nut, Hex, Flng, M5 X 0.80, 2-13, 2-75,
3-9
Nut, Hex, Flng, M6 X 1.00, 2-11, 2-15,
2-17, 2-19, 2-27, 2-35, 2-37, 2-39,
2-43, 2-65, 3-3, 3-5, 3-21
Nut, Hex, Flng, M8 X 1.25, 2-5, 2-15,
2-17, 2-31, 2-37, 2-39, 2-45, 2-47,
2-59, 2-87, 2-89, 2-109, 2-113,
3-15, 3-21, 3-31
Nut, Hex, Jam, .38-16, 2-53
Nut, Hex, Jam, .38-16, Lh, 2-53
Nut, Hex, Jam, .50-20, 2-53
Nut, Hex, Jam, .75-16, 2-45, 2-47
Nut, Hex, Jam, .75-16, Lh, 2-47
Nut, Hex, Jam, M10 X 1.5, Ss, 2-85, 2-93,
2-95
Nut, Hex, Jam, M20 X 1.5, 2-25
Nut, Hex, Lock, .25-20, NI, 2-61, 2-63,
3-53
Nut, Hex, Lock, .31-18, NI, 2-13
Nut, Hex, Lock, .31-18, NI (S30XP Only),
2-13
Nut, Hex, Lock, .31-24, NI, 2-43
Nut, Hex, Lock, .38-16, NI, Thin, 2-35
Nut, Hex, Lock, .75-10, NI, 2-47, 2-97
Nut, Hex, Lock, #10-24, NI, 2-57
Nut, Hex, Lock, #10-32, NI, 2-83
Nut, Hex, Lock, M10 X 1.5, NI, 2-5, 2-27,
2-35, 2-39, 2-43, 2-55, 2-61, 2-75,
2-85, 2-95, 3-11, 3-21, 3-51

Nut, Hex, Lock, M10 X 1.5, NI, Ss, 2-77
Nut, Hex, Lock, M12 X 1.75, NI, 2-49,
2-53, 2-55, 2-67, 2-69, 2-97
Nut, Hex, Lock, M14 X 2.00, NI, 2-49
Nut, Hex, Lock, M4 X 0.70, NI, 2-5, 2-13,
2-15, 2-73, 2-79, 3-13, 3-49, 3-51
Nut, Hex, Lock, M4 X 0.70, NI, Ss, 2-57
Nut, Hex, Lock, M5 X 0.80, NI, 2-75, 2-85,
3-3, 3-5, 3-9, 3-37, 3-55
Nut, Hex, Lock, M6 X 1.00, NI, 2-21, 2-23,
2-25, 2-29, 2-31, 2-47, 2-61, 2-63,
2-65, 2-67, 2-75, 2-113, 2-115, 3-9,
3-19, 3-21, 3-45, 3-47
Nut, Hex, Lock, M6 X 1.00, NI, Ss, 1-1,
2-59, 2-63, 2-69, 2-71
Nut, Hex, Lock, M8 X 1.25, NI, 2-5, 2-17,
2-27, 2-33, 2-35, 2-37, 2-39, 2-43,
2-57, 2-61, 2-75, 2-81, 2-85, 2-87,
2-91, 2-93, 2-95, 2-97, 2-109,
2-121, 3-7, 3-29, 3-31, 3-37, 3-45,
3-47, 3-51
Nut, Hex, Lock, M8 X 1.25, NI, Ss, 1-1,
2-65, 2-67, 2-69, 2-71, 2-85, 3-13
Nut, Hex, Std, 1.00-20, 2-53, 2-55
Nut, Hex, Std, 1.12-18, 2-45, 2-47
Nut, Hex, Std, .38-16, 2-37, 2-39, 3-17
Nut, Hex, Std, .75-10, 2-45
Nut, Hex, Std, M10 X 1.50, 2-95
Nut, Hex, Std, M12 X 1.75, 2-49
Nut, Hex, Std, M12 X 1.75, Ss, 2-7, 2-9
Nut, Hex, Std, M3 X 0, 3-15
Nut, Hex, Std, M6 X 1.00, 8, 2-59, 2-61,
2-63
Nut, Hex, Std, M6 X 1.00, Ss, 3-3, 3-5
Nut, Hex, Std, M8 X 1.25, 2-85
Nut, Hex, Std, M8 X 1.25, Brs, 2-35
Nut, Isolator, 10-32, .015-.192, 3-53
Nut, Jam, 4-15
Nut, Lock [Ku], 5-26
Nut, Motor, Hyd, 4-11
Nut, Nozzle [Ku], 5-21
Nut, Wheel, .50-20 X 60 Angle, 2-45,
2-47, 2-55
Nut, Wing, .31-18, 2-35

O

O-Ring [Ku], 5-4, 5-27
Ohg Kit, Ci [S30], 3-11
Oil, Hyd [EI, Iso 100, 01gal], 1-2
Oil, Hyd [EI, Iso 100, 05gal], 1-2
Oil, Hyd [EI, Iso 32, 01gal], 1-2
Oil, Hyd [EI, Iso 32, 05gal], 1-2
Oil, Hyd [EI, Iso 68, 01gal], 1-2
Oil, Hyd [EI, Iso 68, 05gal], 1-2
Oil, Hydraulic 68 [20l] (CE ONLY), 1-2
Orifice, Valve En, 4-15

P

Pad, Armrest, 4-21
Pad, Pedal, Brake, 3.96l 2.36w 0.75, 2-57

- Paint, Airdry, Blk, 12oz (NOT EUROPE), 1-1
 Paint, Airdry, Gray, 12oz (NOT EUROPE), 1-1
 Paint, Airdry, Iron Gray, 12oz (NOT EUROPE), 1-1
 Paint, Airdry, Off-White, 12oz (NOT EUROPE), 1-1
 Paint, Airdry, Teal, 12oz, Solid (NOT EUROPE), 1-1
 Pan, Oil, Dsl, 5-4
 Pane, Glass, Wndw, Front, 3-13
 Pane, Glass, Wndw, Lh Side, Cab, 3-13
 Pane, Glass, Wndw, Rear, 3-13
 Pane, Wndw, Lower, Cab, 3-17
 Pane, Wndw, Slide, Rh, Cab, 3-17
 Panel Assy, Instmt, Basic, Replmt, 2-21
 Panel Assy, Switch, Replmt, 2-21, 2-23
 Panel Kit, Replmt [S30] (Includes Control Board and Label Overlay Panel), 2-23
 Panel Wldt, Access, 2-59, 3-41
 Panel Wldt, Deflector, Heat, 2-31
 Panel Wldt, Handle, Lift, 2-93
 Panel Wldt, Heat, Shield, Lh, 2-15
 Panel Wldt, Lift, 2-95
 Panel Wldt, Perma Filter, 2-79
 Panel Wldt, Side, 3-23
 Panel Wldt, Top, Cab, 3-15
 Panel, Heat, Shield, Rear, Lh, 2-15
 Panel, Instrument, Basic, 2-21
 Panel, Light, 2-21, 2-23
 Panel, Roof, Plstc, Cab, 3-15
 Panel, Seat, 2-13
 Panel, Shrd, Eng, 2-15
 Panel, Shrd, Seat, 2-11
 Panel, Side, Access, 2-11
 Panel, Side, Access, Ce (Europe Only), 2-11
 Panel, Switch li, 2-21, 2-23
 Pedal Wldt, Brake, 2-57
 Pedal, Propel, Lower, W/Tread, 2-59
 Pedal, Propel, Upper, W/Tread, 2-59
 Pin Assy, Side Brush W/ Clip, 2-87, 2-89, 3-7
 Pin, Clamp, 5-25
 Pin, Clevis (Shoulder), 2-69, 2-71
 Pin, Clevis, 0.25d X 0.50l, 2-73
 Pin, Clevis, 0.25d X 0.75l, 2-59
 Pin, Clevis, 0.37d X 1.00l, 2-53
 Pin, Clevis, 0.37d X 1.50l, 2-85, 2-91, 3-7
 Pin, Clevis, 0.37d X 2.12l, 2-85
 Pin, Clevis, 0.37d X 4.33l, 2-59
 Pin, Clevis, 0.38d X 1.13l, 2-53, 2-93, 2-95
 Pin, Clevis, 0.50d X 1.25l, 2-53
 Pin, Clevis, 0.50d X 1.75l, 2-91, 2-95, 3-7
 Pin, Clevis, 0.50d X 2.00l, 2-91, 3-7
 Pin, Clevis, 0.50d X 2.25l, 2-69, 2-71
 Pin, Clevis, 0.50d X 4.25l, 2-87, 2-91, 3-7
 Pin, Clevis, 0.50d X 5.00l, 2-59, 2-87, 2-91, 3-7
 Pin, Clevis, 0.50d X 5.50l, 2-87, 2-91, 3-7
 Pin, Cotter, .062 X 0.75, 2-59
 Pin, Cotter, .094 X 0.75, 2-53, 2-91, 3-7
 Pin, Cotter, .094 X 1.00, 2-85, 2-93
 Pin, Cotter, .125 X 1.00, 2-53, 2-59, 2-85, 2-87, 2-91, 2-95, 3-7
 Pin, Cotter, .125 X 1.25, 2-87, 2-97
 Pin, Cotter, .125 X 1.75, 2-53, 2-55
 Pin, Cotter, .125 X 2.50, 2-45, 2-47
 Pin, Cotter, .156 X 1.25, 2-69, 2-71
 Pin, Cotter, Hair, 0.38d .072 Wir, 2-59
 Pin, Cotter, Hair, 0.38d .093 Wir, 2-73
 Pin, Dowel [Ku], 5-3
 Pin, Dowel, Cyl Block [1pk=4], 2-27
 Pin, Dowel, Pump, Hyd, 4-13
 Pin, Eng [Ku], 5-3
 Pin, Headed, 4-19
 Pin, Hitch, .500d X 6.00l, Pl, 3-26
 Pin, Joint, Inj [Ku], 5-25
 Pin, Lift, Hppr, 2-75
 Pin, Lock, Cab, 3-17
 Pin, Locking, Steering, Tilt [S30], 2-25
 Pin, Piston [Ku], 5-17
 Pin, Pivot, 0.75d 02.1l, Int 0.33b, 2-61
 Pin, Spring [Ku], 5-12, 5-27
 Pin, Start, Spring, 5-3
 Pin, Straight [Ku], 5-3
 Pin, Tappet [Ku], 5-25
 Pin, Valve, Steering, 4-3
 Pipe, Breather [Ku], 5-11
 Pipe, Clip [Ku], 5-20
 Pipe, Fuel, Overflow [Ku], 5-20
 Pipe, Injector, # 4, 5-20
 Pipe, Overflow, 5-20
 Pipe, Water, 5-10
 Pipe, Water [Kubota], 5-8
 Pipe, Water, Return, 5-29
 Piston, Eng [Ku], 5-17
 Piston, Pump, Hyd, Gear, 4-11
 Piston, Ring Assy [Ku], 5-17
 Piston, Servo, 4-15
 Pivot Wldt, Brush, Side, 2-87, 2-91, 3-7
 Pivot, Adj, Brush, 2-85
 Plate, 5-25
 Plate Wldt, Brush, Adj, 2-93, 2-95
 Plate Wldt, Mtg, Bumper, 2-75
 Plate Wldt, Pump, 2-63
 Plate Wldt, Sppt, Hppr Bottom, 2-65
 Plate Wldt, Stop [S30], 2-93
 Plate, Grounding, Cyclone, 2-79
 Plate, Adj, Brush, 2-85
 Plate, Brake, Pedal, 2-75
 Plate, Brush, Adj, 2-95
 Plate, Cntrl, Spd [Ku], 5-27
 Plate, Cover, 4-13
 Plate, Cover En, 4-15
 Plate, Fan, [Phoenix], 2-81
 Plate, Idler, 3-21
 Plate, Lift, Brush, 2-85
 Plate, Lock Plate, 2-50
 Plate, Motor, Wiper, Cab, 3-13
 Plate, Mtg, 2-97
 Plate, Mtg, Cntrl, Eng, 2-29
 Plate, Prop, Rod, 2-17
 Plate, Retainer, Door, Dump, 1-1, 2-69, 2-71
 Plate, Retainer, Leaf Spring, 2-49
 Plate, Ring, Headlight, Lh, 2-73
 Plate, Ring, Headlight, Rh, 2-73
 Plate, Ring, Light, 2-73
 Plate, Sensor, Pressure, 2-79
 Plate, Spring, U Bolt, Lower, 2-49
 Plate, Spring, U Bolt, Upper, 2-49
 Plate, Stop, Parking, 2-57
 Plate, Support, Skirt Sbd, 3-45, 3-47
 Plate, Valve, Motor, Hyd, 4-11
 Plate, Valve, Pump, Hyd, 4-13
 Plate, Vent, 3-15
 Plate, Wear, Steering Valve, 4-3
 Plate, Wheel, Ce, 2-55
 Plate, Lift, Premium, 2-91
 Plug, 4-11, 4-19
 Plug #8, 4-15
 Plug Assy [Cl], 4-3
 Plug En, 4-17
 Plug S/A En, 4-15
 Plug Wldt, Drive, Brush, 2-97
 Plug Wldt, Idler, Brush, 2-97
 Plug, Cap, Nat, 3-31
 Plug, Cup, Sealing [Ku], 5-3, 5-5
 Plug, Eng [Ku], 5-3
 Plug, Gauge, Oil [Ku], 5-4
 Plug, Hole, Rnd, 0.25h 0.43l, Brb, Nyl, 2-73
 Plug, Hole, Rnd, 0.25h 0.8l, Brb, Nyl, 2-75
 Plug, Hole, Rnd, 0.30h 0.3l, 3-13
 Plug, Hole, Rnd, 0.30h 0.3l (No. Amer. Only), 2-21, 2-23
 Plug, Hole, Rnd, 0.38h .03- .12, Blk Nyl, 2-95
 Plug, Hole, Rnd, 0.44h .03- .12, Blk Nyl, 2-93
 Plug, Hole, Rt, Rocker Switch, .87 X 1.7, 2-21, 2-23, 3-54
 Plug, Hole, Rt, Rocker Switch, .87 X 1.7 (No. Amer. Only), 2-21, 2-23
 Plug, Orifice, Valve, Hyd, .035, 4-7
 Plug, Orifice, Valve, Hyd, .040, 4-5, 4-7
 Plug, Orifice, Valve, Hyd, .046, 4-5, 4-7
 Plug, Pump, Hyd, Gear, 4-11
 Plug, #12 O-Ring Ph, 4-15
 Plunger, Pump, Inj [Ku], 5-25
 Poppet En, 4-17
 Poppet, Pump, Hyd, Gear, 4-11
 Pulley Assy, Cable, 2.8d 0.50b, 2-93
 Pulley, Cable, 1.5d Nyl, 2-53, 2-55, 2-85
 Pulley, Cable, 3.1d 2.30b, .19d Cable, 2-85
 Pump Assy, Water, 12vdc, 3-19
 Pump, Fuel, 2-31
 Pump, Hyd, Gear, Ext, 3, 00.70 2500, Cw, 2-113, 2-115
 Pump, Hyd, Piston, Var, 1.24 4500, Cw, 4-13
 Pump, Hyd, Piston, Var, 1.24 4500, Cw (See Breakdowns), 2-113

CROSS REFERENCE

Pump, Hyd, Piston, Var, 2.48 4500, Cw
(See Breakdowns), 2- 115
Pump, Info, Repair, 2- 113, 2- 115
Pump, Injection [Kubo], 5- 23, 5- 25
Pump, Oil, Eng [Ku], 5- 7
Pump, Soltn, 13.7vdc, 65psi [Fast li+],
3- 31
Pump, Water Assy [Ku], 5- 8

R

Race, Bearing Ce, 4- 15
Race, Bearing, Pump, Hyd, 4- 13
Radiator, W/ Hyd Cooler [Side X Side],
2- 43
Relay Assy, 12vdc [2f/1r], 3- 19
Relay, 12vdc, 040a, Spdt No, 2- 29, 3- 37
Relay, 12vdc, 040a, Spdt No (Europe
Only), 2- 21, 2- 23
Relay, 12vdc, 070a, Spst No [Potter], 2- 29
Relay, 12vdc, 35a, Spdt [Micro 280], 2- 21,
2- 23
Relief Valve Sa En, 4- 17
Repair Info, Pmp En, 4- 17
Reservoir, Hyd, W/ Label, Replmt, 2- 109
Resistor, 022.00ohm, 0040watt, 2- 29
Retainer, 5- 19
Retainer, Blade, Deflector, 2- 5, 3- 29
Retainer, Boot, Steering Column, 2- 25
Retainer, Gear, Starter [Ku], 5- 19
Retainer, Motor, Hyd, 4- 11
Retainer, Pulley, 2- 85
Retainer, Seal, 1- 1, 2- 69, 2- 71
Retainer, Seal, Door, 2- 79, 2- 83
Retainer, Shaft, 0.12id .38od X .052, 3- 17
Retainer, Skirt, .12, 1.0w X 09.8l, Gray,
2- 67
Retainer, Skirt, .12, 1.0w X 18.0l, Gray,
2- 67
Retainer, Skirt, .12, 1.5w X 14.4l, Blk, 2- 7,
2- 9
Retainer, Spring [Ku], 5- 12
Retainer, Spring, Valve [Ku], 5- 12
Retainer, Stop, 2- 95
Rim Assy, 08.0 X 3.8, 4.5bc /5bolt, 2- 50
Rim Assy, 09.0 X 4.0, 4.5bc /5bolt, 2- 55
Ring [Ku], 5- 17
Ring, Motor, Hyd, 4- 11
Ring, Piston Assy [Ku], 5- 17
Ring, Retainer, Steering Valve, 4- 3
Ring, Retaining, 4- 13, 4- 19
Ring, Retaining En, 4- 17
Ring, Retaining, Ext, 0.50d, Hd, 2- 25
Ring, Retaining, Ext, 0.50d, Ss, 2- 85
Ring, Retaining, Int, 2.00d, 2- 75
Ring, Retaining, Pump, Hyd, 4- 13
Ring, Snap [Ku], 5- 13, 5- 15
Ring, Snap, Piston [Ku], 5- 17
Rivet, Blind, .125d X 0.32 X .25d, Alm,
2- 13
Rivet, Plstc, .250d X 0.90, 2- 5, 2- 15,
2- 25, 2- 29, 2- 43, 2- 67
Rivet, Plstc, .325d X 0.79, 2- 5

Rod Assy, Connecting [Ku], 5- 17
Rod Wldt, Brake, 2- 57
Rod Wldt, Prop, Cover, Hppr, 2- 73
Rod- End, M6 X 1.0rh Fem 6mmb [Nylon],
2- 59, 2- 61, 2- 63
Rod- End, 0.75- 16lh Fem 0.75b Zerk,
2- 47
Rod- End, 0.75- 16rh Fem 0.75b, 2- 45
Rod- End, 0.75- 16rh Fem 0.75b Zerk,
2- 47
Rod- End, 0.75- 16rh Mal 0.75b [Teflon],
2- 45
Rod, Handle, Cab, 3- 17
Rod, Hanger, Isolator, 2- 37, 2- 39
Rod, Latch, Cab, 3- 17
Rod, Push [Ku], 5- 21
Rod, Push, Valve [Ku], 5- 15
Rod, Tie, 4 Wheel, 2- 47
Roll Pin En, 4- 17
Rotating Kit, 4- 15

S

Screen, Fltr, 60 Micron, Caged Ss, 3- 31
Screw, Adj, Rocker Arm [Ku], 5- 12
Screw, Adj, Stop [Ku], 5- 26
Screw, Btn, M8 X 1.25 X 40, Ss, 2- 85
Screw, Cap, 4- 13, 4- 15
Screw, Cap En, 4- 15, 4- 17
Screw, Cap, Motor, Hyd, 4- 11
Screw, Cap, Pump, Hyd, 4- 13
Screw, Flt [Ku], 5- 7
Screw, Flt, Soc, .75- 10 X 2.50, Al, 2- 97
Screw, Flt, Soc, M5 X 0.80 X 16, 10.9,
2- 97
Screw, Flt, Soc, M6 X 1.00 X 16, 10.9,
2- 65, 2- 67, 2- 69, 2- 71, 3- 9
Screw, Flt, Soc, M8 X 1.25 X 25, 10.9,
2- 95
Screw, Hex [Ku], 5- 4, 5- 5, 5- 7, 5- 11,
5- 23, 5- 25, 5- 28
Screw, Hex, .25- 20 X 3.50, G5, 3- 53
Screw, Hex, .31- 09 X 1.25, Wood, 2- 87,
2- 89, 3- 7
Screw, Hex, .31- 18 X 1.25, G5, 2- 35
Screw, Hex, .31- 18 X 1.50, G5, 3- 21
Screw, Hex, .38- 16 X 0.75, G5, 2- 65,
2- 67, 3- 9
Screw, Hex, .38- 16 X 0.75, NI, 2- 97
Screw, Hex, .38- 16 X 1.25, G5, 2- 61,
2- 113
Screw, Hex, .38- 16 X 1.25, NI, 2- 87,
2- 89, 3- 7
Screw, Hex, .38- 16 X 3.00, G5, 2- 35
Screw, Hex, .75- 10 X 2.50, Fl, 2- 97
Screw, Hex, .75- 10 X 3.00, G5, 2- 47
Screw, Hex, .75- 10 X 3.25, G5, 2- 45
Screw, Hex, 10- 24 X 0.50, Ss, 2- 35
Screw, Hex, 12- 16 X 0.75, 3- 9
Screw, Hex, Case, Brg, Main [Ku], 5- 9
Screw, Hex, Cshft [Ku], 5- 17
Screw, Hex, Flywheel [Ku], 5- 18
Screw, Hex, Head, Cyl [Ku], 5- 5

Screw, Hex, M10 X 1.25 X 20, 8.8, 2- 27,
2- 35
Screw, Hex, M10 X 1.25 X 25, 8.8, 2- 27
Screw, Hex, M10 X 1.5, 2- 83
Screw, Hex, M10 X 1.5 X 25, 8.8, 3- 11
Screw, Hex, M10 X 1.5 X 35, 9.8, Sems,
3- 26
Screw, Hex, M10 X 1.5 X 60, 8.8, 2- 91
Screw, Hex, M10 X 1.5 X 80, 8.8, 3- 7
Screw, Hex, M10 X 1.50 X 100, 8.8, 2- 27
Screw, Hex, M10 X 1.50 X 110, 8.8, 2- 27,
3- 21
Screw, Hex, M10 X 1.50 X 120, 8.8, Fl,
2- 27
Screw, Hex, M10 X 1.50 X 20, 8.8, 2- 25
Screw, Hex, M10 X 1.50 X 20, NI, Ss,
2- 69
Screw, Hex, M10 X 1.50 X 25, 10.9, 2- 7,
2- 9, 2- 50, 2- 55
Screw, Hex, M10 X 1.50 X 25, 8.8, 2- 27,
2- 35, 2- 49, 3- 31
Screw, Hex, M10 X 1.50 X 30, 8.8, 2- 27,
3- 51
Screw, Hex, M10 X 1.50 X 35, 8.8, 2- 27,
2- 61, 2- 75
Screw, Hex, M10 X 1.50 X 35, 9.8, Sems,
2- 11, 2- 47, 2- 49, 2- 85, 2- 93, 2- 95,
3- 11, 3- 13, 3- 21
Screw, Hex, M10 X 1.50 X 40, 8.8, 2- 27,
2- 75, 2- 117, 2- 119, 3- 21
Screw, Hex, M10 X 1.50 X 45, 8.8, 2- 43,
2- 95
Screw, Hex, M10 X 1.50 X 50, 8.8, 2- 5,
2- 39, 2- 77
Screw, Hex, M10 X 1.50 X 60, 8.8, 2- 27
Screw, Hex, M10 X 1.50 X 80, 8.8, 2- 87
Screw, Hex, M10 X 1.50 X 90, 8.8, 2- 77
Screw, Hex, M12 X 1.75 X 140, 8.8, 2- 49
Screw, Hex, M12 X 1.75 X 40, 10.9, 2- 67,
2- 69
Screw, Hex, M12 X 1.75 X 40, 8.8, 2- 53,
2- 55, 2- 115
Screw, Hex, M12 X 1.75 X 80, 8.8, 2- 49
Screw, Hex, M12 X 1.75 X 90, 8.8, 2- 97
Screw, Hex, M14 X 2.00 X 90, 8.8, 2- 49
Screw, Hex, M16 X 2.00 X 20, 8.8, 2- 97
Screw, Hex, M4 X 0.70 X 10, Fmg, Blk,
2- 93, 2- 95
Screw, Hex, M4 X 0.70 X 20, Ss, 2- 57
Screw, Hex, M5 X 0.80 X 16, 8.8, 2- 93,
3- 5
Screw, Hex, M5 X 0.80 X 16, Fmg, 3- 21
Screw, Hex, M5 X 0.80 X 20, 8.8, 2- 75
Screw, Hex, M6 X 1.0 X 20, 9.8, Sems,
2- 31, 2- 37, 2- 39, 2- 93
Screw, Hex, M6 X 1.00 X 10, Fmg, 2- 75,
2- 109
Screw, Hex, M6 X 1.00 X 12, Fmg, 2- 83
Screw, Hex, M6 X 1.00 X 12, NI, Ss, 1- 1,
2- 65
Screw, Hex, M6 X 1.00 X 20, 8.8, 3- 21

Screw, Hex, M6 X 1.00 X 20, 9.8, Sems, 2-25, 2-29, 2-43, 2-65, 2-67, 2-79, 2-95, 3-9, 3-13	Screw, Hex, M8 X 1.25 X 50, 8.8, 2-37, 2-39, 2-85	Screw, Pan, Phl, M6 X 1.00 X 20, 4.8, 3-45, 3-47
Screw, Hex, M6 X 1.00 X 20, NI, Ss, 2-97	Screw, Hex, M8 X 1.25 X 60, 8.8, Fl, 2-57	Screw, Pan, Phl, M8 X 1.25 X 16, Blk, 3-17
Screw, Hex, M6 X 1.00 X 20, Ss, 3-3, 3-5	Screw, Hex, M8 X 1.25 X 70, 8.8, 2-75, 2-121	Screw, Pan, Phl, M8 X 1.25 X 25, Blk, 3-15
Screw, Hex, M6 X 1.00 X 25, 8.8, 2-63, 2-75, 2-113, 2-115	Screw, Hex, W/ Washer [Ku], 5-10	Screw, Pan, Phl, M8 X 1.25 X 50, Blk, 3-15
Screw, Hex, M6 X 1.00 X 25, 9.8 Sems, 2-7, 2-9, 2-27, 2-31, 2-35, 2-43	Screw, Pan, 12-16 X 0.50, F/ Plstc, 2-15, 3-27	Screw, Pump, Injection [Ku], 5-25
Screw, Hex, M6 X 1.00 X 25, 9.8, Sems, 2-11, 2-15, 2-17, 2-19, 3-3, 3-5, 3-31, 3-51, 3-53	Screw, Pan, 12-16 X 0.75, F/ Plstc, 2-73	Screw, Rod, Connecting [Ku], 5-17
Screw, Hex, M6 X 1.00 X 25, Fmg, 3-19	Screw, Pan, M5 X 0.80 X 16, 4.8, 3-55	Screw, Set, 4-19
Screw, Hex, M6 X 1.00 X 25, Ss, 2-59	Screw, Pan, M8 X 1.25 X 25, Blk, 2-85	Screw, Set [Ku], 5-13, 5-15
Screw, Hex, M6 X 1.00 X 30, 8.8, 2-47, 2-61	Screw, Pan, Phl, .31-18 X 1.00, G2, 2-13	Screw, Set, Soc, 10-24 X 0.38, Al, 2-83
Screw, Hex, M6 X 1.00 X 30, 9.8, Sems, 1-1, 2-7, 2-9, 2-31, 2-69, 2-71, 2-87, 2-89, 3-7	Screw, Pan, Phl, 08-16 X 1.00, F/ Plstc, 2-17	Screw, Soc, .31-24 X 1.00, Al, 2-61
Screw, Hex, M6 X 1.00 X 35, 8.8, 1-1, 2-69, 2-71	Screw, Pan, Phl, 10-14 X 0.75, F/ Plstc, 2-65, 2-79	Screw, Soc, .38-16 X 1.50, Al, 2-113, 2-115
Screw, Hex, M6 X 1.00 X 35, Ss, 2-97	Screw, Pan, Phl, 10-32 X 0.50, G2, Blk, 2-21, 2-23	Screw, Soc, .38-16 X 2.00, Al, 2-63
Screw, Hex, M6 X 1.00 X 70, Ss, 2-63	Screw, Pan, Phl, 10-32 X 0.62, Ss, 3-53	Screw, Soc, .50-13 X 1.50, Al, 2-45, 2-47
Screw, Hex, M8 X 1.25 X 16, 8.8, 2-11, 2-15, 2-17, 2-19, 2-27, 2-113, 3-13	Screw, Pan, Phl, M3 X 0.50 X 12, Blk, 3-15	Screw, Soc, M10 X 1.50 X 16, 12.9, 2-21, 2-23
Screw, Hex, M8 X 1.25 X 16, Ss, 2-73, 2-79, 2-83, 2-85	Screw, Pan, Phl, M4 X 0.70 X 10, Blk, 3-15	Screw, Soc, M10 X 1.50 X 50, 12.9, 2-121
Screw, Hex, M8 X 1.25 X 20, 8.8, 2-81, 2-97, 3-9, 3-21, 3-45, 3-47, 3-49	Screw, Pan, Phl, M4 X 0.70 X 10, Ss, 2-73, 3-51	Screw, Soc, M16 X 2.00 X 50, 12.9, 2-45, 2-49
Screw, Hex, M8 X 1.25 X 20, 9.8, Sems, 2-65, 2-67	Screw, Pan, Phl, M4 X 0.70 X 16, 4.8, 2-15, 2-73, 2-79	Screw, Soc, M6 X 1.00 X 16, 12.9, 2-29
Screw, Hex, M8 X 1.25 X 20, Fmg, 3-9	Screw, Pan, Phl, M4 X 0.70 X 16, Ss, 2-67, 2-79, 3-49	Screw, Soc, M6 X 1.00 X 20, 12.9, NI, 2-97
Screw, Hex, M8 X 1.25 X 20, Ss, 2-45, 2-73, 3-13, 3-31	Screw, Pan, Phl, M4 X 0.70 X 20, 4.8, 2-13	Screw, Valve, Steering, 4-3
Screw, Hex, M8 X 1.25 X 20, Ss, Sems, 3-9	Screw, Pan, Phl, M4 X 0.70 X 20, Blk, 3-13	Screw, W / Washer, 5-20
Screw, Hex, M8 X 1.25 X 25, 8.8, 2-17, 2-35, 2-43, 2-47, 2-57, 2-81, 3-13, 3-51	Screw, Pan, Phl, M4 X 0.70 X 25, Blk, 3-15	Seal Assy, Door, Cyclonics, 2-79
Screw, Hex, M8 X 1.25 X 25, 9.8, Sems, 2-5, 2-11, 2-13, 2-15, 2-17, 2-29, 2-31, 2-35, 2-37, 2-39, 2-43, 2-59, 2-73, 2-79, 2-81, 2-83, 2-87, 2-89, 2-93, 2-109, 3-7, 3-13, 3-23, 3-33, 3-35, 3-45, 3-47, 3-49	Screw, Pan, Phl, M4 X 0.70 X 6, 4.8, 2-79	Seal Assy, Door, Shagr, 2-83
Screw, Hex, M8 X 1.25 X 25, Ss, 2-59, 2-97	Screw, Pan, Phl, M4 X 0.70 X 60, 4.8, 2-5	Seal Kit, 2-45, 2-75, 2-113, 2-115
Screw, Hex, M8 X 1.25 X 30, 8.8, 2-7, 2-9, 2-27, 2-59, 2-61, 2-85, 2-91, 3-7, 3-29	Screw, Pan, Phl, M5 X 0.80 X 10, 4.8, 3-9	Seal Kit, Cartridge, 4-5, 4-7, 4-22
Screw, Hex, M8 X 1.25 X 30, 9.8, Sems, 2-27, 2-33, 2-55, 2-69, 2-71, 2-85, 2-91, 2-93, 2-109, 3-21, 3-31, 3-45, 3-47	Screw, Pan, Phl, M5 X 0.80 X 12, Ss, 2-11, 2-79	Seal Kit, Cyl, Hyd, 2-75
Screw, Hex, M8 X 1.25 X 30, Ss, 2-45	Screw, Pan, Phl, M5 X 0.80 X 16, 4.8, 2-13, 2-29, 3-3, 3-5, 3-27, 3-37	Seal Kit, Pump En, 4-15, 4-17
Screw, Hex, M8 X 1.25 X 35, 8.8, 2-17, 2-57, 2-95, 3-21	Screw, Pan, Phl, M5 X 0.80 X 16, Blk, 2-21, 2-23, 2-85, 3-41	Seal Kit, Rear [Cl], 4-11
Screw, Hex, M8 X 1.25 X 35, 9.8, Sems, 2-33, 2-43, 2-53, 2-55, 2-65, 2-69, 2-71, 2-79, 2-87, 2-93, 3-37	Screw, Pan, Phl, M5 X 0.80 X 20, 4.8, 2-29, 3-9	Seal Kit, Scu, 2-25
Screw, Hex, M8 X 1.25 X 35, NI, Ss, 2-85	Screw, Pan, Phl, M5 X 0.80 X 25, 4.8, 3-3, 3-5, 3-9	Seal Kit, Shaft [Cl], 4-11
Screw, Hex, M8 X 1.25 X 40, 8.8, 2-5, 2-35, 2-85, 3-29, 3-49	Screw, Pan, Phl, M5 X 0.80 X 25, Blk, 3-15	Seal Kit, Steering [Cl], 4-3
	Screw, Pan, Phl, M5 X 0.80 X 30, Ss, 3-31	Seal Kit, Cntrl, 4-19
	Screw, Pan, Phl, M5 X 0.80 X 40, 4.8, 2-29, 3-3, 3-5	Seal, Afmkt, Bulb, 90, 0.38, 03ft, 3-51
	Screw, Pan, Phl, M5 X 0.80 X 50, 4.8, 3-19	Seal, Afmkt, Bulb, 90, 0.50d, 03ft, 3-15
	Screw, Pan, Phl, M6 X 1.0 X 16, Blk, 3-17	Seal, Afmkt, Bulb, 90, 0.75d F/11ga 01ft, 2-15
	Screw, Pan, Phl, M6 X 1.0 X 35, Blk, 3-17	Seal, Afmkt, Bulb, 90, 0.75d F/11ga 02ft, 2-11, 2-15
	Screw, Pan, Phl, M6 X 1.00 X 12, Blk, 3-23	Seal, Afmkt, Bulb, 90, 0.75d F/11ga 03ft, 3-15
	Screw, Pan, Phl, M6 X 1.00 X 12, NI, Pl, 3-17	Seal, Afmkt, Bulb, 90, 0.75d F/11ga 08ft, 2-15, 2-17
	Screw, Pan, Phl, M6 X 1.00 X 16, 4.8, 2-65, 3-3, 3-5, 3-9	Seal, Afmkt, Bulb, 90, 0.75d F/11ga 20ft, 3-17
		Seal, Afmkt, Bulb, Adh 0.38, 0.75w 02ft, 2-43
		Seal, Afmkt, Bulb, Str, .50d F/11ga 02ft, 2-15, 2-43
		Seal, Afmkt, Bulb, Str, .50d F/11ga 03ft, 2-13
		Seal, Afmkt, Bulb, Str, .75d F/07ga 03ft, 3-13
		Seal, Afmkt, Bulb, Str, 0.76, 0.93w 01ft, 2-15
		Seal, Afmkt, Bulb, Str, 0.76, 0.93w 02ft, 2-17, 3-53

CROSS REFERENCE

Seal, Afmkt, Foam, 1.18 X 1.18, 01ft, 3-13	Shaft, Idler, Plug, Brush, 2-97	Sleeve, Nyl, 2.38id 05.0l, 2-45
Seal, Afmkt, Foam, 1.18 X 1.18, 03ft, 3-13, 3-15	Shaft, Input, 4-19	Sleeve, P/M, 0.22b 0.32d 0.4l, Pl, 3-9
Seal, Afmkt, Rbr, Clsd, Adh, 02ft, 2-7, 2-9	Shaft, Lever, Spd [Ku], 5-27	Sleeve, P/M, 0.31b 0.50d 0.5l [430ss], 2-53, 2-55, 2-85, 2-93, 2-95
Seal, Afmkt, Rbr, Clsd, Adh, 08ft, 2-11, 2-81, 3-49	Shaft, Motor, Hyd, 4-11	Sleeve, P/M, 0.31b 0.50d 0.7l [430ss], 2-87, 2-91, 3-7
Seal, Afmkt, Rbr, Clsd, Adh, 12ft, 3-51	Shaft, Rocker, Arm [Ku], 5-12	Sleeve, P/M, 0.31b 0.50d 1.3l [430ss], 2-37, 2-39
Seal, Afmkt, Rbr, Wndw, 08ft, 3-17	Sheave, 01grv, 04.1pd 1.6b [XI], 3-21	Sleeve, P/M, 0.33b 0.63d 0.4l, Ss / Oil, 2-85
Seal, Afmkt, Rbr, Wndw, 10ft, 3-13	Sheave, Cshft [Ku], 5-17	Solenoid, #10, 12vdc, 4-5, 4-7
Seal, Afmkt, Rbr, Wndw, 10ft [Zipper], 3-13	Sheave, Fan [Ku], 5-8	Solenoid, #8, 12vdc, 4-5, 4-7
Seal, Afmkt, Ure, Adh, 0.38, 0.38w 02ft, 2-43	Sheave, Flat, 2.6d 0.62w 0.38b, 3-21	Spacer [Ku], 5-21
Seal, Cavity, Grease, 4 Wheel, 2-47	Shield, Breather, 5-10	Spacer, 0.32d, 1.00d, 0.38l, Pl (Europe Only), 2-13
Seal, Cleanout Door, 2-79	Shield, Heat, Dsl, W/ Label, Replmt, 2-37, 2-39	Spacer, 0.33b 0.50d 0.15l, Pl, 2-61
Seal, Door, Dump, 1-1, 2-69, 2-71	Shim, 5-23	Spacer, 0.35b, 1.50d, 0.25l, Pl, 2-47
Seal, Drive, Rear, Grease Cav, 2-45	Shim, Pump, Injection, 5-23	Spacer, Coil, #8, 4-5, 4-7
Seal, Flange, Rbr, Foam, Adh, 1.0th, 3-49	Shim, Tappet, Injection [Ku], 5-25	Spacer, Fan, 2-35
Seal, Foam, 2-79	Shims En, 4-17	Spacer, Fltr, 2-83
Seal, Foam, .50, 1.00w 72.00l, Adh, 3-13	Shock Absorber, 2.3 Strk, 2-61, 2-63	Spacer, Plstc, 0.18b 0.27d 0.27l, 3-13
Seal, Heat [Ku], 5-20	Shoe Assy, Brake, 177.8 X 45, 2-55	Spacer, Plstc, 0.62b 0.75d 0.27l, 3-13
Seal, Hopper, Box, Lower, 2-79	Shoe Set, Brake [1 Set=1pkg=2 Shoes], 2-53	Spacer, Rnd, .38b .88d .38l, 2-13
Seal, Mechanical Assy [Ku], 5-8	Shroud Wldt, Station, Oprtr, 2-11	Spacer, Valve, Steering, 4-3
Seal, Oil [Ku], 5-27	Shroud, Fan, 2-43	Spindle Wldt, Wheel, Front, Lh, 2-55
Seal, Oil, Front [Ku], 5-7	Skirt Assy, Door, Brush, Lh, 2-9, 3-29	Spindle Wldt, Wheel, Front, Rh, 2-55
Seal, Oil, Rear [Ku], 5-9	Skirt Assy, Door, Brush, Rh, 2-7, 3-29	Spool, Pilot, Hyd, 4-5, 4-7
Seal, Org, 5-7, 5-10, 5-19	Skirt Kit, Door, Hppr, Maint [S30], 1-1, 2-69, 2-71	Spring, 2-53, 4-11, 5-19
Seal, Org [Ku], 5-4, 5-7, 5-25	Skirt Kit, Hppr, Maint [S30], 1-1, 2-65	Spring Assy Kit, 2-5
Seal, Org, .064 X 00.30id #03, 2-31	Skirt Kit, Side/ Rear [S30], 3-29	Spring Assy, Centering, 10lb, 75mm Travel, 2-63
Seal, Org, .069 X 00.06id, 2-113, 2-115	Skirt, Brush Arm, 2-7	Spring En, 4-17
Seal, Org, .072 X 00.35id #04, 4-5, 4-7	Skirt, Deflector, 2-7, 2-9, 2-67	Spring Kit, Scu [Cl], 4-3
Seal, Org, .078 X 00.47id #06, 4-5, 4-7	Skirt, Deflector Wheel Pocket Skirt, 1-1	Spring, Brush, 5-19
Seal, Org, .078 X 00.47id 06, 4-22	Skirt, Door, Brush, 1-1, 2-7, 2-9, 3-29	Spring, Cmpr, 0.72od .06wir 02.3l, 2-25, 2-91, 3-7
Seal, Org, .087 X 00.64id #08, 4-5, 4-7	Skirt, Front, Dual Sbdc [S30], 3-47	Spring, Cmpr, 0.97od .11wir 02.5l, 2-87, 2-91, 3-7
Seal, Rbr, Clsd, 1.00, Door, Brush, Lh, 2-9	Skirt, Hppr, 1-1, 2-65	Spring, Cmpr, Plunger [Ku], 5-25
Seal, Rbr, Clsd, 1.50, Door, Brush, Rh, 2-7	Skirt, Lh, Single Sbdc [S30], 3-45	Spring, Cmpr, Relief [Ku], 5-7
Seal, Rbr, Clsd, 2.00w 09.8l Lh, 2-9	Skirt, Lip, 1-1, 2-65, 2-67	Spring, Cmpr, Rocker [Ku], 5-12
Seal, Rbr, Clsd, 2.00w 09.8l Rh, 2-7	Skirt, Lip, Hppr, 1-1, 2-65	Spring, Cmpr, Valve, Injector [Ku], 5-25
Seal, Stem, Valve [Ku], 5-12	Skirt, Lip, Hppr, Stl, 2-67	Spring, Cntr, 4-19
Seal, Tray, Debris, Shaker, 2-83	Skirt, Neo, .06, 30.00w 41.00l [3 Wheel] (S30 and XP only), 2-43	Spring, Ext [Ku], 5-19
Seal, Trim, Bulb, 90 Degree, 2-11	Skirt, Neo, .06, 30.00w 41.00l [4 Wheel] (S30 X4 only), 2-43	Spring, Extn, 0.75od 0.09wir 02.5l, 2-57
Seal, Upper, Lh, Sbdc [S30], 3-45, 3-47	Skirt, Neo, .12, 15.9w, 20.8l, 03/Sl, 1-1, 2-65	Spring, Extn, 1.00od 0.12wir 05.0l, 2-61
Seal, Upper, Rh, Sbdc [S30], 3-45, 3-47	Skirt, Neo, .18, 06.74w 50.00l, 04/ Sl, 1-1, 2-5, 3-29	Spring, Extn, 1.39od 0.15wir 09.0l, 2-95
Seal, Ure, .25, 06.0w 06.0l, Adh, 3-9	Skirt, Neo, .18, 6.42w X 48.73l, 04/Sl, 2-5, 3-29	Spring, Governor [Ku], 5-28
Seal, Wiper, Door, 1-1, 2-69, 2-71	Skirt, Neo, .37, 06.00w 44.65l, 04/ Sl Recirculation, 1-1	Spring, Leaf, 21.5inch [Slipper], 2-49
Seat, Deluxe, Replmt (S30XP Only) (See Breakdowns), 2-13	Skirt, Neo, .37, 06.00w 44.65l, 04/Sl, 2-5	Spring, Motor, Hyd, 4-11
Seat, Deluxe, Replmt [S30], 4-21	Skirt, Rbr, .12, 10.66w 43.00l, 10/ Sl, 2-5	Spring, Start [Ku], 5-28
Seat, Spring, Lower, Injector [Ku], 5-25	Skirt, Rubber, 2-5	Spring, Tens, Brake, 2-55
Seat, Spring, Upper, Injector [Ku], 5-25	Skirt, Side Shroud, Sbdc [S30], 3-45, 3-47	Spring, Tors [Ku], 5-27
Seat, Std [Milsco] (S30 Only), 2-13	Sleeve, 0.31b 0.50d 0.3l, Ss, 2-85	Spring, Tors, 0.61id .18wir 02.0coil, 2-55
Seatbelt, Retract, Orange, Replmt, 4-21	Sleeve, Cntrl, Pump, Injection [Ku], 5-25	Spring, Tors, 0.75id .06wir 02.8coil, 2-57
Send-Unit, Fuel, 2-31	Sleeve, Dashpo, Pump, Hyd, Gear, 4-11	Spring, Tors, 1.09id .11wir 03.0coil, 2-85
Send-Unit, Water, Temp, 04npt[113oh/195d], 2-109	Sleeve, Flange, 2-65, 2-67, 3-9	Spring, Valve [Ku], 5-12
Sensor, Level, Liq, 14vdc 01a .62-11, 3-31	Sleeve, Govnr [Ku], 5-13	Spring, Retainer, 4-19
Shaft, 2-53	Sleeve, Hose, Hi-Temp, 1.12id, 25.0l, 2-107	Starter, 12vdc [Kubota], 5-19
Shaft, Drive Sp En, 4-15	Sleeve, Nyl, #27 20.0l, 2-97	Steer-Control, Hyd#10 04.5 4000 (S30 X4 Only), 2-25
Shaft, Governor [Ku], 5-13		Steer-Control, Hyd05, 06.1 2030, 2-25, 4-3
Shaft, Governor, Weight [Ku], 5-13		
Shaft, Govnr, 5-13		
Shaft, Govnr [Ku], 5-13		
Shaft, Idler, Gear [Ku], 5-15		

Steer-control, Info, Repair, 2-25
 Stem, Valve, Hyd [4w2p], 4-5, 4-7
 Stop Wldt, Suspension, 4 Wheel, 2-49
 Stopper, Cam [Ku], 5-15
 Stopper, Fuel [Ku], 5-13
 Strainer, Hyd, 010gpm 100mesh, 2-109
 Strainer, Hyd, 025gpm 100mesh 03psi,
 1-1, 2-109
 Strainrelief, 2-83
 Strap Kit, Knob, Fltr Box [S30], 2-79
 Strap, Cap, Enclosure, 3-9
 Strap, Door, Cab, 3-17
 Strap, Door, Dump, Side, 1-1, 2-69, 2-71
 Strap, Main, Lip, 1-1, 2-65, 2-67
 Strap, Pyp, 0.07 1.0w 18.5l, W/ Buckle,
 3-9
 Strap, Rbr, 2-79
 Strap, Static, W/Grommet, .19 1.1w 25.0l,
 2-5
 Strap, Tank, Fuel, 2-31
 Strap, Tank, Hyd, 2-109
 Strip, Backing, Hppr, 2-5
 Strip, Retainer, Front, Sbdc, 3-45, 3-47
 Strip, Retainer, Lh, Skirt, Sbdc, 3-45
 Strip, Retainer, Wldt, Sbdc [S30], 3-45,
 3-47
 Strip, Retainer, Wldt, Skirt, Lh, Sbdc, 3-45,
 3-47
 Strip, Retainer, Wldt, Skirt, Rh, Sbdc,
 3-45, 3-47
 Stud [Ku], 5-7, 5-11, 5-12, 5-23, 5-27
 Stud, M8 X 1.25 [55.0], 2-79
 Stud, Strike, Cab, 3-17
 Stud, Wheel, .50-20 X 1.50l, 0.297th,
 2-47
 Stud, Wheel, .50-20 X 1.50l, 0.370th,
 2-45
 Stud, Wheel, .50-20 X 1.88l, 0.560th,
 2-55
 Switch Assy, Press, No 02400psi, 2-117,
 2-119
 Switch Kit, Press, Replmt[S30], 2-79
 Switch, A/C [Binary], 3-21
 Switch, Key, 4 Pos [Honeywell], 2-21,
 2-23
 Switch, Limit, 15a, Nc, 2-93, 3-5
 Switch, Magneto [Ku], 5-19
 Switch, Press, 0006psi Dpdt, 2-27
 Switch, Press, Adj [.80"-4.0" Water], 3-49
 Switch, Press, Hyd, 18-24psi, Spst, No
 (S30 XP and X4 Only), 2-109
 Switch, Rocker, Dpdt, Mom / Off / Mom,
 2-21
 Switch, Rocker, Dpdt, On / Off / Mom,
 2-21, 3-37
 Switch, Rocker, Dpst, On / None / On,
 2-21
 Switch, Rocker, Dpst, On / None / On (S30
 ONLY), 3-9
 Switch, Rocker, Prgrsv, 2-21, 2-23
 Switch, Seat, 4-21
 Switch, Snap, 15a Nc, 3-37
 Switch, Snap, 15a Nc, Rlr, 2-85

Switch, Snap, 15a No, 3-3, 3-5
 Switch, Snap, 15a No, Rlr, 2-75
 Switch, Thermal, 160deg, Spdt, 2-65,
 2-67
 Switch, Thermostat, Water, 2-27
 Switch, Turn Signal, 3-5

T

Taillight, 12vdc, 6.3 X 2.5, 2-5
 Tank, Coolant, 03.6w 04.1hi 05.5l, 1liter,
 2-43
 Tank, Fuel, 2-31
 Tank, Kit, Water, Afmkt [S30], 3-31
 Tape, Warning, Left Blk/Yel [33 Mtr]
 (Europe Only), 2-141
 Tape, Warning, Rh, Blk / Yel [33 Mtr]
 (Europe Only), 2-141
 Tappet [Ku], 5-15
 Tappet, Pump, Injection [Ku], 5-25
 Template, Drill, Cntrl Console[S30], 3-41
 Thermostat, 180deg, 1.7d [Ku], 5-29
 Thermostat, Heater/Air, 4-9
 Tie, Cable, 11.3l, 2.75d Max, 3-33, 3-35
 Tie, Cable, Nyl, 07.3l .19w 1.8 Max D,
 2-31, 2-43, 3-3, 3-5, 3-37
 Tie, Cable, Nyl, 14.5l .30w 4.0 Max D,
 2-41, 2-87, 2-89
 Timer, 12vdc, 10a [Ce Seat Switch]
 (Europe Only), 2-21
 Timer, 12vdc, 1a [10s Sgl Shot], 2-29
 Timer, 12vdc, 30sec On, 2-21
 Timer, 12vdc, 6sec Spcl [Tosr116], 2-21
 Tire Assy, Foam-filled, 125/75-08 5bolt
 (Standard), 2-51
 Tire Assy, Pneu, 21 X 6.0-12 4.5bc, Ce,
 2-55
 Tire Assy, Pneu, 5.00 4.5bc/5bolt[R8ic70]
 Pneumatic Rear, 1-1
 Tire Assy, Pneu, 570/500-08 4.5bc 5bolt
 (Standard), 2-50
 Tire Assy, Pneu, 600x9 4.5bc/5bolt, Ce
 Pneumatic Front, 1-1
 Tire Assy, Solid, 18.0 X 4.3 4.5bc 5bolt
 (Option), 2-50
 Tire Assy, Solid, 18.0x4.3 4.5bc/5bolt Solid
 Rear Tire, 1-1
 Tire Assy, Solid, 20.8 X 5.0, W/ Brg, Front
 Tire, 1-1, 2-53
 Tire, Pneu, 21 X 6.0 X 9.0 12 Ply [Ic40],
 2-55
 Tire, Solid, 18.0 X 7.0 X 8.0[4.33 Sc15],
 2-50
 Tire, W/ Tube, W/ Flap, 2-50
 Track Assy, Slide, 4-21
 Track, Slide, Seat Adj, 12.5l, 2-13
 Track, Slide, Seat Adj, 12.5l, W/Latch,
 2-13
 Tray Wldt, Debris, Filter, 2-83
 Tread, Non-Skid, 02.2w 11.5l, 2-59
 Tread, Non-Skid, 04.5w 10.0l, 2-11
 Tread, Non-Skid, 10.0w 12.0l, 2-11
 Tube Assy, Hyd, Cooler [Coyote], 2-111

Tube Assy, Hyd, Fltr, 2-111
 Tube Assy, Hyd, Motor [Lh-Inner], 2-47
 Tube Assy, Hyd, Motor [Lh-Outer], 2-47
 Tube Assy, Hyd, Valve Tank [Coyote],
 2-111
 Tube Wldt, 2-97
 Tube Wldt, Exhaust, Dsl [Roto Cover],
 2-37, 2-39
 Tube, 0.38id 0.75od 00.3l, Ss, 2-35
 Tube, 0.59id 1.25od 00.6l, Stl, 2-91, 3-7
 Tube, 0.77id 1.75od 00.7l, Stl, Pntd, 2-45
 Tube, Breather, 5-10
 Tube, Coolant, Lower, Dsl [Roto-mold],
 2-41
 Tube, Drain, Starter, 5-19
 Tube, Exhaust, Tailpipe, 3 Wheel, 2-37
 Tube, Exhaust, Tailpipe, 4 Wheel, 2-39
 Tube, Hose, 3-9
 Tube, Hyd [Pump Charge], 2-113
 Tube, Hyd, Gear Pump Front[S30
 Mit2013], 2-113, 2-115
 Tube, Hyd, Gear Pump Middle[S30
 Mit2013], 2-113, 2-115
 Tube, Hyd, Gear Pump Rear [Coyote],
 2-113
 Tube, Hyd, Pump, Drain, 2-113
 Tube, Hyd, Pump, Rear Drive, Ff10/Fm10,
 2-113
 Tube, Hyd, Right Inside, 2-47
 Tube, Hyd, Right Outside, 2-47
 Tube, Hyd, Steering Drain, 2-111
 Tube, Injector, Pipe #1 [Ku], 5-20
 Tube, Injector, Pipe #2 [Ku], 5-20
 Tube, Injector, Pipe #32 [Ku], 5-20
 Tube, Pin [Ku], 5-3
 Tube, Plstc, 0.25id 0.31od 00.5l, Blk, 2-97
 Tube, Seat, Valve, Oil [Ku], 5-7
 Turnbuckle, Body, .38thread, 03.9l, 2-53

V

Valve Assy, Relief [CI], 4-3
 Valve Plate, 4-17
 Valve Spool, 4-19
 Valve, Breather, Complt, 5-10
 Valve, Check, 4-5, 4-7
 Valve, Check, 0005psi Bm06/Bm06, 3-33,
 3-35
 Valve, Cntrl, Solenoid, 4-5, 4-7
 Valve, Eng [Delivery, Ku], 5-25
 Valve, Exhaust [Ku], 5-12
 Valve, Expansion, 4-9
 Valve, Heater, 3-19
 Valve, Hyd [Priority Ds05g1200], 2-121
 Valve, Hyd, Flow Cntrl, 4-22
 Valve, Hyd, Flow Divider, 4-22
 Valve, Hyd, Flow Divider, Propel [4w],
 4-22
 Valve, Hyd, Flow Divider, Propel [4w] (See
 Breakdowns), 2-121
 Valve, Hyd, Solenoid, 12vdc [06s], 4-5,
 4-7

CROSS REFERENCE

Valve, Hyd, Solenoid, 12vdc [06s] (See Breakdowns), 2-117
 Valve, Hyd, Solenoid, 12vdc [08s] (See Breakdowns), 2-119
 Valve, Intake [Ku], 5-12
 Valve, Motor, Hyd, 4-11
 Valve, Relief, 4-5, 4-7
 Valve, Relief, 3000psi, 4-17
 Valve, Relief, 3500psi, 4-13
 Valve, Relief, Pump, 4-13
 Valve, Shutoff, Bm04/Bm04, Pvc, 3-31
 Valve, Stem, No, 4-5, 4-7
 Video, Oprtr, Dvd [S30 En Es Fr], 3-56

W

Wand Kit, Vacuum, Ci [Roto. S30], 3-9
 Wand, Vacuum, 3-9
 Washer, 4-13, 4-15
 Washer Flat, 0.50, Sae, 2-25
 Washer En, 4-15, 4-17
 Washer, Adjusting [Ku], 5-21
 Washer, Cab, Shld, Glass, 3-15
 Washer, Collar, Gear [Ku], 5-15
 Washer, Flat [Ku], 5-12, 5-27
 Washer, Flat, 0.16b 0.38d .05, Pl, 06, 2-15
 Washer, Flat, 0.19b 0.44d .03, Nyl, Blk, 2-21, 2-23
 Washer, Flat, 0.19b 0.44d .05, Pl, 08, 3-49
 Washer, Flat, 0.19b 0.50d .03, Stil, Blk, 3-13, 3-15
 Washer, Flat, 0.25, Fendr, 1-1, 2-65
 Washer, Flat, 0.25, Sae, 2-25, 2-61, 2-63, 2-65, 2-73, 3-3, 3-5, 3-45, 3-47
 Washer, Flat, 0.25, Sae, Blk, 3-17
 Washer, Flat, 0.25, Std, 1-1, 2-31, 2-69, 2-71, 3-9, 3-19, 3-51
 Washer, Flat, 0.25b 0.56d .05, Pl, 10, 2-75, 2-83, 3-9, 3-27
 Washer, Flat, 0.27b 0.69d .05, Ss, 2-59, 2-65, 2-67, 2-97, 3-9, 3-53
 Washer, Flat, 0.31, Fendr, 2-15, 2-65, 2-81, 3-45, 3-47
 Washer, Flat, 0.31, Sae, 2-27, 2-35, 2-43, 2-45, 2-61, 2-85, 3-13
 Washer, Flat, 0.31, Sae, Blk, 3-13, 3-15, 3-17
 Washer, Flat, 0.31, Std, 1-1, 2-5, 2-7, 2-9, 2-11, 2-15, 2-17, 2-27, 2-33, 2-37, 2-39, 2-43, 2-45, 2-47, 2-61, 2-65, 2-67, 2-69, 2-71, 2-73, 2-79, 2-81, 2-91, 2-95, 2-121, 3-7, 3-9, 3-13, 3-21, 3-29, 3-31, 3-49
 Washer, Flat, 0.31, Std (S30XP Only), 2-13
 Washer, Flat, 0.31b 0.67d .07, Stil, Blk, 3-15
 Washer, Flat, 0.32b 1.00d .12, Ss, 2-19, 2-65, 2-81, 3-31, 3-49
 Washer, Flat, 0.34b 0.69d .06, Nyl, 2-73, 3-51, 3-53
 Washer, Flat, 0.38, Sae, 2-21, 2-23, 2-53, 2-85, 2-87, 2-97, 2-113, 2-115, 3-9

Washer, Flat, 0.38, Std, 2-7, 2-9, 2-27, 2-35, 2-37, 2-39, 2-43, 2-59, 2-65, 2-67, 2-75, 2-83, 2-87, 2-89, 2-91, 2-95, 3-7, 3-11, 3-17, 3-31, 3-51
 Washer, Flat, 0.38b 0.88d .08, Ss, 2-35, 2-73, 2-79, 2-83, 2-85
 Washer, Flat, 0.38b 0.88d .12, Stil, Pl, 2-13
 Washer, Flat, 0.39b 0.75d .06, Nyl, 2-17
 Washer, Flat, 0.40b 1.12d .12, Ss, 2-43
 Washer, Flat, 0.40b 1.12d .12, Stil, Pl, 2-61, 2-117, 2-119
 Washer, Flat, 0.44b 1.00d .08, Ss, 2-69, 2-75
 Washer, Flat, 0.44b 2.00d .12, Stil, Pl, 2-27
 Washer, Flat, 0.50, Sae, 2-49, 2-53, 2-55, 2-59, 2-85, 2-87
 Washer, Flat, 0.50, Std, 2-5, 2-39, 2-67, 2-69, 2-77
 Washer, Flat, 0.53b 1.75d .12, Stil, Pl, 2-97
 Washer, Flat, 0.56b 1.38d .11, Ss, 2-7, 2-9, 2-49
 Washer, Flat, 0.62, Sae, 2-59
 Washer, Flat, 0.75, Sae, 2-45, 2-47, 2-117, 2-119
 Washer, Flat, 0.81b 1.24d .03, Stil, Pl, 2-61
 Washer, Flat, 08, 2-5, 2-57, 2-73
 Washer, Flat, 1.02b 1.75d .12, Stil, 2-53, 2-55, 2-75
 Washer, Flat, 1.10b 1.50d .12, Stil, Pl, 2-35
 Washer, Flat, 1.39b 2.12d .13, Stil, 2-45, 2-47
 Washer, Flat, 10, 2-11, 2-15, 2-21, 2-23, 2-29, 2-73, 2-85, 2-93, 3-3, 3-5, 3-21
 Washer, Flat, 10, Sae, 3-37
 Washer, Flat, 10, Ss, 2-79, 3-9, 3-31
 Washer, Flat, 2.16b 3.50d .16, Felt, 2-45
 Washer, Flat, 2.24b 3.03d .12, Ni, 2-47
 Washer, Flat, Belleville, .31, 2-35, 2-61, 2-97, 3-21
 Washer, Flat, Belleville, .38, 2-7, 2-9
 Washer, Flat, Belleville, .50, 2-49, 2-67, 2-69, 2-97, 2-115
 Washer, Flat, Belleville, M10, 2-85
 Washer, Flt, Pump, Hyd, 4-13
 Washer, Lock, Int-ext, 0.25, 2-27, 2-65, 2-79, 2-83, 3-21
 Washer, Lock, Int-Ext, 0.31, 2-35
 Washer, Lock, Int-ext, 0.38, 2-5, 2-27
 Washer, Lock, Int-ext, 10, 2-35, 2-73
 Washer, Lock, Int, 0.25, 2-109
 Washer, Lock, Int, 0.31, 2-35, 3-49
 Washer, Lock, Int, 0.38, 3-31
 Washer, Lock, Int, 10, Ss, 3-31
 Washer, Lock, Split [Ku], 5-7, 5-23, 5-27
 Washer, Plain [Ku], 5-18, 5-21
 Washer, Pump, Hyd, 4-13
 Washer, Retainer, Door, Dump, 2-69, 2-71

Washer, Sealing, 0.28b 0.75d Ss, Neo, 3-13
 Washer, Shaft, Rocker [Ku], 5-12
 Washer, Thrust [Ku], 5-13
 Washer, Thrust, 0.61b 1.25d .06, Fgl, 2-85
 Weight, Comp, Govnr [Ku], 5-13
 Weight, Counter, Casting, 52.8lb, 2-77
 Weight, Counter, Casting, 72.8lb, 2-77
 Weight, Counter, Casting, 72.8lb (S30 and S30XP Only), 2-5
 Weight, Counter, Casting, 79.9 Lb, 2-5
 Weight, Eccentric, Pntd, 2-83
 Wheel, Steering, 14.0d 0.81b 36tooth, 2-25
 Wire, 10ga 16.0l Blk .25ring /.38ring, 2-35, 3-21
 Wire, 10ga, 15.0l, Grn, M8 Ring/M8 Ring, 2-79
 Wire, 10ga, 35.0l, Grn, M8 Ring/M6 Ring, 2-65, 2-79
 Wire, Tie [W/.25" Fir Tree Clip], 2-65, 2-69, 2-81

Y

Yoke, 5-19