



Electronic Service Manuals

This electronic document is provided as a service to our customers. We do not create the contents of the information contained in this document. Should you have detailed questions pertaining to the information contained in this document, you may contact Michco, or the manufacturer which provided the original information in this electronic deliverable. Michco's only part in this electronic deliverable was the electronic assembly process. By providing this manual on line we are not guaranteeing parts availability.

You may contact Michco through the following methods:

Phone (517) 484-9312 or (800) 331-3339

2011 N. High St. -- Lansing, Michigan -- 48906

Fax: (517) 484-9836

Email: CustServe@Michco.com

Web site: www.Michco.Com

Parts Web site: www.FloorMachineParts.Com

Order Parts on Line at:

www.FloorMachineParts.Com

Directly to Parts & Service:

By Email: **Shop@Michco.com**

By Fax: (517) 702-2041

By Voice: Use numbers above.

Serving the Cleaning Industry Since 1922

Notice: All copyrighted material remains property of original owners, all trademarks are property of respective owners. Manuals are subject to Manufacturer's reproduction limitations. Originals or reproductions were provided by manufacturers through a request. We make no warranty as to the correctness of information provided in this document and you assume all risk. By placing these manuals on line we are not declaring our corporation to be an manufacturer authorized dealer or provider, please check our web site for authorized manufacturers we represent.

WRANGLER 24

IMPORTANT SAFETY INSTRUCTIONS



**READ AND UNDERSTAND ALL INSTRUCTIONS
BEFORE OPERATING OR SERVICING MACHINE**



DANGER!

**Failure to Observe These Instructions Can Cause Personal Injury to
Machine Operator, By-Standers or Possible Machine Damage.**

- **NEVER** attempt to operate this machine unless you have been trained in its operation.
- **NEVER** allow an untrained person to operate this machine.
- Use this machine **ONLY** as described in this manual.
- **NEVER** attempt to operate this machine if it is not working properly or has been damaged in any manner.
- **NEVER** disconnect or modify any switch or safety device (circuit breaker) on this machine.
- **ALWAYS** operate this machine from the rear control panel, not from the side.
- **NEVER** drop or insert any object into any machine opening.
- **ALWAYS** keep face, fingers, hair or any body part, or loose clothing away from any machine opening or moving part (revolving brush, pad driver or vacuum motor).
- **NEVER** operate machine with any air opening blocked. Keep all air openings free of dust, lint, hair etc.
- **NEVER** spray machine with water or any liquids.
- **NEVER** allow vacuum motor or battery charging plug to get wet. Vacuum motor and battery charging plug will short out if wet.
- **NEVER** operate machine when battery charger is plugged in.
- **NEVER** operate machine in an explosive atmosphere (grain dusts, flammable liquids or fumes).
- **NEVER** use flammable liquids (gas, kerosene, solvents or thinners) to clean floor.
- **ALWAYS** turn OFF brush switch when attaching pads or brushes.
- **NEVER** operate machine with splash skirt removed.
- **NEVER** leave machine unattended.
- **ALWAYS** store this machine indoors in a dry, cool area.

**PERSONAL INJURY AND PROPERTY DAMAGE FROM MACHINE OVERTURNING, BATTERIES
FALLING OUT OF MACHINE OR BATTERIES LEAKING ACID CAN OCCUR IF YOU DO NOT FOLLOW
THESE PRECAUTIONS:**

- ALWAYS** be sure ramp is secured to vehicle before attempting to load/unload.
- ALWAYS** use extreme caution when operating machine on a ramp or loading/unloading a machine into or out of a truck. Use extreme caution if ramp is wet, oily or covered with cleaning chemicals.
- NEVER** turn machine on an incline.
- NEVER** stop machine on a ramp.
- NEVER** attempt to climb a grade of more than 20 degrees.
- NEVER** park machine near a dock or on ramps.


ALL repair service must be performed by an NSS authorized distributor/service station. Use only NSS original equipment parts.

SAVE THESE INSTRUCTIONS




CONTROL PANEL/SQUEEGEE ASSEMBLY

ITEM	PART #.	DESCRIPTION	QTY	ITEM	PART #	DESCRIPTION	QTY
101	-----	LABEL, CONTROL WR20 W/D	1	158	9120900	1/4-20 ESNA NUT	2
102	0693141	RUBBER SWITCH BOOT	4	159	3392971	SQUEEGEE KNOB, MACHINED	2
103	2391391	BATTERY METER -24V	1	162	3096741	WHEEL,BUMPER-SMALL GRAY	1
104	2395831	WIRE DIAGRAM -BATTERY	1	163	9121010	1/4-20 x 3/4 TRUSS HD PHIL SCREW	2
105	2395521	CONTROL PANEL WR 20/24 WD	1	164	9121880	5/16-18 x 3/4 SOCKET HD CAP SCREW	2
106	9120390	5/16 SAE FLAT WASHER	5	165	9121920	5/16-18 x 1 1/2 SOCKET HD CAP SCREW	2
107	9121410	5/16 EXTERNAL STAR LOCK WASHER 5		166	9121880	5/16-18 x 3/4 SOCKET HD CAP SCREW	2
108	9121640	5/16-18x3/4 HEX HD BOLT	5	167	2692533	INNER CHANNEL SQ. NARROW MOUNT	1
109	0690761	PLUG BUTTON	2	168	2791061	32"REPL. SQ.BLADES, SET OF 2	1
110	2395221	DEADMAN SWITCH	2	169	2692523	HOUSING, NARROW MOUNT SQUEEGEE	1
111	9120910	1/4-20 KEPS NUT	5		2692539	SQUEEGEE ASSM NARROW MOUNT	1
112	2391351	SOLENOID, 24V	2	170	2790281	3" BUMPER WHEEL	2
113	9121170	1/4-20x1/2 HEX HD BOLT	1	171	9120390	5/16 SAE FLAT WASHER	2
114	9120970	1/4 EXTERNAL STAR LOCK WASHER	1	172	9121410	5/16 EXTERNAL STAR LOCK WASHER	2
115	4490561	INSULATED STANDOFF	1	173	9121560	5/16-18x1/2 HEX HD BOLT	2
116	-----	COVER PANEL	1	174	9122130	5/16-18x2 1/4 HEX HD BOLT	1
117	9120370	10 FLAT WASHER	2	175	9121520	5/16 SPLIT LOCK WASHER	1
118	9120320	10 SPLIT LOCK WASHER	2	176	1390171	SQUEEGEE BRACKET	1
119	9120720	10-32 x 3/8 ROUND HD PHIL	2	177	9122140	3/8-16 ESNA NUT	1
120	9120970	1/4 EXTERNAL STAR LOCK WASHER	1	178	1391171	BUSHING, SQUEEGEE SHAFT	2
121	9121160	1/4-20 x 3/8 HEX HD BOLT	1	179	3695581	SPRING	1
122	9997560	VELCRO LOOPS	.8'	180	1390156	SQUEEGEE PIVOT ROD	1
123	9121160	1/4-20 x 3/8 HEX HD BOLT	6	181	9122660	1/2-13 x 3 HEX HD BOLT	1
124	2391531	FILTER - WRANGLER 20/24	1	182	1090981	SPACER	1
125	-----	C-14 BAG RING GASKET	1	183	2391941	BALL JOINT -WRANGLER 20	1
126	-----	COVER BOX	1	184	9122300	3/8-16 x 1 1/4 HEX HD BOLT	1
127	-----	LABEL, BRUSH - WR 20 /24	1	185	9122100	3/8 SPLIT LOCK WASHER	1
128	-----	SQUEEGEE LIFT BRACKET	1	186	9121980	3/8 FLAT WASHER	3
129	9120990	1/4-20x3/8 TRUSS HD PHIL SCREW	2	187	-----	LOCK DOWN LIFT ROD WR 20/24	1
130	1390941	5/16 E RING	2	188	2691831	RETAINER SPRING HOUSING	1
131	2495301	SQUEEGEE LIFT CABLE - 25"	1	189	2691841	SPRING, BRUSH PRESSURE	1
132	9120990	10-24 x 3/8 TRUSS HD SCREW	1	190	9122140	3/8-16 ESNA LOCK NUT	1
133	9120320	10 SPLIT LOCK WASHER	1	191	2691821	SPRING HOUSING, BRUSH LIFT	1
134	9120370	10 FLAT WASHER	1	192	9122000	3/8-16 HEX NUT	1
135	2395921	HANDLE, SQUEEGEE LIFT	1	193	-----	LOCK DOWN LIFT ROD	1
136	2391371	KNURLED KNOB - WRANGLER 20	4	194	9121990	3/8-24 JAM NUT	2
137	9120880	1/4 SPLIT LOCK WASHER	2	195	9122260	3/8-16x1 HEX HD BOLT	1
138	9120930	1/4 FLAT WASHER	2	196	9122100	3/8 SPLIT LOCK WASHER	1
139	9120690	10-32 KEPS NUT	4	197	9121980	3/8 FLAT WASHER	2
140	9120370	10 FLAT WASHER	4	198	4490531	3/8" ROD END	2
141	-----	WIRING DIAGRAM DECAL	1	199	2392561	CIRCLE COTTER - #CC-7	1
142	9120655	10-32 x 1-3/4 SET SCREW	4	200	2691373	BRUSH LIFT HANDLE	1
143	2395773	RESISTOR BRACKET	1	201	2391951	PIN - WRANGLER 20	1
144	-----	10-24 SQUARE NUT	1	202	2490661	PIVOT STUD	1
145	9120360	10-24 KEPS NUT	3	203	-----	BRACKET, MOUNT LIFT ARM	1
146	2695121	RESISTOR	1	204	9122450	1/2 SAE WASHER	1
147	9120410	10-24 x 1/2 ROUND HD PHIL SCREW	4	205	9122675	1/2-13 HEX SLOTTED NUT	1
148	9120920	1/4-20 HEX NUT	2	206	9120312	HUMPED COTTER PIN	1
149	2690981	LIFT HANDLE GRIP	1	207	9121250	1/4-20 x 3/4 HEX HD BOLT	4
150	9120930	1/4 SAE FLAT WASHER	4	208	4892471	CIRCUIT BREAKER BUTTON SEAL	2
151	9120910	1/4-20 KEPS NUT	4	209	2392201	CIRCUIT BREAKER,10 AMP	1
152	4890851	HOSE CLAMP	1	210	2391361	CIRCUIT BREAKER, 25 AMP	1
153	2490591	SPACER	1	211	3390411	FWD-REV SWITCHES	2
154	9122670	1/2-20 JAM NUT	1	212	2792041	VAC MOTOR SWITCH	1
155	2690591	SQUEEGEE VAC HOSE W/CUFFS	1	213	4491101	TOGGLE SWITCH	1
156	9121440	5/16-18 WING NUT	1	214	1390171	SQUEEGEE BRACKET	1
157	9122340	3/8-16x2 HEX HD BOLT	1				

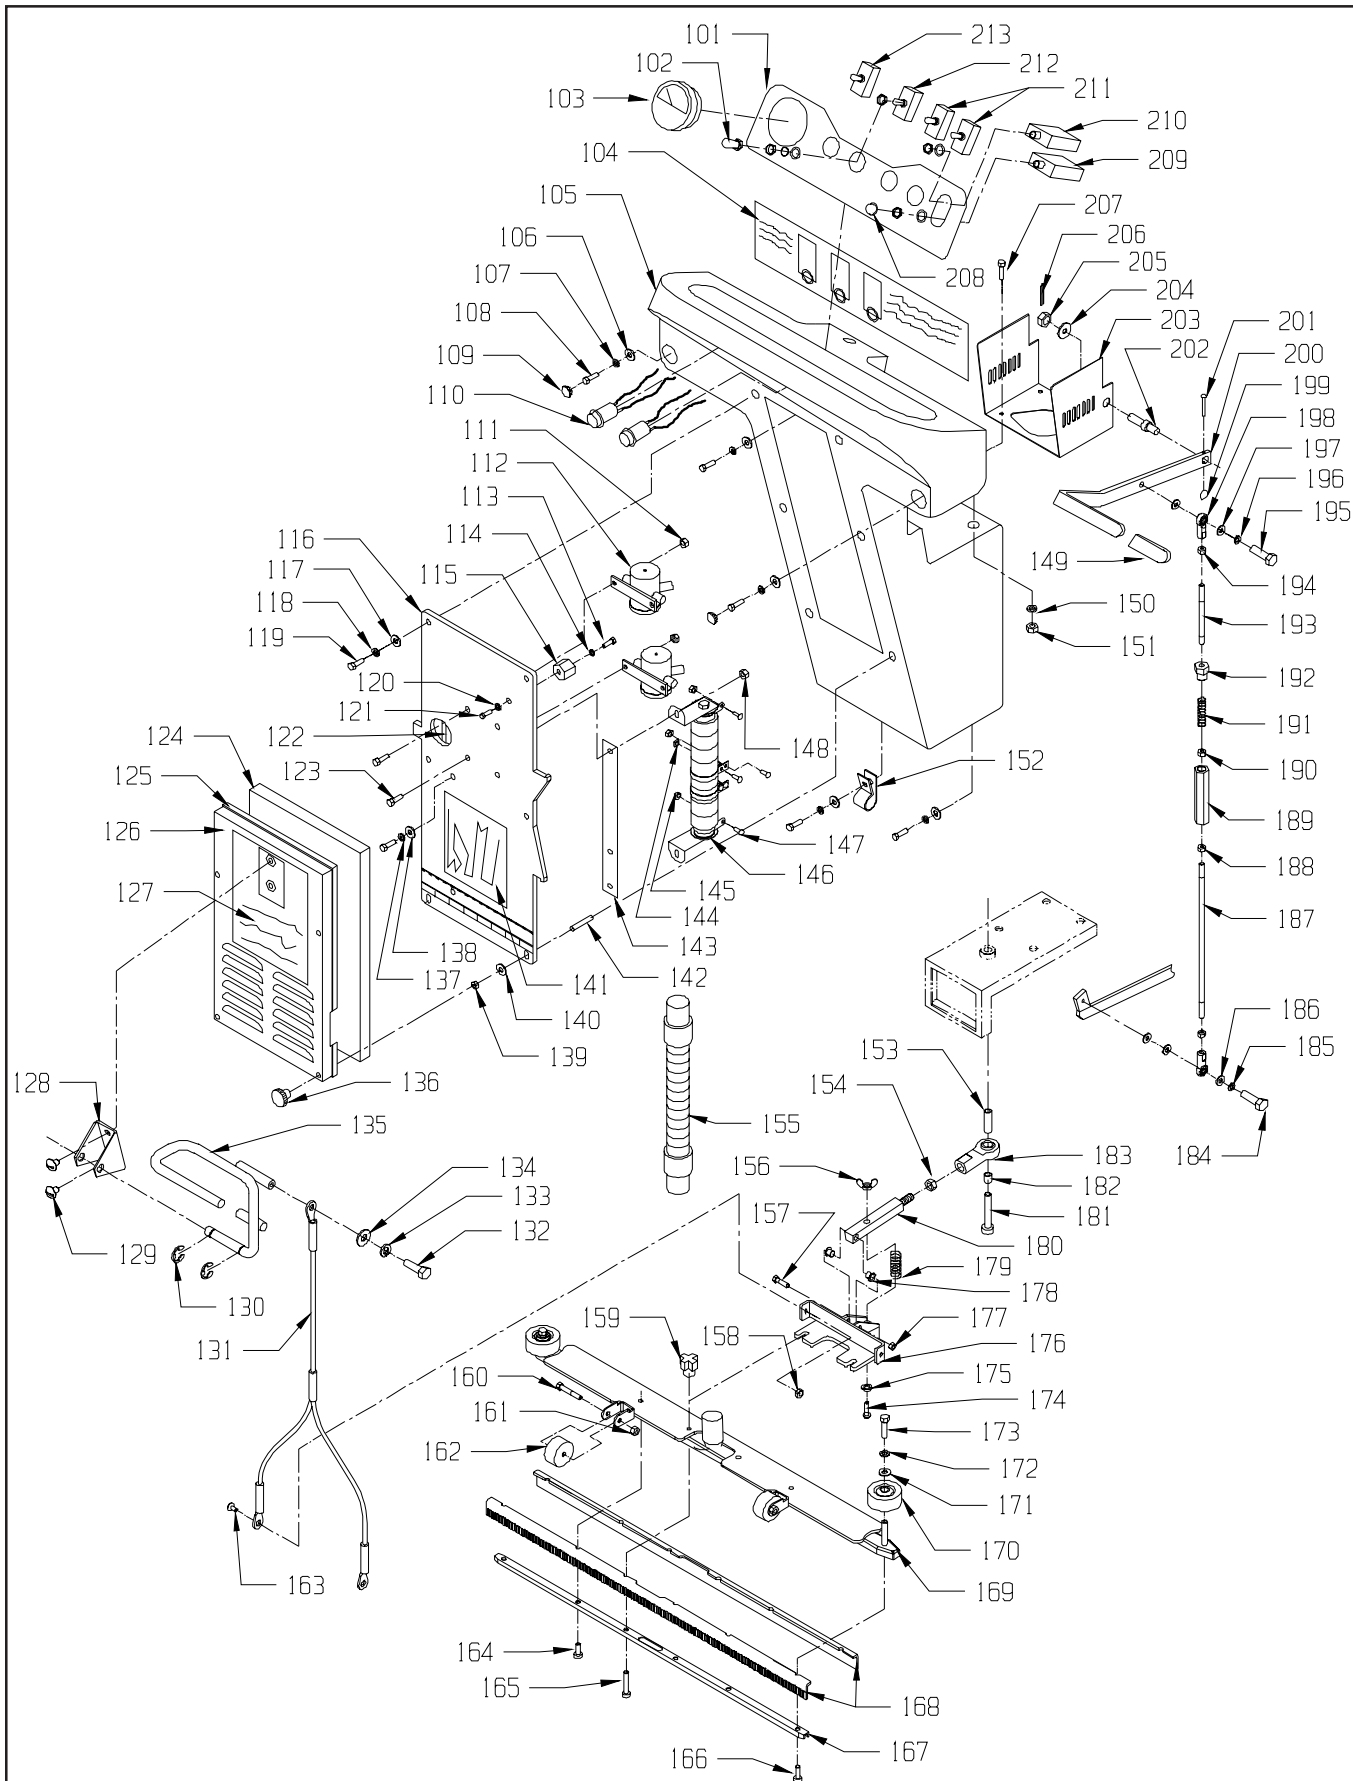


SOLUTION TANK/CHASSIS TRANSAXLE ASSEMBLY

ITEM	PART #.	DESCRIPTION	QTY	ITEM	PART #	DESCRIPTION	QTY
201	9120320	10 SPLIT LOCK WASHER	1	256	9121640	5/16-18 x 3/4 HEX HD BOLT	1
202	9120380	10-24 x 3/8 ROUND HD PHIL SCREW	1	257	2495151	ELL FITTING 1/2 BARB x 1/4 MNPT	1
203	5092531	SOLUTION FEED TUBE CAP	1	258	2795841	HOSE CLAMP 9/16 - 1 1/16	3
204	2391636	HOOD ROD - WRANGLER 20/24	1	259	-----	CHANNEL - DRIVE CASTER	1
205	9121170	1/4-20 x 1/2 HEX HD BOLT	2	260	9122450	1/2 FLAT WASHER	1
206	9120880	1/4 SPLIT LOCK WASHER	2	261	9122420	1/2 SPLIT LOCK WASHER	1
207	9120930	1/4 FLAT WASHER	2	262	9122500	1/2-13 x 7/8 HEX HD BOLT	1
208	2391646	ROD BRACKET	1	263	5092291	CORD CLAMP	1
209	2392561	CIRCLE COTTER - #CC-7	2	264	9122180	3/8 WROUGHT WASHER	4
210	2791899	TANK SCREEN BAG	1	265	9121980	3/8 FLAT WASHER	4
211	0294341	TOP MOTOR SEAL - NEOPRENE	1	266	9120825	KEY, MAIN AXLE SPROCKET	2
212	-----	CLEAN WATER DECAL	1	267	2395243	CLAMP, AXLE W/BRUSH CAP GUARD	1
213	0294331	MOTOR SEAL GASKET	1	268	9122450	1/2 FLAT WASHER	4
214	2395571	VACUUM MOTOR 24V 3 STAGE	1	269	9122500	1/2-13x7/8 HEX HD BOLT	4
214	2392571	REPLACEMENT CARBON BRUSHES	2	270	9122420	1/2 SPLIT LOCK WASHER	4
215	4495441	HOSE CLAMP 1.875"-2.125" RANGE	1	271	-----	RIGHT AXLE SUPPORT BRACKET	1
216	2395651	VAC MOTOR EXHAUST HOSE	1	-----	-----	LEFT AXLE SUPPORT BRACKET	1
217	9120880	1/4 SPLIT LOCK WASHER	3	272	2395353	AXLE CLAMP	2
218	9121360	1/4-20x4 HEX HD BOLT	3	273	9121250	1/4-20 x 3/4 HEX HD BOLT	4
219	2395471	VALVE LEVER (SHORT)	1	274	9120880	1/4 SPLIT LOCK WASHER	4
220	9121530	5/16-24 HEX NUT	1	275	-----	LIFT FORK WR 24	1
221	9120890	1/4-20 THIN ESNA HEX NUT	1	276	2791371	FLANGE BEARING FF-838-3	2
222	9121520	5/16 SPLIT LOCK WASHER	2	277	2396071	BATTERY CHARGER (115V)	1
223	9121640	5/16-18 x 3/4 HEX HD BOLT	2	2391991	BATTERY CHARGER (240V)	1	
224	5490171	1/4 MALE SPADE FULLY INSULATED	2	2392011	BATTERY CHARGER (120V)	1	
225	2391771	90 DEGREE HOSE BARB	1	2392511	BATTERY CHARGER (100V-JAPAN)	1	
226	-----	SOLUTION VALVE BRACKET	1	-----	BATTERY CHARGER (100V-250V)	1	
227	2395997	VINYL HOSE, 3/4"ID x 33" LGTH	1	278	3390361	BATTERY (6V, 220A.H.)	4
228	2495317	VINYL HOSE, 1/2" ID x 34" LGTH	1	3390951	BATTERY (6V, 220A.H. DRY)	4	
229	2495161	FITTING 1/2 HOUSE BARB x 1/4 MNPT	1	279	2392761	WARNING TAG - BATTERY TERMINAL	1
230	1391531	W-17 SOLUTION VALVE	1	280	-----	HINGE BRACKET - LOWER	1
231	2495151	ELL FITTING 1/2 HOUSE BARB x 1/4 MNPT	1	280	2391689	LOWER HINGE ASSEMBLY	1
232	2495327	VINYL HOSE 1/2"ID x 14" LGTH	1	281	9121210	1/4-20x5/8 HEX HD BOLT	4
233	2391181	VALVE LEVER GRIP	1	282	9120880	1/4 SPLIT LOCK WASHER	4
234	2690283	VALVE LEVER	1	283	9120930	1/4 SAE FLAT WASHER	4
235	-----	SQUEEGEE MOUNT & STOP BRACKET	1	284	2395933	ADJUSTMENT PLATE - HINGE BRACKET	2
236	6492061	SWIVEL CASTER, PLATFORM, 4" WHEEL	1	285	9121950	HINGE PIN - WRANGLER 20	2
4490391	CASTER WHEEL ONLY W BEARING	1	286	-----	HOSE CLIP BRACKET	1	
237	9121250	1/4-20x3/4 HEX HD BOLT	1	287	9121250	1/4-20 x 3/4 HEX HD BOLT	4
238	9120880	1/4 SPLIT LOCK WASHER	1	288	9120880	1/4 SPLIT LOCK WASHER	4
239	9120930	1/4 FLAT WASHER	1	289	9120930	1/4 SAE FLAT WASHER	4
240	2791281	SPACER	1	290	2392131	SPRING CLIP, HOSE	1
241	9122100	3/8 SPLIT LOCK WASHER	4	291	2391751	POP RIVET 1/8" X 5/8"	2
242	9122350	3/8-16 x 3 HEX HD BOLT	4	292	2391011	SOLUTION TANK -WRANGLER 20/24	1
243	9122260	3/8-16 x 1 HEX HD BOLT	2	293	2392001	CHARGER PLUG, RED 24V W/WIRES	1
244	9122100	3/8 SPLIT LOCK WASHER	2	294	9120080	6-32 x 3/4 ROUND HD PHIL	2
245	9122450	1/2 FLAT WASHER	2	295	9120130	6 EXTERNAL STAR LOCK WASHER	2
246	2395501	WHEEL, DRIVE 8x2	2	296	2391581	SPRING TUBE ADAPTOR	1
247	5293151	RETAINING RING	2	297	9120350	10-24 HEX NUT	1
248	2395481	TRANSAXLE, 20"	1	298	2690851	TUBE ADAPTER	1
-----	-----	CARBON BRUSH - TRANSAXLE	2	299	2391591	GASKET TUBE ADAPTER	1
-----	-----	CARBON BRUSH CAP - TRANSAXLE	2				
-----	-----	TOP MOTOR BRACKET - TRANSAXLE	1				
249	9123105	1-1/4" x .770" x .082" WASHER	4				
250	9121380	5/16-18 x 3/8 KNURLED SET SCREW	4				
251	-----	SOLUTION LABEL, WRANGLER 20/24	1				
252	2391771	90 DEGREE HOSE BARB	1				
253	2392141	HOSE CLAMP STEEL .953-1.093	1				
254	2395761	CLAMP, TUBE	1				
255	9121520	5/16 SPLIT LOCK WASHER	1				

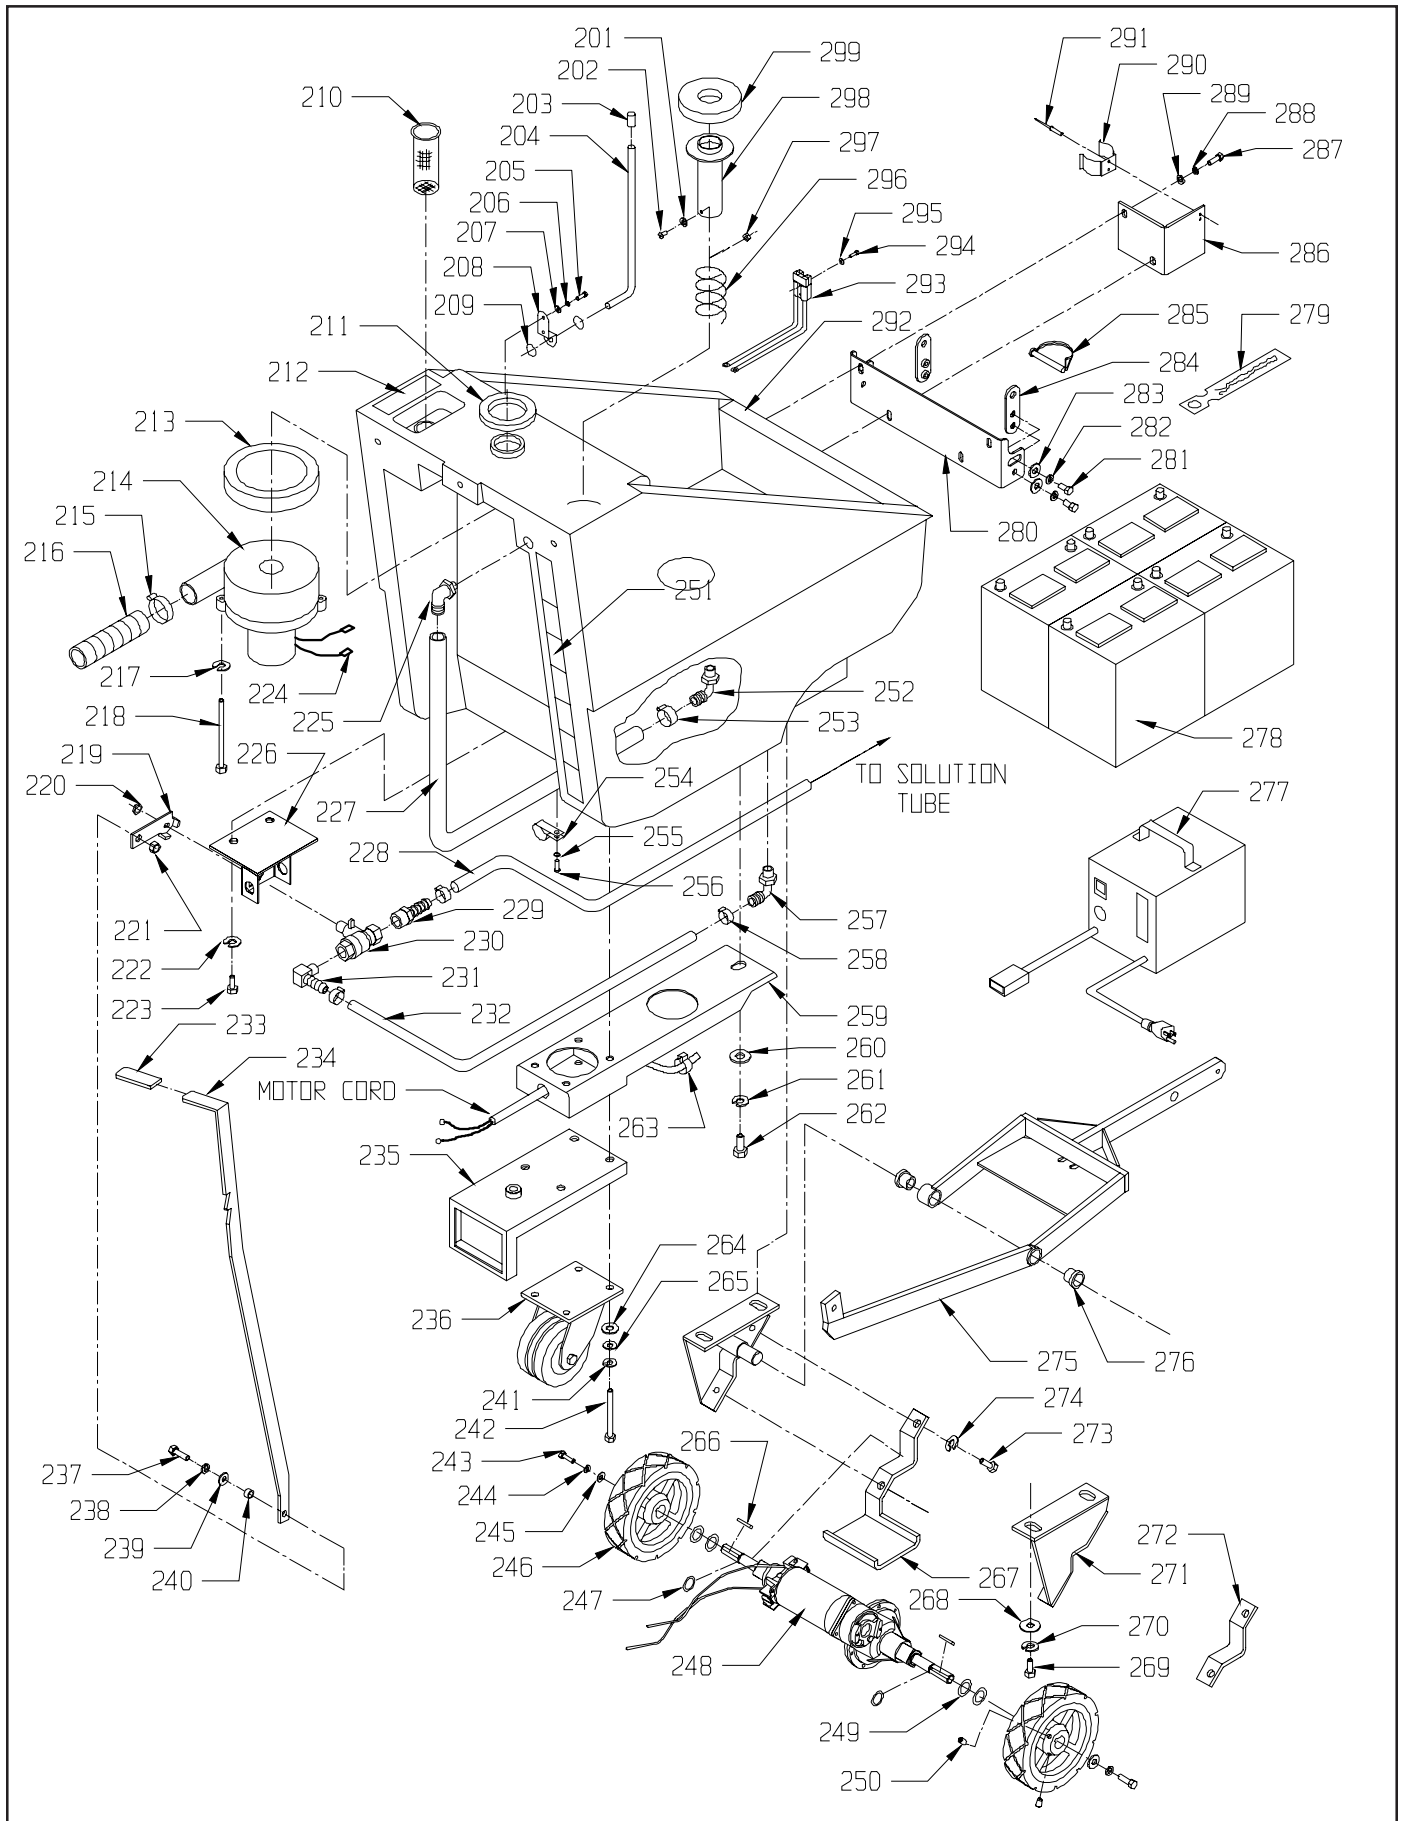


RECOVERY TANK ASSEMBLY

<u>ITEM</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>QTY</u>
301	2291211	5 IN ALUMINUM CONNECTOR	1
302	2391241	HOSE STRAP - WRANGLER 20/24	1
303	5797011	17" SQUEEGEE	1
304	4490521	LOAD ADJUST KNOB	1
305	-----	10-32 x 1/2 SET SCREW	1
306	-----	WARNING/OPERATE LABEL, WRANGLER 20/24	1
307	-----	TANK DRAIN LABEL	1
308	2395451	VACUUM TUBE	1
309	2391611	INLET TUBE GASKET - W20/24	1
310	2391601	VACUUM TUBE GASKET- W20/24	1
311	9120930	1/4 FLAT WASHER	3
312	9120970	1/4 EXTERNAL STAR WASHER	3
313	9121000	1/4-20 x 5/8 TRUSS HD SCREW	3
314	4894081	HOSE CLAMP 1.593"-1.812" RANGE	1
315	2391621	STUD, HOOD KNOB	1
316	2391561	INLET TUBE	1
317	2391611	INLET TUBE GASKET - W20/24	1
318	2391541	FLOAT SCREEN ASSM - W20/24	1
319	9120970	1/4 EXTERNAL STAR WASHER	3
320	9121000	1/4-20 x 5/8 TRUSS HD SCREW	3
321	2791881	PLUG STRAP	1
322	2795621	DRAIN PLUG	1
323	2391661	HOSE TUBE	1
324	2393451	TUBE HOSE CLAMP, CRIMP-ON TYPE	1
325	2391671	DRAIN HOSE, CRUSH PROOF - WRANGLER 20/24	1
326	-----	UPPER HINGE - WRANGLER 20/24	1
327	9120880	1/4 SPLIT LOCK WASHER	4
328	9121210	1/4-20 x 5/8 HEX HD BOLT	4
329	4495441	HOSE CLAMP, 1 9/16-2 1/2 DIA	1
330	-----	SIDE LABEL - LEFT, WRANGLER 24	1
	-----	SIDE LABEL - RIGHT, WRANGLER 24	1
331	2395441	RECOVERY TANK - WR 20/24	1
332	2694421	BATTERY COVER LABEL - NSS/HORSE	1
333	9997550	VELCRO HOOK,P.S. - 2"	2
334	9120360	10-24 KEPS NUT	2
335	2690891	RECOVERY TANK LID GASKET	1
336	2690931	LID CHAIN RECOVERY TANK	1
337	9120450	10-24 x 1 ROUND HD PHIL SCREW	1
338	2795681	10-16 x 5/8 SHEET METAL SCREW	5
339	2690881	RECOVERY TANK LID ASSM	1
340	9997560	VELCRO LOOP, P.S. - 6"	2
341	2391231	VACUUM HOSE - WRANGLER 20/24	1
342	5790331	WAND - 2PC.	1

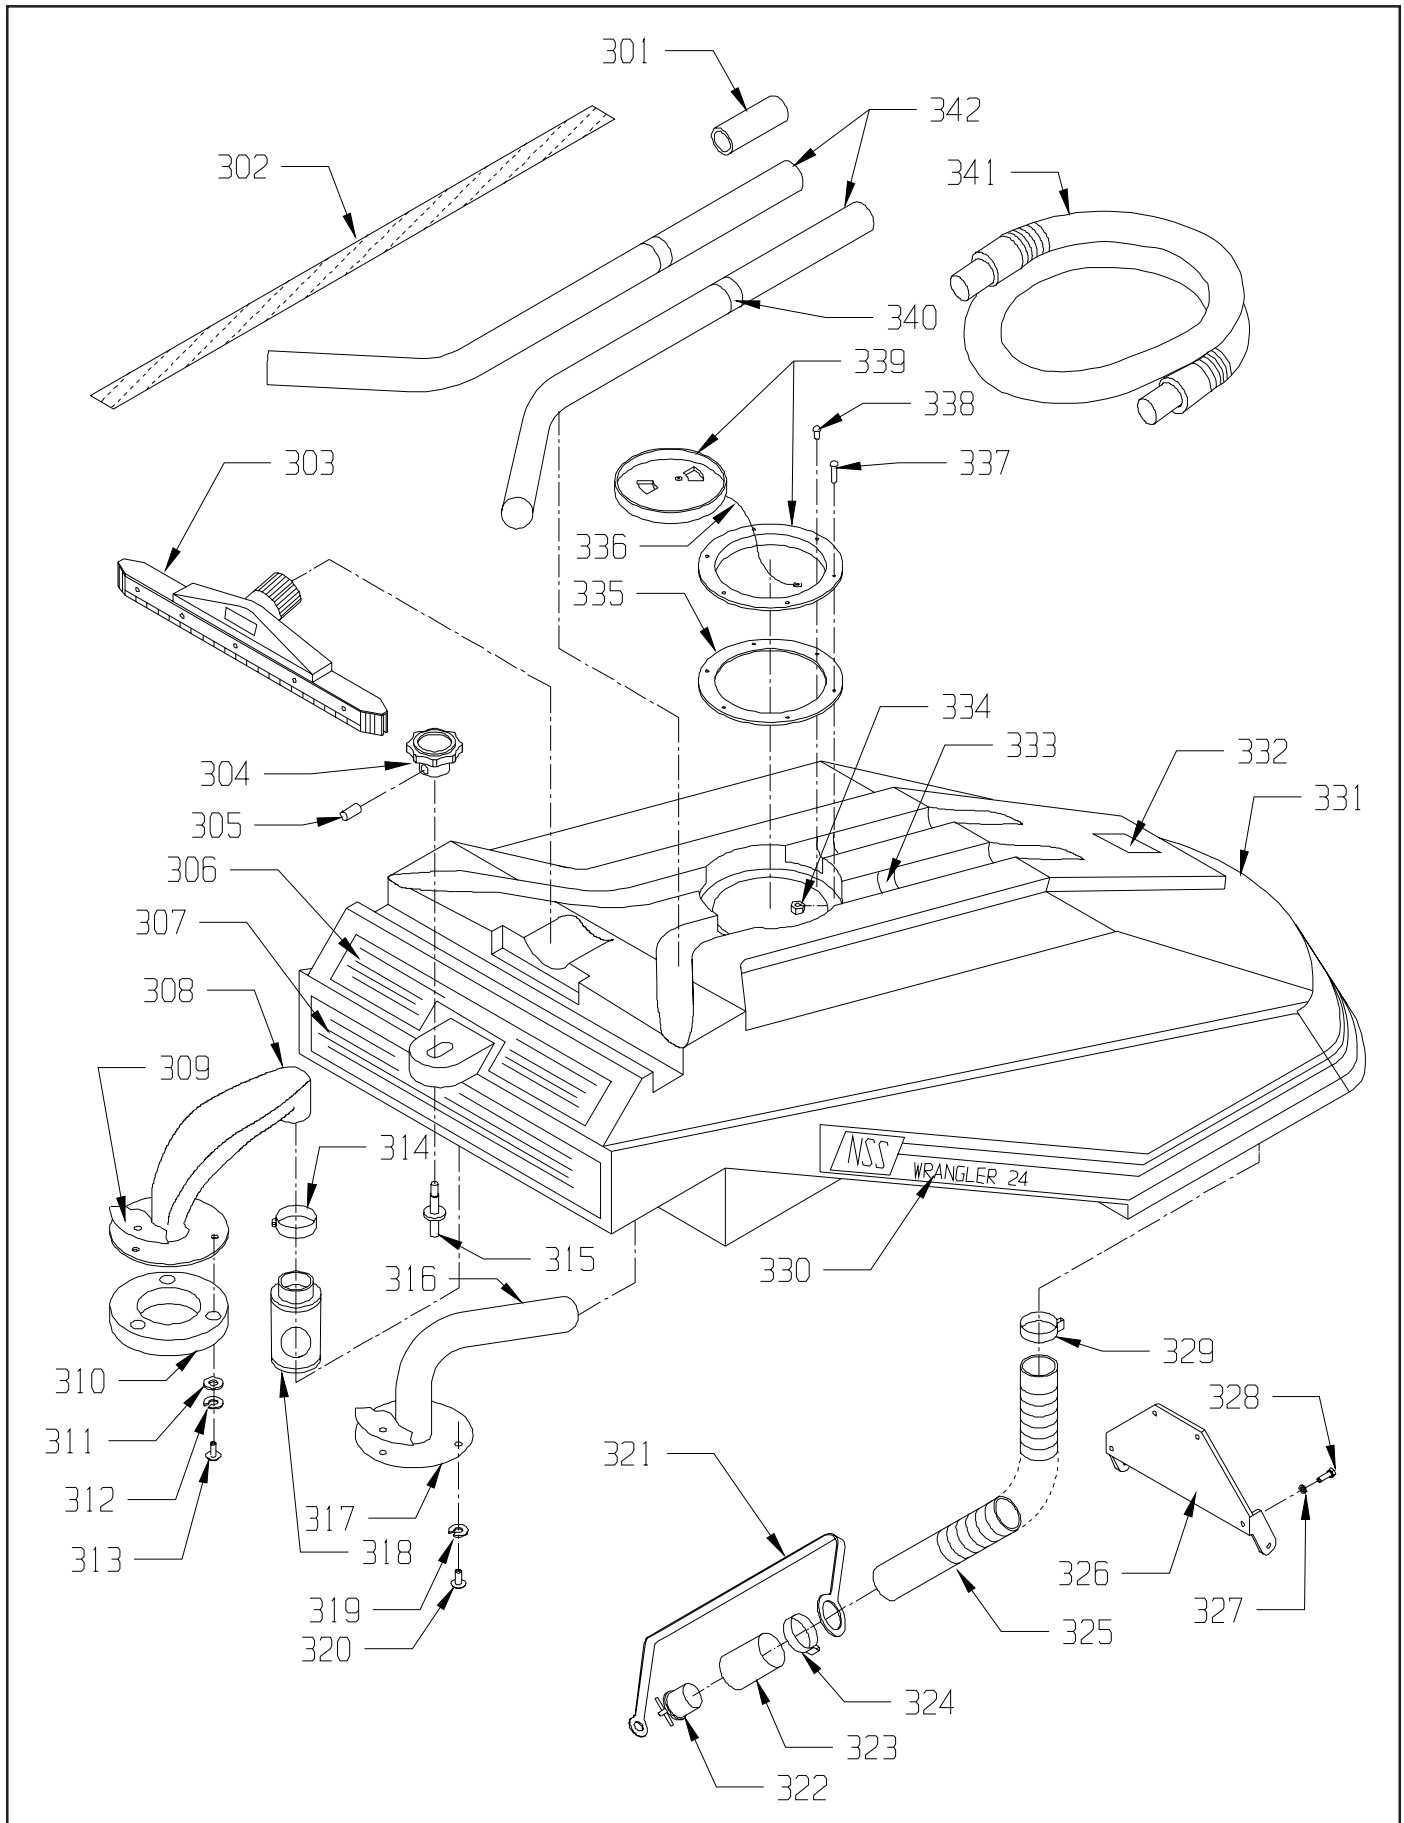


BRUSH MOTOR ASSEMBLY

<u>ITEM</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>QTY</u>
401	9120580	10-24 x 5/8 ROUND HD SCREW	12
402	————	LEFT SKIRT STRAP	1
403	————	LEFT SIDE WIPER	1
404	————	LEFT SKIRT	1
428	2392276	BUMPER WHEEL AXLE	2
429	2790281	BUMPER WHEEL 3"	2
430	9121390	5/16 SAE FLAT WASHER S.S.	2
427	————	RIGHT SKIRT ASSM	1
426	————	RIGHT SIDE WIPER	1
427	————	RIGHT SKIRT	1
	9120580	10-24 x 5/8 ROUND HD SCREW	12
423	9122120	3/8 SPRING WASHER	2
424	2790211	BRUSH PLATE LATCH	2
425	2495061	RIGHT SKIRT STRAP	1
428	2392276	BUMPER WHEEL AXLE	2
429	2790281	BUMPER WHEEL 3"	2
430	9121390	5/16 SAE FLAT WASHER S.S.	2
405	————	BRUSH MOTOR MOUNT	1
406	9120880	1/4 SPLIT LOCK WASHER	8
407	9121210	1/4-20 x 5/8 HEX HD BOLT	8
408	9122550	1/2-13 x 1 1/2 HEX HD BOLT S.S.	1
	————	LIFT FORK ASSM	1
409	————	LIFT FORK	1
	2791371	BEARING,FLANGE FF-838	3
410	2790751	BUSHING SPACER	1
411	————	WATER FEED CHANNEL	1
414	2792499	LEFT BRUSH DRIVE PLATE ASSM	1
412	9121090	1/4-20 x 1/2 TRUSS HD S.S.	2
413	2791281	BUSHING SPACER	2
415	2790202	BRUSH DRIVE PLATE	2
416	9121400	5-16 WROUGHT WASHER S.S.	2
417	9121520	5/16 SPLIT LOCK WASHER	2
418	9121680	5/16-18 x 1 HEX HD S.S.	2
419	2495191	PAD DRIVER ASSM. 12"	2
421	2795241	PAD HOLDER W/RING	2
422	2792489	RIGHT BRUSH DRIVE PLATE ASSM	1
413	2791281	BUSHING SPACER	2
417	9121520	5/16 SPLIT LOCK WASHER	2
418	9121680	5/16-18 x 1 HEX HD S.S.	2
421	2795241	PAD HOLDER W/RING	2
422	2792489	RIGHT BRUSH DRIVE PLATE ASSM	1
419	2495191	PAD DRIVER ASSM. 12"	2
420	2795231	SPLIT RING, ONLY	2
431	9121410	5/16 EXTERNAL STAR WASHER S.S.	2
432	9121560	5/16-18 X 1/2 HEX HD S.S.	4
433	9122495	1/2 THIN ESNA LOCKNUT S.S.	1
434	9121250	1/4-20 X 3/4 HEX HD	1
435	9120880	1/4 SPLIT LOCK WASHER	1
436	9120930	1/4 FLAT WASHER	1
437	2791281	BUSHING SPACER	1
438	4490561	INSULATED STANDOFF	2
439	9120880	1/4 SPLIT LOCK WASHER	2
440	9121160	1/4-20 X 3/8 HEX HD	2
441	9121950	HINGE PIN	1
442	2790101	DRIVE MOTOR 36V	2
443	————	BRUSH MOTOR COVER	1

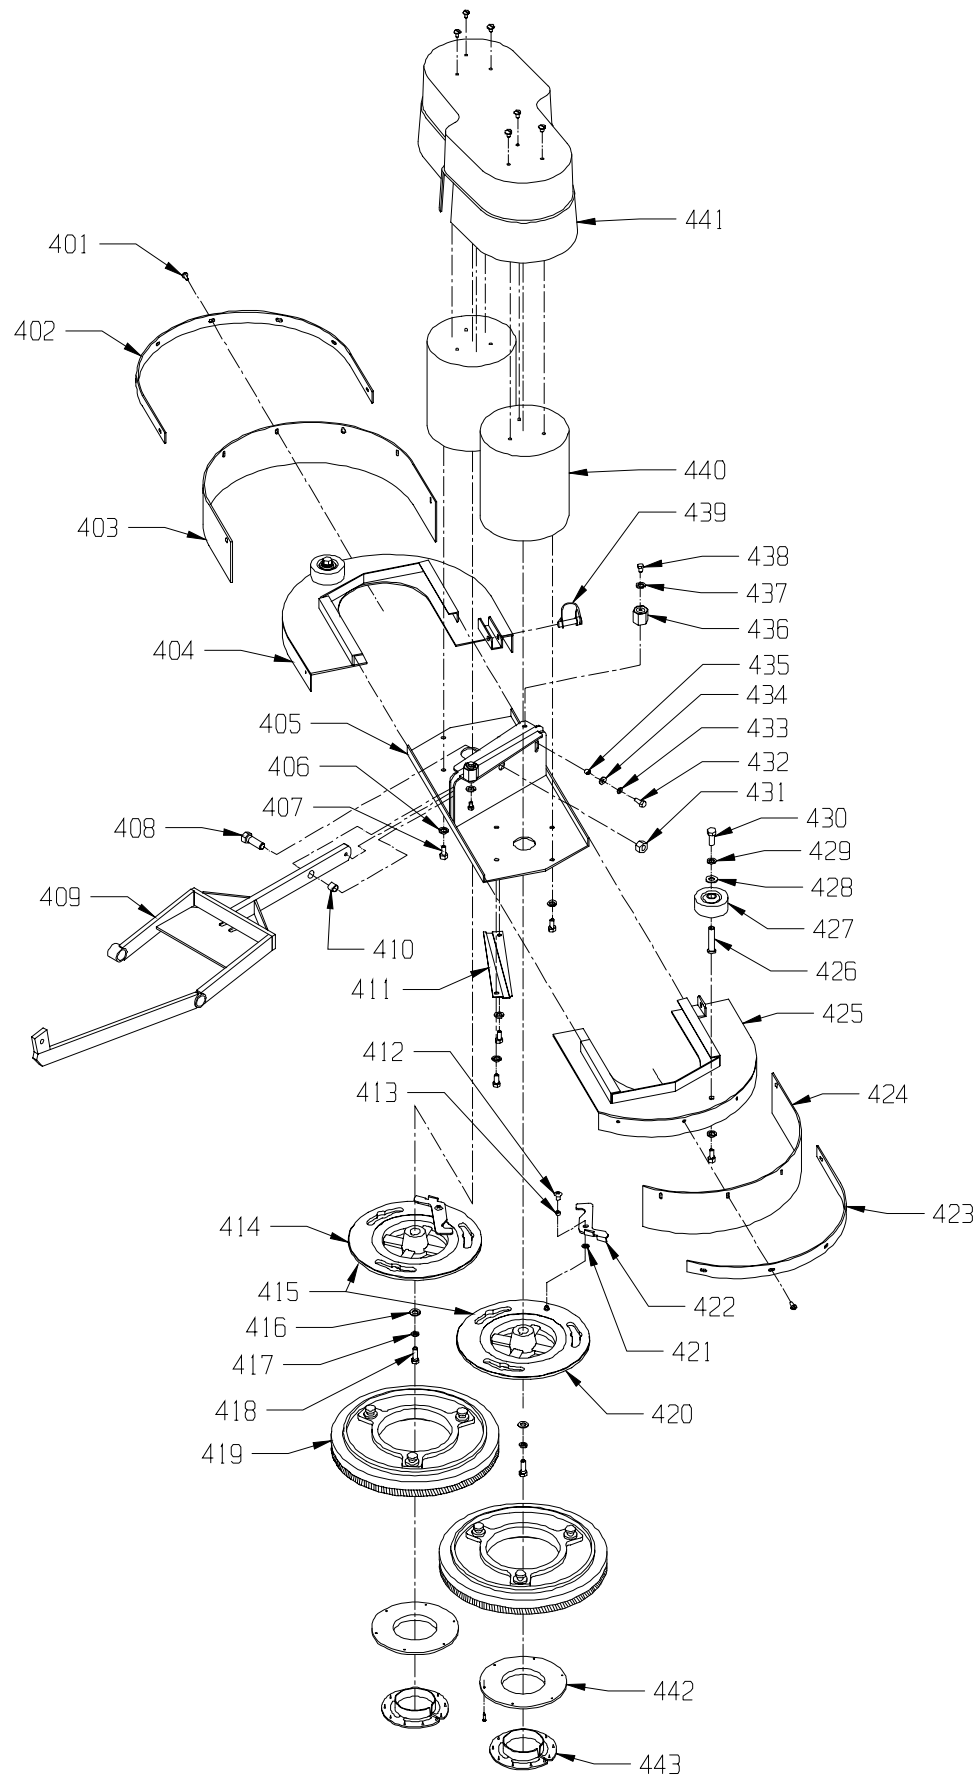


ELECTRICAL COMPONENTS - WIRING DIAGRAM

<u>ITEM</u>	<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>QTY</u>
1	2395581	WIRE ASSM TRANSAXLE FOR/REV SWITCH	1
2	————	WIRE ASSM TRANSAXLE, RESISTOR	1
3	————	WIRE ASSM HIGH/LOW SWITCH, RESISTOR	2
4	————	WIRE ASSM FOR/REV, HIGH/LOW JUMPER	1
5	————	WIRE ASSM FOR/REV, RESISTOR	1
6	————	WIRE ASSM DRIVE SOLENOID, DRIVE C.B.	1
7	————	WIRE ASSM FOR/REV, STANDOFF	1
8	2393071	MOTOR CORD	1
11	2392541	POS. BATTERY CABLE	1
17	2392551	NEG. BATTERY CABLE	1
47	2792141	CABLE ASSM #6 X 6"	1
53	6496031	WIRE ASSM #14 X 6"	1
60	————	WIRE ASSM #14 X 3"	2
62	————	WIRE ASSM #14 X 6"	1
81	3390681	WIRE ASSM #18 X 17"	1
89	2392021	WIRE ASSM VAC LEAD, VAC-SWITCH	1
90	2392031	WIRE ASSM VAC LEAD, STANDOFF	1
91	————	WIRE ASSM BRUSH SOL., BREAKER	1
92	2392051	WIRE ASSM BATTERY METER, STANDOFF	1
93	2392061	WIRE ASSM BRUSH SOL., VAC SWITCH	1
94	2392071	WIRE ASSM METER, BRUSH SWITCH	1
95	2392081	WIRE ASSM BRUSH SOL., BRUSH SWITCH	1
96	2392001	CHARGER PLUG, RED 24V W/WIRES	1
97	2391981	BATTERY JUMPER 3/8 RING	3
	2391351	SOLENOID 24V SINGLE POLE	2
	2391361	CIRCUIT BREAKER 24V 25AMP	1
	2391391	BATTERY METER	1
	2392091	CHARGER PLUG ONLY, RED 24V	1
	2392201	CIRCUIT BREAKER 115V 10AMP	1
	2395481	TRANSAXLE, 20"	1
	2395221	DEADMAN BUTTON SWITCH	2
	2395571	VAC MOTOR 24V 3 STAGE	1
	————	1/4 RING TERMINAL 10-14 GA.	6
	2695121	RESISTOR	1
	2790101	DRIVE MOTOR	2
	2792041	VAC MOTOR SWITCH	1
	3390411	FORWARD / REVERSE SWITCH	2
	4490561	INSULATED STAND-OFF	3
	4491101	TOGGLE SWITCH	1
	5490161	1/4 FEMALE TERMINAL FULLY INS. 16-14 GA.	4
	5490171	1/4 MALE SPADE TERMINAL FULLY INS. 16-14 GA.	4

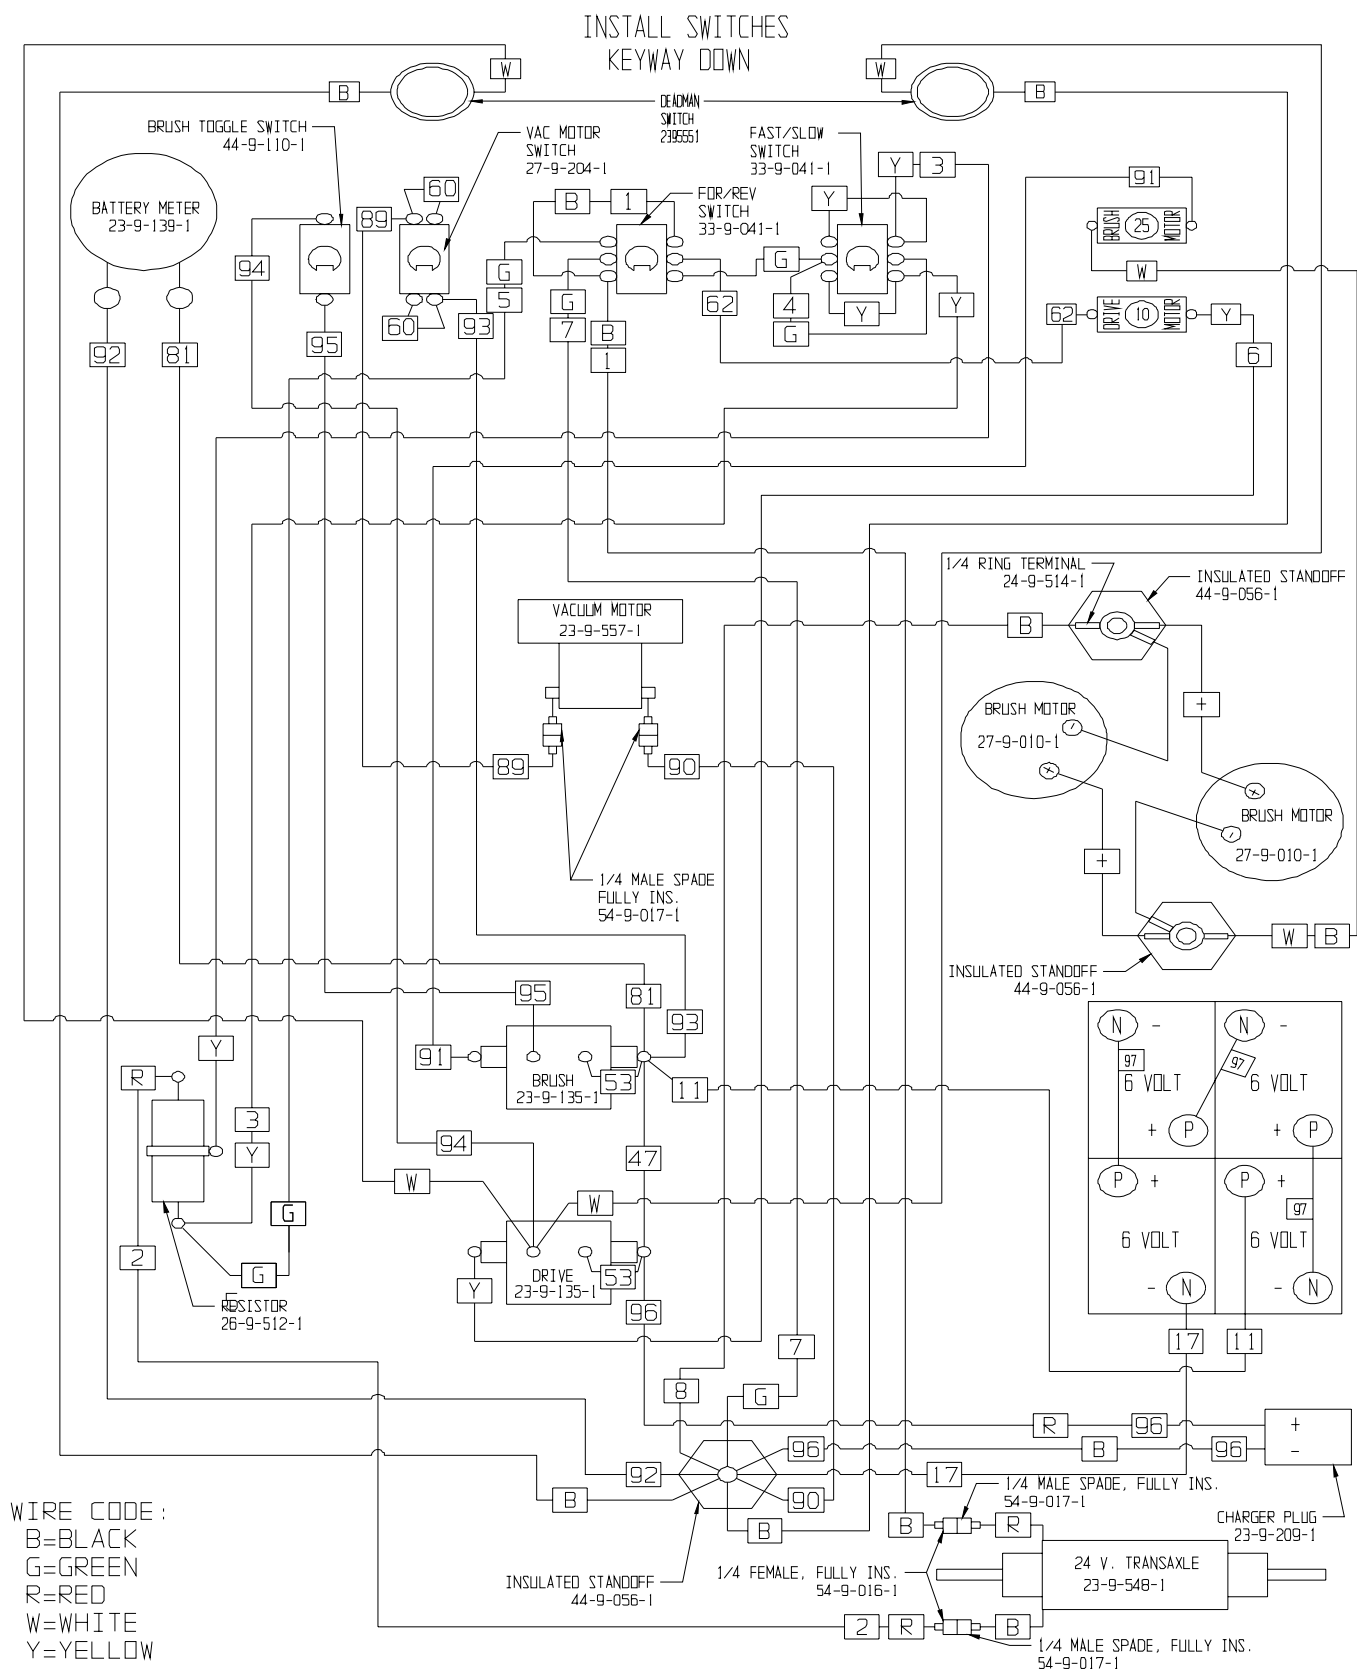

BRUSH DRIVE MOTOR - 2790101

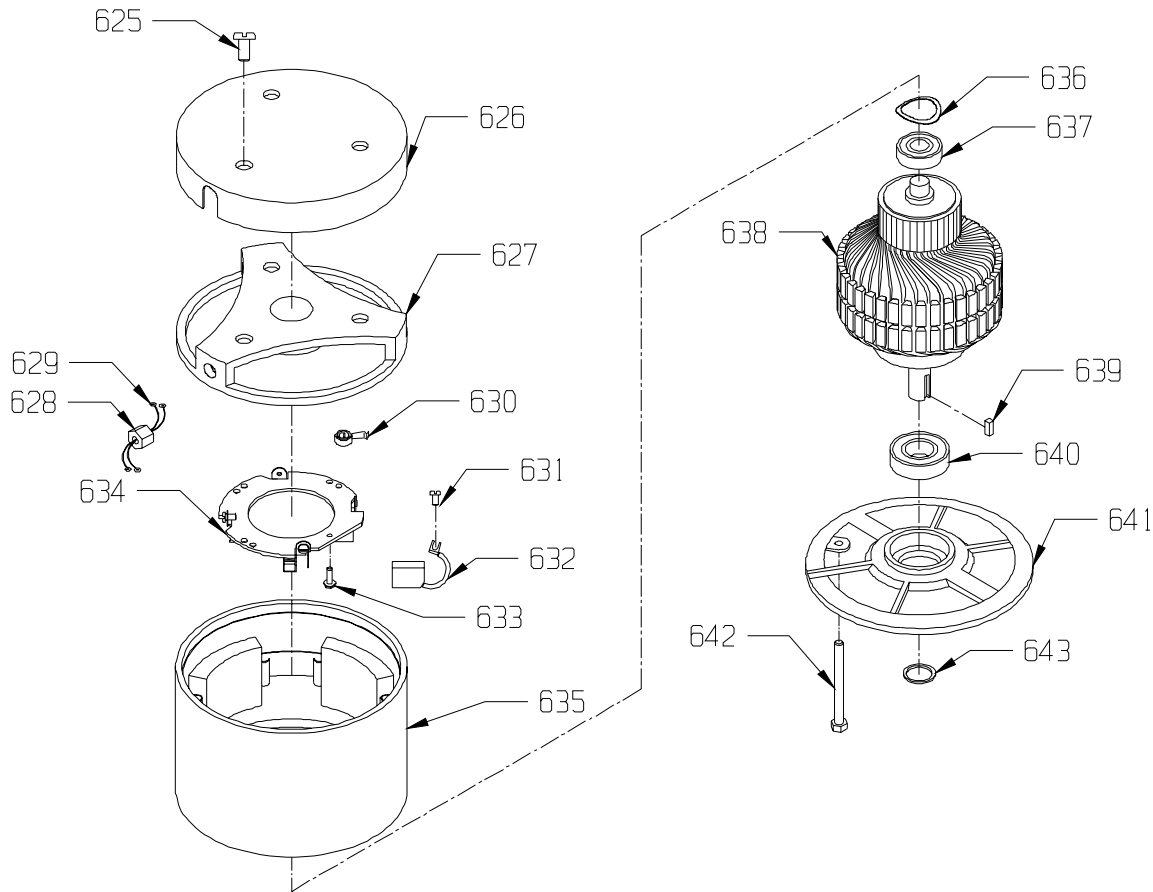

ITEM	PART NO.	DESCRIPTION	QTY
625	-----	1/4-20 X 3/8 PAN HEAD SCREW	3
625	-----	1/4-20 X 3/8 PAN HEAD SCREW	3
626	2797721	COVER	1
627	2797671	TOP END BELL WITH BRUSH BOARD ASSEMBLY	1
628	2797631	HEYCO STRAIN RELIEF	1
629	2797581	LEAD ASSY, 1 WIRE W/TERMINAL	2
630	2797571	BRUSH SPRING	4
631	-----	10-32 X 3/8 BRASS PAN HEAD SCREW	4
632	2797691	CARBON BRUSH ASSEMBLY WITH LEAD AND TERMINAL	4
633	9120600	10-24 X 1/2 PAN HEAD PHILLIPS THREAD CUTTING SCREW	3
634	2797681	BRUSH RING ASSEMBLY-WITH SPRINGS AND BRUSHES	1
635	2797651	STATOR FRAME ASSEMBLY-WITH MAGNETS	1
636	2797591	1 13/32 X 1 7/8 2 WAVE SPRING WASHER	1
637	5092041	BEARING, TOP ROTOR	1
638	2797661	ARMATURE ASSEMBLY WITH BEARINGS	1
639	2792681	1/4" X 1/4" X 1" MOTOR KEY	1
640	2790311	BEARING, BOTTOM END	1
641	2797711	BOTTOM END BELL	1
642	2797701	1/4-20 X 5 3/4 HEX HEAD THRU BOLT	2
643	2797731	SHAFT SEAL	1



NSS ® Enterprises, Inc.

3115 Frenchmens Road, Toledo, Ohio 43607
 PHONE (419) 531-2121 FAX (419) 531-3761

NSS ® Enterprises, Inc. European Distribution Centre

Unit II, Pinfold Trading Estate * 55 Nottingham Road
 STAPLEFORD, NOTTINGHAM NG9 8AD ENGLAND U.K.

PHONE: (44) 0115 939 1568 * FAX: (44) 0115 949 0615