

Electronic Service Manuals

This electronic document is provided as a service to our customers. We do not create the contents of the information contained in this document. Should you have detailed questions pertaining to the information contained in this document, you may contact Michco, or the manufacturer which provided the original information in this electronic deliverable. Michco's only part in this electronic deliverable was the electronic assembly process. By providing this manual on line we are not guaranteeing parts availability.

> You may contact Michco through the following methods: Phone (517) 484-9312 or (800) 331-3339 2011 N. High St. -- Lansing, Michigan -- 48906 Fax: (517) 484-9836 Email: CustServe@Michco.com Web site: www.Michco.Com Parts Web site: www.FloorMachineParts.Com

> > Order Parts on Line at: www.FloorMachineParts.Com

Directly to Parts & Service: By Email: Shop@Michco.com By Fax: (517) 702-2041 By Voice: Use numbers above. Serving the Cleaning Industry Since 1922

Notice: All copyrighted material remains property of original owners, all trademarks are property of respective owners. Manuals are subject to Manufacturer's reproduction limitations. Originals or reproductions were provided by manufacturers through a request. We make no warranty as to the correctness of information provided in this document and you assume all risk. By placing these manuals on line we are not declaring our corporation to be an manufacturer authorized dealer or provider, please check our web site for authorized manufacturers we represent.



TRIUMPH 1200 12 Gallon Box Extractor

INTRODUCTION

OPERATING & MAINTENANCE INSTRUCTIONS

READ THIS BOOK

This operator's book has important information for the use and safe operation of this machine. Read this book carefully before starting the machine. Keep this book and tell all operators to read the book. If you do not follow the instructions, you can cause an injury or damage equipment, furniture or buildings.

For new books write to: **Pacific Steamex, Inc.** 2259 S. Sheridan Muskegon, MI 49442-6252

Carefully inspect all components to ensure that there is no concealed freight damage. If such damage is discovered, file a "CONCEALED DAMAGE REPORT" immediately with the delivering carrier.

The contents of this manual are based on the latest product information available at the time of publication. Pacific Steamex reserves the right to make changes or improvements to its machines without notice.

FOR YOUR CONVENIENCE, RECORD THE FOLLOWING IMPORTANT INFORMATION:

MODEL _

SERIAL NUMBER

PARTNUMBER___

DATE PURCHASED

READ AND UNDERSTAND ALL WARNINGS AND INSTRUCTIONS BEFORE USING THIS APPLIANCE!

WARNING! To reduce the risk of fire, electric shock, or injury:

- 1. Unplug from outlet when not in use and before servicing.
- 2. Do not use outdoors. Protect the machine from rain.
- 3. Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- 4. Use only as described in this manual.
- 5. Never use this machine to pick up volatile or explosive materials!
- 6. Do not use this machine for pick up of dust or dry debris.
- 7. Do not use with damaged cord or plug. If appliance should not work as it should, has been dropped or damaged, left outdoors, or dropped into water, return it to service center.
- 8. Do not pull or carry by cord, use cord as handle, close a door on cord or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- 9. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord
- 10. Do not handle plug or appliance with wet hands. Do not immerse. Keep the machine in a dry building.
- 11. Do not put any objects into opening. Do not use with any opening blocked: keep free of dust, lint, hair and anything that may reduce airflow.
- 12. Keep hair, loose clothing, fingers and all parts of the body away from openings and moving parts.
- 13. Turn off all controls before unplugging.
- 14. Do not use in areas where flammable or combustible liquids such as gasoline may be present.
- 15. Connect to a properly grounded outlet only.
- 16. Do not use water that is hotter than $82^{\circ}C$ ($180^{\circ}F$).
- 17. To prevent damage to the solution system, do not store in freezing temperatures without proper maintenance.

Grounding Instructions

This machine must be grounded. If it should malfunction or break down, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This machine is equipped with a cord having an equipment-grounding conductor and grounding plug. The plug must be inserted into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

WARNING - Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service person if you are in doubt as to whether the outlet is properly grounded. Do not modify the plug provided with the machine - if it will not fit the outlet, have a proper outlet installed by a qualified electrician.


This machine is for use on a nominal 120-volt circuit, and has a grounded plug that looks like the plug illustrated in figure A. A temporary adapter that looks like the adapter illustrated in figures B and C may be used to connect this plug to a 2-pole receptacle as shown in figure B if a properly grounded outlet is not available. The temporary adapter should be used only until a properly grounded outlet (figure A) can be installed by a qualified electrician. The green colored rigid ear, lug, or the like extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box cover. Whenever the adapter is used, it must be held in place by a metal screw.

NOTE: In Canada, the use of a temporary adapter is not permitted by the Canadian Electrical Code

EXTENSION CORDS

Use only three-wire 14/3 or larger gauge approved extension cords that have three-prong grounding type plugs and three-pole receptacles that accept the appliance's plug. Replace or repair any damaged cords or plugs.

When servicing, refer to authorized person only. Use only identical replacement parts.

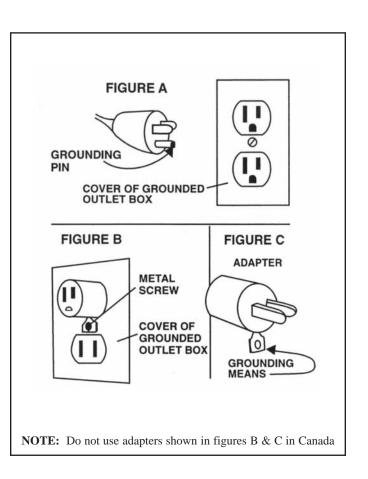

WARNING! For the safe operation of this machine follow the instructions given in this booklet and the training given by your supervisor. Failure to do so can result in personal injury and/or damage to machine and property!

DO NOT OPERATE MACHINE IN AN EXPLOSIVE ENVIRONMENT!

NEVER USE THIS MACHINE TO PICK UP VOLATILE OR EXPLOSIVE MATERIALS!

The model shown in this manual is intended for commercial use.

DO NOT OPERATE MACHINE IN AN EXPLOSIVE ENVIRONMENT!

ASSEMBLY & OPERATION

- 1. Connect one end of the vacuum hose to the intake port of the extractor located on the top of the unit and the other end to the wand.
- 2. Connect the one end of the solution hose to the brass water discharge fitting on the lower front of the extractor and the other end to the valve connection on the floor wand.
- 3. Fill the solution tank (the rectangular opening located on the top of the machine that does not have a cover) with warm or hot water, plus a commercial grade carpet cleaning chemical. Use dilution recommendations located on the chemical bottle. This unit holds 12-gallons of liquid. **NOTE: A low-foaming solution should be used. If not a defoamer must be used to keep the foam to a minimum during use to protect your vacuum motor. Defoamer if used is placed in the recovery tank prior to operating the unit.**
- 4. Once you have completed all of the above and your unit is plugged into a grounded outlet, turn on the pump switch, which will start to pressurize the unit.
- 5. Turn on either one or both of the vacuum switches depending on the amount of suction desired.
- 6. Holding the wand with two hands, activate the solution by squeezing the lever on the wand (located at the top of the wand). Spray will start to flow from the jets located at the pick up end of the wand.
- 7. With one hand squeezing the wand lever, the other hand should be putting downward pressure on the wand and dragging the wand backwards across the carpet towards the operator. This is basically wringing the water out

of the carpet and pulling dirt embedded in the carpet up while the suction created by the vacuum motor picks up the water & dirt and empties it into the recovery tank.


- 8. Repeat step #7 without putting more solution down to extract greater quanities of water from the carpet. Doing this extra times will shorten the drying time required for your carpet.
- 9. After using all of the solution from the solution tank, you should empty the recovery tank using the dump valve located at the lower rear of the machine by bringing the unit to a janitor's sink, commode, etc. and pulling up on the "T" handle on the top of the valve.
- 10. Once the recovery tank is emptied, lower the "T" handle and repeat steps 3-9 as needed to clean the remaining carpet.
- 11. The cover on the recovery tank must always be in place while using the extractor. The suction from the unit during operation holds this in place.
- 12. During recovery, note that 100% recovery of all liquid will not be achieved.

DAILY OR REGULAR MAINTENANCE

- 1. Rinse solution and recovery tanks out after every use. Never leave any liquid in the system after use during storage. Store unit in a warm place. If unit is left in a freezing environment with liquid left in the system, the pump and pump housing could crack, requiring replacement of the pump.
- 2. Twice a month, flush machine with a solution of white vinegar (one quart vinegar to two gallons of water) or anti-browning solution mixed as directed. This will prevent build up of alkaline residue in the machine.
- 3. If spray jet on the wand becomes clogged, remove spray tip, wash thoroughly and blow dry.


PERIODIC MAINTENANCE

1. Periodically inspect all hoses, electrical cable and connections on the machine. Frayed or cracked hoses should be replaced to eliminate vacuum or water pressure loss. Check power cable for damage. Repair or replace damaged cord to prevent fire or electric shock.

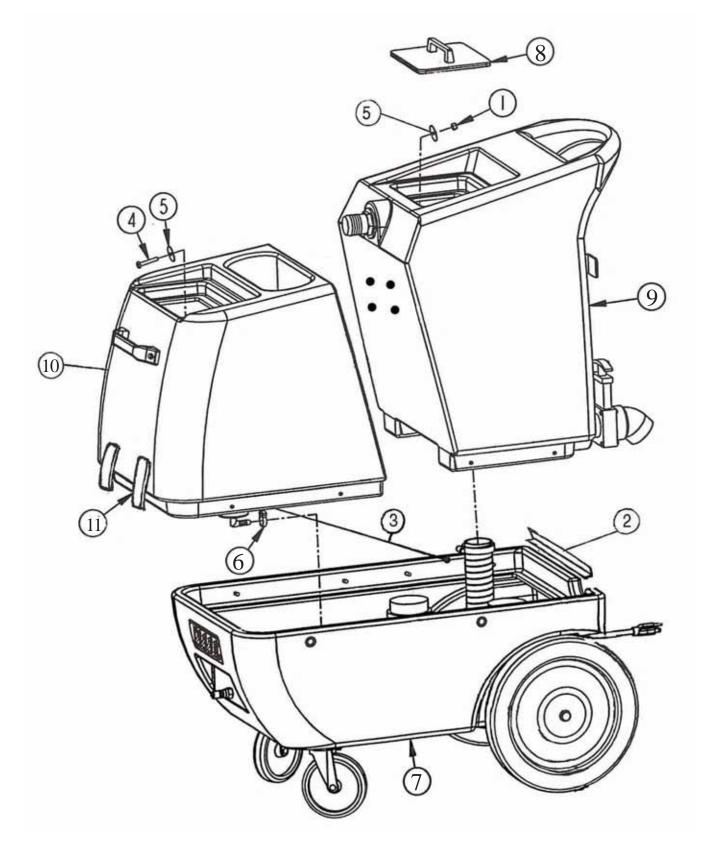

TRIUMPH 1200 FINAL ASSEMBLY PARTS LIST


ITEM	PART NO.	DESCRIPTION	QTY.
1	920665	Nut-Hex 1/4 SS Nyloc	1
2	254554	Hinge	1
3	911552	Cable-Steel Lanyard	1
4	962358	Screw-1/4-20x1-1/2 Hex SS	2
5	W104D	Washer-Flat	4
6	252004	Clamp-Hose 5/8 Plastic	1
7	251804	Base-Black	1
8	255121	Lid Assembly	1
9	258626	Tank-Solution-Black	1
10	258627	Tank-Recovery-Black	1
11	255106	Latch-Rubber	2
	980720	Washer-Flat (Not Shown)	8

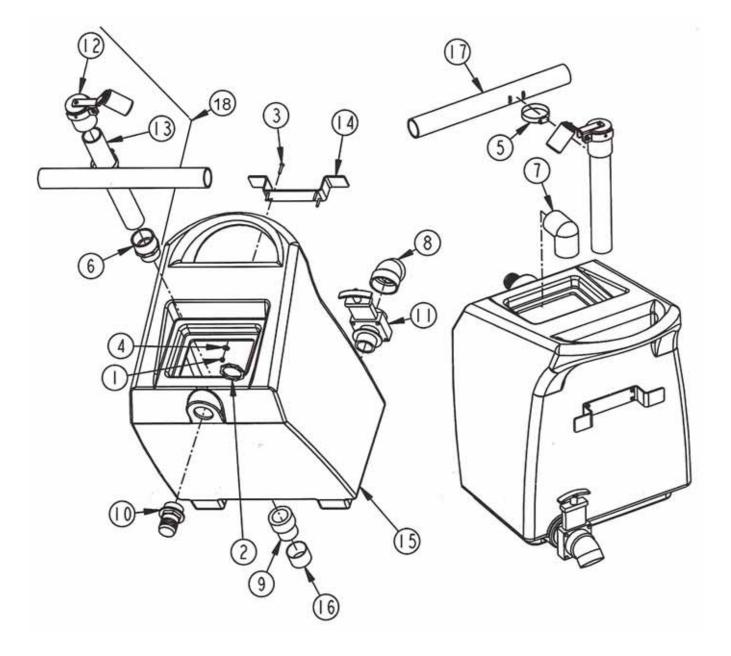

TRIUMPH 1200 RECOVERY TANK PARTS LIST

ITEM	PART NO.	DESCRIPTION	QTY.
1	920666	Nut-Hex 10-32 SS Nyloc	4
2	S400P5	Locknut 1-1/2	1
3	962453	Screw 10-32x1 SS Phillips	4
4	W104D	Washer-1/4 Flat	4
5	S216P	Clamp-Hose	1
6	253306	Fitting-Pipe 1-1/2 MPT	1
7	252807	Elbow 1-1/2 FIPT x 1-1/2	1
8	S400PB4	Elbow-Black	1
9	253343	Fitting-Pipe 1-1/2	1
10	250201	Adaptor-1-1/2 MPT & Hose Barb	1
11	S400PB4	Drain Valve	1
12	255020	Kit-Shutoff Assembly	1
13	257014	Standpipe-12 Gallon	1
14	520801	Bracket-Cord Wrap	1
15	258627	Tank-Recovery-Black	1
16	257004	Pipe-PVC 2 x .75"	1
17	257015	Support-PVC 1.5 x 17.25"	1
18	257016	Standpipe Assembly-12 Gal	1


TRIUMPH 1200 SOLUTION TANK

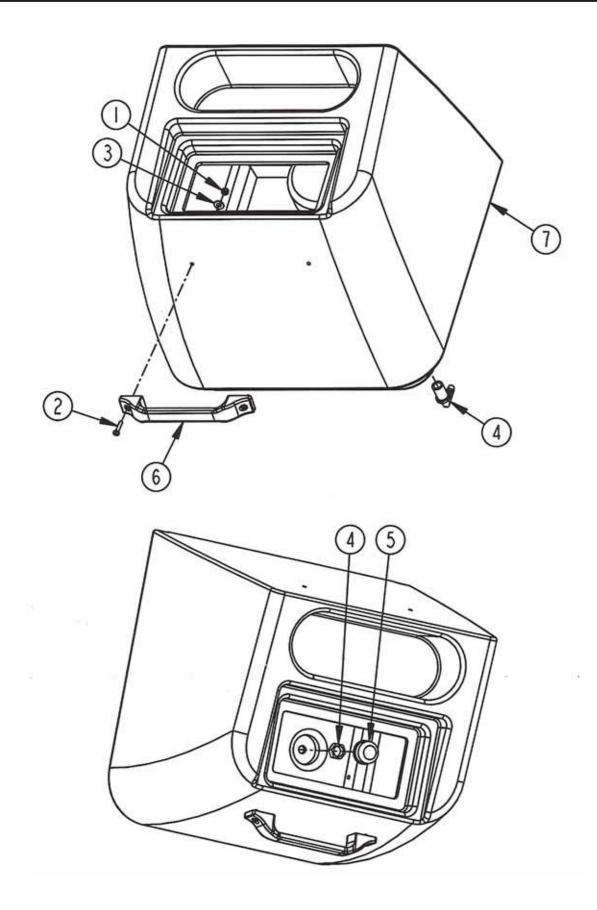

TRIUMPH 1200 SOLUTION TANK PARTS LIST


ITEM	PART NO.	DESCRIPTION	QTY.
1	920666	Nut-Hex 10-32 SS Nyloc	2
2	962453	Screw 10-32 x 1 SS Phillips	2
3	W104D	Washer 1/4 Flat SAE SS	2
4	211310	Body-90 Jet w/Lock Nut	1
5	253302	Filter Screen	1
6	253901	Handle-Grab Plastic	1
7	258626	Tank-Solution-Black	1

TRIUMPH 1200 BASE ASSEMBLY

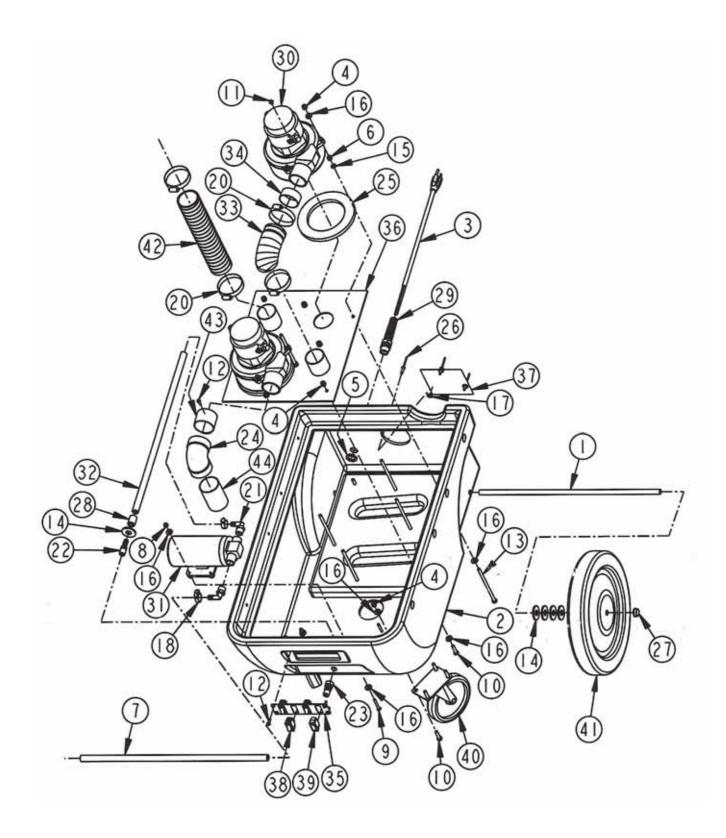


DESCRIPTION ITEM PART NO. QTY. Rod-Axle 1/2 x 19" Base-Black-12 Gal Cord Asm 25' 16-3 SJT Nut 1/4-20 Elastic Stop Nut 1/2 Pipe Lock Nut 1/4-20 Hex Hose-Solution 3/8 x 48" Nut-Hex 10-32 SS Nyloc Screw 10-30 x 1 Phillips Screw 1/4-20 x 1 Hex Zinc Screw 10 x 3/8 Hex Washer Screw 8 x 5/8 Self Tap HHW Screw 1/4-20 x 5 Hex Zinc Washer-Flat 1/2 x 1-3/8 OD Washer-Med Split 1/4 W104D Washer 1/4 Flat SAE SS W401D Washer #10 Flat SAE Zinc S453P Clamp-Hose Clamp-Hose Metal #28 Elbow-Male 3/8 to 3/8 Nylon Fitting-Hose Barb 3/8 Quick Connect-Male 1/4 Elbow-Short 90D PVC Gasket-Top Vac Rivet S482P Cap-Axle **Ferrule-Solution Hose** Relief-Strain A13020 Vacuum Motor-2 Stage Tangential Pump-100 PSI Hose-Solution 3/8 x 19" Hose-2 x 6.5" Pipe-PVC 2 OD x .75"L Switch Plate Plate-Motor Mounting Screen-Vac Guard Switch-Rocker-20 Amp Blank-Switch S519PB **Caster-Swivel** Wheel 12 x 1.75" Hose 2 x 11" Pipe-PVC 2 x 2" Pipe-PVC 2 x 3"

TRIUMPH 1200 BASE ASSEMBLY PARTS LIST

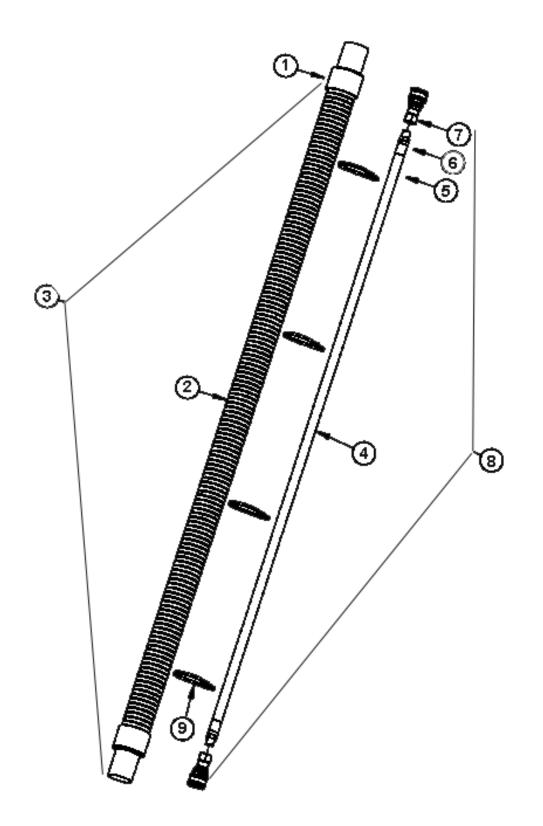

TRIUMPH 1200 HOSE ASSEMBLY PARTS LIST


ITEM	PART NO.	DESCRIPTION	QTY.
1	252403	Cuff-Hose 1.5 x 1.5"	2
2	254105	Hose-Vacuum 1.5" (Per Foot, No Cuffs)	15 ft
3	254113	Hose-Vacuum Assm 15' w/Cuffs	1
4	S250P	Hose-Solution 3/8" (Per Foot)	15 ft
5	203359	Fitting-Hose Barb 3/8"	2
6	202050	Clamp-Solution Hose	2
7	203308	Quick Connect - 1/4" Female	2
8	254121	Hose-Solution Assm 15' w/QC	1
9	911104	Tie-Cable	4

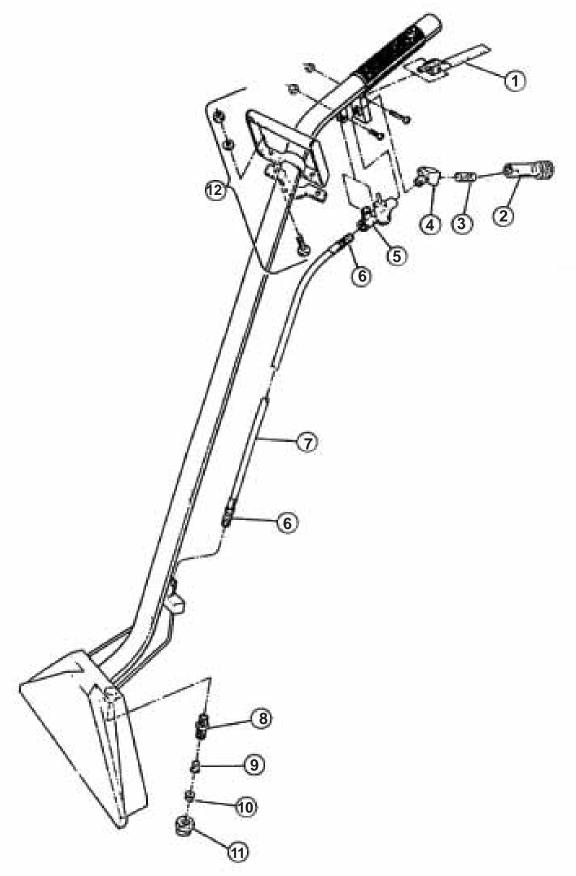

TRIUMPH 1200 WAND ASSEMBLY PARTS LIST


ITEM	PART NO.	DESCRIPTION	QTY.
1	219201	Trigger-Wand	1
2	203302	Quick Connect 1/4" Male	1
3	S906A	Nipple-Brass	1
4	T4055	Elbow-45 Degree Brass	1
5	219402	Valve	1
	215007	Kit-Valve Repair (O-ring/Spring/Disk)	
6	S223P	Barb-1/4 to 1/4" Brass	2
7	214116	Hose Assembly (Valve to Jets)	1
8	S980P	Body-Spray Jet	2
9	S280P	Strainer w/Check Valve	2
10	S877P2	Jet-Brass	2
11	S973P	Cap-Jet	2
12	213903	Handle w/Hardware	1

TRIUMPH 1200 WIRING DIAGRAM - NO HEATER INSTALLED

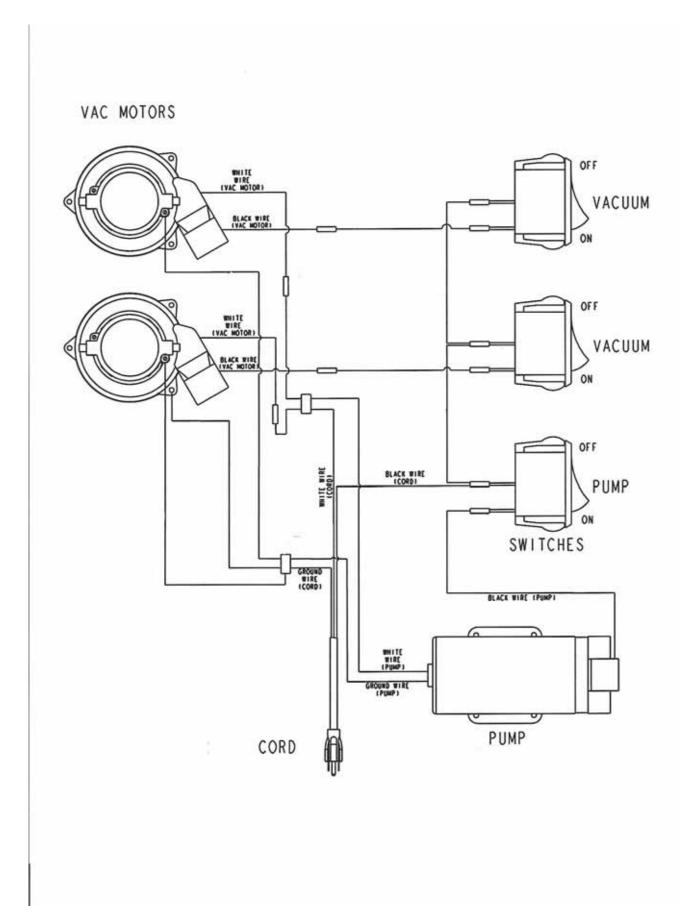

TRIUMPH 1200 WIRING DIAGRAM - WITH HEATER INSTALLED

VAC MOTORS

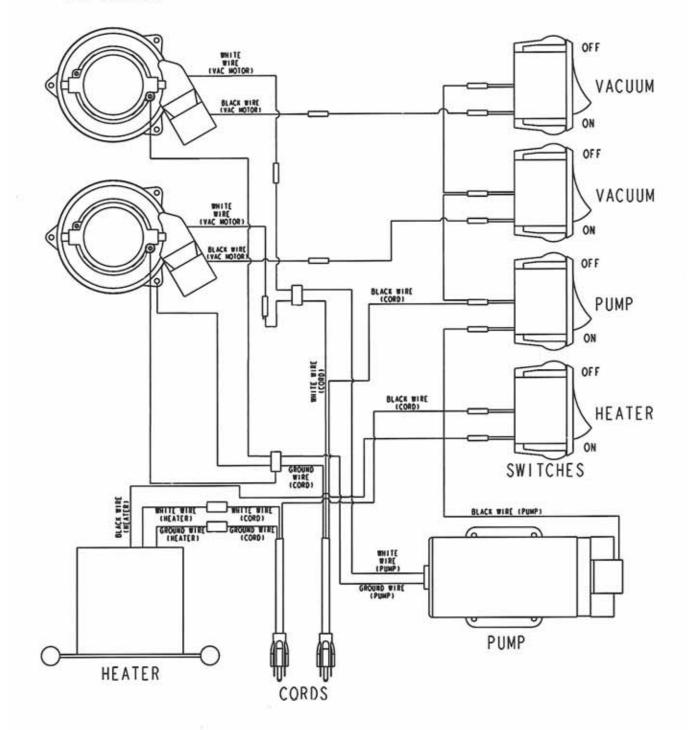

WARRANTY POLICY TRIUMPH 1200 12 GALLON BOX EXTRACTOR

The **Pacific** Triumph 1200 has been manufactured, tested and inspected in accordance with specific engineering requirements and is WARRANTED to be free from defects in workmanship and materials as follows:

Five (5) years parts, One (1) year labor – Rotational molded tanks. One (1) year parts & labor – All other components unless excluded below.

This warranty extends to the original user/purchaser and only when used, operated and maintained in accordance with **Pacific's** Operating and Maintenance instructions.

This warranty does not apply to certain wear parts of the machine such as electrical cords, carbon motor brushes, hoses, tools, etc., nor does it apply to damage or failure caused by improper use, abuse or neglect. Warranty credit or replacement of return parts including motors, tools, etc., is subject to incoming inspection of those items.

To secure repair under this warranty, the following procedure should be taken:

- The inoperative machine or warranted parts must be delivered to the authorized dealer with shipping and delivery charges prepaid. If unable to locate the Dealer, you may contact **Pacific** at the address listed herein for the location of the nearest **Pacific** repair center or agent or for other instructions pertaining to your warranty difficulty.
- Upon compliance with the above warranty procedure, all warranted repairs would be completed at no additional charge or cost to the user.
- Only **Pacific** or its authorized dealers and agents may make no charge warranty repairs on this product. All others do so at their own risk.

This warranty limits **Pacific** liability to the repair of the product and/or warranted parts replacement and does not include incidental or consequential damages arising from the use of a **Pacific** machine whether defective or not.

This warranty is in lieu of all other expressed or implied warranties and is extended to the original purchaser/user.





2259 S. Sheridan • Muskegon, MI 49442 Ph: (231) 773-1330 • (800) 968-1332 • Fax (800) 863-9536 www.pacificfloorcare.com