



Electronic Service Manuals

This electronic document is provided as a service to our customers. We do not create the contents of the information contained in this document. Should you have detailed questions pertaining to the information contained in this document, you may contact Michco, or the manufacturer which provided the original information in this electronic deliverable. Michco's only part in this electronic deliverable was the electronic assembly process. By providing this manual on line we are not guaranteeing parts availability.

You may contact Michco through the following methods:

Phone (517) 484-9312 or (800) 331-3339

2011 N. High St. -- Lansing, Michigan -- 48906

Fax: (517) 484-9836

Email: CustServe@Michco.com

Web site: www.Michco.Com

Parts Web site: www.FloorMachineParts.Com

Order Parts on Line at:

www.FloorMachineParts.Com

Directly to Parts & Service:

By Email: **Shop@Michco.com**

By Fax: (517) 702-2041


By Voice: Use numbers above.

Serving the Cleaning Industry Since 1922

Notice: All copyrighted material remains property of original owners, all trademarks are property of respective owners. Manuals are subject to Manufacturer's reproduction limitations. Originals or reproductions were provided by manufacturers through a request. We make no warranty as to the correctness of information provided in this document and you assume all risk. By placing these manuals on line we are not declaring our corporation to be an manufacturer authorized dealer or provider, please check our web site for authorized manufacturers we represent.

WAND ASM

INSTRUCTION SHEET

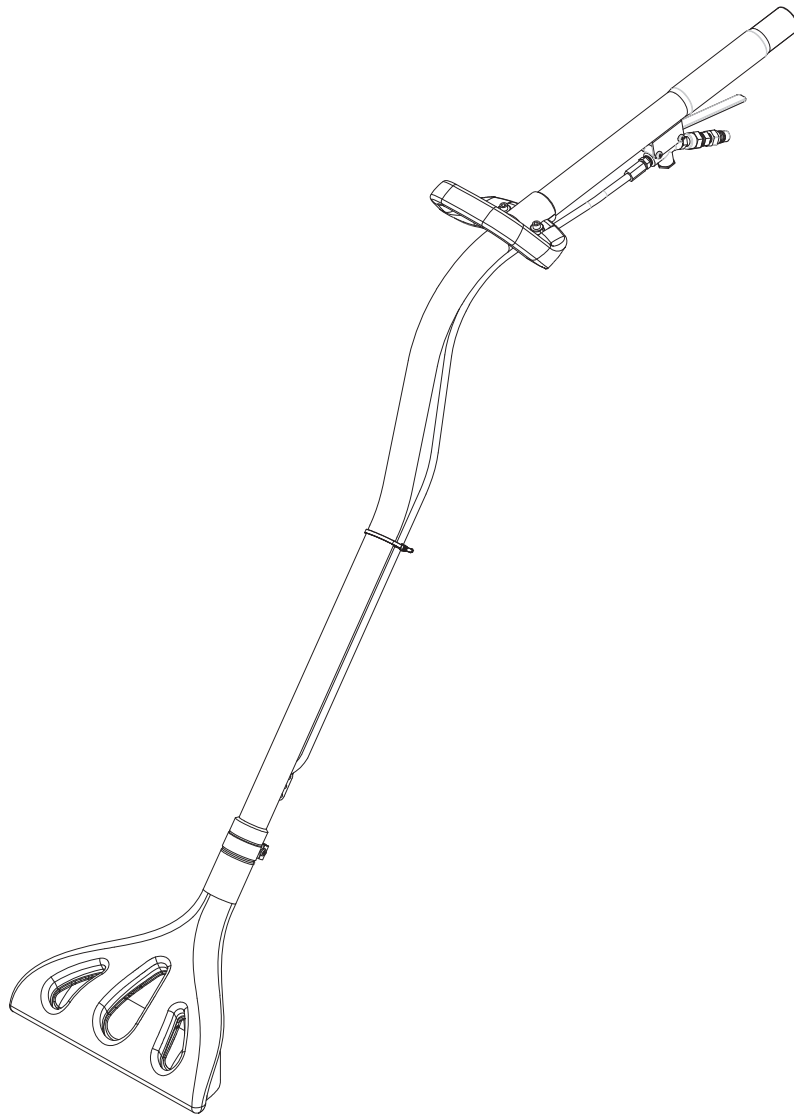

MODEL #

WAND, CARPET EXTRACTION, 13"

ORDER #

8.632-900.0

CONTENTS

Contents 2

Model and Dealer Data Log..... 2

Important Safety Information 3

Assembly Instructions..... 3

Exploded View & Parts List..... 4

Model and Dealer Data Log

Model Number _____

Date of Purchase _____

Dealer _____

Address_____

Phone Number_____

Note: Fill in the Data Log upon receipt of your new accessory.
Parts may be ordered from your dealer. When placing an order for parts, the part number, model and order number must be included.

IMPORTANT SAFETY INFORMATION

WARNING




READ OPERATOR'S
MANUAL THOROUGHLY
PRIOR TO USE.

WARNING: To reduce the risk of injury, read all instructions thoroughly before using. This wand requires some assembly and adjustments.

TOOLS REQUIRED:


**PHILLIPS HEAD SCREW DRIVER 9/16" OPEN END WRENCH
(ALLEN WRENCH INCLUDED)**

ASSEMBLY INSTRUCTIONS

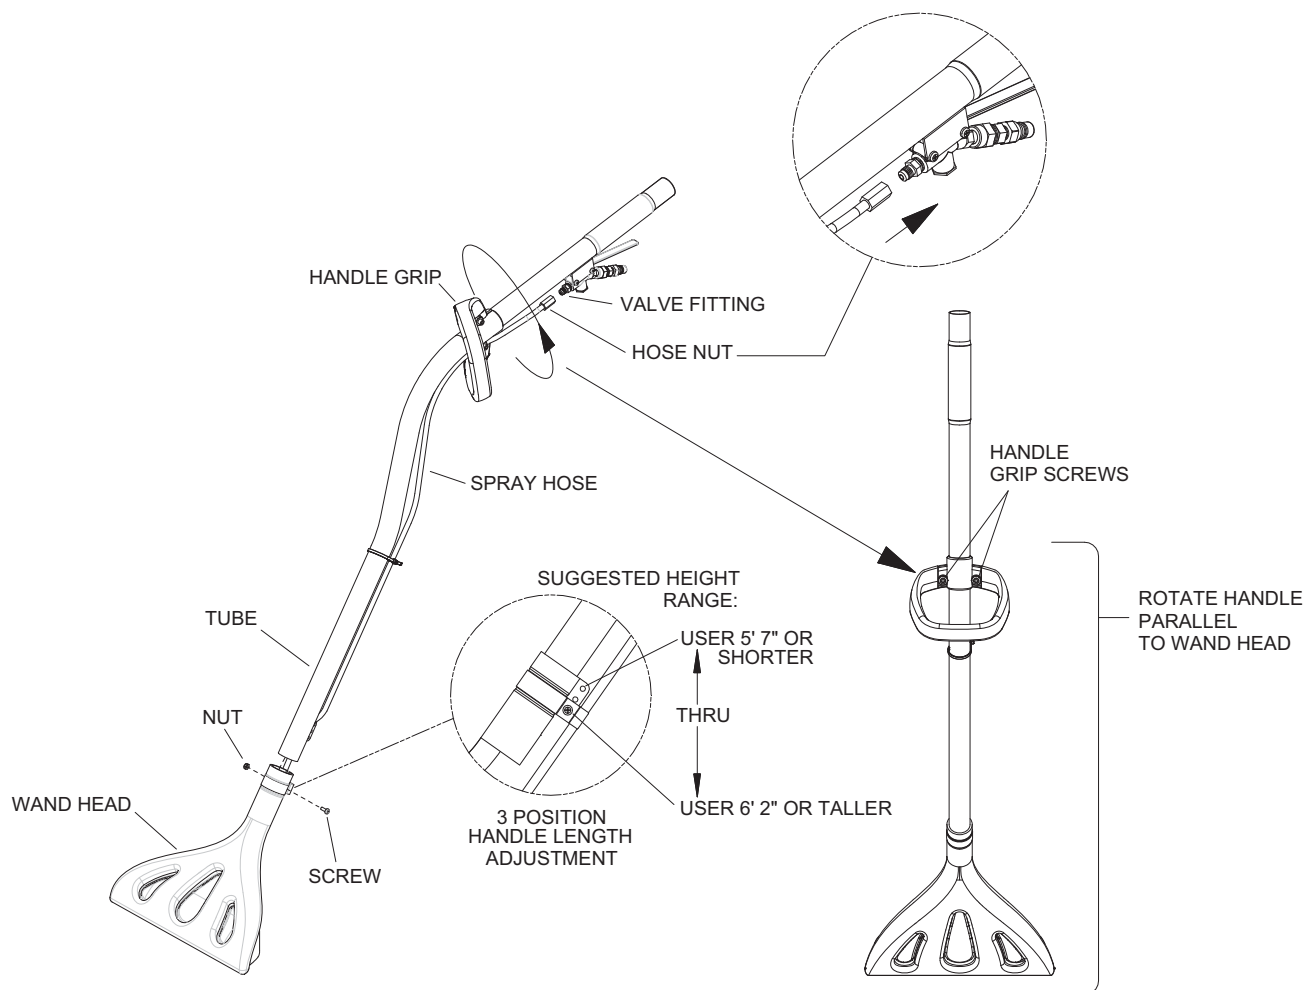

- 1. WAND HEAD:** PLACE WAND HEAD ON TUBE. POSITION AS SHOWN IN FIGURE.
- 2. INSERT SCREW INTO CORRECT POSITION FOR HEIGHT, INSTALL NUT AND TIGHTEN TO HOLD IN PLACE.**
- 3. SPRAY HOSE:** PLACE HOSE NUT ONTO VALVE FITTING AND TIGHTEN.
- 4. HANDLE GRIP:** LOOSEN HANDLE GRIP SCREWS IF NECESSARY. ROTATE HANDLE GRIP 90 DEGREES INTO POSITION AS SHOWN IN FIGURE ON THE RIGHT. TIGHTEN SCREWS TO HOLD IN PLACE.

EXPLODED VIEW

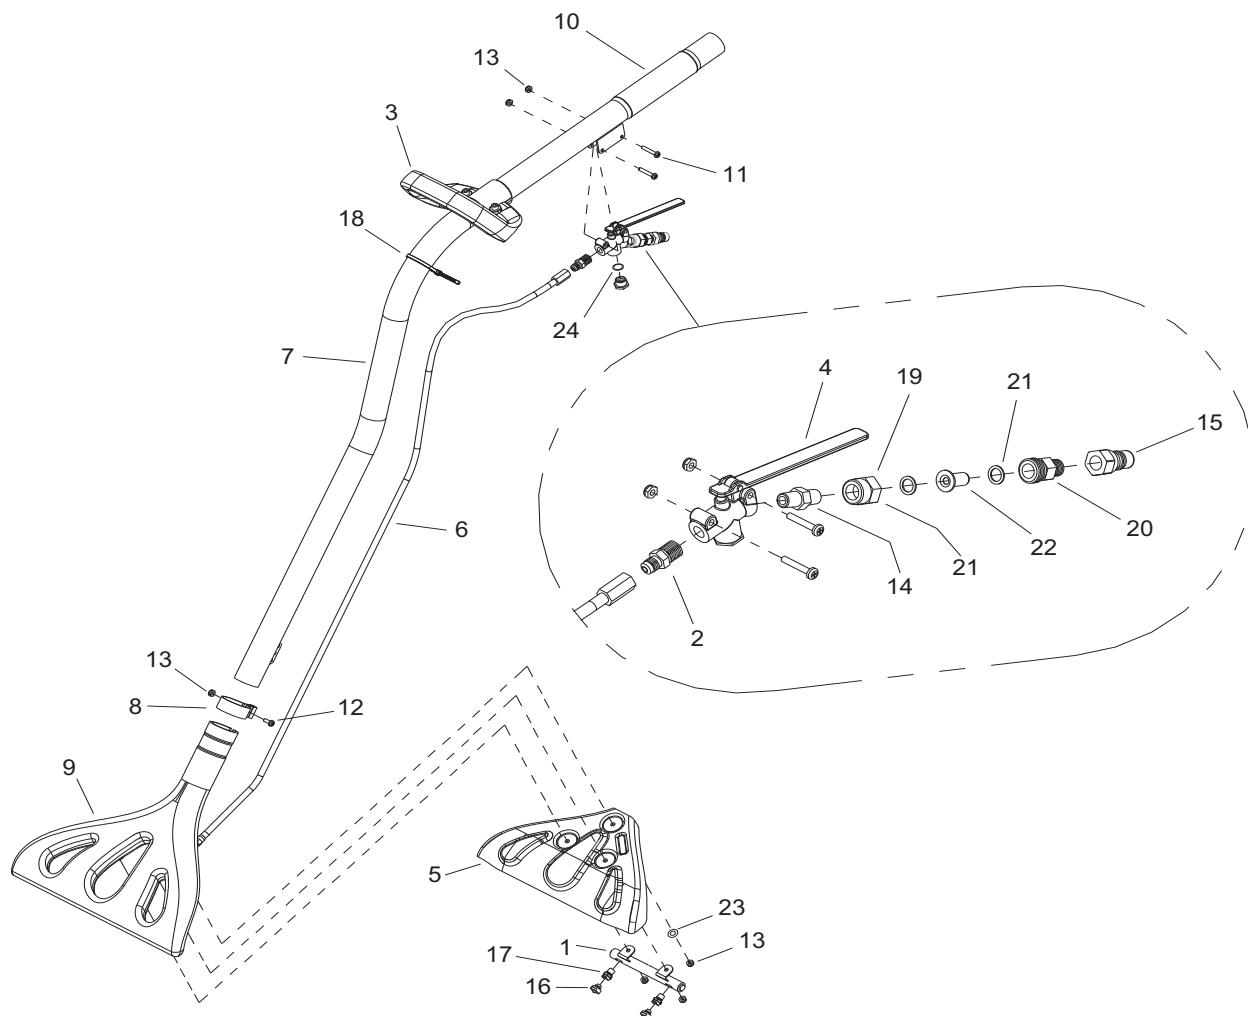

EXPLODED VIEW PARTS LIST

ITEM	PART #	DESCRIPTION	QTY	ITEM	PART #	DESCRIPTION	QTY
1	8.632-926.0	Manifold, Spray, Dual	1	13	8.735-050.0	Nylok Nut Hex #10-32 SS	6
2	8.617-765.0	Conn, 1/4P X 1/4T BR	1	14	8.624-768.0	Nipple, 1/4 Hex	1
3	8.922-368.0	Handle Wand Tool	1	15	8.600-558.0	Nipple, 1/4 FPT QD	1
4	8.632-727.0	Valve, Kingston, 30 DEG W/LVR	1	16	8.624-164.0	Jet, 11001, Mini-Quick	2
5	8.632-726.0	Shield, Wand Head	1	17	8.600-453.0	Jet Body, Mini-Quick w/Seal	2
6	8.632-725.0	Hose, Spray	1	18	9.802-511.0	Cable, Tie, 11" Black	1
7	8.929-020.0	Tube ASM, Wand	1	19	8.617-787.0	Cap, Bypass 4676-1/8 ZEEMS	1
8	8.632-720.0	Bracket, Clamp	1	20	8.617-786.0	Conn, 1/4P X 11/16-16M	1
9	8.919-853.0	Head, Wand, Dark Grey (Trim)	1	21	8.619-557.0	Washer, Nylon	2
10	8.620-220.0	Grip, Wand 1 1/2 X 6	1	22	8.619-349.0	Strainer, Jet, 50 Mesh	1
11	8.627-624.0	SCR, 10-32 X 1-1/8 PPHMS SS	2	23	8.718-977.0	Washer, 1/4" Flat, SS	1
12	8.718-760.0	SCREW, 10/32 X 5/8 PHIL PAN, SS	1	24	8.633-118.0	Kit, Valve, Kingston 251-30-Kit	1